 


Premium Portable Projector


USER MANUAL

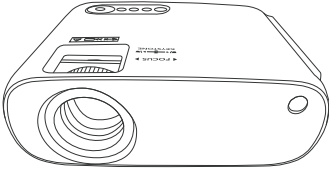


In the Box




1 x projector

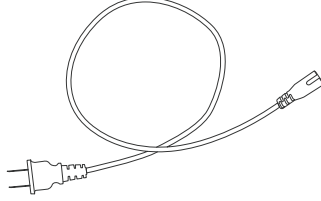


1 x power cord

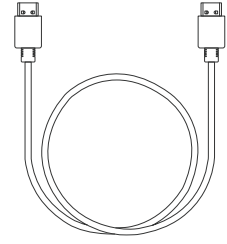

1 x HDMI cable

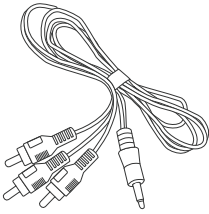

1 x RCA / AV
connector

 


1 x remote control

Safety Instructions


1. Please read this guide carefully before operating the machine.
2. For future reference, please keep this guide in a safe place.
3. Do not look straight at the projector lens during operation. The intense light beam may damage your eyes.
4. Please connect the cable that matches the cable port. Do not insert it forcibly.
5. Do not use it in a place with water or where it gets wet, including showers, kitchen sinks, swimming pools, hot tubs, etc.
6. Contact a skilled professional for any wall or ceiling installation.
7. Keep the machine away from heaters, stoves, and other heating devices.
8. Do not let water, debris, or materials get inside the machine.
9. Handle with care. Dropping this device can result in damage.
10. Only connect the cable that matches the terminal. Never jam or force in a cable that doesn't match.

Introduction to Parts

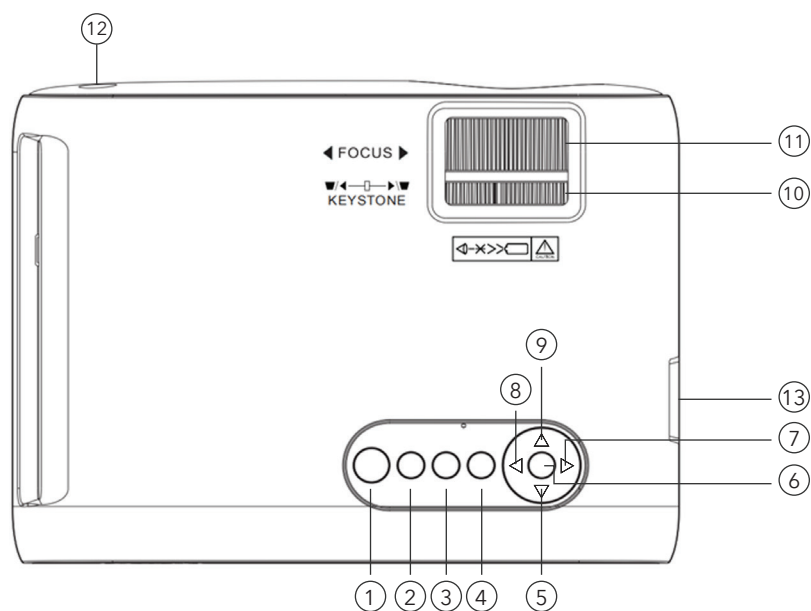


Functions:

- | | |
|------------------|---------------------------------------|
| 1. Power button | 8. Left key |
| 2. Return key | 9. Up key |
| 3. Signal source | 10. Keystone correction |
| 4. Menu | 11. Zoom adjustment |
| 5. Down key | 12. IR:Remote control signal receiver |
| 6. OK | 13. Power socket |
| 7. Right key | 14. Video input panel |

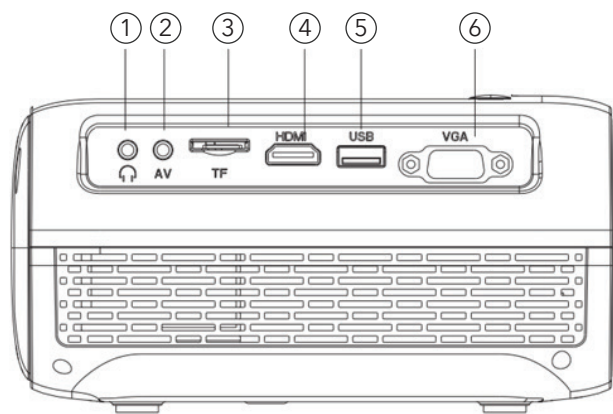

Video input:

- | | |
|--------------------------|------------------|
| 1. 3.5 mm headphone jack | 7. HDMI port |
| 2. AV input jack | 8. USB port |
| 3. MicroSD card slot | 9. VGA connector |

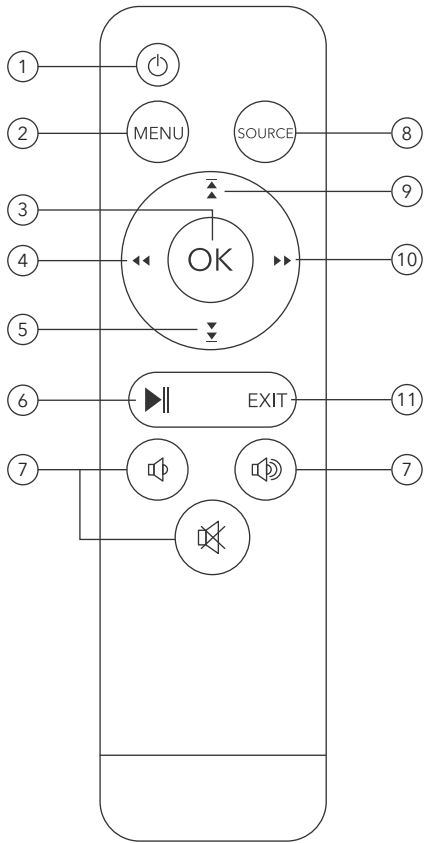


Remote:


1. Power on / off
2. Menu
3. OK
4. Left / back
5. Down / next file
6. Play / pause
7. Volume control / mute
8. Video source
9. Up / previous file
10. Right / fast forward
11. Exit

Setup

 
1. Connect the power cord into the projector and a power outlet.

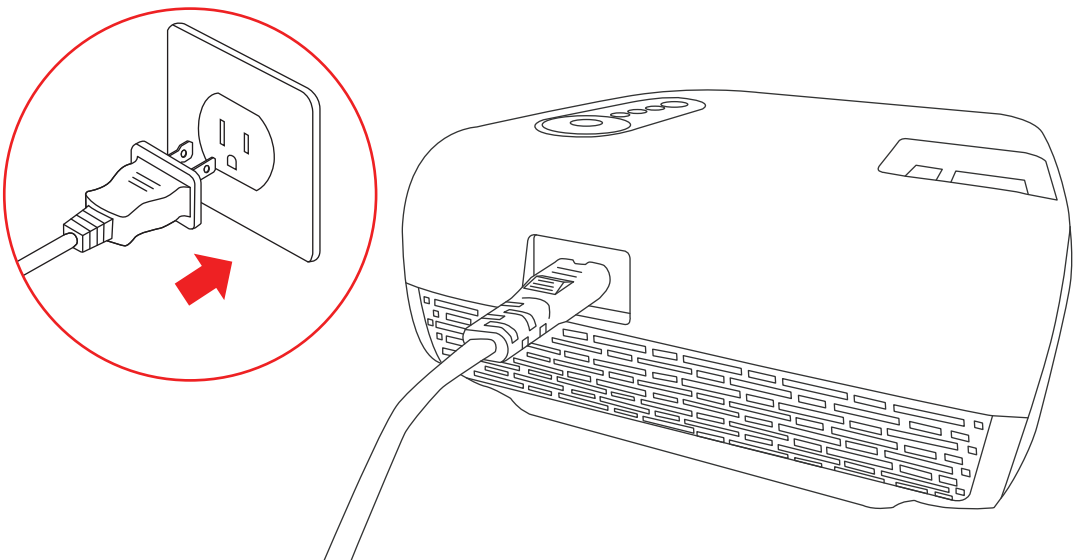

 
2. Connect the projector to your video source, such as Blu-ray player, TV, game console, or other devices.

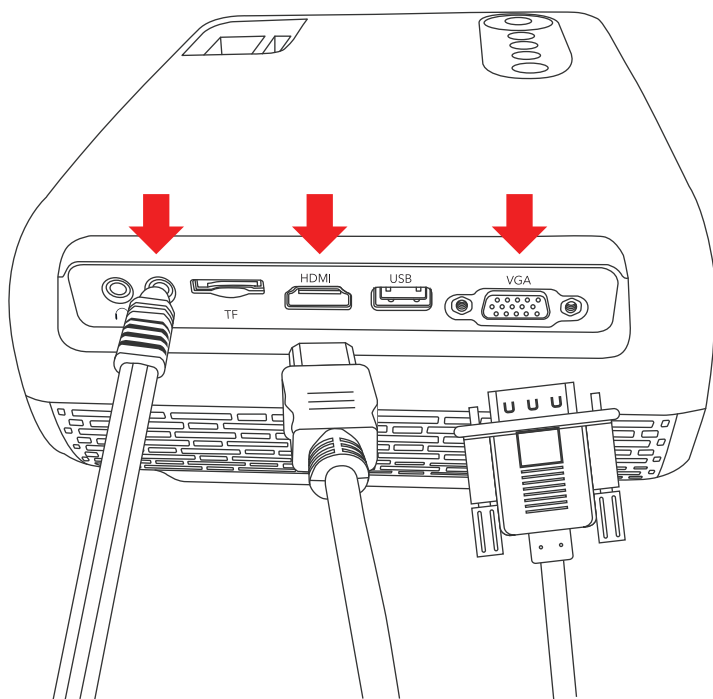

3. To turn on / off, press and hold the power button until the power indicator turns green. Wait 10 seconds for it to warm up.

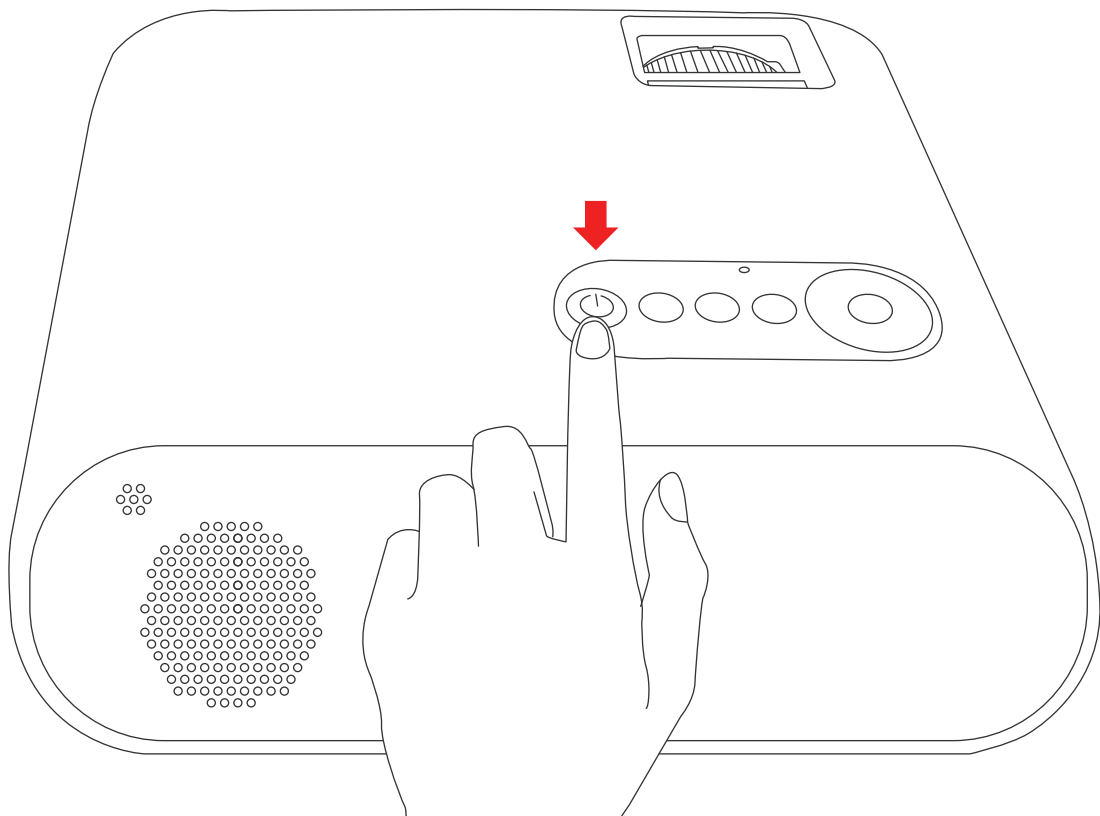

4. Adjust the projector angle by the lifting leg and adjust the focus using the focus wheel and keystone adjustment.

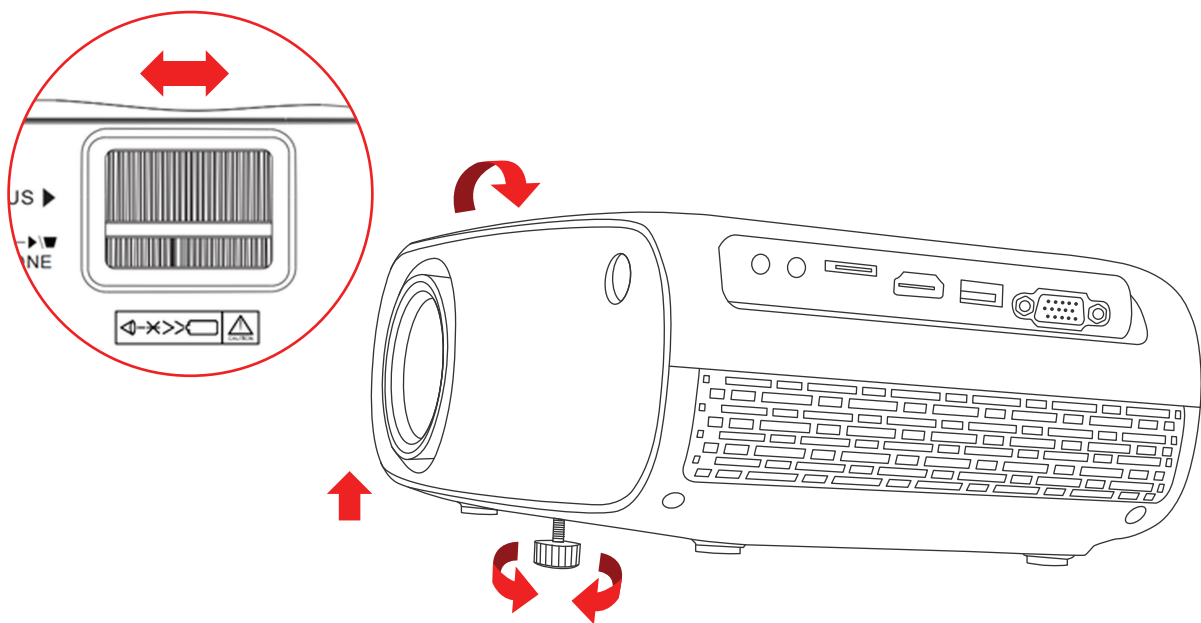


Using the Projector


1. Switch the input source to “**DMP**” to browse media files and select the video source using the remote or navigation buttons at the top of the projector.



2. To adjust the input source, press the source button on the remote control. Press **"OK"** to select your source.

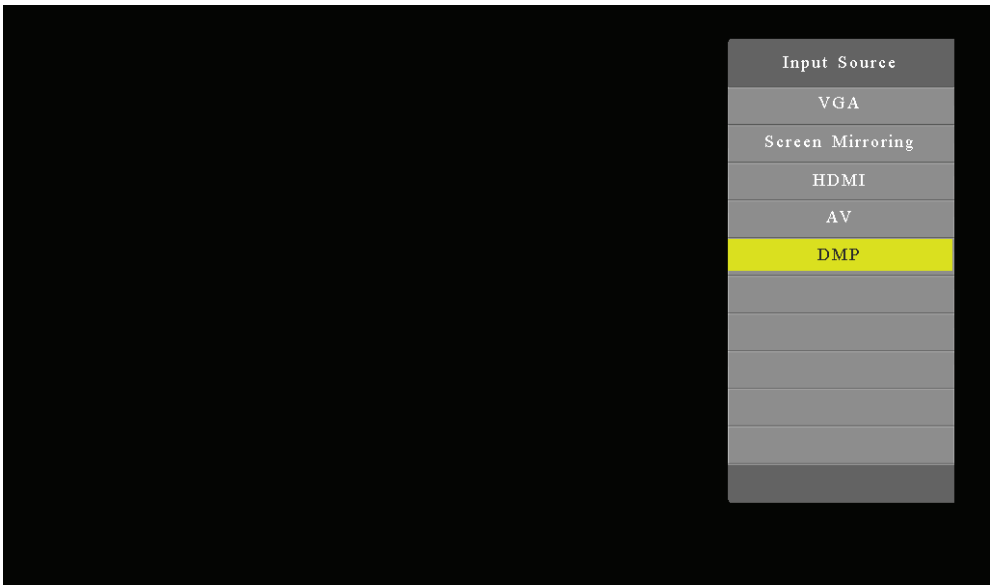


3. To adjust the Sound, Picture, and System settings, select **"SETTING"** from the main menu.

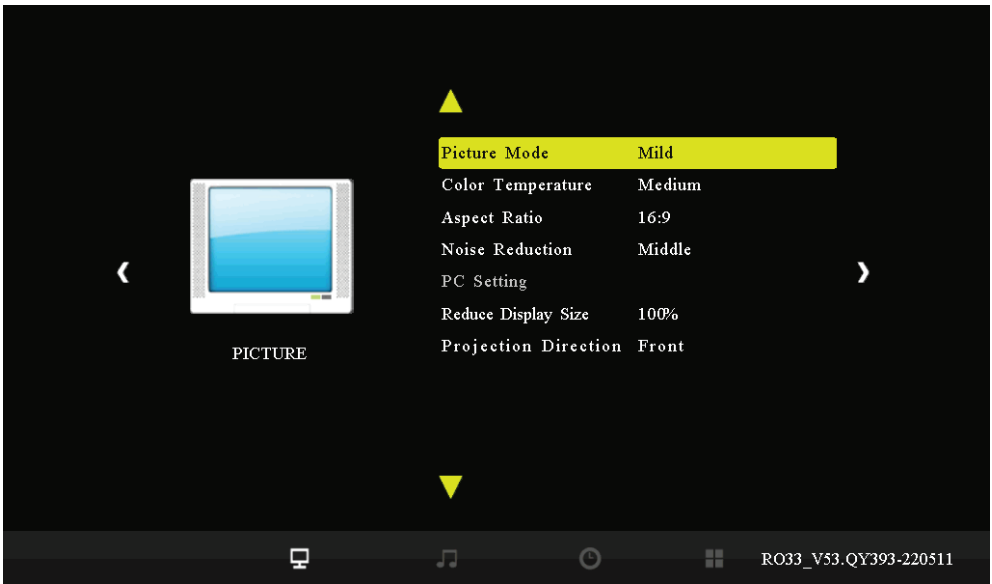


Screen Mirroring Mode

Note: Apple devices require iOS 7 or above, Android devices require Android 4.2 or above.

1. Select the **"Screen Mirroring"** from the input source, the following page will show up. Connect the projector to the same Wi-Fi network as the mirroring device.

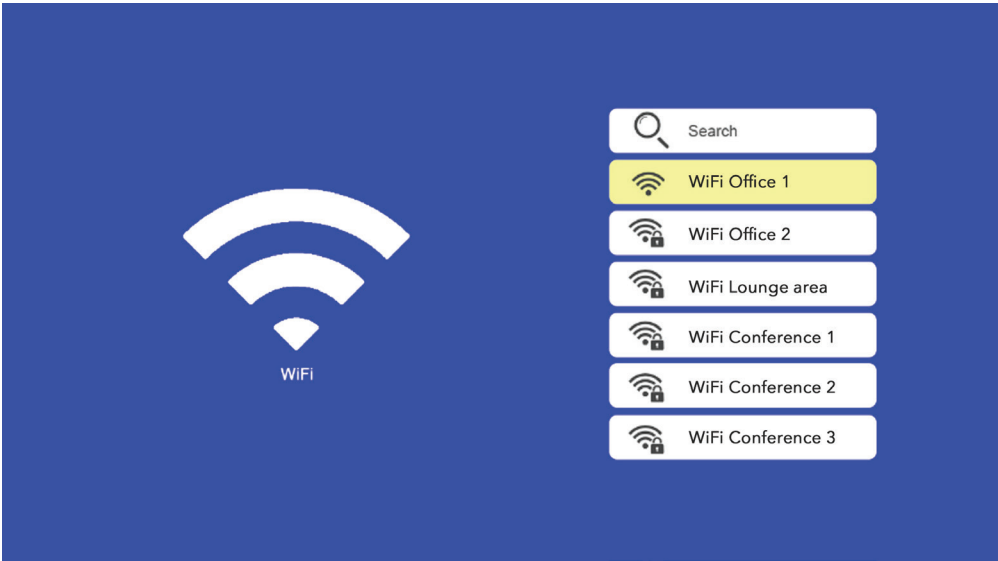

2. Once connected, the following screen will be displayed (you can go back to the Wi-Fi settings page by pressing **"OK"** again). Follow the corresponding steps to continue screen mirroring.

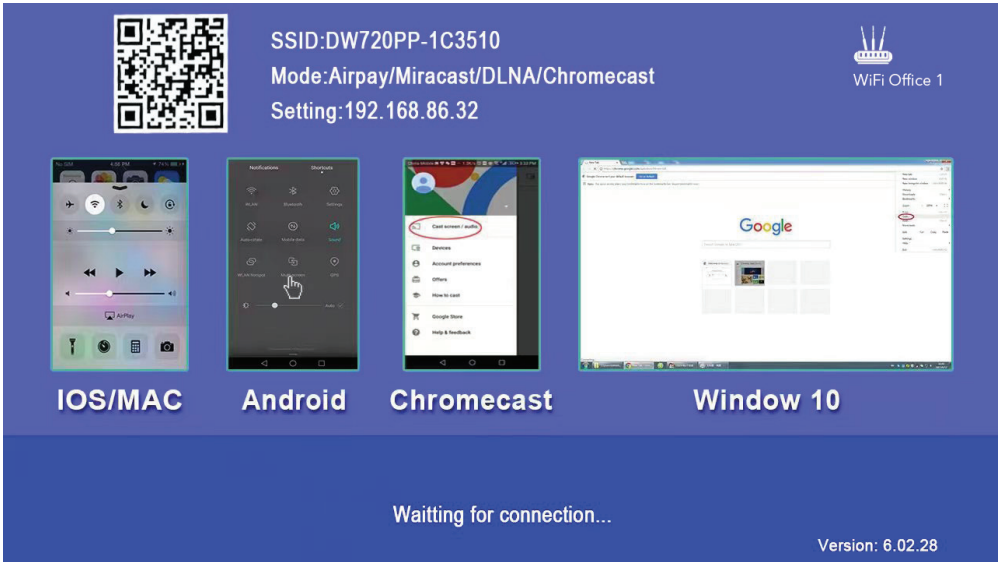




Via Airplay (Apple OS device)

1. Connect your iPhone, iPad, or iPod Touch to the same Wi-Fi network as your projector.
2. Open Control Center:
 - a. On iPhone X or later or iPad with iPadOS 13 or later: Swipe down from the upper-right corner of the screen.
 - b. On iPhone 8 or earlier or iOS 11 or earlier: Swipe up from the bottom edge of the screen.
3. Tap Screen Mirroring 
4. Select "**DW720PP-xxxxxxx**" from the list. Wait until your screen shows up.
5. To stop mirroring your iOS or iPadOS device, open Control Center, tap "**Screen Mirroring**", then tap "**Stop Mirroring**".



Via Smart View (Android)

1. Swipe down from the top screen to open the "Quick panel", then, tap on the Smart View icon.
2. Select "**DW720PP-xxxxxxx**" from the list of available devices. (If you cannot find the projector from the list, make sure you have connected to the same Wi-Fi network.)
3. Select "**Start now**" on the pop-up message that says "**Start casting with Smart View?**".

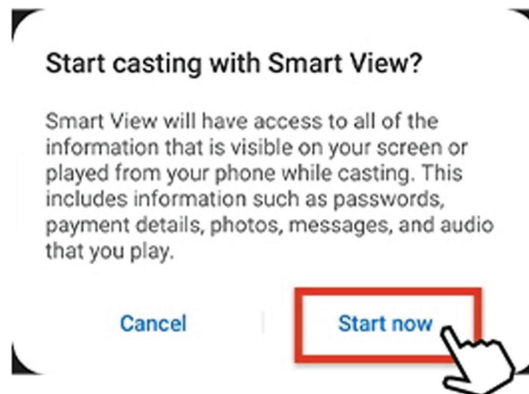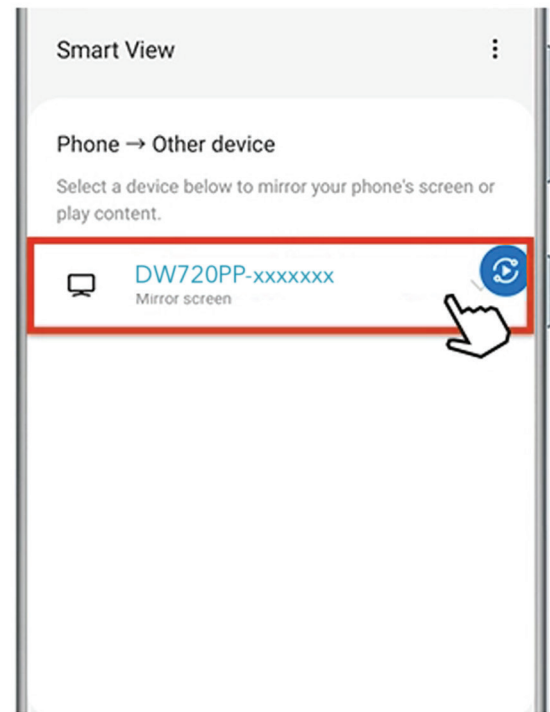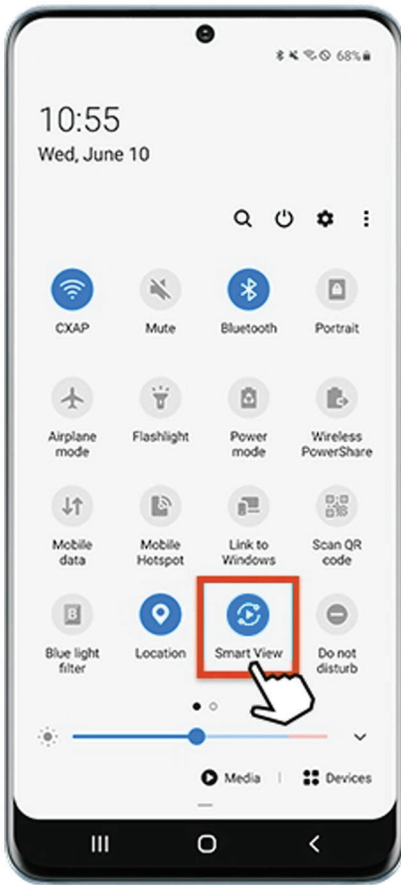

Specifications

Model no.:	PremProjectorUS
Native resolution:	720p (1080p supported)
Image brightness:	4400 lumens
ANSI lumens	140 lumens
Projection size:	40 up to 200 in
Projection distance:	3.9 - 19.6 ft
Video input:	HDMI, VGA, USB, micro SD card, AV-in, and AUX bluetooth, built-in Wi-Fi
Connectivity:	AC 100 - 240 V, 50 - 60 Hz
Power input:	Max 60 W
Dimensions:	9.5 x 7 x 3.5 in
Net weight:	2.7 lb

*The actual product and specifications are subject to change without notice due to product enhancement.

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com



www.wasserstein-home.com

Made in China