



Quick Start Guide

For Mechless and CD Receivers

Not all features listed in this QSG are available on all models.



To download the complete model-specific manual, please visit www.dualav.com/support/manuals.php or call 1-866-382-5476. 9AM-5PM EST (Monday-Friday).

General Operation

Power On/Off	Press the U button to turn the unit on. Press U again to turn unit off.
Faceplate Removal	Press RELEASE and pull away from the left side to remove. To re-install, insert right side of faceplate first then push left side to secure.
Changing Modes	Press MODE to select between AM/FM, CD player, auxiliary front/rear, USB and operation of iPod/iPhone. Modes of operation are shown in the display.
Volume	Adjust volume using volume knob.
Mute	Press MUTE to silence the audio. Press MUTE again to resume listening at the previously selected volume.
Auxiliary Inputs	Insert a 3.5mm cable in the units front AUX port, or RCA cables into the rear AUX-IN connectors.
Reset	Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located behind the front panel.
Setting the Clock	With the unit on, press and hold DISP until the clock begins to flash, then release. Press TUNE << to adjust the hours and TUNE >> to adjust the minutes. Press DISP momentarily to save the selected time.
Display	Press DISP to toggle display between various displayed information.
Audio / Menu	Press and hold AUDIO/MENU for more than three seconds to access the setup menu. Press AUDIO/MENU momentarily to select between the menu functions and rotate the volume knob left/right to adjust or activate the desired function.

To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

Installation

Before You Start

- Consult a qualified technician for instructions. Dual always recommends professional installation.
- Disconnect negative battery terminal.
- Remove trim ring from unit (if installed).
- Remove 2 transit screws located on top of the unit (if applicable).
- Insert the removal keys, and remove the mounting sleeve from the head unit.

Note: Most vehicles require an installation kit, wiring harness and/or antenna adapter (all sold separately) to properly install the head unit in the vehicle.

Installation Process

1. Carefully remove the existing head unit.
2. Connect wiring harness. Consult a qualified technician if you are unsure.
3. Mount the head unit using the mounting sleeve or ISO brackets (depending on vehicle's dashboard).
4. Connect wiring harness and antenna. Test the head unit for correct operation.
5. Slide into mounting sleeve to secure, or mount the ISO brackets to the vehicle.
6. Snap trim ring into place.

Wiring Connections

The chart below the connection for each wire in the wiring harness.


Color	Connection
Red	12V Ignition / Accessory
Yellow	12V Battery / Memory
Black	Ground
Blue	Power Antenna / Amp Turn-on
Grey	Right Front (+)
Grey/Black	Right Front (-)
White	Left Front (+)
White/Black	Left Front (-)
Violet	Right Rear (+)
Violet/Black	Right Rear (-)
Green	Left Rear (+)
Green/Black	Left Rear (-)

Tip:
When a suitable ground wire is not present in the vehicle wiring harness, connect the black ground wire to the vehicle chassis.

Fuse:
When replacing the fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio.

Installation


Mounting the Head Unit:
Typical DIN mounting

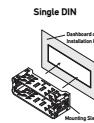


Step 1:
Insert the mounting sleeve into the installation kit or dashboard.



Step 2:
Bend multiple mounting tabs around the mounting sleeve until the mounting sleeve is secure.

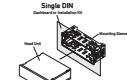

Step 3:
Connect all wiring harnesses and slide the head unit into the mounting sleeve until it clicks into place.

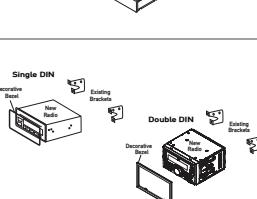

Mounting the Head Unit:
ISO mounting

Using the existing brackets or the brackets supplied with the installation kit, mount the brackets to the sides of the head unit with the screws supplied with the head unit.

AM/FM Tuner Operation

Seek Tuning	Press TUNE << or TUNE >> for more than one second to seek to the next strong station.
Manual Tuning	Press TUNE << or TUNE >> momentarily to move radio frequency up or down one step at a time. Press and hold to advance quickly.
Band	Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
Storing Presets	Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.
Recalling Presets	Preset stations can be recalled any time by pressing the corresponding preset button.

CD Operation*

Insert CD	With the label facing up, insert a standard size CD into the CD slot. Playback will begin automatically.
Eject CD	Press EJECT (located behind the front panel) to eject the CD. The unit will change to previous mode of operation.
Track Select	Press TUNE >> to skip to the beginning of the next track. Press TUNE << to return to the beginning of the current track. Pressing TUNE << again skips to the beginning of the previous track.
Fast Forward/ Reverse	Press and hold TUNE >> or TUNE << to fast forward or reverse a track.
Pause	Press II to temporarily stop CD playback. Press II again to resume playback.
Intro	Press INT to access the Intro menu, then turn the volume knob to select one of the following: • OFF - Cancels the INT function. • ALL - Plays the first 10 seconds of each track.
Repeat	Press RPT to access the Repeat menu, then turn the volume knob to select one of the following: • ALL - Plays all tracks on CD. • TRACK - Continuously repeats selected track.
Random	Press RDM to access the Random menu, then turn the volume knob to select one of the following: • OFF - Cancels the RDM function. • ALL - Plays all tracks in random order.
CD-R/CD-RW Compatibility	Some CD-Rs and CD-RWs may be incompatible with this unit, depending on media type and recording method. Refer to the online owner's manual for details.

* Not available on all models.
To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php.

MP3 / WMA Operation *		Operation of iPod/iPhone*	Bluetooth® Operation*
Playing MP3/WMA Files	To play MP3/WMA files, insert a data CD, SD card or USB device containing MP3/WMA files.	Connect an iPod/iPhone Device (sold separately)	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Track Select	Press TUNE ►► to skip to the beginning of the next song. Press TUNE ◀◀ to return to the beginning of the current song. Pressing TUNE ◀◀ again skips to the beginning of the previous song.	Song Select	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details.
Fast Forward and Reverse	Press and hold TUNE ►► or TUNE ◀◀ to fast forward or reverse a track.	Forward/Reverse	The device name is "DUAL BT". The Bluetooth passcode is "1234".
Pause	Press ►/ to temporarily stop playback. Press ►/ again to resume playback.	Pause	Note: If passcode "1234" does not pair your device to the receiver, use passcode "0000".
Folder Access	Press ☰ to select the next folder. Press ☱ to select the previous folder. Folder access is only available on discs or devices with more than one folder.	Repeat	Note: The head unit can be in any mode of operation when pairing is performed.
Repeat	Press RPT to enter the Repeat menu, then turn the volume knob to select one of the following options: • ALL - Plays all tracks on disc or device. • TRACK - Continuously repeats selected track. • FOLDER - Continuously repeats all files in folder.	Random	If a device is currently connected, press and hold ↻ to disconnect the current device before a new device can be paired. Then begin the pairing sequence from the new Bluetooth device.
Random	Press RDM to enter the Random menu, then turn the volume knob to select one of the following options: • OFF - Cancels RDM function. • ALL - Plays all tracks in random order. • FOLDER - Plays all tracks in folder in random order.	Intro	Press and hold ↻ for 3 seconds to disconnect a connected device. The device will remain paired and appear in the SEARCH menu, but not connected.
Intro	Press INT to enter the Intro menu, then turn the volume knob to select one of the following options: • OFF - Cancels the INT function. • ALL - Plays first 10 seconds of each track. • FOLDER - Plays first 10 seconds of each track in the selected folder.	Music Search	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music: • Press ►► to skip to the next available audio track. • Press ◀◀ to skip to the previous audio track. • Press ►/ to toggle between play and pause during playback.
* Not available on all models.		* Not available on all models.	
To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php .		To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php .	
Pandora® Operation*			
Requirements	Control for Pandora requires: • An iPhone device with a reliable data connection, or an iPod touch that is connected to wireless internet. • The Pandora App installed on the iPhone/iPod device. • An active account with Pandora (www.pandora.com). • The USB sync cable included with iPod/iPhone device.	Limited One-Year Warranty	FCC Compliance
USB Connection	Connect an iPod touch or iPhone device (required, sold separately) to the USB port, using the USB sync cable included with your iPhone device.	This warranty gives you specific legal rights. You may also have other rights which vary by state or province. This warranty is given to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase. (Note that select products carry a 2-year warranty. Please visit www.dualav.com for details.) Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changing Stations	Press SELECT to display the stations menu. Turn the volume knob to cycle through the list of stations, then press SELECT when the desired station is highlighted.	Who is covered? This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A.	Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Shuffle	Press SELECT to display the stations menu. Choose "Shuffle" from the stations menu to shuffle songs from all of your stations.	What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.	Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
Skip Track	Press ►► to skip the current song.	1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.	
Play/Pause	Press ►/ to temporarily stop playback. Press ►/ again to resume playback.	2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.	Dual Electronics Corp. Toll Free: 1-866-382-5476 Monday-Friday, 9AM-5PM www.dualav.com
Thumbs Up	Press ☰ to customize the station to play more songs like the currently playing song.	3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.	©2016 Dual Electronics Corp. All rights reserved. The SD logo is a trademark of the SD Card Association. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Note that the use of this accessory with iPod or iPhone may affect wireless performance.
Thumbs Down	Press ☱ to customize the station to play songs that are different from the currently playing song.	4. For more information and for the location of the nearest authorized service center please contact us toll-free at 1-866-382-5476 or by email at cs@dualav.com.	The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung is under license. Pandora, the Pandora logo, and the Pandora trade dress are trademarks of Pandora Media, Inc. used with permission. Other trademarks and trade names are those of their respective owners.
Device Compatibility	Refer to the Owner's Manual for a complete list of devices compatible with this head unit. Refer to www.pandora.com/everywhere/mobile for devices compatible with the Pandora mobile application.	Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.	NSC0816-V03
Troubleshooting	Note: Pandora is an internet service, carrier and data charges may apply.		
* Not available on all models.			
To download the complete Owner's Manual for your radio, please visit www.dualav.com/support/manuals.php .			
Pandora is only available in certain countries. Please visit http://www.pandora.com/legal for more information.			



DXRM57BT

INSTALLATION/OWNER'S MANUAL

AM/FM Receiver with Bluetooth

MP3

USB

AUX

Bluetooth®





Preparation


Please read entire manual before installation.

Before You Start

- Disconnect negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.


Getting Started

- Remove trim ring from unit.
- Remove 2 transit screws located on top of the unit.
- Insert the supplied keys into the slots as shown, and slide the unit out of the mounting sleeve.
- Install mounting sleeve into opening, bending tabs to secure.
- Connect wiring harness and antenna. Consult a qualified technician if you are unsure.
- Certain vehicles may require an installation kit and/or wiring harness adapter (sold separately).
- Test for correct operation and slide into mounting sleeve to secure.
- Snap trim ring into place.

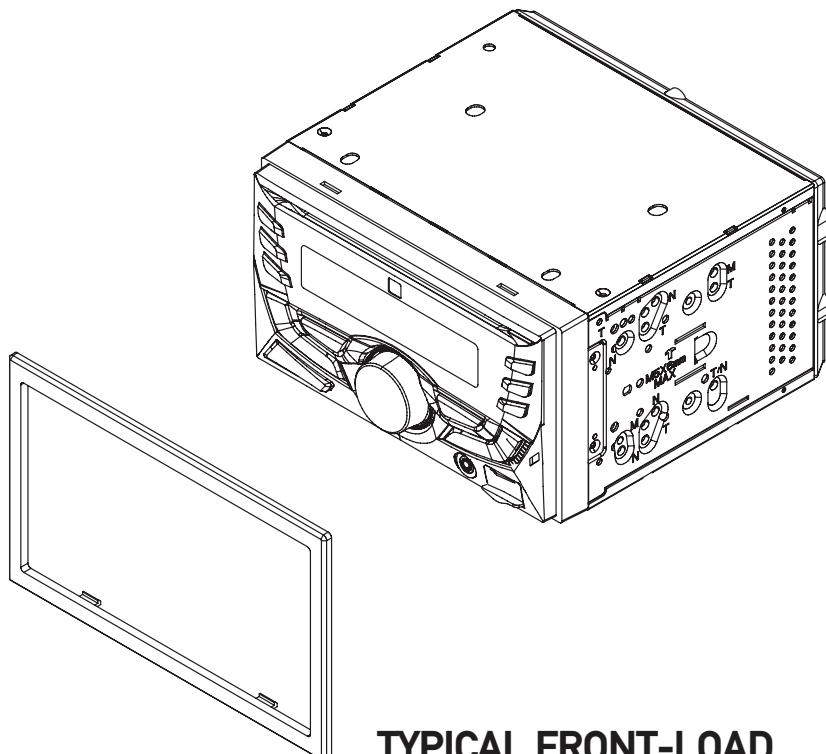

**TYPICAL FRONT-LOAD
MOUNTING METHOD**

Wiring Diagram

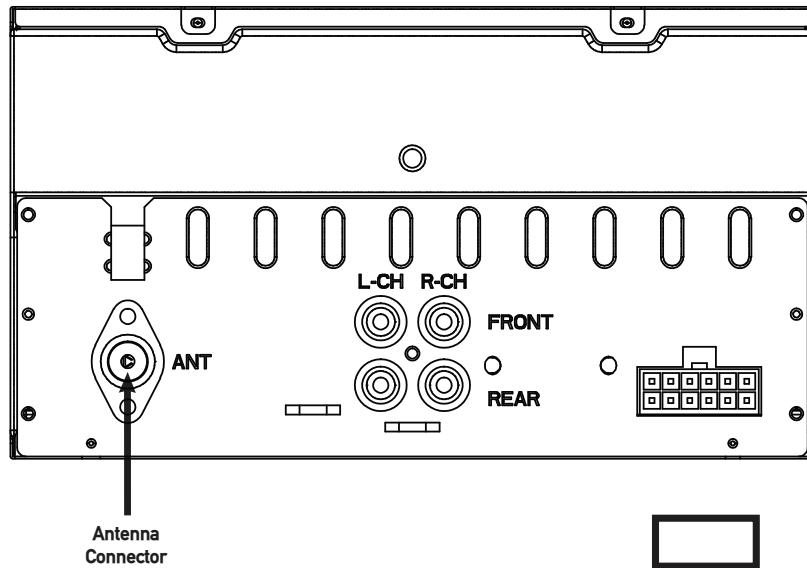

Antenna Connector

BLUE | **Remote Turn-On**
Connect to amplifier or power antenna. Insulate wire if not used.

BLACK | **Ground**
Connect to vehicle chassis ground.

RED | **Accessory**
Connect to existing ignition circuit or switched 12 volt source.
10 AMP AGC Fuse

YELLOW | **Memory**
Connect to battery circuit or constant 12 volt source

Right Rear
Violet/Black (-)
Violet (+)

Right Front
Gray/Black (-)
Gray (+)

Left Rear
Green/Black (-)
Green (+)

Left Front
White/Black (-)
White (+)

FUSE

When replacing the fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio.

The unit uses one 10 amp ATM fuse located beside the wiring connector.




Control Locations



(1) Preset 1 / Repeat	(11) Reset
(2) Preset 2 / Random	(12) Bluetooth Talk
(3) Preset 3 / Intro	(13) Auxiliary Input
(4) Power / Mute	(14) USB Port
(5) Mode	(15) AS/PS
(6) Tune / Track Down	(16) Display
(7) Tune / Track Up	(17) Preset 6 / Folder Up
(8) Band	(18) Preset 5 / Folder Down
(9) Microphone	(19) Preset 4 / Play / Pause
(10) Volume Knob	

Remote Control

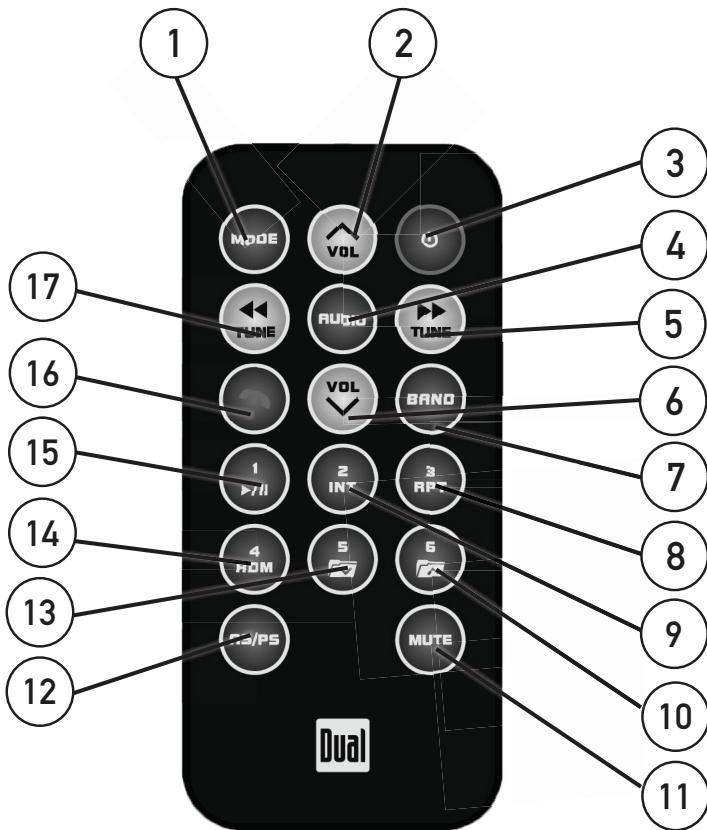

1	Mode	10	Preset 6 / Folder Up
2	Volume Up	11	Mute
3	Power	12	Audio / Menu
4	Select	13	Preset 5 / Folder Down
5	Tune / Track Up	14	Preset 4 / Play / Pause
6	Volume Down	15	Preset 1 / Repeat
7	Band / Go Back	16	Bluetooth Talk
8	Preset 3 / Intro	17	Tune / Track Down
9	Preset 2 / Random		



General Operation

Power On/Off	Press the Power button to turn the unit on. Press Power again to turn the unit off.
Changing Modes	Press MODE to select between Radio, USB, Auxiliary Input and Bluetooth. Modes of operation are shown in the display.
Volume	Adjust volume using the volume knob (00-40).
Mute	Press to silence the audio. Press again to resume listening at the previously selected volume.
Auxiliary Inputs	Insert a 3.5mm cable in the unit's front AUX port.
Reset	Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located on the front panel.
Setting the Clock	With the unit on, press DISP to display clock time. Press and hold DISP until the hours begins to flash, then release. Press the TUNE ◀◀ and TUNE ▶▶ to adjust the hours, then press the DISP , the minutes begins to flash, press the TUNE ◀◀ and TUNE ▶▶ button to adjust the minutes. Press DISP momentarily to save the selected time.
Display	Press DISP to toggle display between various displayed information.
Audio / Menu	Press the volume knob momentarily to select between audio functions. Press and hold the volume knob for more than two seconds to select between the menu functions. Rotate the volume knob left/right to adjust or activate the desired function/audio.

AM/FM Tuner Operation

Seek Tuning	Press TUNE ◀◀ or TUNE ▶▶ to seek to the previous or next strong station.
Manual Tuning	Press and hold TUNE ◀◀ or TUNE ▶▶ to enter manual tuning mode, then press TUNE ◀◀ or TUNE ▶▶ momentarily to change radio frequency up or down one step at a time. Press and hold TUNE ◀◀ or TUNE ▶▶ to advance quickly.
Band	Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
Storing Presets	Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.
Recalling Presets	Preset stations can be recalled any time by pressing the corresponding preset button.
Automatically Store	Press and hold AS/PS for more than 2 seconds to store 18 FM stations and 12 AM stations automatically.
Preset Scan Stations	Press AS/PS to recall each preset station that stored in the memories in each band.



USB Operation

Playing MP3 Files	To play MP3 files, insert a USB device containing MP3 files.
Track Select	Press TUNE ►► to skip to the beginning of the next track. Press TUNE ◀◀ to skip to the beginning of the previous track.
Fast Forward and Reverse	Press and hold TUNE ►► or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ►/ to temporarily stop USB playback. Press ►/ again to resume playback.
Folder Access	Folders can be found by pressing Folder Up or Folder Down . About one second after the folder name is displayed, the first file under the selected folder will be displayed and playback will begin.
Repeat	Press RPT to toggle between RPT ALL and RPT ONE . <ul style="list-style-type: none">• RPT ALL - Plays all tracks on USB device.• RPT ONE - Continuously repeats selected track.
Random	Press RDM to play tracks in random order; press again to cancel the RDM function.
Intro	Press INT to play the first 10 seconds of each track; press again to cancel the INT function.

Bluetooth Operation

Preparation	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Pairing a New Device	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. The device name is "Dual Media Player". The Bluetooth passcode is "1234". Note: The head unit can be in any mode of operation when pairing is performed.
Streaming Audio Troubleshooting	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music: <ul style="list-style-type: none">• Press ►► to skip to the next available audio track.• Press ◀◀ to skip to the previous audio track.• Press ►/ to toggle between play and pause during playback.



Limited One Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased from an authorized Dual dealer and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.dualav.com.

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
 - Call us toll-free at 1-866-382-5476
 - E-mail us at cs@dualav.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
NO FILE appears on display	No playable MP3 files found on the device	Check the device for valid MP3 files
NO SUPPORT appears on display	An invalid ID3 tag version is present	Version 1.0 to 2.0 ID3 tags are supported.



Specifications

FM Tuner	Tuning range: 87.5MHz-107.9MHz Usable sensitivity: 8.5dBf 50dB quieting sensitivity: 10dBf Stereo separation @ 1kHz: >30dB Frequency response: 30Hz-13kHz
AM Tuner	Tuning range: 530kHz-1710kHz Usable sensitivity: <42dBu Frequency response: 30Hz-2.2kHz
General	Speaker output impedance: 4~8 ohms Line output voltage: 2 Volts RMS Dimensions: 7" x 7" x 4" (178 x 178 x 100 mm)

Design and specifications subject to change without notice.



CEA-2006 Power Standard Specifications (reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)

Power Output: 16 Watts RMS x 4 channels at 4 ohms and $\leq 1\%$ THD+N
Signal to Noise Ratio: 75dBA (reference: 1 watt into 4 ohms)

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Dual Electronics Corp.
Toll Free: 1-866-382-5476**

www.dualav.com
©2017 Dual Electronics Corp. All rights reserved.

Other trademarks and trade names are those of their respective owners.

NSA0217-V01