


Introduction

The Google Home Max is a premium smart speaker designed for powerful sound and smart voice control. It integrates Google Assistant to help you with music, smart home devices, and daily tasks.

Safety & Warnings


- Place on a stable, flat surface.
- Keep away from water, heat, and direct sunlight.
- Use only the included power adapter.
- Do not disassemble or modify.

What's in the Box

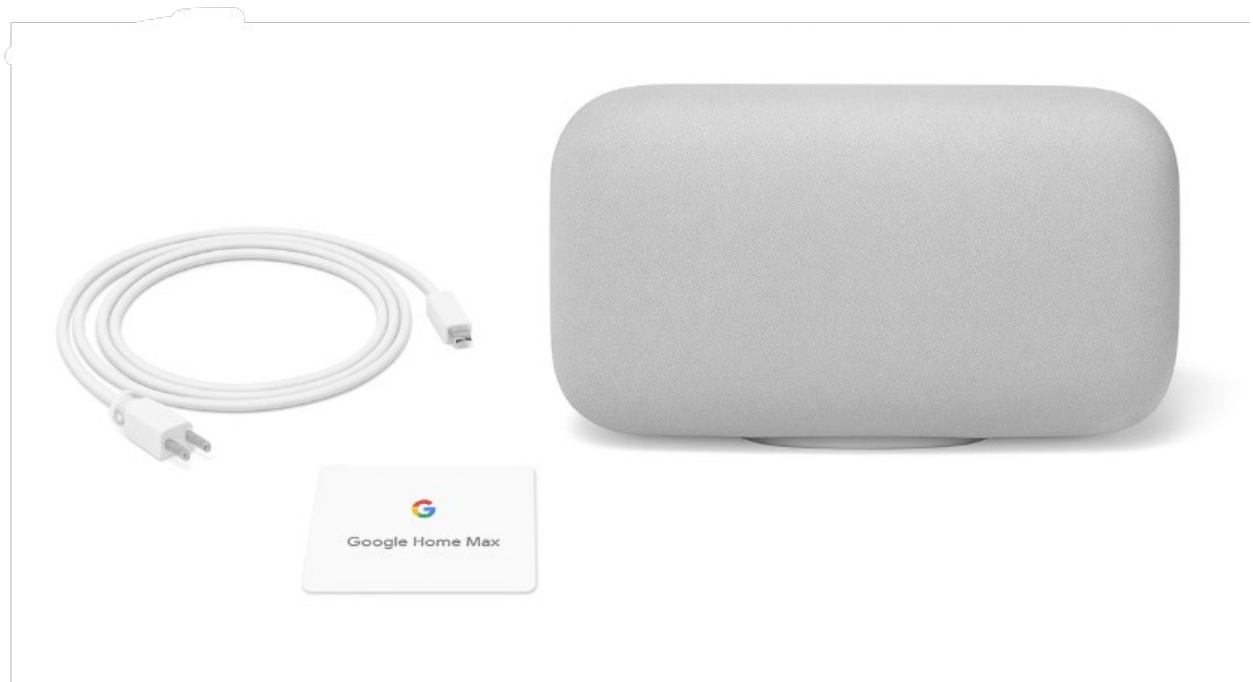

- Google Home Max speaker
- Power cable
- Quick start card

Device Overview

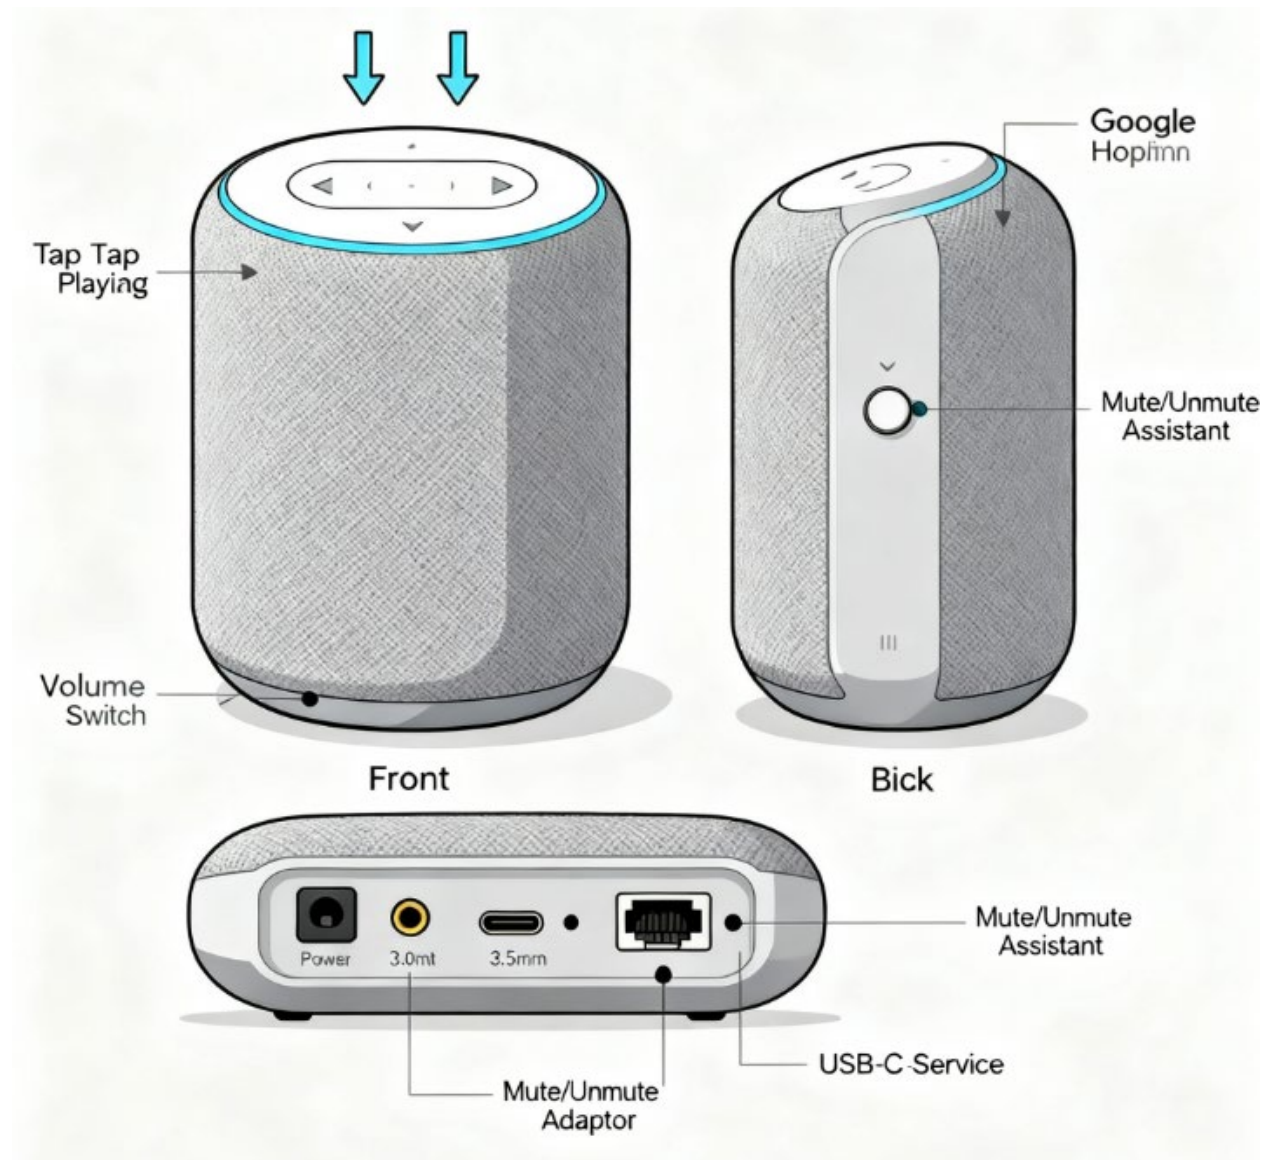

- **Touch Panel:** Tap/swipe for playback and volume
- **Microphone Switch:** Mute/unmute Assistant
- **Ports:** Power, 3.5mm audio, USB-C (service), Ethernet adapter (optional)

Setup Guide

1. Plug in the device.
2. Download the Google Home app (iOS/Android).
3. Open app → Tap "+" → "Set up device."
4. Connect to Wi-Fi and sign in with Google.
5. Assign to a room and link music services.

Daily Use

- Say “Hey Google” or “OK Google” to activate.
- **Example:** “Hey Google, play relaxing music.”
- **Smart home:** “Hey Google, turn on the living room lamp.”

Touch Controls

- **Tap center:** Play/Pause
- **Swipe right:** Volume up
- **Swipe left:** Volume down
- **Long press:** Pairing mode

Audio Features

- **Smart Sound:** Adjusts EQ to the room.
- **Stereo Pairing:** Pair two Max speakers.
- **Chromecast Built-In:** Stream from apps.

Troubleshooting

- **Wi-Fi not connecting:** Restart router & device.
- **No sound:** Check volume & app.
- **Assistant not responding:** Check mic switch.
- **Factory reset:** Hold volume down 12s.

Technical Specs

- **Dimensions:** 13.2 × 7.4 × 6.0 in
- **Weight:** 11.7 lbs (5.3 kg)
- **Connectivity:** Wi-Fi, Bluetooth, Chromecast
- **Speakers:** 2 woofers, 2 tweeters

Google Home Max — Quick Reference Card

Quick Setup

1. Plug in your Google Home Max.
2. Download Google Home app (iOS/Android).
3. Open → “+” → Set up device → New device.
4. Connect to Wi-Fi & sign in.
5. Say “Hey Google” to test.

Touch Gestures

- Tap center → Play/Pause
- Swipe right → Volume up
- Swipe left → Volume down
- Long press → Pairing mode
- Switch (back) → Mute/unmute mic

Popular Commands

- **Music:** “Hey Google, play jazz on Spotify.”
- **Info:** “Hey Google, what’s the time?”
- **Timers:** “Hey Google, set a 10-minute timer.”
- **Smart Home:** “Hey Google, turn off bedroom light.”
- **Routines:** “Hey Google, good morning.”

Troubleshooting Quick Fix

- Device not found → Restart router & phone.
- No sound → Check volume, reboot speaker.
- Wi-Fi drops → Move closer to router.
- Factory reset → Hold volume down 12s.

Google Home Max — Infographic Guide

Section 1: Quick Setup (Icons)

 Plug in →  Step 2: Install app →  Step 3: Wi-Fi →  Step 4: Say “Hey Google”

Section 2: Touch Controls (Icons)

 Volume (swipe left/right) →  Play/Pause (tap) →  Stop alarm (tap & hold) →  Mic mute (switch)

Section 3: Popular Commands (Icons)

-  Music → “Hey Google, play pop hits”  Weather → “Hey Google, what’s the forecast?”
-  Smart Home → “Hey Google, turn on the lights”
-  News → “Hey Google, play the latest news”
-  Productivity → “Hey Google, what’s on my calendar?”