 


inVue

IR2 Key

PK4400



Overview

Review entire instruction guide before starting installation.

System Components


1. IR2 Key
2. IR2 Programming Station
3. IR2 Charger
4. Power Supply (5V) for Programming Station
5. Power Supply (18V) for Charger

System Overview:


The IR2 Programming Station activates the IR2 Key, which is used to operate InVue security devices. An activated key can be used for up to 12 hours. When not in use, the key should be stored in the IR2 Charger. Charging will de-activate the key. The key will need to be re-activated before use.




IR2 Key
PK4400

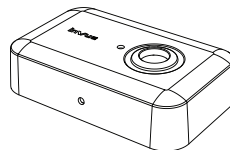


IR2 Programming Station
PK4401

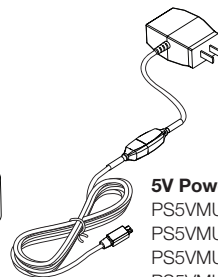

5V Power Supply
PS5VMU-US
PS5VMU-UK
PS5VMU-EU
PS5VMU-AUS
PS5VMU-ARG

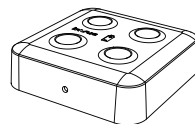


IR2 Charger
PK4404

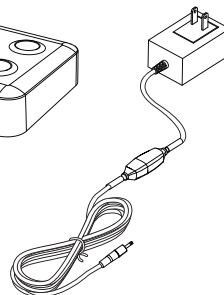


18V Power Supply
PS18VB2-US
PS18VB2-UK
PS18VB2-EU
PS18VB2-AUS
PS18VB2-ARG

1

Connect cable components of power supply. Plug 18 volt power supply into charger and outlet.

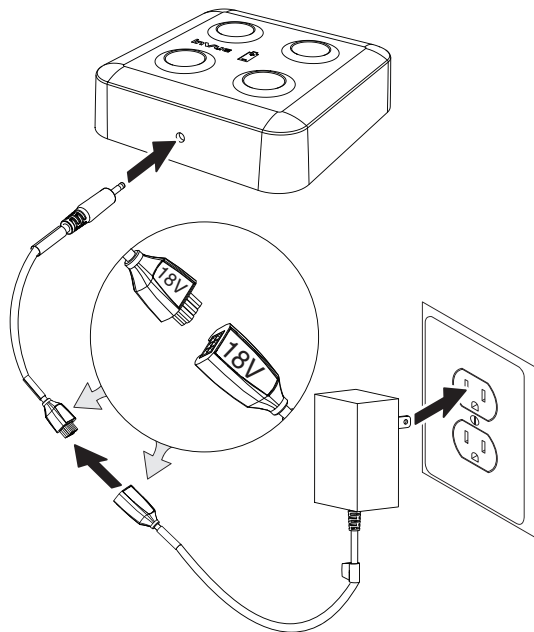
**2**

Confirm green light is on. If green light is not on, confirm power is getting to charger.

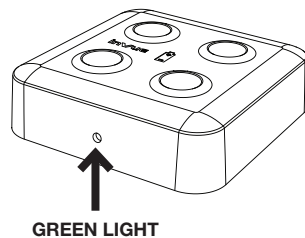


3**Fully charge key before moving to step 4.**

(See “Battery Indicator and Activation Lights” section:
pages 10 – 13)

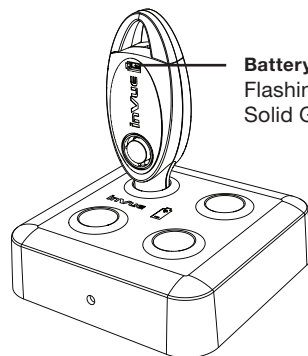**Battery Indicator**


Flashing RED = Charging
Solid GREEN = Charged

Note: Charger may take several seconds to recognize inserted key. Once key has been recognized, battery indicator will light up. A completely depleted battery may take up to 3 hours to reach full charge.

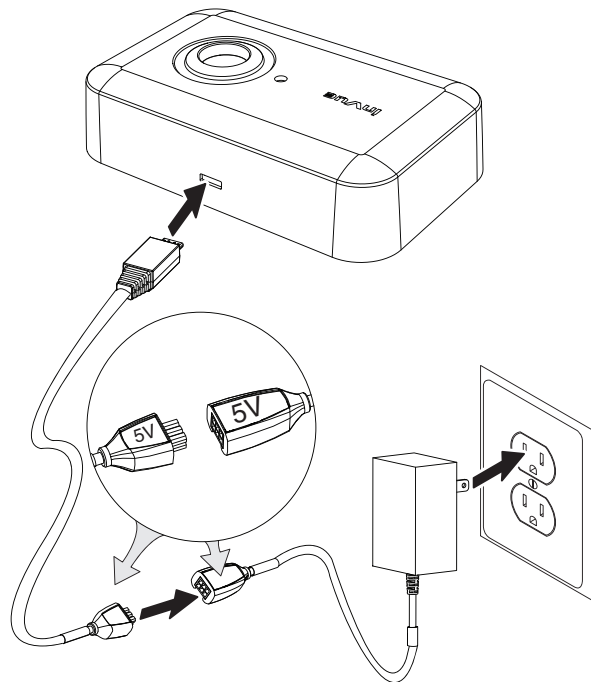4**Plug 5 volt power supply into outlet and programming station.**


5

Confirm green light is on. If green light is not on, confirm power is getting to programming station. Once key has been fully charged, place key on programming station.

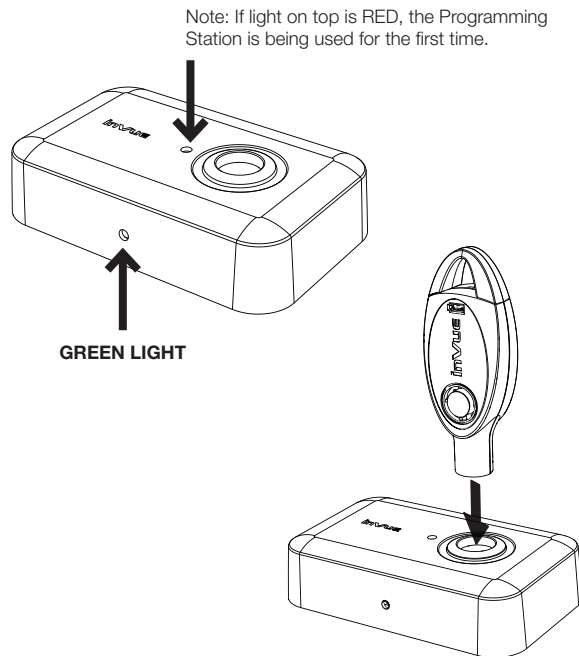

6



Press button and wait for “beep.” Remove from programming station. Key is now activated for 12 hours of use. Note: If double “buzz,” then a programming error has occurred. Try again.

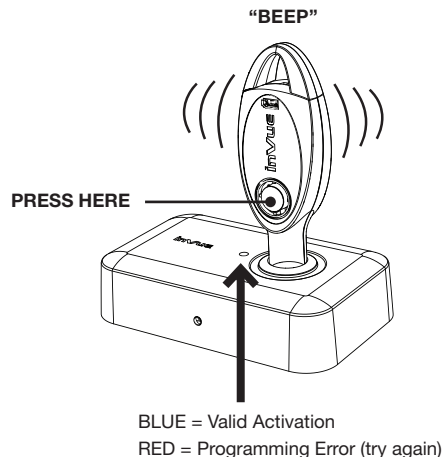

Note: A key is synced with and can only be reactivated on the Programming Station that was used to activate the key initially. An unlimited number of keys can be synced to a single Programming Station.

BATTERY INDICATOR LIGHTS



(When key is in charger)

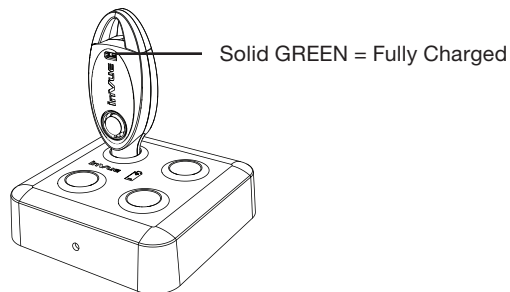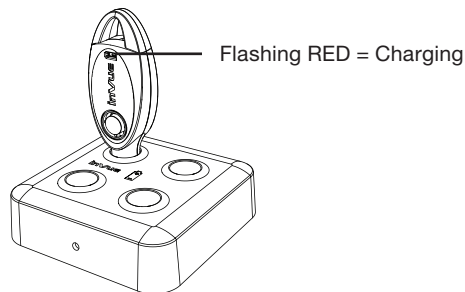

BATTERY INDICATOR LIGHTS

(When key is out of charger)



Note: If battery is "good," battery indicator will normally be off. It will only show green for several seconds when button is pressed.

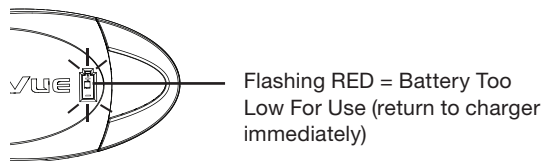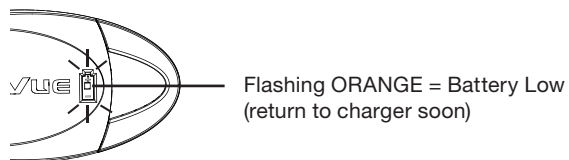


ACTIVATION LIGHTS

(When key is out of charger)


ACTIVATION LIGHTS

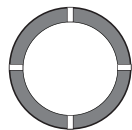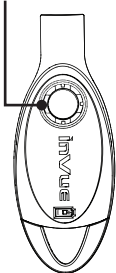


All BLUE light =
Up to 12 hours of activation left

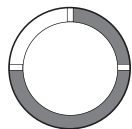


3/4 BLUE light =
Up to 9 hours of activation left

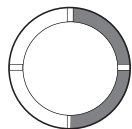

1/2 BLUE light =
Up to 6 hours of activation left

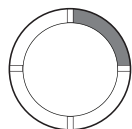


1/4 BLUE light =
Up to 3 hours of activation left

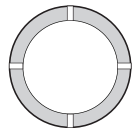


All RED light =
Deactivated (return to programming station)

ALL LIGHTS

(When key is out of charger)

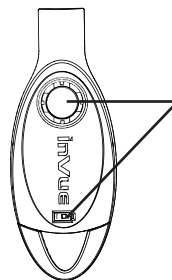

If no lights present when pressing button, return to charger for at least 3 hours.

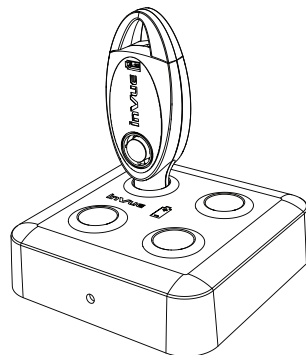

BATTERY WARNINGS

- › Key contains a lithium-ion battery
- › Battery is not replaceable
- › Entire device should be recycled at an approved center for rechargeable batteries
- › Use IR2 Charger only
- › Do not immerse in water
- › Do not place in fire or heater
- › Do not disassemble, puncture or pierce



tough security made easy

www.invuesecurity.com

Corporate Office (North America) // 704.752.6513 • 888.55.INVUE

Europe, Middle East & Africa // +31.23.8900150

Asia Pacific // +852.3127.6811

Latin America // +52.55.9000.3957