


Control Panel

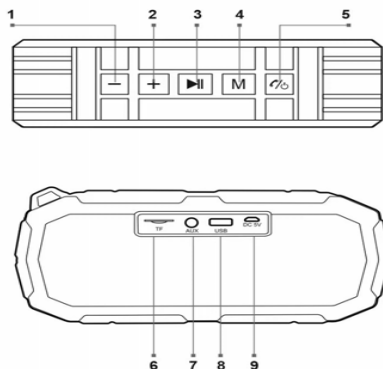

1. - : Short press to select previous track in Bluetooth/USB/TF Card Modes. Select previous preset frequency in FM mode. Long press to decrease the volume.
2. + : Short press to select next track in Bluetooth/USB/TF Card Modes. Select next preset frequency in FM mode. Long press to increase the volume.
3. ▶||/SCAN: Play or Pause in Bluetooth/USB /TF Card Mode. When in FM mode, short press to scan for available frequencies.
4. MODE/TWS: Toggle between source Bluetooth/USB/ TF Card/ FM Radio. When in Bluetooth mode, long press will be in TWS mode.
5. 🔊: Turn ON/OFF Unit's power supply. Short press to answer/hang up phone call.
6. TF Card Slot: Insert TF card to listen stored tracks.
7. Aux Input: Connect external media player using 3.5mm line in cable.
8. USB Slot: Insert USB Drive to listen stored tracks.
9. DC 5V IN: Use included charging cable to charge unit. (Adaptor not included).

LAX-MAX®
NEW GENERATION

Portable Speaker



LK-SPM70

Congratulations on purchasing the Lax-Max Wireless Portable Speaker
Please read this instruction manual prior to using this unit.

Features:

- Wireless Connection
- TWS Function
- Support USB/TF card
- FM Radio
- Aux Input
- Hands – Free Function
- IPX Waterproof

Accessory

- USB Charging Cable: 1 piece
- Carrying Strap: 1 piece



Bluetooth Connection

Use Bluetooth mode to stream music from a Bluetooth enabled player (eg., smartphone, or tablet device). A device must be paired with the unit before using them together for the first time.

- Make sure Bluetooth is enabled on your device and that it's next to the unit before attempting to pair it.
- Turn on the unit and set it to Bluetooth mode (press the mode button). The unit will automatically enter pairing mode.
- Use your device to search for nearby Bluetooth devices. The speaker will be listed as "SPM70"
- Select "SPM70" from the list of found/available devices.

TWS Connection

- TWS connection: TWS connection is only for two active speakers of same model, cannot support quantity over 2 PCS.
- Turn on two same speakers, press the MODE button to switch to BLUETOOTH mode for both speakers.
- Long press the MODE (TWS) button on one speaker. Then two speakers will automatically connect together.
- Pair your Bluetooth: use your device to search and connect for nearby Bluetooth devices.

USB/TF Card

- Insert the USB or TF card into the USB/TF slot. It will read the MP3 format music automatically.
- Press ▶|| to Play/Pause, short press - and + to Prev. and Next, long press - the and + buttons to decrease and increase the volume.

Warning: When the rear flap is open, this speaker is not protected from water. Please make sure the rear flap is closed when near water or inside the rain.

FM RADIO

- Press the MODE button to change to FM radio mode.
- Press the ▶|| button to scan for available frequencies.
- Once it is done scanning, you can short press - or + to move forward or backward. Long press the - and + buttons to decrease and increase the volume.

Noted: When in FM mode, connect the included USB charging cable to the unit as an external antenna for scanning FM radio stations

AUX MODE

- Use 3.5mm Aux cable
- Connect one end of the cable to the AUX port of the speaker and the other end to your audio device. You can now play your music.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.