

FM/AM Clock Radio

Operating Instructions

ICF-C707

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.



No Power No Problem is a trademark of Sony Corporation.

©2010 Sony Corporation

Printed in China



* 4 1 8 0 7 2 1 1 4 * (1)

http://www.sony.net/

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I

I


I

I

I

I

I

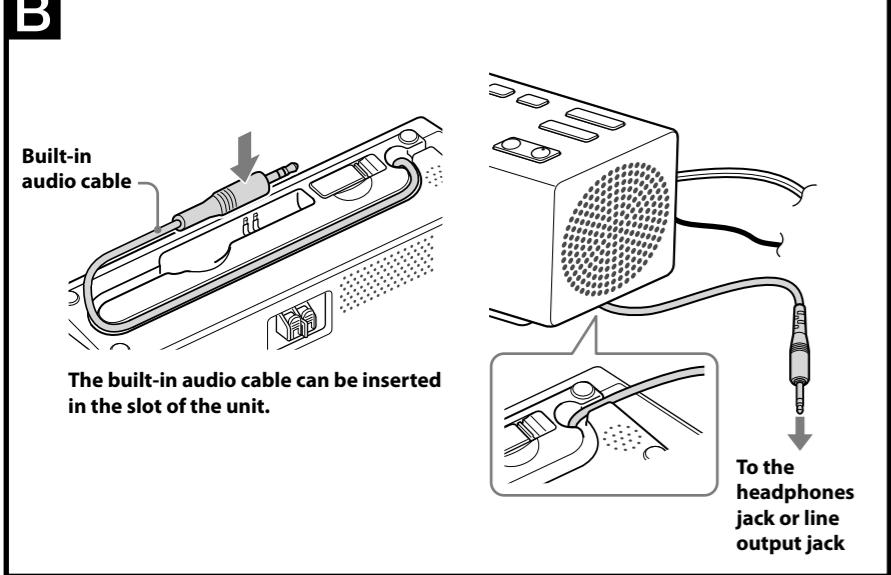

Setting the clock for the first time

This unit is preset to current EST (Eastern Standard Time) at the factory, and is powered by a backup battery. All you need to do the first time is just plug it in and select your time zone.

- 1 Plug in the unit.
"year" (about 4 seconds) → "month and date" (about 4 seconds) → "current EST (Eastern Standard Time)" appears in the display in turn.

- 2 Press and hold **DATE/TIME ZONE** for at least 2 seconds.
Area number "2" flashes in the display.

- 3 Press **TIME SET +** or **-** repeatedly to select the time zone as follows:

Area number	Time zone
1	Atlantic standard Time
2	Eastern standard Time (default setting)
3	Central standard Time
4	Mountain standard Time
5	Pacific standard Time
6	Yukon standard Time
7	Hawaiian standard Time

- 4 Press **DATE/TIME ZONE** to set.

Notes

- Though the clock is correctly set at the factory, discrepancies may arise during transport or storage. If necessary, set the clock to the correct time by referring to "Setting the clock."
- While setting the time zone, you must perform each step within 65 seconds, or the time zone setting mode will be cancelled.

When daylight saving time (summer time) begins

This model automatically adjusts for daylight saving time (summer time).

"*****" is displayed from the beginning of daylight saving time (summer time), and disappears at the end of daylight saving time (summer time) automatically.

- Daylight saving time (summer time) begins at: 2:00 AM on the second Sunday of March.
- Standard time begins at: 2:00 AM on the first Sunday of November.

To cancel Automatic DST/Summer Time adjustment during the daylight saving time (summer time) period

Automatic DST/Summer Time adjustment can be canceled.


Press and hold **DISPLAY/CLOCK** and **SNOOZE / BRIGHTNESS** at the same time for at least 2 seconds while the clock is displayed. "*****" and "OFF" appear in the display to show that Automatic DST/Summer Time adjustment has been canceled. The display returns to the clock.

Notes

- Time change of Automatic DST/Summer Time adjustment (see above) is subject to variations in circumstances and laws of each country/region. Cancel Automatic DST/Summer Time adjustment and set the DST display manually as necessary. Customers living in a country/region that does not use daylight saving time (summer time) must cancel Automatic DST/Summer Time adjustment before using the unit.
- To activate Automatic DST/Summer Time adjustment again, press and hold **DISPLAY/CLOCK** and **SNOOZE / BRIGHTNESS** at the same time for at least 2 seconds. "*****" and "On" appear in the display to show that Automatic DST/Summer Time adjustment has been activated. The display returns to the clock.

Setting the clock

- 1 Plug in the unit.
- 2 Press and hold **DISPLAY/CLOCK** for at least 2 seconds.
The year starts to flash in the display.
- 3 Press **TIME SET +** or **-** repeatedly to set the year.
- 4 Press **DISPLAY/CLOCK**.
- 5 Repeat steps 3 and 4 to set the month, day, hour and minute, and then press **DISPLAY/CLOCK**.
The seconds start incrementing from zero.

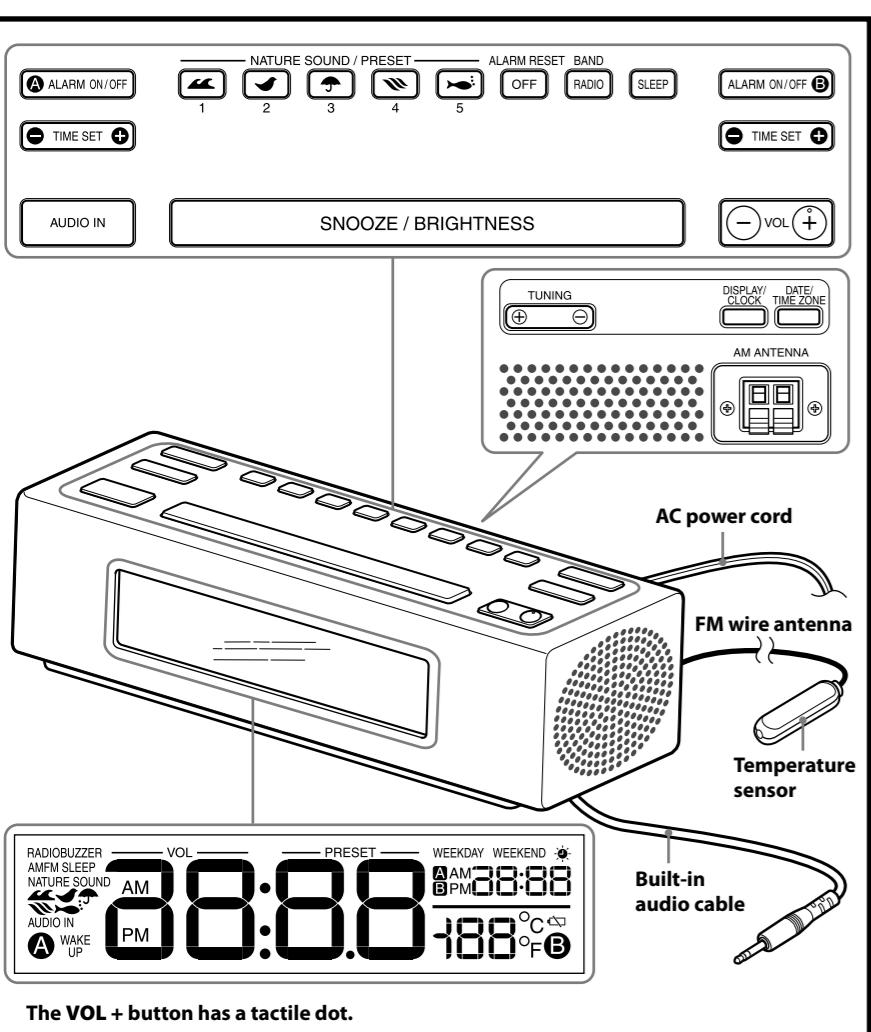

The **VOL +** button has a tactile dot.

Improving the reception

FM: Extend the FM wire antenna fully to increase reception sensitivity.

 
AM: Connect the supplied AM loop antenna to the unit. Rotate the antenna horizontally for optimum reception.

Note on radio reception

Keep digital music players or mobile phones away from the AM loop antenna or the FM antenna, as this may lead to reception interference.

Setting the brightness of the display

Three levels of brightness are available by pressing **SNOOZE / BRIGHTNESS**.



Note

When the alarm is sounding, the brightness function cannot be used.

Playing the radio

Manual tuning

- 1 Press **RADIO · BAND** to turn on the radio and select the AM or FM band.
- 2 Press **TUNING +** or **-** to tune in to a desired frequency.

- 3 Adjust the volume using **VOL +** or **-**.

Tuning in to a station

The unit automatically scans AM or FM stations.

- 1 Press **RADIO · BAND** to turn on the radio to select the AM or FM band.
- 2 Press and hold **TUNING +** or **-**.

- +**: scans upward through the frequency bands.
- : scans downwards through the frequency bands.

Scanning starts from the currently-tuned frequency. When a station is received, scanning stops.

- 3 Adjust the volume using **VOL +** or **-**.

Preset tuning


You can preset 5 stations for FM and 5 stations for AM.

Presetting a station

- 1 Follow steps 1 and 2 in "Manual tuning" to tune the frequency you wish to preset.

- 2 Hold down the desired **NATURE SOUND / PRESET 1** to **5** button until you hear two beeps.

Example: The following display appears when you preset FM 105.7 MHz to preset number 3 for FM.

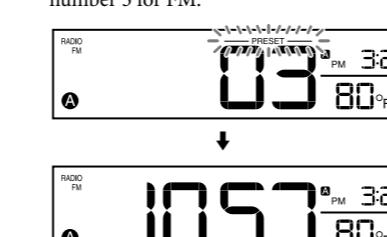

The display shows the frequency for a few seconds and then changes back to the current time.

To change the preset station, tune into the desired station and hold down the **NATURE SOUND / PRESET 1** to **5** button until you hear two beeps.

To preset another station, repeat these steps.

Note

If you try to store another station with the same preset number, the previously stored station will be replaced.

Tuning in to a preset station

- 1 Press **RADIO · BAND** to turn on the radio and select the AM or FM band.

- 2 Press **NATURE SOUND / PRESET 1** to **5** where the desired station is stored.

- 3 Adjust the volume using **VOL +** or **-**.

The seconds start incrementing from zero.

Selecting a Nature Sound

This unit includes 5 types of Nature Sounds: (Sea Waves, Birds, Rain, Brook and Under the Sea.)

You can choose any one of these by pressing the corresponding button.

Playing the radio

Manual tuning

- 1 Press **RADIO · BAND** to turn on the radio and select the AM or FM band.
- 2 Press **TUNING +** or **-** to tune in to a desired frequency.

- 3 Adjust the volume using **VOL +** or **-**.

Setting the alarm

The dual alarm function allows you to set two alarm programs (**ALARM ON/OFF A** and **ALARM ON/OFF B**).

The alarm time can be set for each program and the alarm sound is selectable from "NATURE SOUND," "RADIO" or "BUZZER."

Notes

- Before setting the alarm, make sure to set the clock. (See "Setting the clock")
- The factory setting alarm time is "PM 12:00."
- To set the radio alarm, first preset your favourite station. (See "Presetting a station")
- While setting the alarm, you must perform each step within 65 seconds, or the alarm setting mode will be cancelled.

To set the alarm

- 1 Press and hold **ALARM ON/OFF A** or **B** for a few seconds.

- 2 Press **TIME SET +** or **-** to set the desired hour, and press **ALARM ON/OFF A** or **B**.

- 3 Press **TIME SET +** or **-** to set the desired minute, and press **ALARM ON/OFF A** or **B**.

- 4 Press **TIME SET +** or **-** to set the desired alarm period ("WEEKDAY," "WEEKEND" or everyday*), and press **ALARM ON/OFF A** or **B**.

- * In the case of everyday, both "WEEKDAY" and "WEEKEND" are displayed.

- 5 Press **TIME SET +** or **-** to set the desired alarm mode ("NATURE SOUND," "RADIO," or "BUZZER"), and press **ALARM ON/OFF A** or **B**.

- You can choose one of 3 settings: "NATURE SOUND," "RADIO," or "BUZZER." Set the alarm mode as follows:

- NATURE SOUND: see "A" Setting the Nature Sound alarm."

- RADIO: see "B" Setting the radio alarm."

- BUZZER: see "C" Setting the buzzer alarm."

- 6 Set the alarm again.

Setting the Nature Sound alarm

- 1 Perform steps 1 to 5 in "To set the alarm."

- 2 Press **TIME SET +** or **-** to select "NATURE SOUND" alarm mode, and press **ALARM ON/OFF A** or **B**.

- "NATURE SOUND" appears in the display.

To change an alarm setting

There are two ways to set the alarm:

- ① To change all alarm settings

Set the alarm again.

To deactivate the sleep timer

Press **SLEEP** repeatedly to set the sleep timer to "OFF" in step 2.

To change an alarm time only

When setting the alarm (**ALARM A** or **B** appears), this function is available.

Press and hold **TIME SET +** for at least 2 seconds to move the alarm time forward. Press and hold **TIME SET -** for at least 2 seconds to move the alarm time back. When you release the button, the changed time will be displayed for about 2 seconds. To change the alarm time, press **TIME SET +** or **-** within these 2 seconds, otherwise the setting change will be fixed as displayed.

To dose for a few more minutes

Press **SNOOZE / BRIGHTNESS**.

The sound turns off but will automatically come on again after about 10 minutes.

You can change the snooze time by pressing **SNOOZE / BRIGHTNESS** repeatedly within 4 seconds.

The maximum snooze time is 60 minutes.

To stop the alarm

Press **OFF · ALARM RESET** to turn off the alarm.

The alarm will sound again at the same time depending on the next day setting.

To deactivate the alarm

Press **ALARM ON/OFF A** or **B** to turn off the **ALARM A** or **B** indicator in the display.

Note on the alarm in the event of a power interruption

In the event of a power interruption, the alarm will work until the internal battery is worn out. However, certain functions may be affected as follows:

- The backlight will not light up.

- If the alarm mode is set to Nature Sound or radio, it will change to BUZZER automatically.

- If a power interruption occurs while the alarm is sounding, the alarm will stop.

- If **OFF · ALARM RESET** is not pressed, the alarm will sound for about 5 minutes.

- If "**□**" appears in the display, the alarm will not sound in the event of a power interruption. Replace the battery if "**□**" appears.

- The snooze function will not work.

- During a power interruption, the alarm will sound at the set time only once.

Using the temperature function

This unit includes an external temperature sensor, allowing you to monitor ambient temperature.

The temperature is displayed in Fahrenheit or Centigrade.

To switch between Fahrenheit and Centigrade, press and hold the **SNOOZE / BRIGHTNESS** and **DATE/TIME ZONE** buttons for more than 2 seconds.

Notes

- In the example, the display shows Fahrenheit; however, Centigrade can also be displayed.

- Do not use in water.

- Do not forcefully pull on the external temperature sensor. Improper use of the external temperature sensor may cause a malfunction