



USER MANUAL FPSD SERIES



Email:Support@tigerkingsafe.com

Facebook:@TIGERKINGSAFES

Messenger:m.me/TIGERKINGSAFES

go to our web
www.tigerkingsafe-us.com
click **chat with us** to have live
conversation

Version:V202303

FIREPROOF SAFE

MANUAL

STRUCTURE

01 STRUCTURE

02 FIRST OPENING INSTALL BATTERIES

03 SET UP THE CODE

04 OPEN THE DOOR CLOSE THE SAFE

05 DUAL ALARM SYSTEM SILENCE MODE

06 CUSTOMER SUPPORT & WARRANTY

WARNING

PLEASE DO NOT MOVE THE SAFE WHILE THE DOOR IS OPEN.
PLEASE DO CLOSE THE DOOR BEFORE MOVING THE SAFE.

Tigerking safe recommends that you do not store loaded guns in this unit.

If you experience any problems or challenges with your safe, please feel free to contact us for quick response. Many issues can be resolved promptly without the product needing to be returned.


Our customer support team is always available to answer any questions and help to resolve all concerns you may have.

Email: Support@tigerkingsafe.com

Facebook: [@TIGERKINGSAFES](#)

Messenger: [m.me/TIGERKINGSAFES](#)

go to our web
www.tigerkingsafe-us.com
click [chat with us](#) to have live conversation

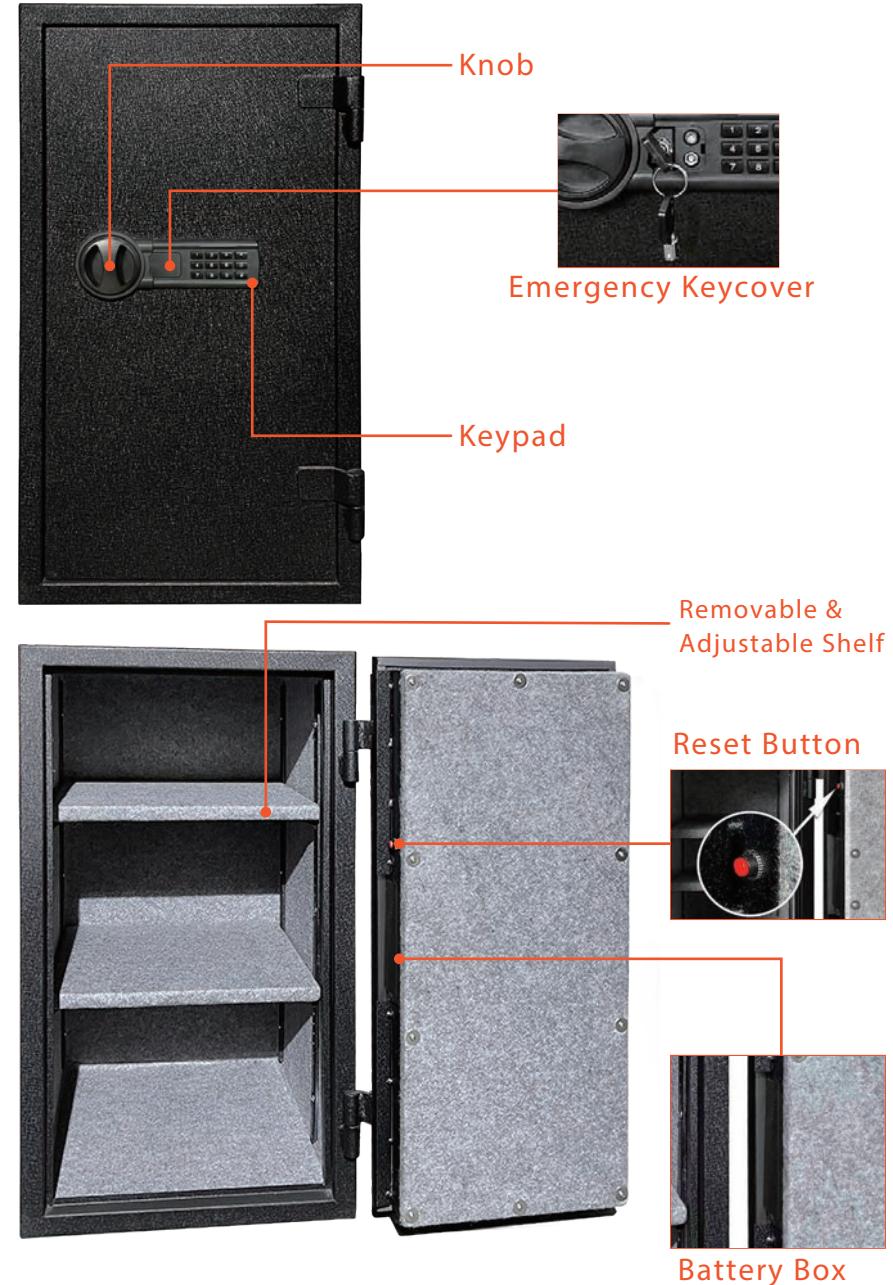

NOTICE:

Different modes have different numbers of shelf .

FIRST OPENING



STEP 1: Locate the 2 emergency keys (the black key) in the same bag as the instruction booklet.

STEP 2: Locate the emergency key hole by pushing the left side of the emergency lock cover;

STEP 3: Align the emergency key with the key hole and fully insert, turn the key counterclockwise to the limit, and hold on it.

STEP 4: At the same time, rotate the knob clockwise to open the safe.


NOTICE:

1. When you rotate the knob clockwise, you must have the key fully inserted and turned counterclockwise to the limit, keeping the key until the safe unlocked and opened.
2. Please keep the keys in a secure place, do not lock the keys inside the safe.

INSTALL BATTERIES

STEP 1: After first opening, keep the safe open and locate the battery compartment on the hinge.

STEP 2: Prepare 4 brand-new AA batteries (not included) and insert into the battery compartment by matching the + & - electrode;

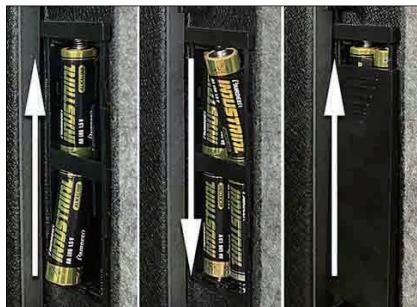

NOTICE:

1. Please use brand-new batteries, do not mix used batteries with new batteries;
2. Replace the batteries when the red indicate light turns on, it means the batteries are running out of power.


SET UP THE CODE

◆ The default code is "159". The safe can be set with two codes.

SET UP FIRST CODE

STEP 1: Open the safe, keep the safe opening;

STEP 2: Press the reset button (a red button in the hinge side of the door), the safe beeps twice, meanwhile blue indicate light flashes twice then keep lighting.

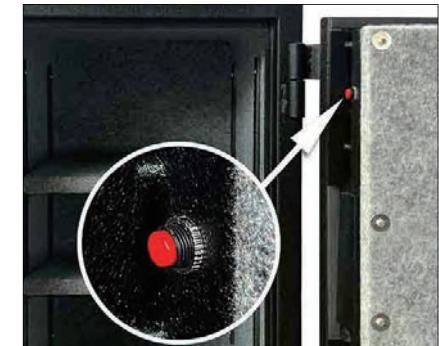

STEP 3: Input a new code, 3-8 digits and press #, the new code will be confirmed by two "beep" and the blue indicate light will flash twice then turn off.

STEP 4: Testing the code before you close the door.

SET UP SECOND CODE

STEP 1: Open the safe, keep the safe opening;

STEP 2: Press "0" twice and then press the reset button (a red button in the hinge side of the door), the safe beeps three times, meanwhile blue indicate light flashes three times then keep lighting.



STEP 3: Input a new code, 3-8 digits and press #, the new code will be confirmed by two "beep" and the blue indicate light will flash twice then turn off.

STEP 4: Testing the code before you close the door.

NOTICE:

1. 10 seconds without any operation after pressing the reset button, it will go back to standby mode, you need to retry from "STEP1";
2. Please set up both of two codes immediately after receiving the safe.

OPEN THE DOOR

◆ THIS SAFE CAN BE UNLOCKED IN BELOW TWO WAYS:

FIRST WAY:

Open the safe with key.

Please refer to the step "FIRST OPENING".

◆ SECOND WAY:

Open the safe with code.

STEP 1: Enter your owner code , each pressing results one buzzer "beep" and the blue light flash;

STEP 2: Press # button as confirmed, if the code is correct, the blue light will flash twice and buzzer "beep" twice, then the green light will turn on 6S, meanwhile the inner LED light will turn on 30s; if the code is incorrect, the blue light will flash three times and safe beeps three times.



STEP 3: Turn the knob clockwise to open the safe after you entered the correct code and while green light turns on.

NOTICE:

1. When press wrong digit, please press "*" to remove all digits inputted then re-input code.
2. The inner LED light will only turn on when you use the second way to open the safe;
3. The default code is "159#".

CLOSE THE SAFE

Close the door and rotate the knob counterclockwise.

DUAL ALARM SYSTEM

1. Continuously inputting wrong code three times, the safe will automatically lock about 20 seconds and the buzzer will go off, any action at keypad is invalid.

2. Continuously wrongly input for three times after the first alarm, the safe will automatically lock around 5 minutes and the alarm will go off for the second time, any action at keypad is invalid during that time.

3. The beeps can be stopped by:

step 1: Use the key to open the safe;

step 2: Remove the battery to cut off the power.

SILENCE MODE

Sound Off

Press "00" and then press " * " as confirming, the sound will turn off, no "beep" during operation.



Sound On

Press "66" and then press " * " as confirming, the sound will turn on, the beep and sound will be restored.

NOTICE:

After power-cut, the sound will turn on.

Where could I find the instruction video?
To see the tutorial video:

1. Go to our Facebook: **@TIGERKINGSAFES**
2. Go to our Youtube channel:
<https://www.youtube.com/@tigerkingsafe>
3. contact us to get the videos (24/7):
Messenger: m.me/TIGERKINGSAFES
Email : Support@tigerkingsafe.com

go to our web
www.tigerkingsafe-us.com
click **chat with us** to have live
conversation

What should I do if losing the keys?

If lost emergency key ---

The numbers on the emergency key or the number in the emergency key
hole.

Customer Support /Warranty

The possible problem you might meet:

1. Cargo damaged
2. Missing accessories
3. Unsatisfied with the safe
4. Or any other setting problem

We encourage you to contact us (24/7):

Messenger: m.me/TIGERKINGSAFES
Email : Support@tigerkingsafe.com

We offer 1 Year Warranty for our client and we shall find solution for you.

For details,please refer to our warranty card or contact us at
“ support@tigerkingsafe.com ”.

Thank you for your time to read



TIGERKING

Professional, Efficient, Competitive



FPSD40



FPSD50



FPSD66