

 
Wasserstein Wooden Birdhouse for Smart Camera

User Manual




W
WASSERSTEIN®

In the box

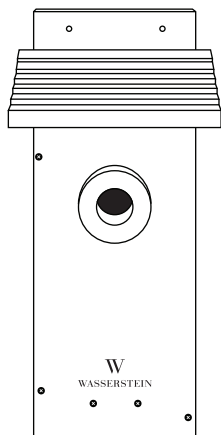


1 x Wooden
Birdhouse

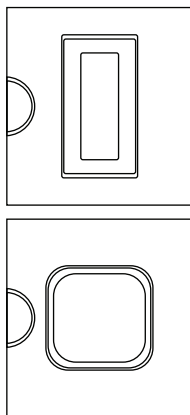

2 x Camera Holders
(compatible with Blink
& Ring cameras)




3 x Sticker Pads

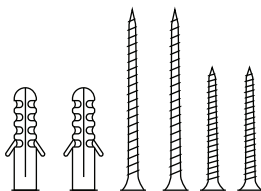


1 x Mounting Screw
& Anchors Set


Compatible Cameras

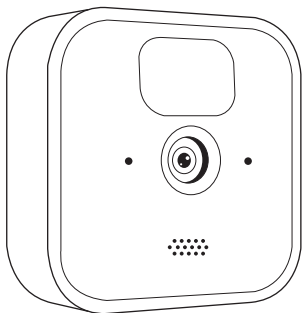

Blink outdoor 3

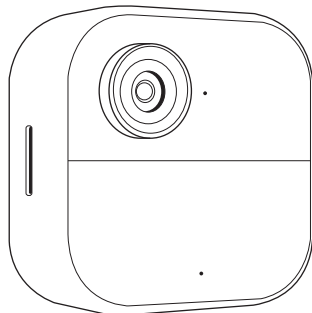

Blink outdoor 4

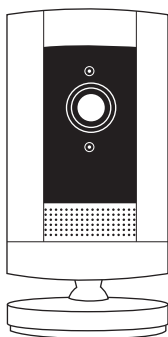

Ring Stick Up Cam Battery

Safety Precautions

- Read this manual and instructions carefully before use. Failure to follow the safety instructions could cause injury and damage to your property.
- This product contains small parts in the kit and can be a choking hazard. Keep small parts away from children.
- Be cautious of height-related hazards during installation. Make sure you have the necessary equipment and assistance with you.
- Wear protective gear when using power tools for installations.
- Ensure that the chosen wall or tree branch can support the birdhouse's weight.

Bird Watching Tips

- Install the birdhouse where birds likely will go, facing the south/southeast in a clearing with tall grasses or shrubbery.
- It may take months for birds to trust and use the birdhouse; patience is key.
- Try to manually capture footage daily, to monitor the progress of nesting and incubation stages of birds.
- Make sure to have enough battery for the hatching period.
- Open the birdhouse for battery replacement only when parent birds are absent, and limit this to under a minute.
- Feel free to contact us via our customer support for more questions.

Anti-Predator Guard Entrance

This birdhouse features a 1½ - inch entrance designed to deter predators and to welcome the following species:



Eastern & western
bluebird



Bewick's & carolina
wren



Tree swallow



Prothonotary
warbler



White-breasted
nuthatch



Violet-green
swallow



Tufted
titmouse



Red-breasted
nuthatch





House wren



Chickadees

Introduction to Parts

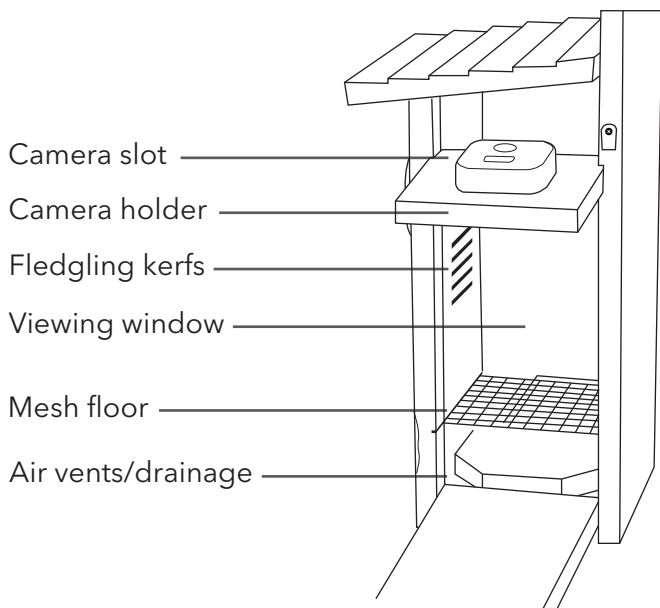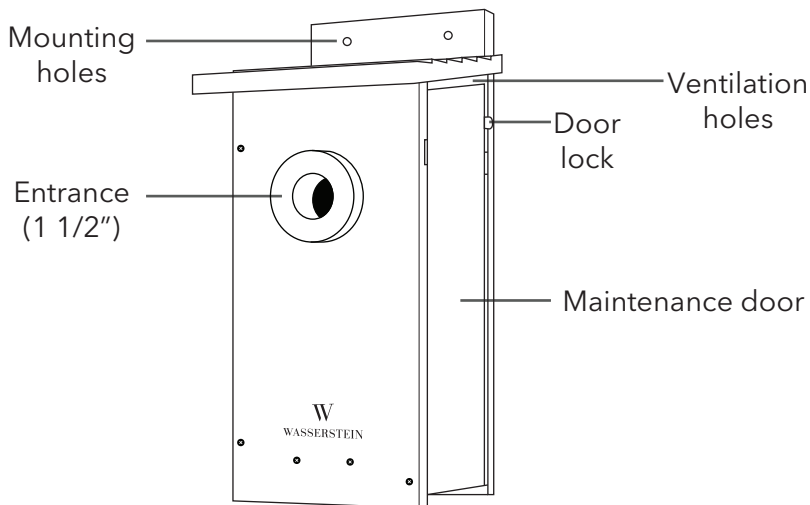


Preparation

- Get the required tools



Phillips screwdriver

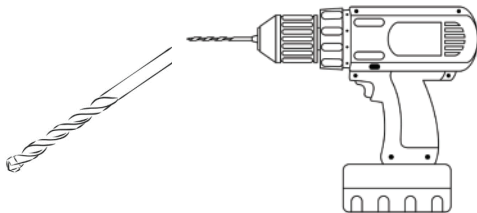


Drill bit and drill (optional)

- Fully charge your smart camera.
- Setup and connect the camera before the installation.
- Ensure your setup location has a strong WiFi signal.
- Ensure your camera is waterproof and all gaskets are closed before installing them outdoors.

Camera Setup



1. Fully charge your camera
2. Turn on your smart camera and follow the camera instructions to set it up.
3. Turn off the motion detection function and check the camera manually after the birds move in. The battery may drain very quickly.

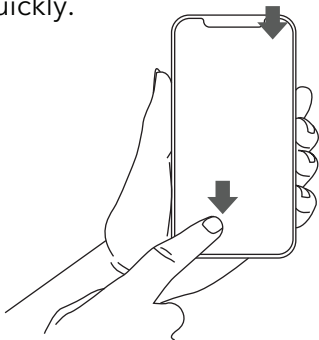

Motion detection




4. Ensure the camera is installed in an area with a strong signal; move the WiFi router closer to the birdhouse if necessary.

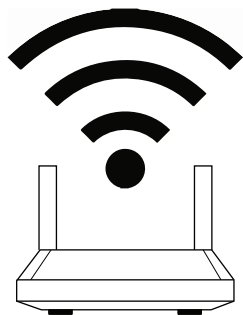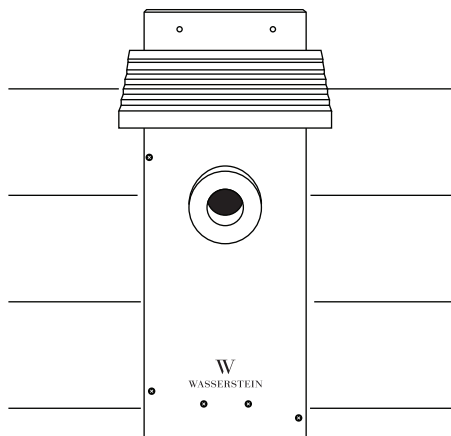


Installation


1. Unlock the maintenance door and remove all parts inside the birdhouse.

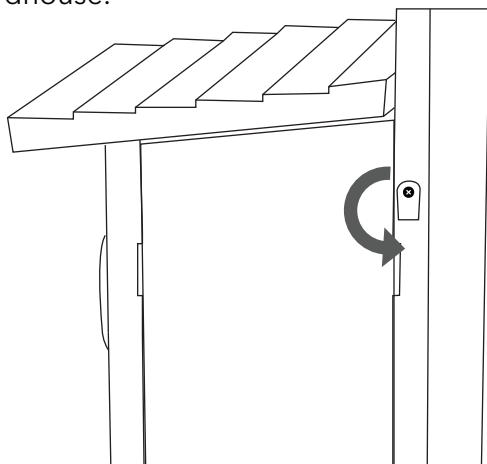

2. Remove all the packaging and protective film on the viewing window.
3. Select your camera holder and apply the sticker pad onto the camera holder.

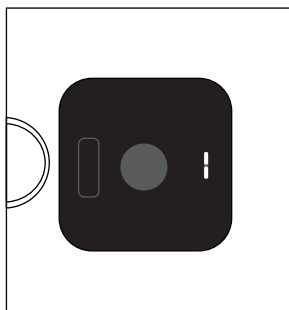


Blink Outdoor 4 /
Outdoor 3


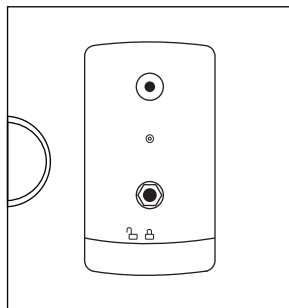


Ring Stick Up battery


4. Slide the camera into the designated slot.

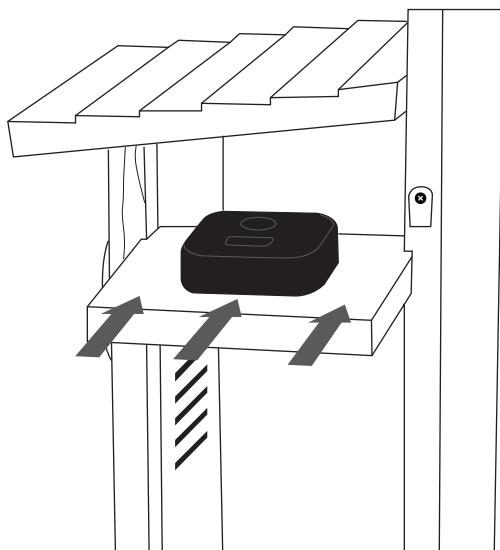


5. Check the view from the camera app.

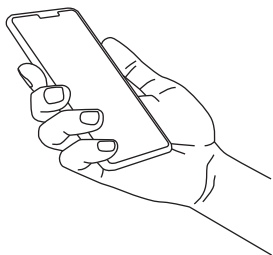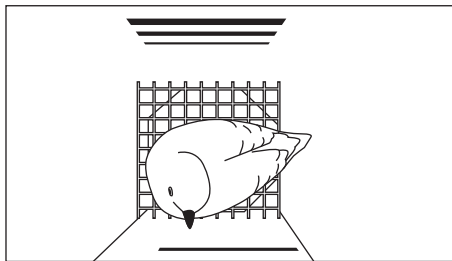


6. Close the door and lock the door firmly.

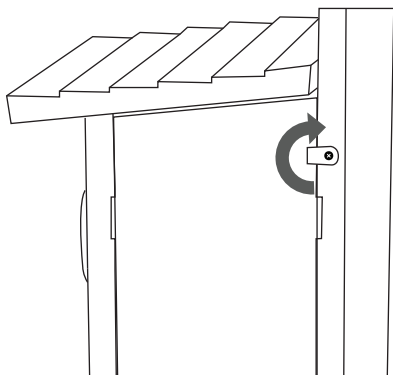


7. Install the birdhouse to your desired location using the screws and anchors provided.

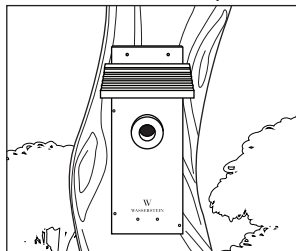


Tree trunk

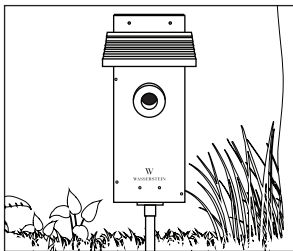


Pole mount
(not included)

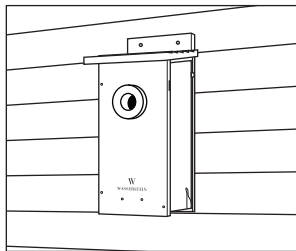

Wall

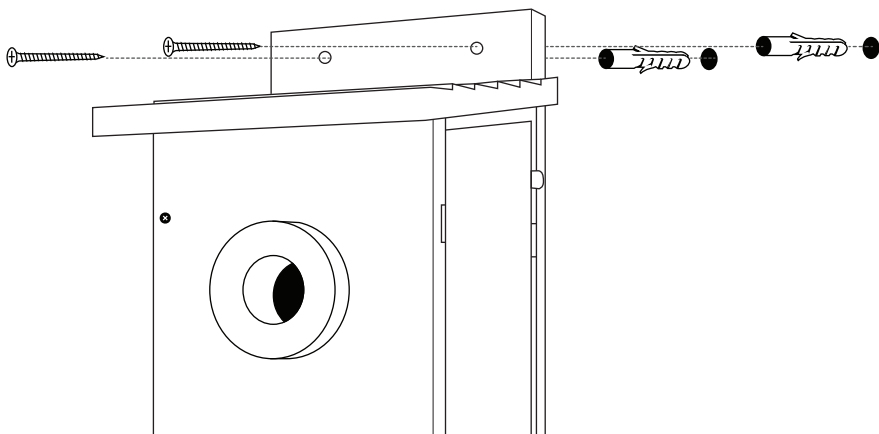


8. For a wired setup, ensure that cables are positioned below the air vent to prevent water from entering the birdhouse.

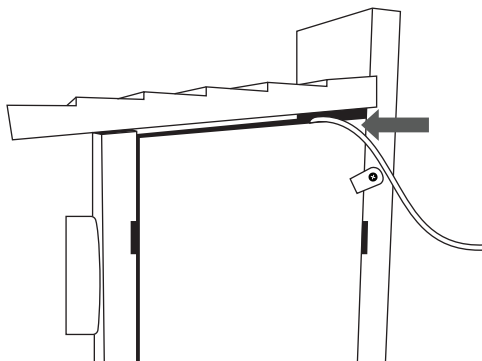


Cleaning



1. Clean the birdhouse of any debris once the birds have left, to maintain hygiene.
2. Release the stopper underneath to remove the viewing window.

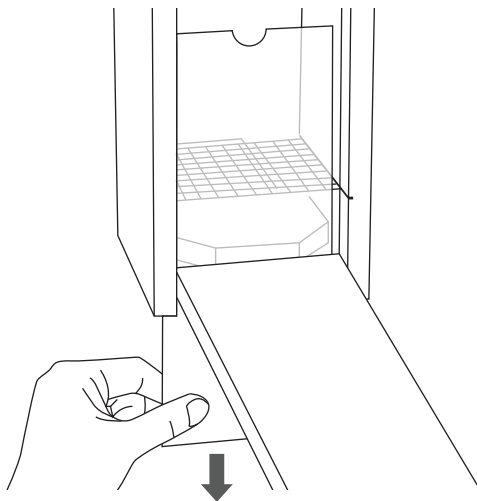

3. Remove the camera and its holder carefully.

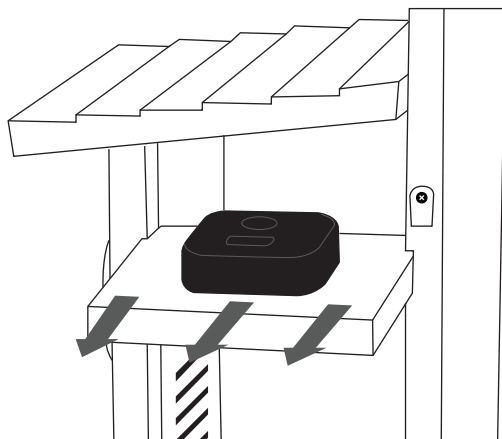

4. Remove the debris and wipe the mesh floor and interior with water and mild detergent only.

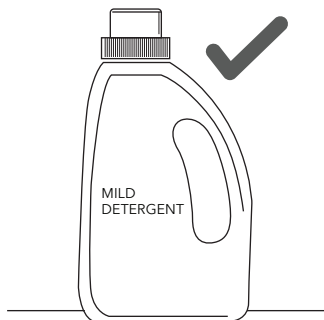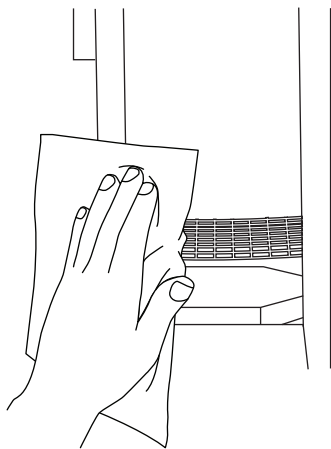


5. Let it dry completely before placing it back together.

Specifications

Model	: WA-BH01
Compatible cameras	: Blink Outdoor 4, Blink Outdoor 3, & Ring Stick Up Cam Battery
Dimensions	: 8.5 x 8.5 x 17.1 in (Overall structure) 5.3 x 5.1 x 9.6 inches (Interior nesting area)
Weight	: 5.0 lbs
Material	: Cunninghamia (Chinese Fir)
Mount Location	: Tree, wall, or pole (note: pole mount not included)

Get More Support

Scan the QR code below or email us at
contact@wasserstein-home.com

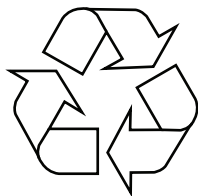

Camera is not included.

Ring Camera is a trademark of Ring Inc.

Blink Camera is a trademark

of Immedia Semiconductor Inc.

Wasserstein is a trademark of Dropcases Ltd.

Wasserstein is not affiliated with Ring Inc.

or Immedia Semiconductor Inc.

W
WASSERSTEIN®
Made in China