


WYBOT

ROBOTIC POOL CLEANER User Manual

Osprey 700

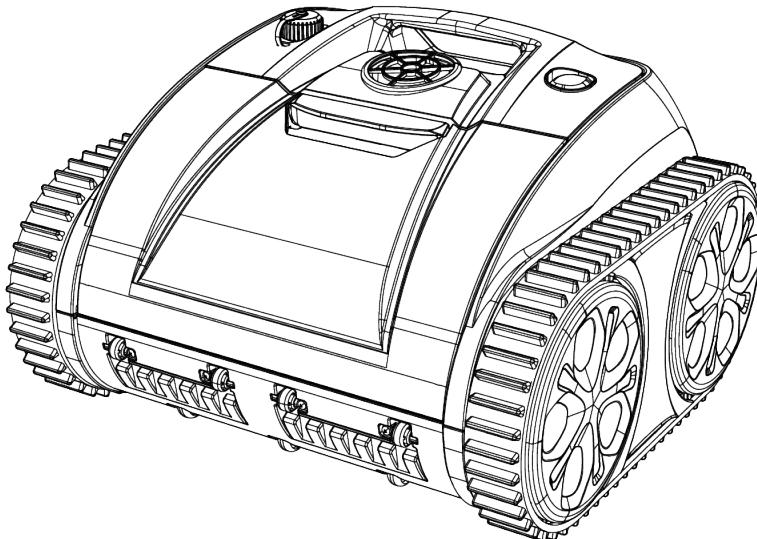

WYBOT

Thank you for purchasing Wybot™ Robotic Pool Cleaner. Please read through the entire manual before using your new robotic pool cleaner. We are not held liable for any loss or injury caused by improper use. If you encounter a problem with your Wybot™ product, please contact our customer service for assistance.

WYBOT Customer Service:

Email: support@wybotpool.com

Web: www.wybotpool.com

Facebook: @WybotPool

WYBOT™  [®]

CONTENTS

Important Precautions	01
1. Introduction.....	03
2. Packing List	03
3. Product Diagram.....	04
4. Specifications.....	05
5. Operations.....	06
5.1 Power button and indicator.....	06
5.2 Attention	07
5.3 Filter Cleaning.....	09
5.4 Charge the battery.....	10
5.5 Charger indicator	11
5.6 Installation of Floating Block	11
5.7 Pool water condition	13
6. Warranty.....	14



Important Precautions

Read and Follow All Instructions

1. Please read the manual carefully, and use the cleaner according to the manual. We are not held liable for any loss or injury caused by improper use.
2. Use the accessories recommended or sold by the manufacturer only.
3. Dry the charging port after removing the cleaner out of water and make sure the cleaner is switched off (the indicator is off) if you want to charge the cleaner.
4. Use the original and authorized power charger only, do not charge any other devices with this charger.
5. The power line must be connected to a leakage protected and earthed socket when charging.
6. Do not charge the cleaner if the environment temperature is above 35°C (95 °F) or below 5°C (41 °F)
7. Do not over charge the cleaner which will reduce the battery life.
8. The cleaner should be charged if it needs to be stored for a long time (over 6 months) to maintain battery life.
9. To reduce the risk of electrical shock, do not use the charger if the cord is damaged.
10. Never allow children to ride on it or play with it as a toy.
11. Do not power on the cleaner when it is out of the water.
12. Do not operate the cleaner when there are people in the pool.
13. Always clean and wash the filter tray after use.
14. Only professionals can disassemble the sealed driving kit of the cleaner.

15. Do not operate the cleaner while pool filter is running.
16. The cleaner should be stored in a cool and ventilated place, away from direct sunshine or any heat source, never cover it with anything that would cause internal electrical components overheating.

Save These Instructions


1. Introduction

The robotic pool cleaner Osprey 700 is a new type of rechargeable automatic cleaning equipment for swimming pools, cordless and easy to use.

2. Packing List

Item	Name	Quantity
1	Osprey 700	1 pc
2	Charger	1 pc
3	Retrieving hook	1 pc
4	Floating blocks	2 pcs
5	User Manual	1 pc
6	Quick Guide	1 pc

3. Product Diagram

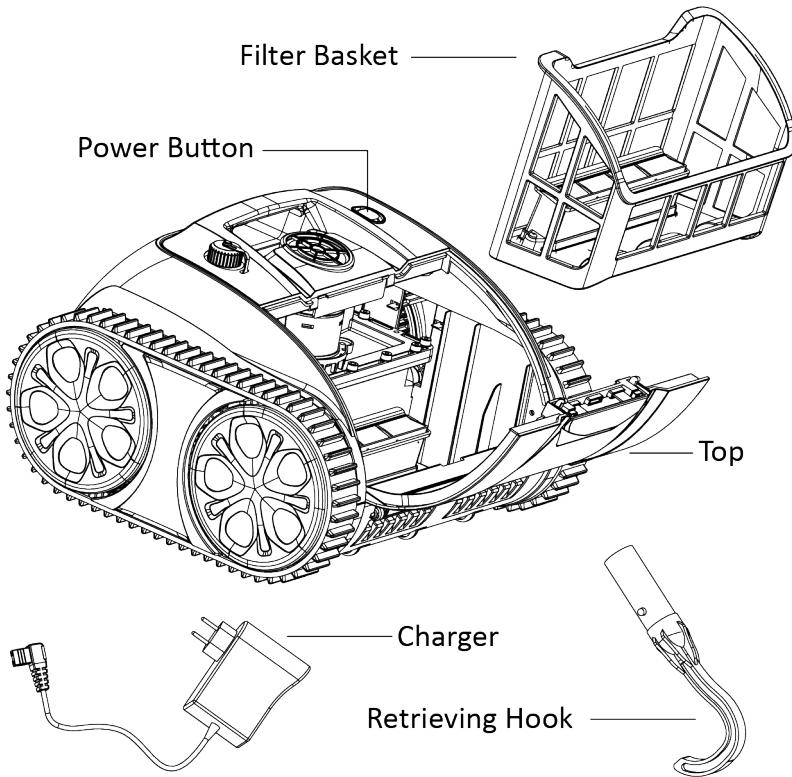


4. Specifications

1. Model	Osprey 700
2. Rated Working Voltage	10.8V
3. Power	65W
4. Run Time	Max. 120min for one cycle
5. Charger Input	100-240V, 50-60Hz
6. Charger Output	12.6V/3A
7. Battery Capacity	9200mAh
8. Charging Time	4.5 Hours
9. Pool Size	Up to 1300sq.ft (120m ²)
10. Flow rate	approx.10m ³ /h(2642gal/h)
11. Filter Density	180 µm
12. Moving Speed	approx. 36ft/min(11m/min)
13. Waterproof Grade	IPX8
14. Charging Environment Temperature	41 °F -95 °F (5°C -35°C)
15. Max Water Depth	13ft(4m)
16. Product Size	14.6(L)*14.1(W)*9.4(H) inches 372(L)*360(W)*240(H) mm
17. Weight	17.64lbs (8KG)
18. Storage Condition	41 °F -95 °F (5°C -35°C), RH≤75%

5. Operations

5.1 Power button and indicator

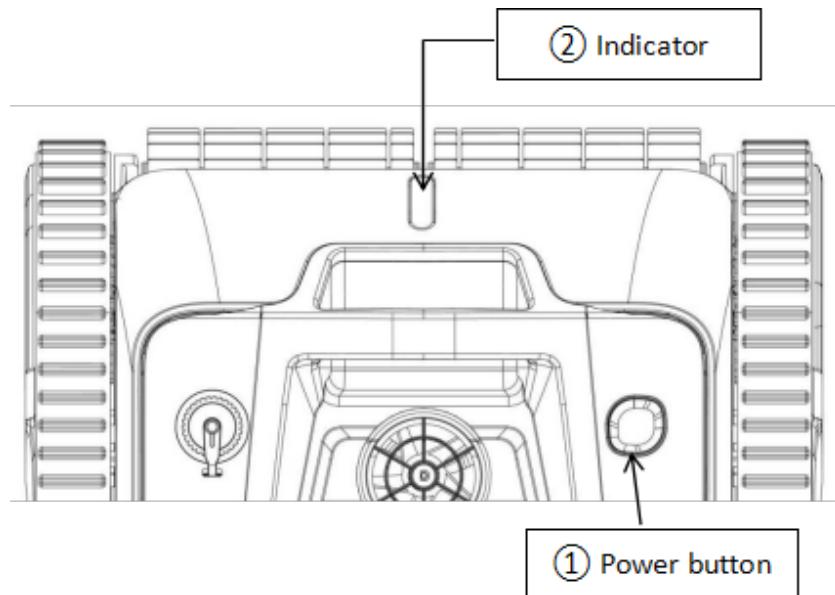


Item	Function	Description
①	Power on/off	Press the button, blue light indicates the cleaner is powered on. Press the button again, red light indicates the cleaner is powered off.
②	Indicator	1.Blue light is steady on: power on 2.Blue light flashes: the cleaner is working 3.Yellow light flashes: low battery and start to self-parking 4.Yellow light is steady on: self-parking finished


Note: When the yellow light is steady on, power off the cleaner and charge it. Running the cleaner in the pool after charging, if it fails to work, please contact after-sales service.

5.2 Attention

- Put into the pool with the cleaner bottom towards the wall. Hold on the robot and power on the cleaner. The cleaner will start working after 20 seconds when emptying trapped air inside (make sure to empty the inside air in order to make the robot work well), then the cleaner can immerse into the pool floor

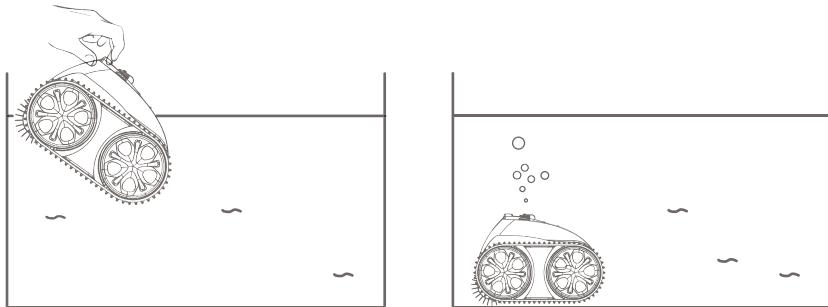


b. The cleaner will move to pool edge when finish working, then use the hook to lift it out of the pool

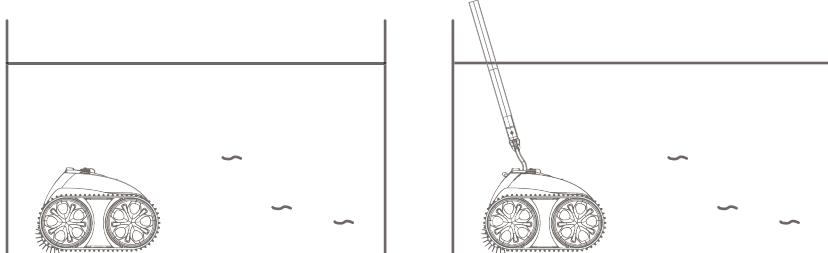


5.3 Filter Cleaning



a. Open the top cover: Put the robot aside the pool and open the top cover, the filter basket is located as shown in picture

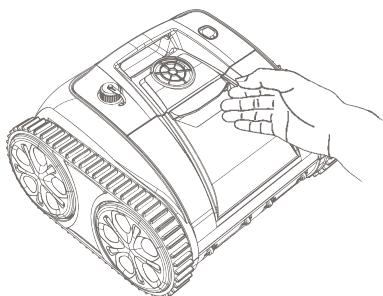

b. Take out the filter basket

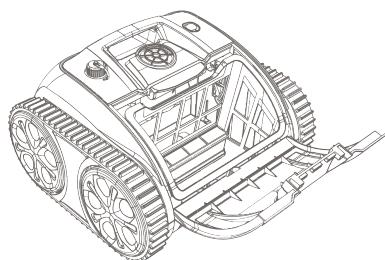


c. Wash filter basket

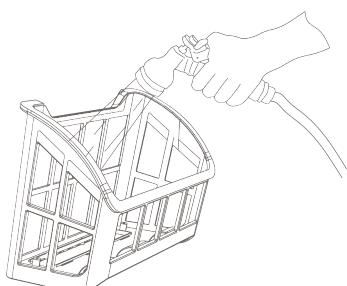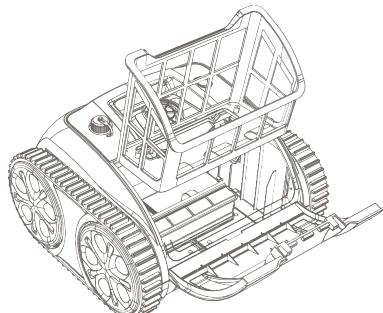

d. Re-install the filter basket in reverse steps.

5.4 Charge the battery

- a. Remove the cleaner from the pool
- b. Make sure the cleaner is powered off (no indicator flashes) and charging port is dry, attach the charger to the charging socket. Red light indicates it is charging, green light indicates it is fully charged.

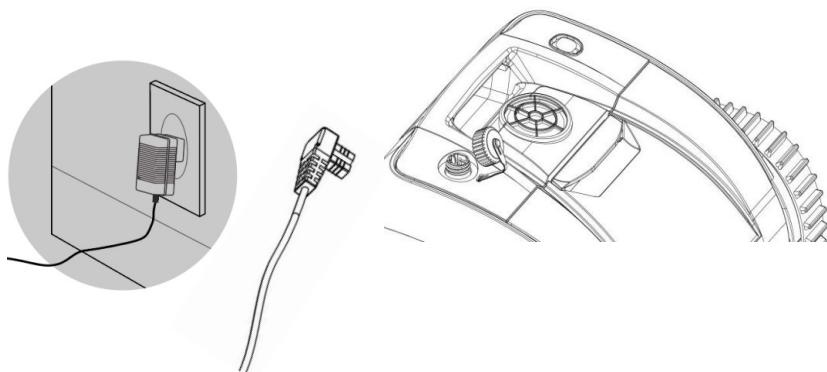

LED Indicator

Red - Charging in Progress

Green - Fully Charged

Note: Charge the cleaner indoor and at least 3m (appr. 10ft) from the edge of the pool for charging.

5.5 Charger indicator


Colour & Status of indicator	Charging status
Green light is steady on	Waiting for a recharge or connector not plugged or charging finished
Red light is steady on	The battery is charging
Red light flashes	Low battery or battery is damaged

5.6 Installation of Floating Block


Attention: If your robot is performing well, please ignore these instructions.

The following diagrams is limited to use of the floating blocks when the robot cannot climb the pool walls or not able to climb walls like used to.


- a. Open the filter cover and pick up the filter basket

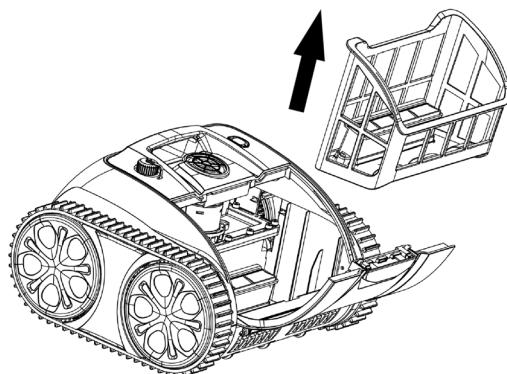

b. Tear off the protective film on the back of the floater and stick one by one according to the position shown in the figure

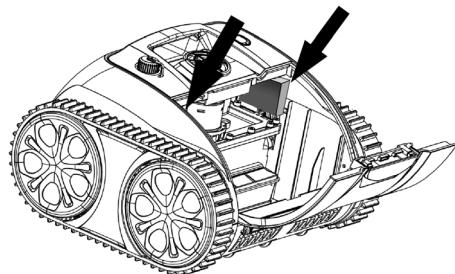

c. Install the filter basket and close the filter cover

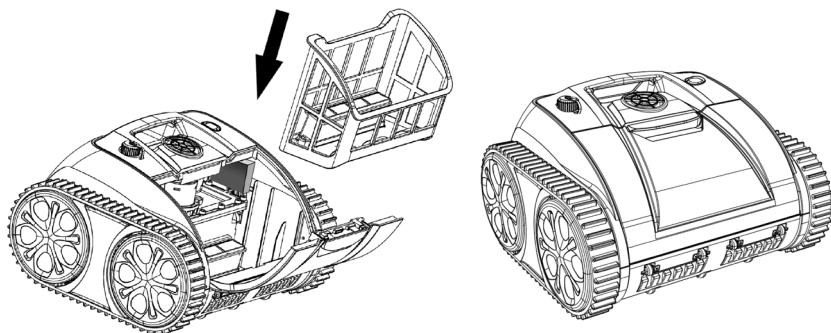

5.7 Pool water condition

Remark: The pool water condition must be within following parameters:

- PH: 7.0-7.4
- Temperature: 50 °F -95 °F (10°C -35°C)
- Salt: Max. 5,000 ppm
- Chlorine: Max. 2 ppm

6. Warranty

1. This product is covered by Wybot™ warranty for 24 months (only for driving kit and control box kit) from the date of purchase. Consumable parts are beyond warranty which include Filter Tray/ Brush/ Wheels/Nozzles.
2. This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized personnels.
3. The warranty extends only to manufacturing defects and does not cover any damage resulting from mishandling of the product by the owner.
4. The order number or record must be presented for any claim or repair during the warranty period.



Environmental programmes, WEEE European Directive

Please respect European Union regulations and help to protect the environment.



Return non-working electrical equipment to a facility appointed by your municipality that properly recycles electrical and electronic equipment. Do not dispose them in unsorted waste bins.

For items containing removable batteries, remove batteries before disposing of the product.

USER MANUAL