# QUICK **START**

Read this manual carefully and save it for future reference.

Disclaimer: The products, accessories, user interfaces, etc. illustrated in this guide are intended for reference only. Due to product updates, the actual product and the illustrations in this guide may vary.

# GET BETTER SECURITY WITH (+ Cam Plus

# **Record Full-Length Videos**

Get unlimited full-lenath video recordinas.

### **Smart Al Detection**

Detect people, packages, vehicles, and more

# **Back-to-Back Event Recording**

Capture everything without 5-minute gaps.

#### **Exclusive Discounts**

Get exclusive discounts on Wyze products.

Subscribe or learn more at mv.wvze.com.

 
## IN THE BOX

Wyze Duo Cam Doorbell × Back Plate × 1 Corner Kit × 1

USB-C Charaina Cable × 1 Wire Nuts × 3 Extension Wire × 1

Long Screws × 3


Wvze Wi-Fi Chime × 1 Short Screws × 4 Expansion Tubes × 3 Adhesive Tape × 1 Doorbell Detaching Pin ×1 Removable Battery Pack × Quick Start Guide ×1



Corner Kit

# MICROSD CARD INSTALLATION

 If you want to use a MicroSD card in your doorbell, install it before setting up the doorbell. Then insert the battery pack. (MicroSD card sold separately.)



# DOWNLOAD

Download the Wyze app and sign in or create an account.






Apple logo and App Store are trademarks of Apple Inc., registered in the U.S. and other countries and regions, Google Assistant, Google Home. Google Play, and the Google Play logo are trademarks of Google LLC.

# DOORBELL SETUP

Insert the battery pack and wait for 5 seconds until the status light flashes red.


Press and hold the RESET button on the back of the doorbell for 10 seconds, or until the voice prompt sounds.

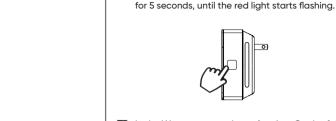


In the Wyze app, tap the + plus sign. On the Add menu, tap Device > Cameras > Wyze Wi-Fi Chime. Follow the in-app instructions to finish setup.

## **INSTALLATION METHODS**

 Installation with adhesive tape:




Installation with screws:

 

Installation with screws and powered by AC wire:



 the Back Plate:



Install the doorbell less than 6.6 feet above the ground.



 
Attach vour doorbell to



Install the Back Plate to the wall, then attach the doorbell.


The adhesive tape only works with the Back Plate, not the Corner Kit.

Insert the Detaching Pin into the small pinhole at the top of the doorbell and push in.



# OPTIONAL CORNER KIT

 To remove the camera from the Back Plate: attach the Back Plate.




Back Plate

Use the included Corner Kit to add 30° to the horizontal viewing angle. First, install the Corner Kit to the wall, then



 Angle (with Corner Kit



## LIGHT INDICATORS DURING INSTALLATION

Doorbell Back

Chime Side

Reset Button

- Screw Terminals

Charging Port

 
Removable

 
Reset Button

Battery Pack

Solid red light

The device is powered and initializing





Lens

Light Senso

Button

Speaker

Indicator

Speaker

Doorbell Front

Chime Front

- Microphone

Flashing blue light The device is connected and finishing setup

Solid blue light The device is working properly

# LIGHT INDICATORS AFTER SETUP





 
Solid blue light (AC Power)

The device is working properly and no operations are running

### WYZE CHIME LIGHT INDICATORS

Solid red light

The device is powered



Flashina red and blue lights

Connection is in progress Flashing blue light

The device is connected and finishing setup Solid blue light

The device is working properly

#### FCC WARNING Any changes or modifications not expressly approved by the party responsible for

measures:

compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the
- receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

#### FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

In the Wyze app, tap the + plus sign. On the Add menu,

tap Device > Cameras > Wyze Duo Cam Doorbell.

Follow the in-app instructions to finish setup.

#### ISED RSS WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, (2) This device must accept any interference, including interference that may cause undesired operation of the device.

#### ISED RADIATION EXPOSURE STATEMENT This equipment complies with ISED RE radiation exposure limits set forth for an

uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# WARRANTY INFORMATION

Your Wyze product is covered by a one-year limited warranty. You can view the limited warranty terms at https://www.wyze.com/policies/refund-policy.

Wyze and Wyze Duo Cam Doorbell are trademarks of Wyze Labs, Inc.

# CAUTION

Risk of fire or explosion if the battery is replaced by an incorrect type.

- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types):
- battery, that can result in an explosion:
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- · A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or ags.

Supplier's Declaration of Conformity Unique Identifier Trade Name: WYZE

Product Name: Wyze Duo Cam Doorbell Model No.: GW DBD Product Name: Wyze Wi-Fi Chime Model No.: GW\_WFCHM

Responsible Party - U.S. Contact Information U.S. Company Name: Wyze Labs, Inc.

Address: 8815 122nd Ave NE. Suite #201. Kirkland WA 98033 www.wvze.com/pages/contact-us

# **NEED HELP?**

Contact our Support Team: https://wvze.com/support

Join the Community: https://wyze.com/community







**CHIME SETUP** 

The Press the RESET button on the side of the chime

#### • Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a