



Quick Setup Guide

Welcome to the World of In-Home Gardening!


Simple Steps to Get Your AeroGarden Up and Growing (No Tools Required)



Harvest Elite

Model number:

100691-PPL / BSS / PCP / PSG

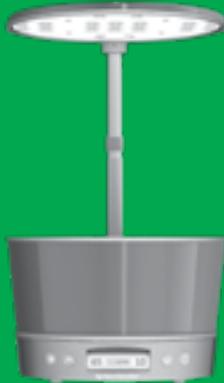

Harvest Elite 360

Model number:

100693-PPL / BSS / PCP / PRE



Harvest Elite Slim

Model number:


100695-PPL / BSS / PCP

Garden Input: 12Vdc, 2.5A • Adapter Input: 100~240Vac, 50/60Hz • Adapter Output: 12Vdc, 2.5A

Get Growing in 4 Fast & Easy Steps!


1

Make sure that Bowl is securely seated in Base and that Grow Deck is properly aligned on Bowl.

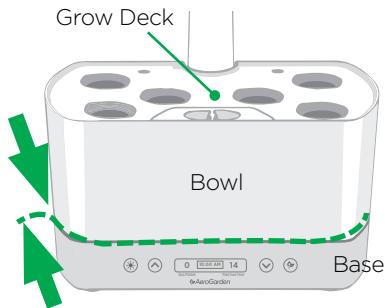


2

Make sure that Pump Cord is plugged into the connector at the back of the base. Plug in the Power Cord Adapter.

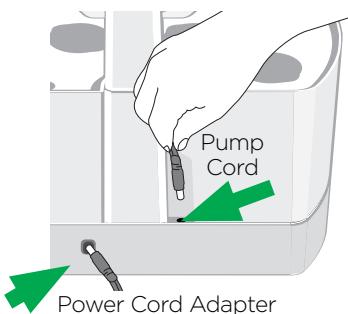

3


Add Water to 'Fill To Here'. Add Plant Food directly to Bowl as per instructions.

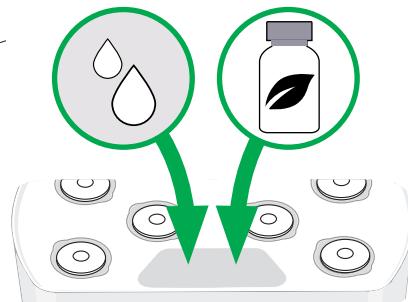

Remove Water Cover

4

Place Seed Pods in openings on the Grow Deck. Cover Seed Pods loosely with Grow Domes.

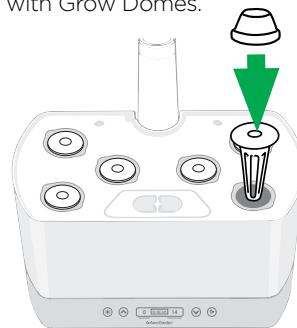

What's Inside



Garden with
LED Grow
Lights



Power Cord
Adapter



Grow
Domes



Seed
Pods



Plant
Food

Good To Know



65-76°F / 16-24°C
Ideal Temperature



Min / Max
Height



Keep Seed Pod
Labels On



After
Sprouting

What You Need



Just Add
Water

Control Panel & Garden Settings



Main Menu

- Touch the button to access your Menu options: set clock, start a new garden, plant select, lights ON timer, test pump.
- Touch the button to select and confirm changes.
- Touch the buttons to scroll between settings and time.
- Touch the button to temporarily turn LED Grow Lights On/Off. This will not affect the timing of your light cycle and occasional use will not harm your plants. Once pressed, the Lights will stay On/Off until the next time they are set to go On/Off.



Plant Food

- Add Liquid Plant Food to the Water Bowl when you first plant your Seed Pod Kit and when the 'Add Plant Food' reminder activates every 2 weeks.
- Follow directions on the Liquid Plant Food bottle for feeding amounts and top off the water level to 'Fill to Here.'
- Touch the button once to turn off the alert and reset the Plant Food timer.

Good To Know:

Your Pump cycle is set to be ON for 5 minutes and OFF for 25 minutes.

There is a Test Pump setting in your garden Menu options.



Watering

Watering

Your garden will alert you when the water level drops more than halfway below the 'Fill to Here' line.



Lights

Set Lights 'ON' Time

When you plug in your AeroGarden for the first time the Grow Light will come ON, and will continue to come ON at this same time every day. It will then turn OFF after the number of hours used for your Plant selection: Flowers 15.5 hrs. Veggies 16 hrs. Salads 16.5 hrs. Herbs 17 hrs. Custom 24 hrs.

If you would like to change the time of day when the light comes ON, go to your garden's Menu, touch the button, and scroll down with the button; then select 'Set Lights ON Time' to make the change. Your Grow Lights will now come ON at this time each day.

An Important Note About Lights:

Your AeroGarden Harvest has a built-in timer for the Grow Light that automatically provides your plants with the perfect amount of "sunlight." As long as your plants get this amount of light, it does not matter what time the lights are OFF. You may find it most convenient to have the lights go on in the morning and off at night, to match your own personal wake and sleep schedule.

To Start a New Garden

Access your garden's Menu options and select "Start a Garden." Then follow the screen instructions.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. CAUTION - You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

User Maintenance: Any servicing is to be performed by an authorized service representative. Use original packaging for storage when the appliance is not used.

Disconnect power before servicing or replacing lights. Use only AeroGarden LED Light replacement.

DO NOT SUBMERGE

HOUSEHOLD USE ONLY
POUR L'USAGE À LA MAISON

Do not immerse cord in water or other liquid, and unplug cord from outlet when not in use.

Harvest Elite Model Number:
100691-PPL / BSS / PCP / PSG

Harvest Elite 360 Model Number:
100693-PPL / BSS / PCP / PRE

Harvest Elite Slim Model Number:
100695-PPL / BSS / PCP

AeroGrow International, Inc.,
P.O. Box 18450, Boulder, CO 80308-1450

IMPORTANT SAFETY INSTRUCTIONS

**When using this AeroGarden electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this AeroGarden furnishing. SAVE THESE INSTRUCTIONS**

1. To reduce the risk of electric shock, the AeroGarden has a specific plug. Do not change the plug in any way.

DANGER – to reduce risk of electric shock:

2. Always unplug the AeroGarden from electrical outlet before cleaning.

WARNING – to reduce risk of burns, fire, electric shock, or injury to persons:

3. Unplug AeroGarden from outlet before putting on or taking off parts.

4. Please take proper precautions when operating an AeroGarden near or by individuals requiring close supervision, including children.

5. Use AeroGarden only for its intended use as described in the instructions.

Do not use attachments not recommended by manufacturer.

6. Never operate AeroGarden if it has a damaged cord or plug, if it is not working properly, if it has been dropped and damaged, or if it has been dropped in water. If any of these conditions occur/exist, contact www.AeroGardenSupport.com or your country's local distributor for instructions.

7. Keep cord away from heated surfaces.

8. Never operate furnishing with air openings blocked. Keep air openings free of lint, hair, and the like.

9. Never drop or insert any object into any electrical openings.

10. Do not use outdoors.

11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12. Do not touch moving parts or hot parts such as pumps, lights, reflective surfaces, and the like.

13. To disconnect, remove plug from outlet.

14. Do not place or submerge base, cord, plug, or Light Hood in water or other liquid to clean it.

15. Do not allow water to contact hot LED Grow Lights.

16. Use only approved and supplied parts and accessories. Use only AeroGarden LED Grow Lights with this AeroGarden model. Use of any other kind of accessory is not recommended. Replacement parts can be ordered from www.AeroGarden.com

17. Do not use AeroGarden for other than intended purpose.

18. This product is intended for household and residential use only. This product is not approved for commercial applications.

19. If supply cord is damaged, it must be replaced by manufacturer, its service agent, or similarly qualified technician in order to avoid a hazard.

20. Electrical wiring must be in accordance with local regulations.

21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

22. Children should be supervised to ensure they do not play with the appliance.



LIMITED WARRANTY

WHAT IS COVERED – This warranty covers any defects in materials or workmanship, with the exceptions stated below.

HOW LONG COVERAGE LASTS – This warranty runs for one (1) year on this AeroGarden and LED Grow Lights, from the date of original purchase, for the original purchaser/user.

WHAT IS NOT COVERED – The warranty shall not apply to problems arising from: normal wear; failure to adhere to enclosed operating instructions; serial numbered products if the serial number has been removed or defaced; products subject to negligence, accident, improper use, maintenance or storage; products damaged by circumstances beyond AeroGrow International Inc.'s control; loss or damage to removable parts; or products modified (including, but not limited to, modifications through the use of unauthorized parts or attachments) or repaired by anyone other than AeroGrow International, Inc., or its designee. This warranty excludes all incidental or consequential damages.

WHAT AEROGROW WILL DO – AeroGrow International, Inc., at its option, will repair any defects in materials or workmanship or will replace these products with ones of similar features and price. AeroGrow International, Inc.'s sole obligation and your exclusive remedy under this warranty shall be limited to such repair or replacement.

TO RETURN THIS PRODUCT – If you have questions or concerns regarding your AeroGarden, please contact Customer Service at 1-800-476-9669. Please do not return any product without contacting AeroGrow for return authorization. Unauthorized returns, as well as C.O.D. shipments, will be refused. For more information regarding returns, please see the Returns section at www.AeroGarden.com

Due to continuing improvements, actual product may differ slightly from the product described herein. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

If you have any questions please feel free to contact our customer service representatives:

US: 1-800-476-9669 | Canada: 1-800-611-9058

NEED SUPPLIES, ACCESSORIES OR INFORMATION? Call: 1-800-476-9669 or Visit Our Website: www.AeroGarden.com



We also have an active Facebook Community that loves to answer questions at [facebook.com/aerogarden](https://www.facebook.com/aerogarden). "Like" us for special offers and community fun!

AeroGrow International, Inc., P.O. Box 18450, Boulder, CO 80308-1450

©2019 AeroGrow International, Inc. 010319 AC