



 
Model: FPJ1080PS

PROJECTOR 1080P WITH SOUNDBAR BUNDLE



Projector Movie theater
Model # FPJ1080PS

Soundbar Movie theater soundbar
Model # FPJ1080PS-BAR

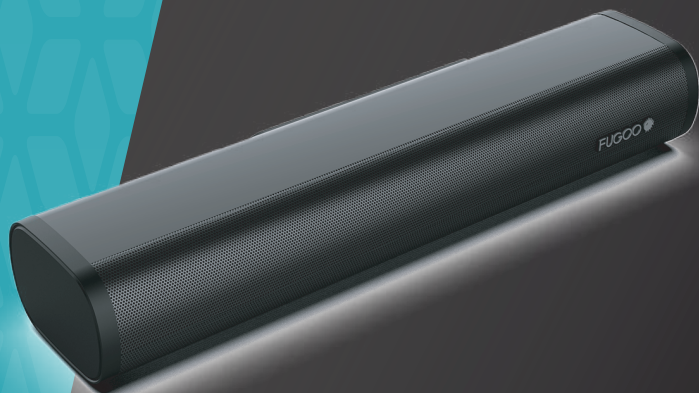

User Manual

(Note: Please read this manual carefully before use to avoid danger or damage to the product due to improper operation)

BEGINNING WORDS

First of all, thank you for your support!

You can fully understand the use and operation of this product by reading this manual. This hand-held projection equipment is small, portable and powerful, which is specially designed for household, entertainment, business and other application environments. It allows you to enjoy the fun of large screen display anytime and anywhere, and you are welcome to share the fun and ideas of using it with us.

If you have any questions about this product, welcome to contact our professional after-sales service personnel, we will provide you with cordial service.



CAUTION!

To prevent electric shock, please do not open the housing, There is no parts that can be repaired by the customer. Please ask for professional staff if repair is needed.



WARNING!

To prevent fire or electric shock, please do not expose the device into rain, water or humidity.



WARNING!

In a residential environment, running this device may cause radio jamming.



CAUTION:

Do not disassemble, impact, squeeze or put into the fire
Do not place it in the hot environment.
Do not use it after immersing.
Please use the designated charger to charge.

 


WARNING!

To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle. Where the mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

IN THE BOX

- 1 × Projector
- 1 × Projection Screen 120"
- 1 × Sound bar
- 1 × Remote Control
- 1 × USB Type-C to HDMI Cable 3ft
- 1 × 3.5mm Audio Cable 3ft
- 1 × USBType-C to USB-A charge cable 3ft
- 1 × A-Micro USB cable for Roku stick
- 1 × HDMI extender 7.87"
- 1 × AC Power cable
- 1 × Manual
- 1 × QSG
- 1 × Carrying Pouch
- 1 × Tripod
- 1 × Stone bag
- 1 × Battery

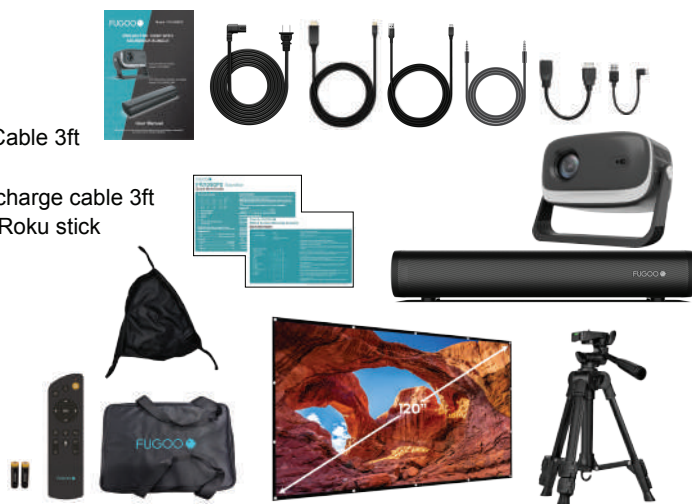

IMPORTANT SAFETY PRECAUTIONS

Important: In order to get the best viewing effect, it's suggested that you use the product in a dark room.

Warning: Following safety instructions can sustain product's lifespan and prevent it from firing or electric shock, so please read them carefully and pay attention to all warnings.

Do not install it in a place with poor ventilation.

Do not install it in a hot or damp place.

 
Do not block its ventilation holes (Intake or Exhaust).

Do not install it in a dusty or smoky place.


Do not install it near to the temperature/smoke sensor since it might take the sensor fail to work.

Do not install it in a position directly blown by air condition. Otherwise it might be malfunctioned because of the water & vapour condensation or high temperature.

Note: In order to maintain the performance and reliability of the projector, please leave at least 30cm of space around the projector.

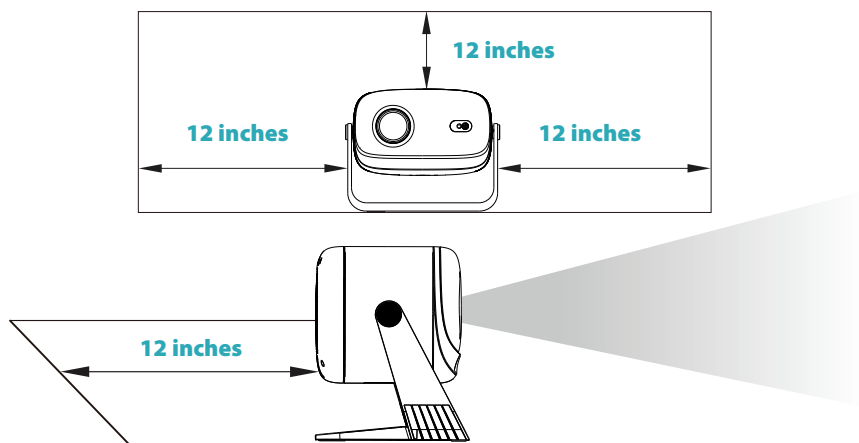


 Note: The projector's light is very bright, so please do not look at it directly or point its light to your eyes in case of causing visual damage.

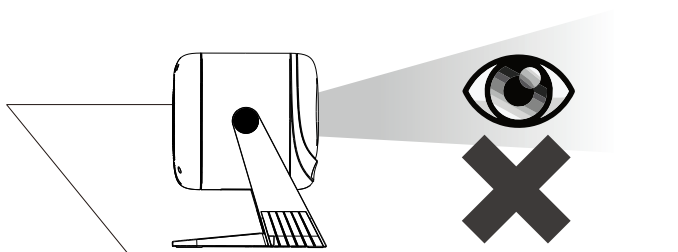

PRODUCT INTRODUCTION

 Product Description

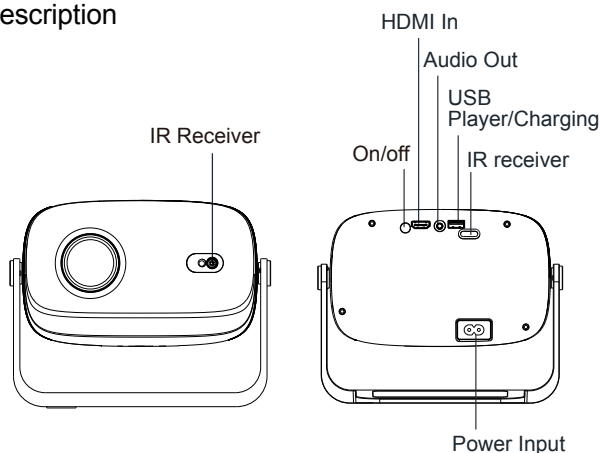


REMOTE CONTROL

- | | |
|-----------------------|----------------------|
| 1. Indicator Light | 9. OK/Play/Pause |
| 2. Power On/Off | 10. Menu |
| 3. Automatic keystone | 11. Back |
| 4. Source | 12. Home |
| 5. Up | 13. Focus Adjustment |
| 6. Left | 14. Volume + |
| 7. Right | 15. Volume - |
| 8. Down | 16. Mute |

Shortcut Button for Remote Control:

1. Projector Basic Setting: ⑩
2. Electric Focus Adjustment:

 Warm Tips for Electric Focus: Click F+ for smaller display and Click F- if you changed the display image to a larger one.*

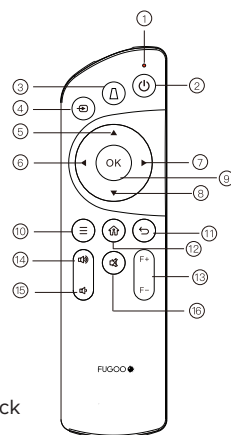

Note: Due to ongoing design improvements, the appearance, screen printing, or labeling on the remote control may differ slightly from the actual product. In case of discrepancies, please refer to the actual product as the final reference.

Be cautious when using the remote control. Do not drop it, trample on it, or spill any liquid into its body. Do not put the remote control near to any heat source. Do not expose the remote control under sunlight. Do not put the remote control in a damp place.

1. Projector Installation

 
 
Place the projector on a firm, level base.



2. Focus Adjustment

When the image is blurred, press **F+** or **F-** button on the remote to adjust the focus to improve the clarity of the image. If you cannot obtain satisfactory clarity through adjustment, please try to move the projector forward or backward.

Warm Tips: Click **F-** for larger display image and Click **F+** for smaller image.

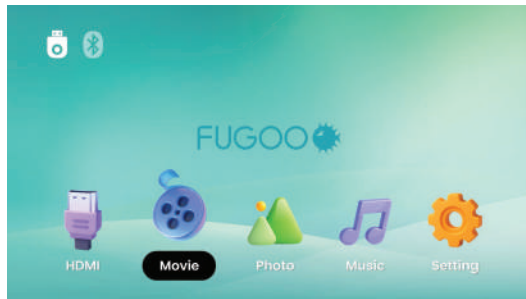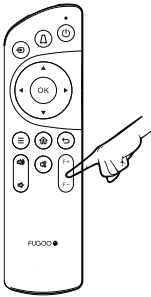


3. Keystone Correction

Electric Keystone Adjustment [Max $\pm 50^\circ$]


Electrically adjust the Keystone correction under [Menu] - [Adjust] - Vertical Keystone] - [Direction keys for $\leftarrow/\rightarrow$ adjustment.

 Note: The side projection angle of the projector should not exceed $\pm 15^\circ$. It's recommended to use horizontally.

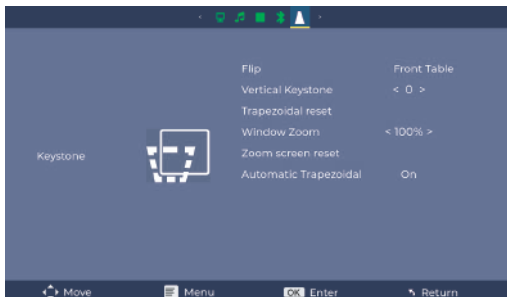


4. ZOOM Setting

 Go to Home Page--[Setting]--[Option]--[window zoom]--[Zoom+/Zoom-]. The projection screen can be zoomed from 100% to 50% without moving the projector distance. Press Direction keys for ◀▶ to set the value needed and click Reset to the original image.

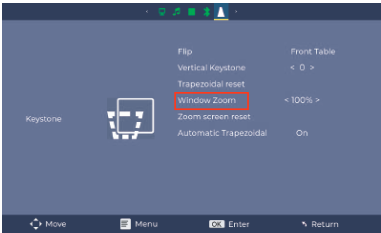


5. Projection Mode

 Note: Go to Home Page--Settings--Option--OK to change the projection modes per your needs

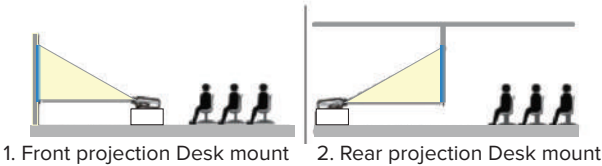

6. Projection Distance Reference

 
Screen size identification (inches)

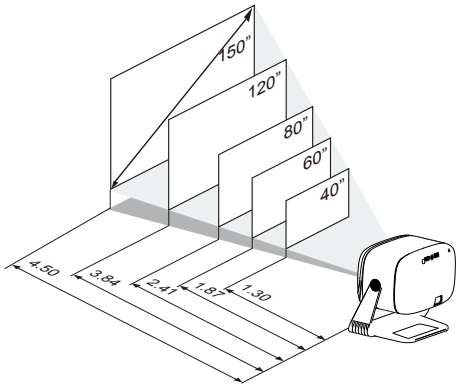

7. Turn Off Safely


Press the Power button on operational panel of remote control, and turn off the device according to the system prompts.

 INPUT SOURCE INTRODUCTION

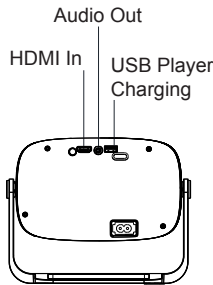

INPUT	HDMI In	
	USB Player Charging	
	Audio Out	
OUTPUT		

 
SIGNAL SOURCE CONNECTION

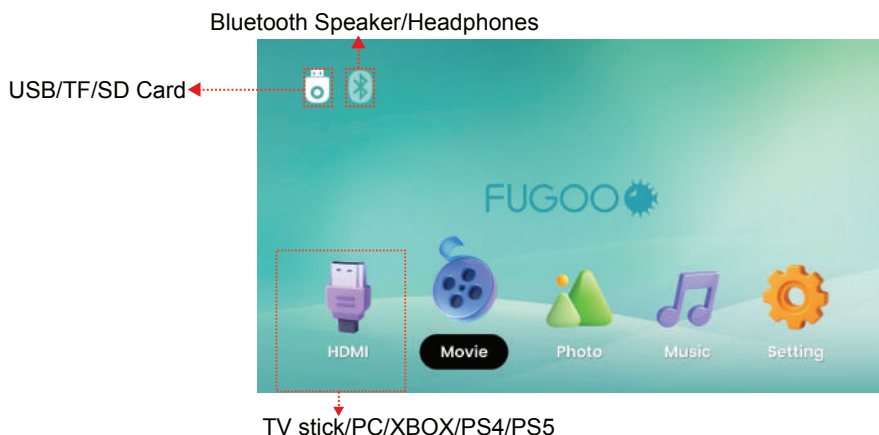

MULTI-MEDIA CONNECTION

1. HDMI Connection

 
Select the desired input signal source HDMI on the home page, or you can press the Source button on the remote control to select the corresponding signal source.

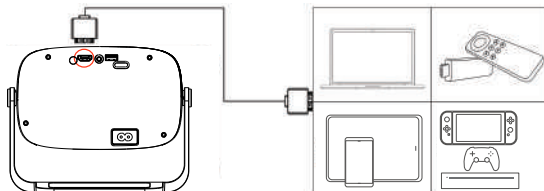

HDMI Compatible Devices: Laptops, TV Sticks, Tablets, Smart Phones, Game Consoles, etc.

2. USB Connection

 For USB devices, choose the signal source.

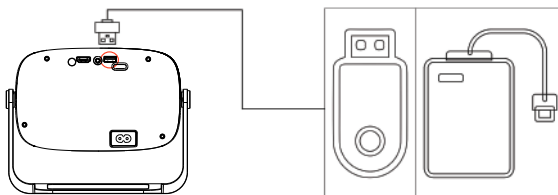


Media Support Format as Following:

Video Format	MP4, TS, DAT, MKV, MPG-1/2/4, MOV
Audio Format	MP3, APE, AAC, FLAC, OGG, WAV, WMA
Picture Format	JPG

SOUNDBAR SETTINGS

1. Picture Settings

 
Set up Contrast, Brightness, Color, Sharpness under Settings –Image Mode, User Mode; Switch color temperature to medium, warm, user and cool to meet different usage.

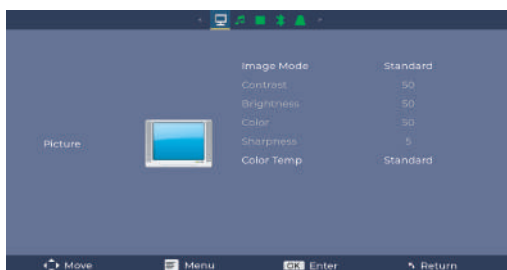

Warm Tips: Warm Mode is good for video display quality and Cool Mode is ideal for Image Display


2. Sound Settings

 Set up sound patterns of Standard, Music, Movie, Sports and User Mode; Balance is to balance the sound of the left and right channel of the speaker.

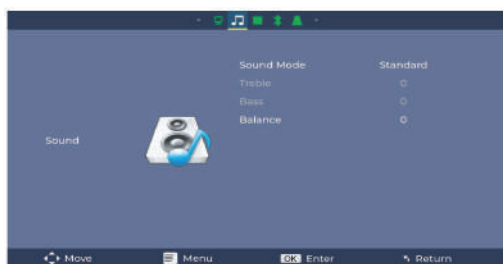

3. Bluetooth Settings

 
- * Go to Home Page--Setting--Select **Bluetooth** and press **OK** to turn on Bluetooth,
- * Click **Search Bluetooth** and choose the device to be paired,
- * Select the Back key to exit after successfully Connected.

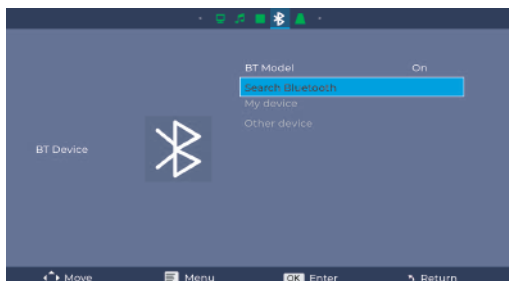

Notice: It's NOT supported to connect with smart-phones via Bluetooth to realize screen sync.

4. Option Settings

 For **OSD Language, Factory Reset, Auto Sleep, OSD Timer, Window Zoom, Video Delay** and **Version information** Settings, you can set them up under Option part.

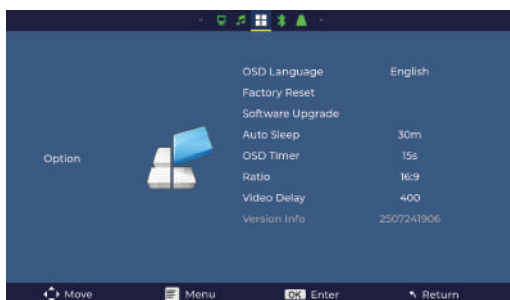

4.1 OSD Language Settings: choose the language per your needs.



4.2 Video Delayed Function

When you connect the Soundbar to watch video programs and notice that the actions in the video are significantly out of sync with the audio output, you can optimize it as follows:

Use the keys on the remote control to operate.

 
Press **"Settings → Video Delay → OK"** to adjust the "Video delay" data. The current delay data (0 to 800) will be displayed on the right side of the screen. Use the up and down keys on the remote control to adjust the video delay value to optimize the synchronization of the actions in the video and the audio output until the desired effect is achieved.

4.3 Auto Sleep


The projector will automatically power off if there is no audio or video playback for 30 minutes.

SOUNDBAR

Control & Power Input

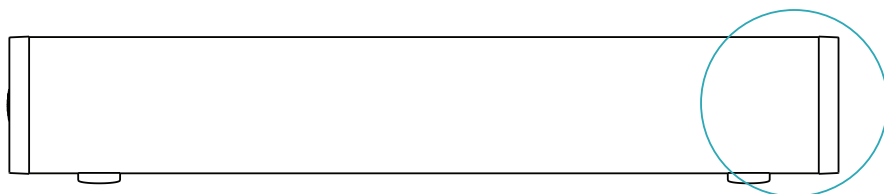

Control Panel (Side of the Unit)

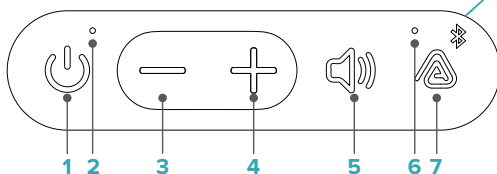 

- | | |
|-----------------------------|---|
| 1 Power & Play/Pause Button | 5 EQ button |
| 2 Power LED (Red) | 6 Auracast & BT & Aux In (White/Blue/Green) |
| 3 Volume- Button | 7 Auracast & BT Button |
| 4 Volume+ Button | |

Power

CHARGING THE SOUNDBAR

POWER SAVING FEATURE

 
When playing from battery power the product will turn off after 15 minutes of not playing audio to conserve the battery charge.

When plugged into a charging source the product will remain on until you turn the power off.

Battery Features

The rechargeable battery comes with a partial charge and the speaker is ready to play. For maximum playtime, fully charge the battery in the soundbar.

Charging

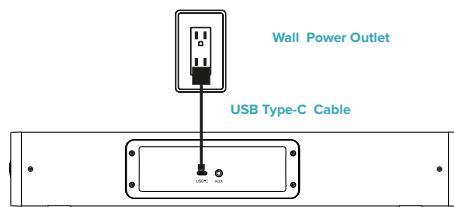

IMPORTANT: Before first use, charge for 4 hours.

- Connect the included USB-C cord into the USB-C port of the product. Connect the other end of the cord into a USB AC adapter and then into a power outlet.

To Prolong Battery Life:

- If the product is stored fully charged, re-charge every 3 months; not to exceed 6 months between charges.
- If the unit is stored with no charge, do not exceed 15 days without charging.

Full Charge Achieved:

- 4 Hours while unit is powered OFF.

 
POWER ON / OFF

- ONHold  button(2 seconds)
- OFFHold  button(2 seconds)

Power LED

- ChargingBreathing
- LowRapid Blink
- FullSolid
- Standbyoff

Projector and Soundbar Connection

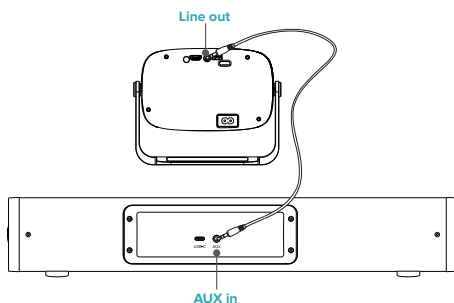

- Turn on your projector and soundbar
- Plug one end of the 3.5mm stereo audio cable into the AUX IN jack on the speaker.
- Plug the other end of the audio cable into the LINE OUT jack on the projector.
- Make sure both ends of the audio cable are fully plugged in.
- The sound from the projector should now play through the soundbar.

Audio

BLUETOOTH PAIRING

The product will automatically enter into Bluetooth mode when powered ON and will search for the last audio device it was paired to.

IMPORTANT: Pair devices within 3 feet (1 meter); Max signal range of 33 feet (10 meter); Signal disruption/loss may occur when devices are out of range from each other.

- Turn your audio source device's Bluetooth ON and select **"FUGOO FPJ1080PS"**

Bluetooth LED

- PairingBlinking
- PairedSolid

DisconnectHold the  button for(2 seconds)

AURACAST

1. Ensure that only one speaker acts as the transmitter in the same environment.

2. Transmitter: When the speaker is connected via Bluetooth and playing music, briefly press the "Auracast & BT" button. The speaker will emit "Auracast pairing", indicating it has entered Auracast transmission mode. Press the button again to exit, accompanied by "Auracast disconnected" tones.

3. Receiver: When the speaker is not connected via Bluetooth, briefly press the "Auracast & BT" button. The speaker will emit a "Auracast pairing" and the white LED will illuminate, indicating it has entered Auracast receiver mode. After the speaker connects successfully, play the prompt tone "Auracast connected". Press again to exit, signaled by "Auracast disconnected" tones and the Bluetooth LED flashing.

4. When the Auracast is successfully established, all receivers will synchronously play the same audio as the transmitter.

PairClick  Button

PairedSolid

Auracast LED

Transmitter PairedBlue Solid

Receiver PairedWhite Solid

BLUETOOTH AUDIO CONTROLS

Play / PauseClick  button

Volume UpClick  button

Volume downClick  button

EQ ModeClick  button

Dust Removal from Projector

Cleaning the dust - proof net of the projector can prevent dust from clogging and affecting heat dissipation and projection effects. The methods are as follows:

Tools Preparation:

- Flat - head screwdriver (used when prying open the dust - proof net)
- Soft - bristle brush (such as an old toothbrush)
- Hairdryer (cold air setting) or compressed air can
- Clean water (suitable for some washable dust - proof nets)

Cleaning steps:

1. Power - off operation

 
First, turn off the projector and disconnect the power supply, and wait for the machine body to cool down (to avoid burns).

2. Locate the dust - proof net

It is usually on the side, back or bottom of the projector. There is an obvious grid - shaped cover plate, and some models are marked with the word "FILTER".

3. Remove the dust - proof net


Pry open the dust-proof net with a flat-head screwdriver

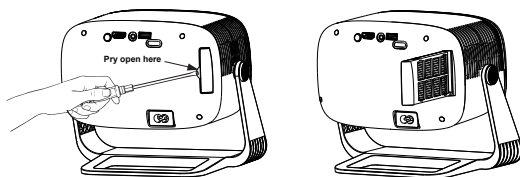

4. Clean the dust - proof net

For light dust: Gently brush off the surface dust with a soft - bristle brush, or blow it clean with a hairdryer on the cold air setting from a distance of 10 - 15 cm.

 For thick dust: If the dust - proof net is washable (check the instruction manual), rinse it with clean water and let it dry (avoid direct sunlight), and reinstall it after it is completely dry.

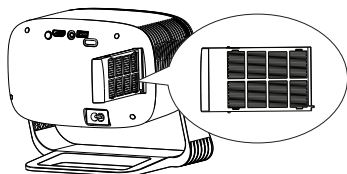

5. Reinstall the dust - proof net

Restore the dust - proof net and the cover plate in the reverse order of disassembly to ensure a secure installation.

Precautions:

- Avoid wiping the inside of the machine body or non - washable dust - proof nets directly with a wet cloth.
- It is recommended to clean once every 1 - 3 months, and shorten the cycle in a dusty environment.

Using the Tripod

TRIPOD DIAGRAM



Mounting devices

(This applies to any device being mounted)



3. Installation completed

Tripod adjustments

PTZ pitch adjustment

- 1 Rotate the handle counterclockwise to loosen fixation to pitch adjustment.
- 2 Rotate the handle clockwise to fix.



PTZ horizontal rotation adjustment

- 1 Rotate the knob counterclockwise to loosen the fixation that PTZ can be rotated and adjusted horizontally.
- 2 Turn the knob clockwise to fix.



Horizontal / vertical tilt

- 1 Turn the knob counterclockwise to loosen the fixation and the PTZ panel can be flipped over.
- 2 Turn the knob clockwise to fix.



Central axis lift

- 1 Rotate the center column locking knob counterclockwise to loosen the fixation.
- 2 After adjusting to the appropriate height, rotate the knob clockwise to fix it.



Stone Bag Usage Content for Tripod

Description & Usage:

Enhance your tripod's stability with this durable **Stone Bag**, designed to reduce vibrations and prevent tipping in windy or uneven conditions. Simply attach the bag to the legs of your tripod using the reinforced hook-and-loop straps or carabiners. Once secured, fill the bag with **stones, sandbags, water or other counterweights**



 
Stone Bag,




Stone Bag attached to the tripod

Projector Screen


Indoor Installation Instructions

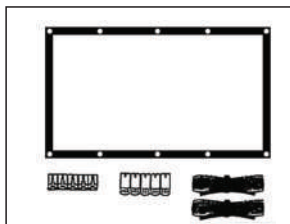

 
- 1** Package includes screen, mounting hooks, adhesive strips

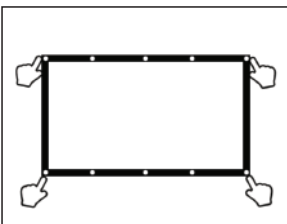

 
- 2** Unfold the screen and locate a desired position on the wall for installation. Mark the position of the grommets on the wall.
Note: Please make sure to stretch tight to avoid wrinkling or sagging.

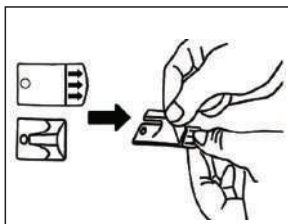

 - 3** Remove the cover on one side of the adhesive strip and stick it to the back of the mounting hook. Make sure to align the hole on the mounting hook and the Adhesive strip.

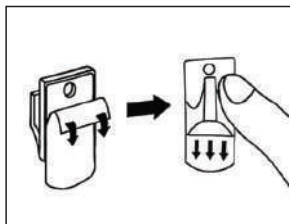


 - 4** Remove the other side of the adhesive strip and stick the mounting hook on the wall at the marked location from step 1. Make sure the mounting hook hole is aligned with the marked location.

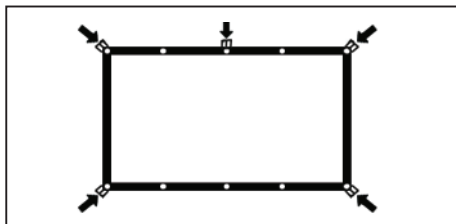


- 5** Mount the screen onto the mounting hooks. It is recommended to use 5 mounting hooks. For easy removal of mounting hooks, slowly stretch the adhesive strip straight down using the tab with downward facing arrows.
Note: The adhesive strips should not be used on textured walls, wallpaper, brick, non-stick surfaces, or fabrics.

 
Outdoor Installation Instructions

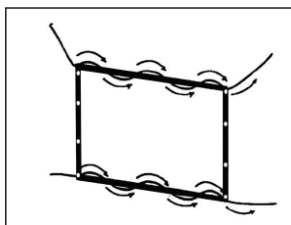

 - 1** Thread the ropes (not included) through the grommets located at the top and bottom of the screen.

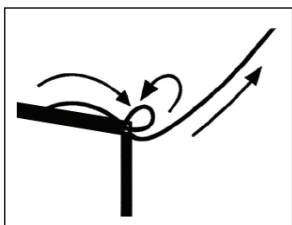

 - 2** Loop the rope twice through the final grommet on each corner so the screen will stay tight.

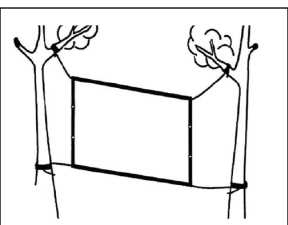

- 3** Tie both ends of the two ropes to nearby objects, like trees, as shown in the diagram. Note: When the screen is not in use, please store in this bag to keep the screen clean and prevent discoloration from UV rays due to prolonged Sun exposure.

SPECIFICATIONS

Projector Specifications

Product Size	W(8.14") x D(4.81") x H(6.38")
Display Technology	LCD
Light Source	LED
Focusing Method	Electric Focus
Screen Ratio	4:3/16:9
Zoom Display	100% - 50%
Display Resolution	1920x1080 Pixels
Contrast Ratio	1000:1
Projection Size	40-150 Inch
Projection Distance	4.27 to 14.76 feet / 1.3-4.5M
Bluetooth Version	V5.4
Speaker	4ohm/3W(max)*1
Total Power	78W
Power Voltage	AC100-240V 50/60Hz 1.5A

Soundbar Specifications

Power

Power Input	USB - C 5V / 2A
Battery Type	7.4V / 2500 mAh
Battery Life	10 Hours (at 50% Volume)

Audio

Drivers	(x2) 2.25"
Audio Output	10W x 2
THD + Noise	≤ 10 %
Signal-to-Noise	> 70 dB

Connectivity

Bluetooth Version	5.4
Range	10m / 33 feet

Construction

Materials	Metal Grill, Rubber, Plastic
Weight	2.4 lbs. / 1.1 kg.
Dimensions (W x H x D)	15.7 x 2.8 x 3.8" / 400 x 70.7 x 97.7 mm

Environment

Water Resistant	IPX4
Operating Temp. Range.....	32°F to 98.6°F / 0°C to 37°C
Operating Humidity	40-90 % RH
Storage Temp. Range	-13°F to 158°F / -25°C to 70°C

***Specifications and design are subject to change without notice.**

Claims and Dispute Resolution

BLOWFISH LLC AND YOU AGREE THAT ALL CLAIMS OR DISPUTES ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCT, WHETHER BASED IN CONTRACT, TORT, STATUTORY, FRAUD, MISREPRESENTATION OR ANY OTHER LEGAL THEORY, AND ALL CLAIMS THAT ARE SUBJECT OF A PURPORTED CLASS ACTION LITIGATION THAT YOU ARE NOT A MEMBER OF THE CERTIFIED CLASS, SHALL BE RESOLVED THROUGH ARBITRATION AS PROVIDED FOR HEREIN, OR IN SMALL CLAIMS COURT, AND NOT BY A TRIAL BY JURY. YOU WAIVE THE RIGHT TO A TRIAL BY JURY, AND WAIVE THE RIGHT TO PARTICIPATE IN CLASS ACTIONS ARISING FROM OR RELATING TO ANY AND ALL CLAIMS AND DISPUTES WITH BLOWFISH LLC. YOU AGREE THAT YOU MAY ARBITRATE CLAIMS AGAINST BLOWFISH LLC ONLY IN YOUR INDIVIDUAL CAPACITY AND NOT AS A PLAINTIFF, A CLASS REPRESENTATIVE, OR CLASS MEMBER IN ANY CLASS OR REPRESENTATIVE PROCEEDING. THIS AGREEMENT EVIDENCES A TRANSACTION IN INTERSTATE COMMERCE, AND THUS THE FEDERAL ARBITRATION ACT GOVERNS THE INTERPRETATION AND ENFORCEMENT OF THIS PROVISION. THIS PARAGRAPH SHALL SURVIVE THE TERMINATION OF THIS LIMITED WARRANTY.

BLOWFISH LLC REQUIRES THAT YOU ARBITRATE YOUR CLAIMS AGAINST BLOWFISH LLC PURSUANT TO THE ARBITRATION DESCRIBED BELOW PRIOR TO YOUR EXERCISE OF YOUR RIGHTS PURSUANT TO TITLE I OF THE MAGNUSON-MOSS WARRANTY ACT. TITLE I OF THE MAGNUSON-MOSS WARRANTY ACT DOES NOT REQUIRE YOU TO PURSUE RIGHTS AND REMEDIES AVAILABLE TO YOU THAT ARE NOT PROVIDED BY TITLE I OF THE MAGNUSON-MOSS WARRANTY ACT.

Any such arbitration shall not be combined or consolidated with a claim or dispute involving any other person's or entity's product or claim or dispute, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action or class arbitration. If you intend to seek arbitration you must first email BLOWFISH LLC at support@fugoo.com a notice of dispute, at least thirty (30) days in advance of initiating the arbitration. The notice must include: (i) a description of your claim and the basis of the dispute; and (ii) a description of the relief you are seeking. If BLOWFISH LLC and you do not reach an agreement to resolve the claim within thirty (30) days after BLOWFISH LLC receives your notice, you or BLOWFISH LLC may commence an arbitration proceeding.

The arbitration will take place in Los Angeles, California or a mutually agreed upon location. Arbitration shall be administered by JAMS, or alternatively a mutually agreed upon arbitrator or arbitration service, under the applicable commercial arbitration rules for JAMS or the mutually agreed upon arbitration service, excluding any rules or procedures governing or permitting class actions. The arbitrator, and not any federal, state or local court or agency, shall have exclusive authority to resolve all disputes arising out of or relating to the interpretation, applicability, enforceability or formation of this Limited Warranty, including, but not limited to any claim that all or any part of this Limited Warranty is void or voidable, or whether a claim is subject to arbitration. The arbitrator shall be empowered to grant whatever relief would be available in a court under law or in equity. The arbitrator's award shall be written and binding on the parties and may be entered as a judgment in any court of competent jurisdiction. To the extent the filing fee for the arbitration exceeds the cost of filing a lawsuit, Russell Distribution will pay the additional cost. The arbitration rules also permit you to recover attorney's fees in certain cases. The parties understand that, absent this mandatory provision, they would have the right to sue in court and have a jury trial. They further understand that, in some instances the costs of arbitration could exceed the costs of litigation and the right to discovery may be more limited in arbitration than in court.

This arbitration provision also applies to claims and disputes by you, the purchaser of the Product and all those in privity with you, including your family members, beneficiaries and assigns against BLOWFISH LLC, subsidiaries and affiliates and any person or entity that licensed, supplied, sold or distributed the Product and each of their officers, employee, representatives, licensors/licensees, Agents, beneficiaries, predecessors in interest, successors, and/or assigns. You may opt out of this dispute resolution procedure by providing notice to BLOWFISH LLC no later than thirty (30) calendar days after the date of the first consumer purchaser's purchase of the Product. To opt out you must send notice by e-mail to support@fugoo.com. The opt-out notice must include (a) your name, email address, mailing address and phone number; (b) the date on which the product was purchased; (c) the product model name or model number; and (d) the Serial Number. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty. If you opt-out of these arbitration provisions, BLOWFISH LLC also will not be bound by them.



One Year Consumer Limited Warranty

This Fugoo-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year for labor and one (1) year for parts. This "Limited Warranty" is conditioned upon proper use of Product by you, the Purchaser. This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", "products missing accessories", or "no fault found". Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the Limited Warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This Limited Warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, Puerto Rico, and Canada by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt, or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this Limited Warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and Products assume the remaining original Limited Warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser, and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products. If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This Limited Warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish: accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference, or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE, AND STATES YOUR EXCLUSIVE REMEDY.

Some states or provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state, or province to province. Any provision contained herein which is found contrary to state, province or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

PLEASE CONTACT US AT OUR CUSTOMER SUPPORT FOR ASSISTANCE BEFORE RETURNING TO STORE:

Phone: (877) 435-7596
Email: support@fugoo.com /
Website: <https://fugoo.com>

Hours of Operation:
Monday - Friday: 6 am to 6:30 pm (PST)
Saturday - Sunday: 8:00 am to 4:30 pm (PST)

RF Exposure Statement

Fugoo Movie theater complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Fugoo Movie theater meets the exemption from the routine evaluation limits in section 4.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Fugoo film theater est conforme à l'exemption des limites d'évaluation habituelle de la section 4.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.

Fugoo movie theater soundbar complies with the FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Fugoo movie théâtre soundbar est conforme aux limites d'exposition aux rayonnements de la FCC et de l'ISED établies pour un environnement non contrôlé. Cet émetteur ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;

2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



This equipment is a Class II or double insulated electrical appliance.

It has been designed in such a way that it does not require a safety connection to electrical earth.



 
BATTERY SAFETY

CAUTION!

Risk of explosion if the battery is replaced with an incorrect battery type.

- Use consumer grade, non-rechargeable carbon-zinc or alkaline batteries AAA or AA type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- Exposing a battery to high temperature can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- **To avoid battery leakage**, remove exhausted batteries from the remote control, or when not using for long periods.
- **Do not break** open or throw exhausted batteries on a fire.
- **Do not mix** old and new batteries.
- **Do not mix** Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

FUGOO

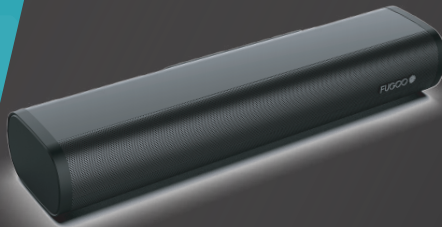

Model: FPJ1080PS

PROJECTOR 1080P WITH SOUNDBAR BUNDLE

PLEASE CONTACT US AT OUR CUSTOMER SUPPORT FOR ASSISTANCE BEFORE RETURNING TO STORE:

Phone: (877) 435-7596 • Email: support@fugoo.com • Website: <https://fugoo.com>

Distributed by Russell Distribution Company, LLC
7801 Hayvenhurst Avenue
Los Angeles, CA 91406

Blowfish Audio, LLC is the licensee of Fugoo and the Fugoo logo in the U.S. used under license.

The Bluetooth® and Auracast™ word marks and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.