




Spring assisted knife

GW 6681

- overall dimensions
- knife specification
- assembly instruction



**MULTIFUNCTIONAL
SPRING ASSISTED
FOLDING
POCKET**




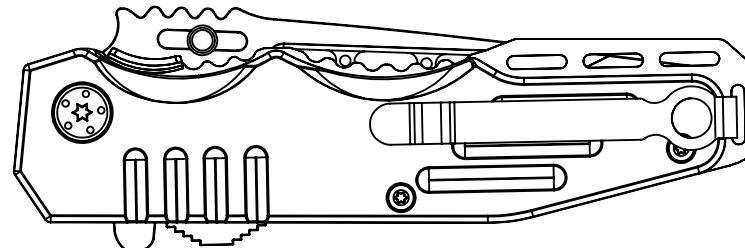
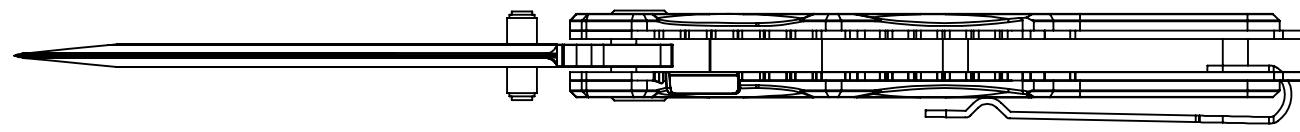
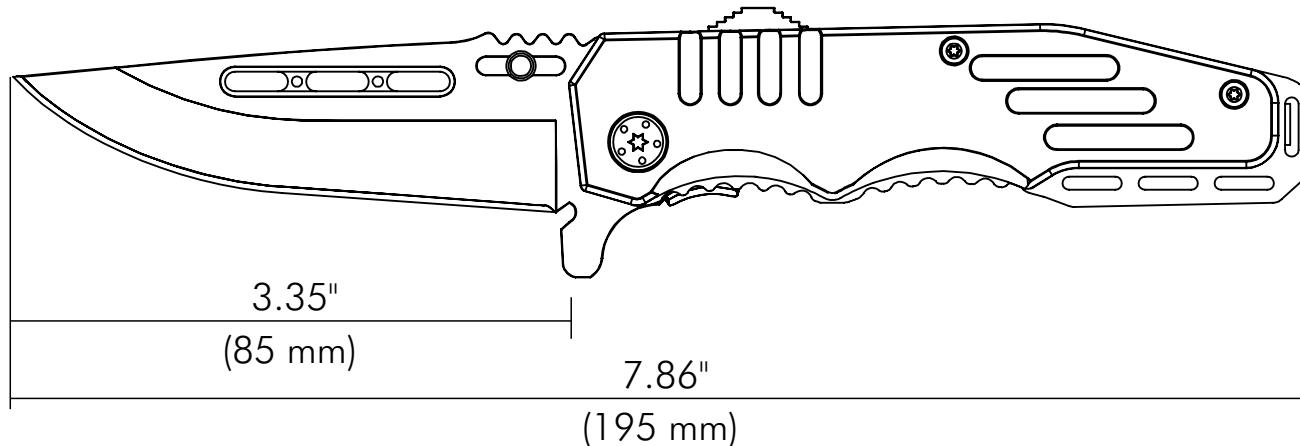



SURFACE OF
THE BLADE: BLACK OXIDE

HANDLE
MATERIAL: ALUMINIUM


STEEL MARK: 440C

WEIGHT: 4.30 oz

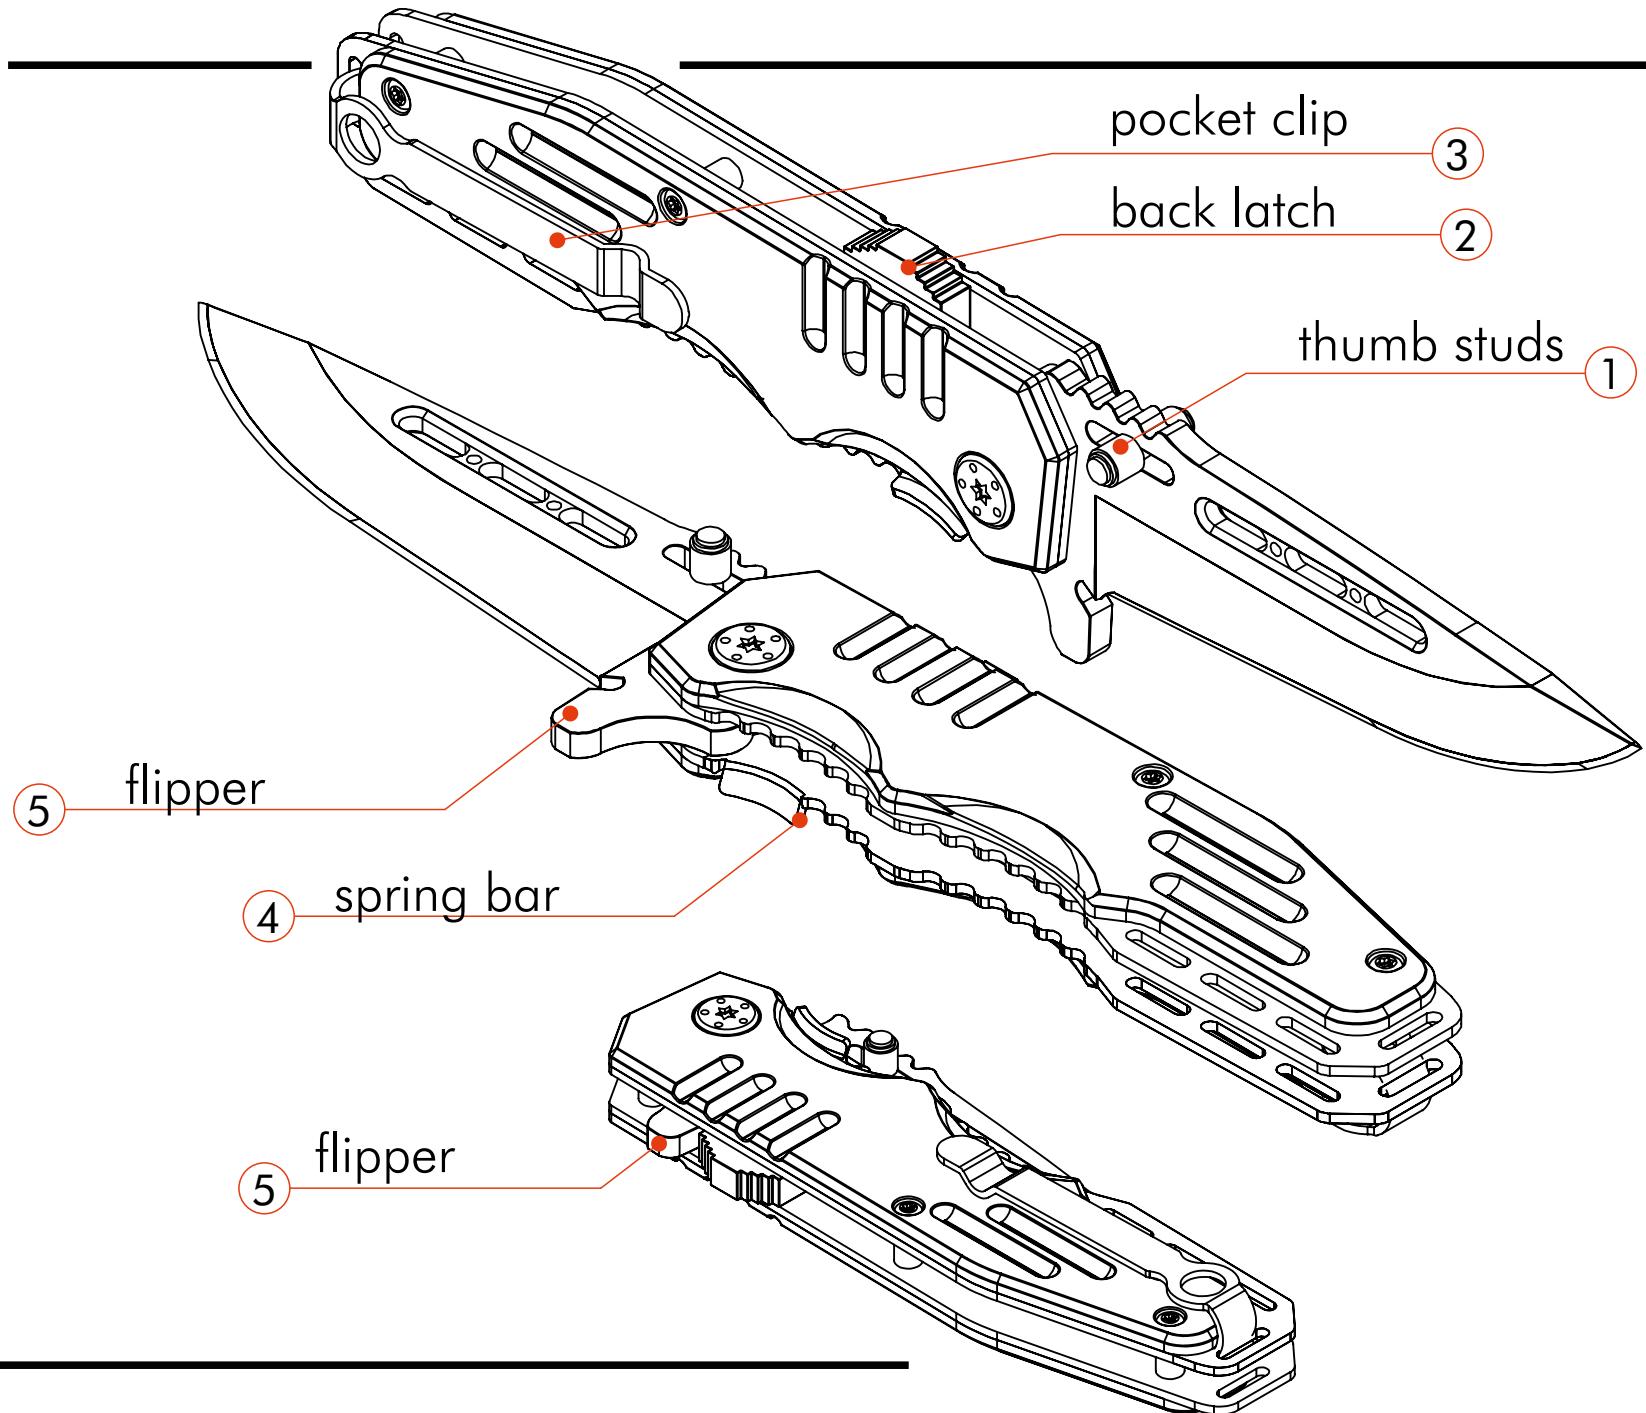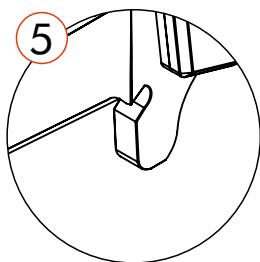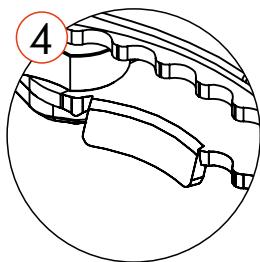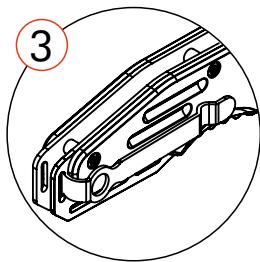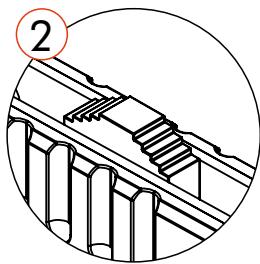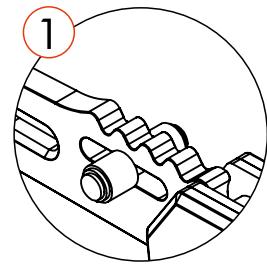


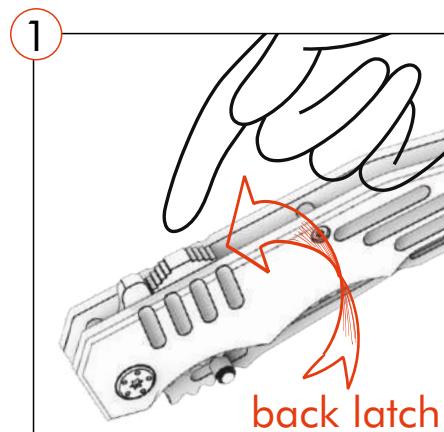

1. Find the back latch.
Now the knife is closed.

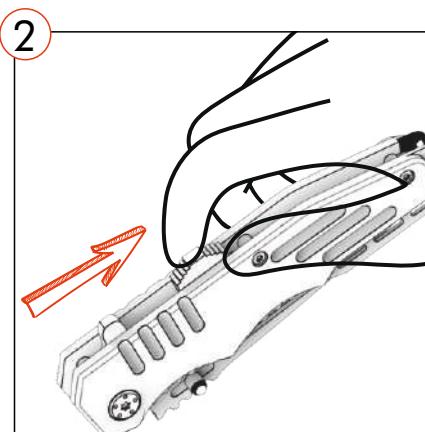


2. Move the back latch
to open position.

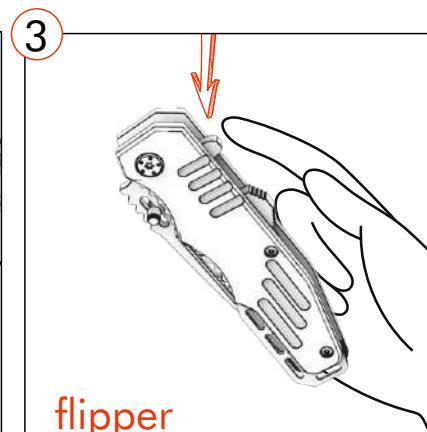


flipper


3. Find the flipper and
press it.

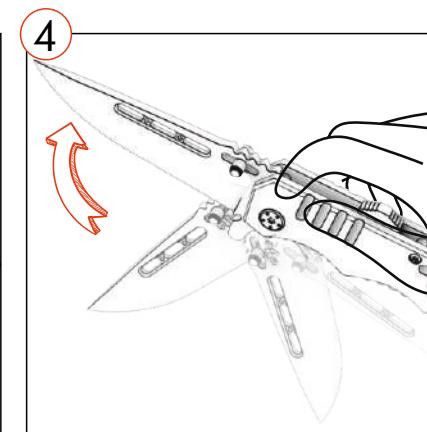


4. Now you can unfolding
the knife.

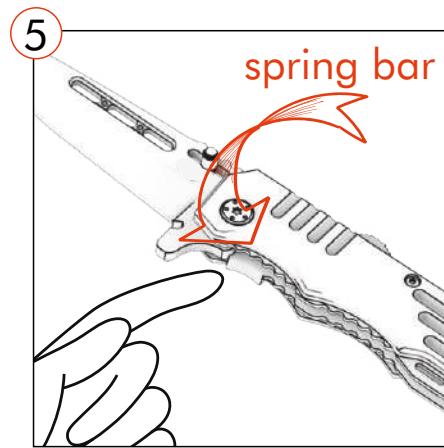


5. Find the spring bar.

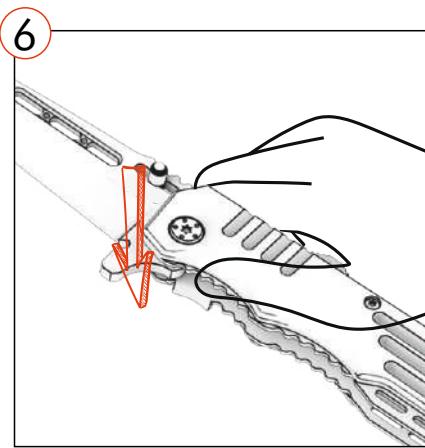

6. Press the spring bar
toward the clip.

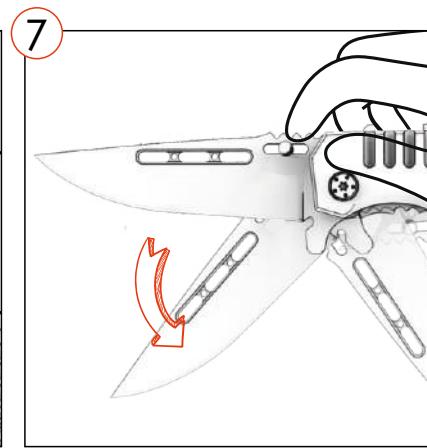

7. Now you can folding
the knife.

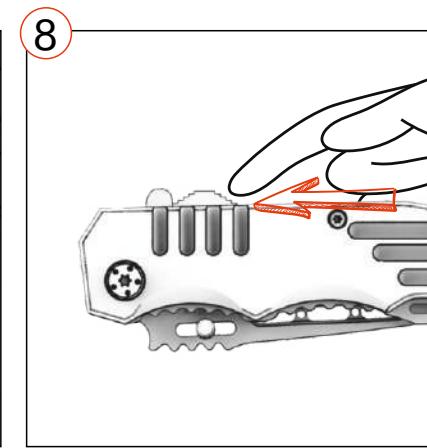

8. Close the back latch

CAUTION: For users and Bystanders:

-  **Sharp Blades** Improper use, chiseling, ice picking, prying, applying force onto back of blade, or contact may result in injury.
-  Always keep blades away from fingers and body.
-  When not in use, store in the sheath or a safe place.
-  Keep out of reach of children.

-  Do not use if blades are dull, bent, chipped, loose at its pivot or otherwise damaged or if the handle is broken or loose.
Handle with care.
-  Do not pick it up by the blade. Contact with the hard object can result in blade chipping.
-  Do not use to strike with or against another tool, hardened nails, or other hard objects.