

*Please Read These Instructions
Before Using Your Mower*

Mountfield

Operating Instructions

*for models
HP414 & SP414 Lawnmowers
with RS 100 engine*



Product Codes:
297411043/BQ
297412043/BQ

**Do not return this product to store, please call
the Service Link Helpline**

**Products with petrol in cannot be accepted
back in store**

Supported by



For all your Warranty,
Parts and Service needs

0845 601 4221

www.servicelink.org.uk

EN	ENGLISH (Original instructions)	
	- Safety precautions	3-4
	- Know your mower	4-6
	- How to get mowing	7-9
	- Maintenance	9
	- Fault Finding	10
	 GUARANTEE	 11

Thank you for purchasing a Mountfield lawnmower. This machine will give you many years of safe and reliable service if operated in accordance with these instructions. **Please read and understand these Operating Instructions before using your mower. Failure to do so could result in personal injury or damage to the equipment.**



NEVER TIP THE MOWER ON ITS SIDE AS THIS WILL FLOOD THE AIR FILTER WITH OIL.
To access the underside, lift the front wheels by lowering the handle until it rests on the ground.

SAFETY PRECAUTIONS

Your lawnmower should be used with due care and attention. Symbols have therefore been placed on various parts of the machine to remind you of the main precautions to be taken. Their meaning is explained below. You are also asked to carefully read the safety regulations in the applicable chapter of this handbook



1. Warning: Read the instructions manual before using the machine.



2. Beware of thrown objects: Keep other people at a safe distance whilst working.



3. Beware of cutting: Moving blades. Do not put hands or feet near the blades. Disconnect the spark plug before carrying out any repairs or maintenance.

DESCRIPTION OF SYMBOLS ON CONTROLS (where foreseen)



11. Engine stop 12. Drive on

Maximum noise and vibration levels



Operator's ear noise pressure level..... db(A) 80,9
- Measurement uncertainty db(A) 0,5

Measured acoustic output level..... db(A) 94,3
- Measurement uncertainty db(A) 0,3

Guaranteed acoustic output level..... db(A) 96

Vibration level m/s 4,24
- Measurement uncertainty m/s 0,4


IDENTIFICATION LABEL

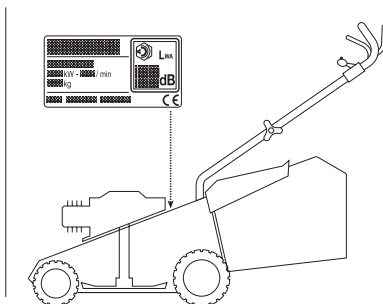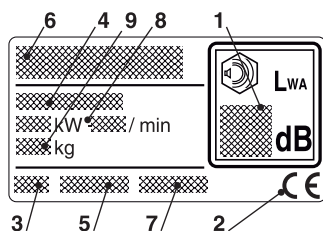

1. Acoustic power level according to directive 2000/14/EC
2. Conformity mark according to directive 2006/42/EC
3. Year of manufacture
4. Type of lawnmower
5. Serial number
6. Name and address of manufacturer
7. Article code
8. Engine power and speed
9. Weight in kilograms

As soon as you have purchased the machine, do not forget to write the identification numbers (3-4-5-7) in the spaces on the last page of the manual.

KNOW YOUR MOWER

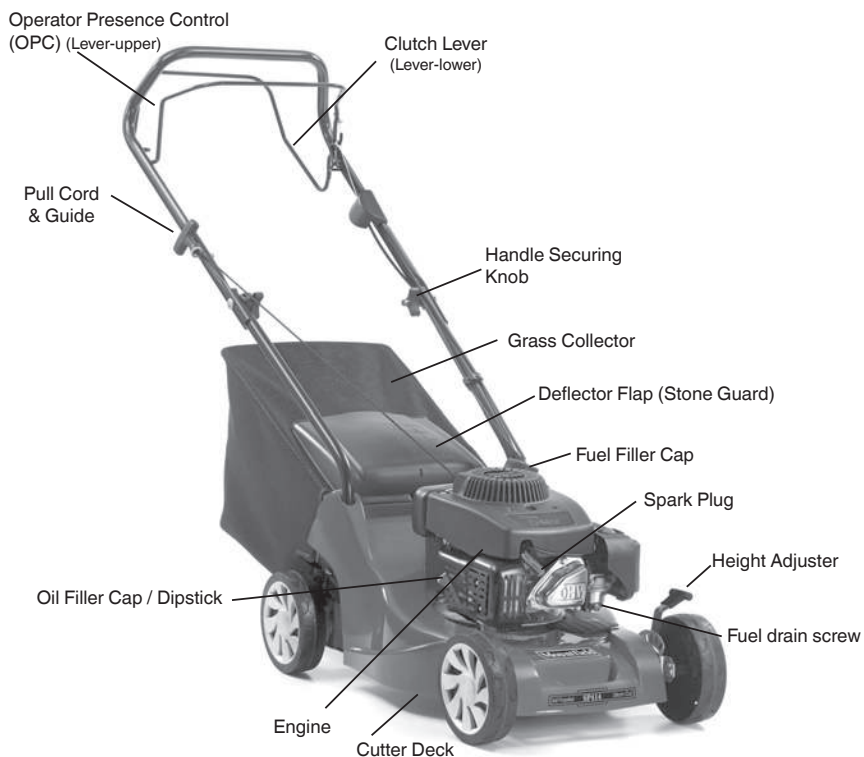

The following safety precautions must be observed at all times. Please read them carefully.

TRAINING

- 1) **Read the instructions carefully.** Get familiar with the controls and proper use of the equipment. Learn how to stop the engine quickly
- 2) **Only use the lawnmower for the purpose for which it was designed, i.e. for cutting and collecting grass.** Any other use can be hazardous, causing damage to the machine. Examples of improper use may include, but are not limited to:
 - transport of people, children or animals on the machine;
 - being transported by the machine;
 - using the machine to tow or push loads;
 - using the machine for leaf or debris collection;
 - using the machine to trim hedges, or for cutting vegetation other than grass;
 - use of the machine by more than one person;
 - using the blade on surfaces other than grass.
- 3) Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations may restrict the age of the operator.
- 4) **Never use the lawnmower:**
 - When people, especially children, or pets are nearby.
 - If the operator has taken medicine or substances that can affect his ability to react and concentrate.
- 5) Remember that the operator or user is responsible for accidents or hazards occurring to other people or their property.

PREPARATION

- 1) **While mowing, always wear sturdy footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.**
- 2) Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine or damage the cutter assembly and the engine (stones, sticks, metal wire, bones, etc.)
- 3) **WARNING: DANGER! Engine fuel is highly flammable:**
 - Store fuel in containers specifically designed for this purpose.
 - **Refuel using a funnel and outdoors only. Do not smoke while refuelling or whenever handling the fuel**
 - Add fuel before starting the engine. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot.
 - If fuel is spilt, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until the fuel has evaporated and the vapour dispersed.
 - Replace all fuel tanks and containers caps securely.
- 4) Substitute faulty silencers. Never use the machine without silencer.
- 5) **Before use, always inspect the machine, especially the condition of the blades, and check that the screws and cutting assembly are not worn or damaged.** Replace worn or damaged blades and screws in sets to preserve balance.
- 6) Before mowing, attach the discharge opening guards (grass-catcher or stone-guard).

OPERATION

- 1) Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
- 2) Mow only in daylight or good artificial light.
- 3) If possible, avoid operating the equipment in wet grass.
- 4) Always be sure of your footing on slopes.
- 5) Walk, never run and do not allow yourself to be pulled along by the lawnmower.
- 6) Mow across the face of slopes, never up and down.
- 7) Exercise extreme caution when changing direction on slopes..
- 8) **Do not mow on slopes of more than 20°.**
- 9) Exercise extreme caution when pulling the lawnmower towards you
- 10) Stop the blade if the lawnmower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be mowed.
- 11) Never operate the lawnmower with defective guards, or without safety devices, such as the stone-guard and/or grass-catcher, in place.
- 12) Do not change the engine governor settings or overspeed the engine.

- 13) On power-driven models, disengage the drive clutch before starting the engine.
- 14) Start the engine carefully, following the instructions and keeping feet well away from the blade.
- 15) Do not tilt the lawnmower when starting the engine. Start the engine on a flat surface that is free of obstacles and tall grass.
- 16) **Do not put hands or feet near or under rotating parts.** Keep clear of the discharge opening at all times.
- 17) Never pick up or carry a lawnmower while the engine is running.
- 18) **Stop the engine and disconnect the spark plug wire:**
 - Before carrying out any work underneath the cutting deck or before unclogging the chute;
 - Before checking, cleaning or working on lawnmower;
 - After striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the lawnmower;
 - If the lawnmower begins to abnormally vibrate (Immediately look for the cause of the vibrations and contact your local Dealer).
- 19) **Stop the engine:**
 - Whenever you leave the lawnmower unattended. Remove the key from models with electric starters.
 - Before refuelling.
 - Every time you remove or replace the grass-catcher.
 - Before adjusting the grass cutting height.
- 20) Reduce the throttle before turning off the engine and turn the fuel off when you have finished mowing, following the instructions in the engine handbook.
- 21) When mowing, always keep to a safe distance from the rotating blade. This distance is the length of the handle.

MAINTENANCE AND STORAGE

- 1) Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Regular maintenance is essential for safety and performance.
- 2) Never store the equipment with fuel in the tank inside a building where vapour may reach a flame or a spark or a source of extreme heat.
- 3) Allow the engine to cool before storing in an enclosed space.
- 4) **To reduce the fire hazard, keep the engine, exhaust silencer, battery compartment and fuel storage area free of grass, leaves, or excessive grease.** Do not leave containers with grass cuttings in rooms.
- 5) Check the stone-guard and grass-catcher frequently for wear and deterioration.
- 6) If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.
- 7) Wear strong work gloves when removing and reassembling the blade.
- 8) **Keep the blade balanced during sharpening.** All operations on the blade (dismantling, sharpening, balancing, remounting and/or replacing) require a certain familiarity and special tools. For safety reasons, these jobs are best carried out at a specialized centre.
- 9) **For safety reasons, never use the machine when it has worn or damaged parts. Parts are to be replaced and not repaired. Use genuine spare parts. Parts that are not of the same quality can damage the equipment and impair your safety.**
- 10) If the machine is not going to be used for 28 days or more please drain all fuel from the machine. Stale fuel can cause damage to the carburettor.

TRANSPORTATION AND HANDLING

- 1) Whenever the machine is to be handled, raised, transported or tilted you must:
 - wear strong working gloves;
 - grasp the machine at the points that offer a safe grip, taking account of the weight and its distribution.
 - use an appropriate number of people for the weight of the machine and the characteristics of the vehicle or the place where it has to be placed or collected.
- 2) During transport, fasten the machine securely with ropes or chains.

HOW TO GET MOWING

Your Mountfield lawnmower does not contain petrol or oil and these must be added before use.

Running the mower with insufficient oil can cause serious damage to the engine and will invalidate your warranty.



NEVER TIP THE MOWER ONTO ITS SIDE AS THIS WILL FLOOD THE AIR FILTER WITH OIL.

To access the underside of the machine lift the front wheels by lowering the handle to the ground.


Carefully remove the mower from the carton and read these Operating Instructions. An Owner's Manual for the engine is also included. Please read this before starting the engine.




WARNING - Unpacking and completing the assembly should be done on a flat and stable surface, with enough space for machine handling and its packaging, always making use of suitable equipment. Disposal of the packaging should be done in accordance with the local regulations in force

HANDLE ASSEMBLY (Figure 1)

- Insert the lower parts of the handle (1) and (2) into the respective holes and fasten them in place using the screws (3) and the washers (4) supplied. Apply the two caps (5) to the ends of the two lower parts of the handle (1) and (2).
- Attach the upper part of the handle (6) to the lower parts using the knobs (7) and the nuts and bolts supplied as shown.
- Engage the Operator Presence Control (OPC) lever by pulling and holding it against the handle in order to release the engine brake. Pull the starter cord (8), and fit it into the cord guide (9) as shown. Tighten the nut (10) using a 10mm spanner. Failure to use the cord guide will result in premature cord wear.
- Secure the control cables using the clamp (11). Take care that the cables are not secured too tightly (this may impair how the mower operates) or impair removal of the grass collector. The clutch cable and control lever are only fitted to models with power drive (SP414).

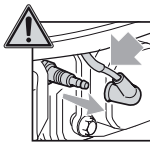


(Figure 1)

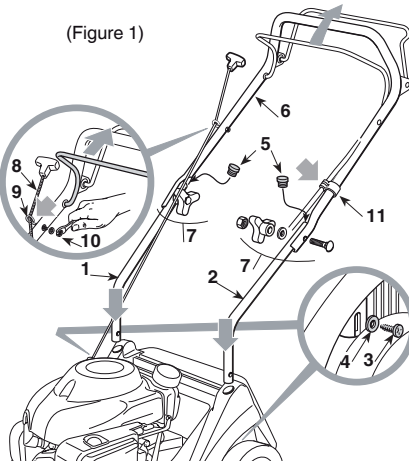


GRASS COLLECTOR

- Insert the frame into the bag and attach the plastic clips to the frame using a screwdriver, as shown in the drawing (Figure 2).
- Ensure that the plastic clips locate on the upper front part of the frame (Figure 3).
- To fit the grass collector onto the mower, lift the rear deflector flap and hook the collector onto the pegs on the rear of the mower (Figure 4).

(Figure 2).

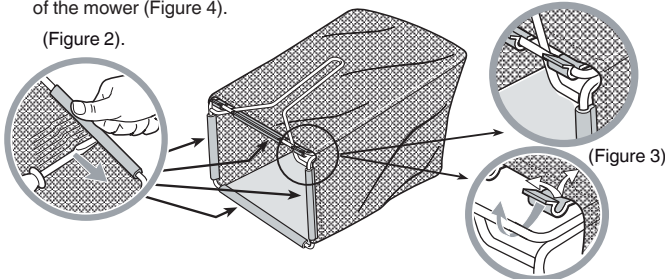


(Figure 4).

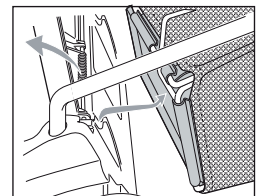

STARTING YOUR MOWER

Read and understand the Safety Precautions before using your mower.

- Put Mountfield 4-stroke, or an SAE 10W-30 oil, in the oil filler (Figure 5). Do not overfill, the oil tank capacity is 0,45 litres. Mountfield oil, part number MX855, is available from any Mountfield stockist or B&Q store.
- Fill the fuel tank with UNLEADED petrol. Use only clean, fresh petrol - stale fuel may contain deposits that will clog the carburettor. Unleaded fuel can start to go stale after just 28 days. Do not overfill, the petrol level should be below the bottom of the fuel tank neck. Do not over tighten the fuel cap. The fuel cap breathes through the threads of the cap and over tightening can cause the engine to cut out.
- Ensure that the spark plug lead is securely connected to the spark plug.

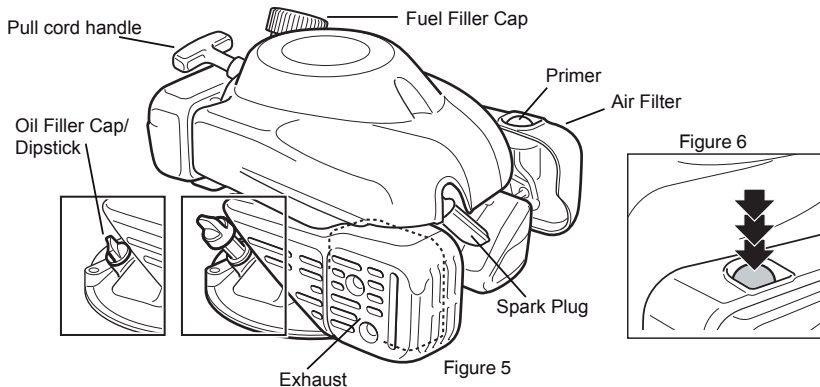

- Press the PRIMER button 3 times to prime the carburettor (Figure 6).
- Pull and hold the Operator Presence Control (OPC) lever against the handle to disengage the engine brake.
THE ENGINE WILL NOT START, OR CONTINUE TO RUN, UNLESS THE OPC LEVER IS HELD AGAINST THE HANDLE
- Pull the starter cord with a strong smooth pull. Do not remove the pull cord from the guide.
- When the engine starts let go of the pull cord.
- To engage the drive to the rear wheels on Self Propelled models, pull and hold the clutch lever against the handle.
- To stop the drive, release the clutch lever.

NOTE: It is not normally necessary to use the "PRIMER" button when starting a warm engine.

STOPPING YOUR MOWER


- Release the Operator Presence Control (OPC) lever; this will engage the engine brake and operate the ignition safety cut out device.

ADJUSTING THE HEIGHT OF CUT

The height of cut adjustment not only determines the length of the cut grass, it also controls the airflow which carries grass clippings into the collector. If the discharge chute becomes blocked, increase the airflow by raising the height of cut. To prevent blockages when cutting long, thick grass, set the adjustment to the highest setting and cut the grass; then cut it again on a lower setting.


To adjust the height of cut:

- Stop the engine and disconnect the spark plug
- Put the mower on a level surface
- Adjust the cutting height lever by pulling outwards and moving into the required position (Figure 7)
- All 4 wheels must be at the same height

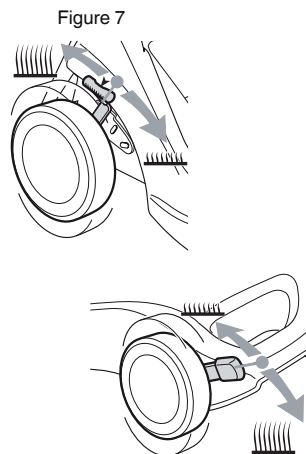

BEFORE EACH USE

- Always ensure that the mower is in a safe working condition. Inspect the cutter blade for damage; check safety devices and guards; check that all nuts, bolts and screws are secure.
- Check the oil level as follows:
 - a) Remove the oil filler cap and wipe the dipstick clean (Figure 8).
 - b) Refit the dipstick into the filler neck without screwing it down. Remove the dipstick and check the oil level; oil should be at the FULL mark. The oil tank capacity is about 0,45 litre or 20 fluid oz.
 - c) If the oil level is low add Mountfield oil part number MX855 or a SAE 10W-30 oil, to the upper limit on the dipstick. Do not overfill; the oil level should not be above the FULL mark.
- Fill the fuel tank with unleaded petrol. Do not overfill, there is no need to fill tank to the top. The fuel tank need only contain enough fuel to complete the days mowing. If you run out of fuel, refilling must only be carried out once the engine has cooled. Fuel stored within the machine for 28 days or more can go stale and should be drained before further use.

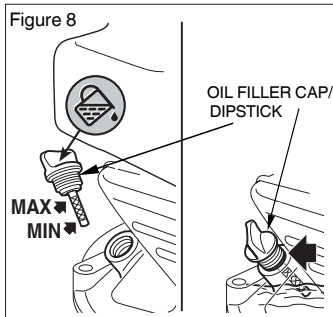

MAINTENANCE



Stop the engine and disconnect the spark plug lead before working on the machine.

DO NOT TIP THE MOWER ONTO ITS SIDE AS THIS WILL FLOOD THE AIR FILTER WITH OIL.

To access the underside of the machine, lift the front wheels by lowering the handle until it rests on the ground.

CUTTER BLADE

Examine the cutter blade regularly for wear or damage.

- A slightly worn blade can be re-sharpened by your local dealer
- If the blade is damaged it should be replaced. Replacement blade kits are available from your Mountfield stockist. The part number for the blade kit is MS1199. If in doubt refer to your dealer, or telephone 0845 601 4221. Blade must always be marked with part number GGP 81004360/3.

ENGINE

An engine Manufacturer's Owner's Manual is supplied with your mower. Please read this, it provides detailed information on engine operation, maintenance and battery care. Repair work other than routine maintenance, should be carried out by an authorised dealer.

STORAGE

A little time spent on your mower after use will ensure many years of reliable mowing.

To access the underside of the cutter deck, ensure that the spark plug lead is disconnected. Then lift the front wheels by lowering the handle until it rests on the ground. Do not tip the mower onto its side, as this will flood the air filter with oil. Failure to maintain and care for your engine may invalidate the machine guarantee. Please see the guarantee statement for full terms and conditions.

AFTER EACH USE

- Remove any grass pulp from the underside of the cutter deck using a non-metallic instrument such as a piece of wood. Take care not to damage the paintwork.
- Examine the cutter blade for any damage. A damaged blade may upset the balance of your mower and cause excessive vibration. If in doubt refer to your dealer.
- Inspect the grass collector and clean it if necessary. If the mesh becomes clogged airflow will be reduced and impair grass collection.
- The handle can be folded down to reduce the amount of storage space required. Take care not to trap any of the operating cables when folding or unfolding the handle.
- Store the mower in a clean, dry area well away from any naked flames, sparks or heat source

LONG TERM - (if you are not using your mower for more than 28 days)

- Give the machine a thorough clean, paying particular attention to the underside
- Lubricate all moving parts
- Empty the fuel tank either by running the mower out of fuel or tip the machine backwards and onto the back left wheel to drain the fuel into a suitable container. To drain the carburettor it is necessary to slacken the drain screw. The drain screw is situated under the carburettor on the float bowl (see diagram page 4). A bolt holds the bowl in place on the very bottom, but on an angle slightly closer to you is another bolt with a red washer. This is the drain screw.

FAULT FINDING

PROBLEM	SOLUTION
Engine will not start	Check there is ample clean, fresh fuel in the tank. Any stale fuel needs to be drained from the machine.
	Check the cutter blade is not fouling the ground preventing free rotation.
Engine will not stop	Check the Operator Presence Control (OPC) lever is fully released.
	Remove spark plug lead to stop the engine using insulated gloves and refer to dealer.
Engine smokes	Engine may be overfilled with oil or may have been tipped.
Engine running unevenly	Check the petrol filler cap isn't too tight - it should only be finger tight. If fuel is over 28 days old it has gone stale and will need replacing.
Failure to cut grass properly	Stop the engine and disconnect the spark plug lead using heat resistant gloves.
	Check blade attachment bolt is tight.
Failure to collect grass properly	Check condition of blade. If seriously worn or damaged replace with a new one.
	Stop the engine and disconnect the spark plug lead using heat resistant gloves
	Check and make sure there is no build up of grass inside the casing.
	Check grass collector is allowing air to flow through the fabric. If it is clogged it should be washed carefully.
	If the grass collector is not clogged raise the height of cut to increase airflow.
	Check to ensure the engine is running at the correct speed (approximately 3,000rpm)
Machine vibrates excessively	If conditions are too severe to use the grass collector, remove it and work with the deflector in position
	This will certainly indicate that the blade has become badly damaged. Stop the engine, disconnect the spark plug lead and examine the blade assembly. Refer to your local dealer.



This product is supported by Service Link. If you have been unable to find the information you require above please call the Service Link helpline. Here you will find 1-2-1 help and advice from garden machinery repair specialists.



Service link

- > **What is Service Link?** Service Link is an aftersales help and advice helpline with a national network of garden machinery repair specialists.
- > **How can we help you?** Here at service link we can help with all your trouble shooting, warranty, parts and service needs. Call us and speak to one of our advisors and if required, visit one of our 450 centres across the UK and Ireland.
- > **How can you contact us?** If in the unlikely event that this product does require our help please contact the helpline on 0845 601 4221 in the UK or 1800806149 in RoI. Lines are open Monday-Saturday 9am to 5pm and Sundays 10am to 4pm. Also find us online at www.servicelink.org.uk.

CERTIFICATE OF CONFORMITY

A certificate of conformity is enclosed with the documentation as separate document.
An EXAMPLE is here on the bottom.

DICHIARAZIONE CE DI CONFORMITÀ (Direttiva Macchine 2006/42/CE, Allegato II, parte A)		FR Déclaration CE de Conformité (Directive Machine 2006/42/CE, Annexe II, partie A)	EN Declaration of Conformity (Directive Machine 2006/42/CE, Annex II, part A)	DE CE-Konformitätserklärung (Richtlinie Maschinen 2006/42/EG, Anlage II, Teil A)
1. La Società: GGP ITALY S.p.A. - Via del Lavoro, 6 - 31033 Castelfranco Veneto (TV) - Italy	1. Die Société: 1. Déclaration sous sa propre responsabilité que la machine: "Tondeuse à cordilles tractée"	1. The Company: 1. I hereby declare under my own responsibility that the machine: "Petrol driven controlled lawn mower / Grass cutting machine"	1. Das Geschäft: 1. Erkläre auf eigene Verantwortung, dass die Maschine: "Traktierter Kordellrasenmäher"	
2. Dichiaa sotto la propria responsabilità, che la macchina: Rasaerba con operatore a piedi / taglio erba	2. Type / Modèle de Base a) Modèle commercial b) Année de construction c) Base d) Base e) Base f) Base g) Base h) Base i) Base j) Base k) Base l) Base m) Base n) Base o) Base p) Base q) Base r) Base s) Base t) Base u) Base v) Base w) Base x) Base y) Base z) Base aa) Base ab) Base ac) Base ad) Base ae) Base af) Base ag) Base ah) Base ai) Base aj) Base ak) Base al) Base am) Base an) Base ao) Base ap) Base aq) Base ar) Base as) Base at) Base au) Base av) Base aw) Base ax) Base ay) Base az) Base ba) Base bb) Base bc) Base bd) Base be) Base bf) Base bg) Base bh) Base bi) Base bj) Base bk) Base bl) Base bm) Base bn) Base bo) Base bp) Base bq) Base br) Base bs) Base bt) Base bu) Base bv) Base bw) Base bx) Base by) Base bz) Base ca) Base cb) Base cc) Base cd) Base ce) Base cf) Base cg) Base ch) Base ci) Base cj) Base ck) Base cl) Base cm) Base cn) Base co) Base cp) Base cq) Base cr) Base cs) Base ct) Base cu) Base cv) Base cw) Base cx) Base cy) Base cz) Base da) Base db) Base dc) Base dd) Base de) Base df) Base dg) Base dh) Base di) Base dj) Base dk) Base dl) Base dm) Base dn) Base do) Base dp) Base dq) Base dr) Base ds) Base dt) Base du) Base dv) Base dw) Base dx) Base dy) Base dz) Base ea) Base eb) Base ec) Base ed) Base ee) Base ef) Base eg) Base eh) Base ei) Base ej) Base ek) Base el) Base em) Base en) Base eo) Base ep) Base eq) Base er) Base es) Base et) Base eu) Base ev) Base ew) Base ex) Base ey) Base ez) Base fa) Base fb) Base fc) Base fd) Base fe) Base ff) Base fg) Base fh) Base fi) Base fj) Base fk) Base fl) Base fm) Base fn) Base fo) Base fp) Base fq) Base fr) Base fs) Base ft) Base fu) Base fv) Base fw) Base fx) Base fy) Base fz) Base ga) Base gb) Base gc) Base gd) Base ge) Base gf) Base gg) Base gh) Base gi) Base gj) Base gk) Base gl) Base gm) Base gn) Base go) Base gp) Base gq) Base gr) Base gs) Base gt) Base gu) Base gv) Base gw) Base gx) Base gy) Base gz) Base ha) Base hb) Base hc) Base hd) Base he) Base hf) Base hg) Base hh) Base hi) Base hj) Base hk) Base hl) Base hm) Base hn) Base ho) Base hp) Base hq) Base hr) Base hs) Base ht) Base hu) Base hv) Base hw) Base hx) Base hy) Base hz) Base ia) Base ib) Base ic) Base id) Base ie) Base if) Base ig) Base ih) Base ii) Base ij) Base ik) Base il) Base im) Base in) Base io) Base ip) Base iq) Base ir) Base is) Base it) Base iu) Base iv) Base iw) Base ix) Base iy) Base iz) Base ja) Base jb) Base jc) Base jd) Base je) Base jf) Base jg) Base jh) Base ji) Base jj) Base jk) Base jl) Base jm) Base jn) Base jo) Base jp) Base jq) Base jr) Base js) Base jt) Base ju) Base jv) Base jw) Base jx) Base jy) Base jz) Base ka) Base kb) Base kc) Base kd) Base ke) Base kf) Base kg) Base kh) Base ki) Base kj) Base kl) Base km) Base kn) Base ko) Base kp) Base kq) Base kr) Base ks) Base kt) Base ku) Base kv) Base kw) Base kx) Base ky) Base kz) Base la) Base lb) Base lc) Base ld) Base le) Base lf) Base lg) Base lh) Base li) Base lj) Base lk) Base ll) Base lm) Base ln) Base lo) Base lp) Base lq) Base lr) Base ls) Base lt) Base lu) Base lv) Base lw) Base lx) Base ly) Base lz) Base ma) Base mb) Base mc) Base md) Base me) Base mf) Base mg) Base mh) Base mi) Base mj) Base mk) Base ml) Base mn) Base mo) Base mp) Base mq) Base mr) Base ms) Base mt) Base mu) Base mv) Base mw) Base mx) Base my) Base mz) Base na) Base nb) Base nc) Base nd) Base ne) Base nf) Base ng) Base nh) Base ni) Base nj) Base nk) Base nl) Base nm) Base no) Base np) Base nq) Base nr) Base ns) Base nt) Base nu) Base nv) Base nw) Base nx) Base ny) Base nz) Base oa) Base ob) Base oc) Base od) Base oe) Base of) Base og) Base oh) Base oi) Base oj) Base ok) Base ol) Base om) Base on) Base oo) Base op) Base oq) Base or) Base os) Base ot) Base ou) Base ov) Base ow) Base ox) Base oy) Base oz) Base pa) Base pb) Base pc) Base pd) Base pe) Base pf) Base pg) Base ph) Base pi) Base pj) Base pk) Base pl) Base pm) Base pn) Base po) Base pp) Base pq) Base pr) Base ps) Base pt) Base pu) Base pv) Base pw) Base px) Base py) Base pz) Base qa) Base qb) Base qc) Base qd) Base qe) Base qf) Base qg) Base qh) Base qi) Base qj) Base qk) Base ql) Base qm) Base qn) Base qo) Base qp) Base qq) Base qr) Base qs) Base qt) Base qu) Base qv) Base qw) Base qx) Base qy) Base qz) Base ra) Base rb) Base rc) Base rd) Base re) Base rf) Base rg) Base rh) Base ri) Base rj) Base rk) Base rl) Base rm) Base rn) Base ro) Base rp) Base rq) Base rr) Base rs) Base rt) Base ru) Base rv) Base rw) Base rx) Base ry) Base rz) Base sa) Base sb) Base sc) Base sd) Base se) Base sf) Base sg) Base sh) Base si) Base sj) Base sk) Base sl) Base sm) Base sn) Base so) Base sp) Base sq) Base sr) Base ss) Base st) Base su) Base sv) Base sw) Base sx) Base sy) Base sz) Base ta) Base tb) Base tc) Base td) Base te) Base tf) Base tg) Base th) Base ti) Base tj) Base tk) Base tl) Base tm) Base tn) Base to) Base tp) Base tq) Base tr) Base ts) Base tt) Base tu) Base tv) Base tw) Base tx) Base ty) Base tz) Base ua) Base ub) Base uc) Base ud) Base ue) Base uf) Base ug) Base uh) Base ui) Base uj) Base uk) Base ul) Base um) Base un) Base uo) Base up) Base uq) Base ur) Base us) Base ut) Base uu) Base uv) Base uw) Base ux) Base uy) Base uz) Base va) Base vb) Base vc) Base vd) Base ve) Base vf) Base vg) Base vh) Base vi) Base vj) Base vk) Base vl) Base vm) Base vn) Base vo) Base vp) Base vq) Base vr) Base vs) Base vt) Base vu) Base vv) Base vw) Base vx) Base vy) Base vz) Base wa) Base wb) Base wc) Base wd) Base we) Base wf) Base wg) Base wh) Base wi) Base wj) Base wk) Base wl) Base wm) Base wn) Base wo) Base wp) Base wq) Base wr) Base ws) Base wt) Base wu) Base wv) Base ww) Base wx) Base wy) Base wz) Base xa) Base xb) Base xc) Base xd) Base xe) Base xf) Base xg) Base xh) Base xi) Base xj) Base xk) Base xl) Base xm) Base xn) Base xo) Base xp) Base xq) Base xr) Base xs) Base xt) Base xu) Base xv) Base xw) Base xx) Base xy) Base xz) Base ya) Base yb) Base yc) Base yd) Base ye) Base yf) Base yg) Base yh) Base yi) Base yj) Base yk) Base yl) Base ym) Base yn) Base yo) Base yp) Base yq) Base yr) Base ys) Base yt) Base yu) Base yv) Base yw) Base yx) Base yz) Base za) Base zb) Base zc) Base zd) Base ze) Base zf) Base zg) Base zh) Base zi) Base zj) Base zk) Base zl) Base zm) Base zn) Base zo) Base zp) Base zq) Base zr) Base zs) Base zt) Base zu) Base zv) Base zw) Base zx) Base zy) Base zz) Base	2. Dichiaa sotto la propria responsabilità, che la macchina: Rasaerba con operatore a piedi / taglio erba	2. I hereby declare under my own responsibility that the machine: "Petrol driven controlled lawn mower / Grass cutting machine"	2. Erkläre auf eigene Verantwortung, dass die Maschine: "Traktierter Kordellrasenmäher"
3. E conforme alle specifiche delle direttive: • MD: 2006/42/EC g) Ente Certificatore h) Esame CE del tipo: • CND: 2000/14/EC, ANNEX IV, proc. 1-2005/88/EC f) Ente Certificatore: • EMC: 2004/108/EC	3. Est conforme aux prescriptions des directives: a) Référence à la norme harmonisée b) Référence à la norme harmonisée c) Niveau de puissance sonore mesuré d) Niveau de puissance sonore garanti e) Largeur de coupe f) Personne habilitée à établir le Dossier Technique g) Lieu et Date	3. The machine conforms to the specifications of the following Directives: a) Reference to harmonized standard b) Reference to harmonized standard c) Sound power level measured d) Sound power level guaranteed e) Mower cutting width f) Person authorized to draw up the Technical File g) Place and Date	3. Die Maschine ist in Übereinstimmung mit den Anforderungen der folgenden Richtlinien: a) Zitierte Harmonisierte Normen b) Zitierte Harmonisierte Normen c) Gemessene Schallleistungswerte d) Garantierte Schallleistungswerte e) Schnittbreite f) Zur Vorlegung der technischen Unterlagen befugte Person: g) Ort und Datum	
4. Riferimento alle Norme armonizzate: EN 836:1997+A4:2011	4. Référence aux Normes harmonisées: EN 836:1997+A4:2011	4. Reference to the harmonized standards: EN 836:1997+A4:2011	4. Bezugnahme auf die harmonisierten Normen: EN 836:1997+A4:2011	
i) Livello di potenza sonora misurato j) Livello di potenza sonora garantito k) Ampiezza di taglio	i) Niveau de puissance sonore mesuré j) Niveau de puissance sonore garanti k) Amplitude de coupe	i) Sound power level measured j) Sound power level guaranteed k) Mower cutting width	i) Ausdehnung der Schallleistungswerte j) Garantierte Schallleistungswerte k) Schnittbreite	
g) Persona autorizzata a compilare il Documento Tecnico: GGP ITALY S.p.A. Via del Lavoro, 6 - 31033 Castelfranco Veneto (TV) - Italia	g) Personne autorisée à établir le Dossier Technique: GGP ITALY S.p.A. Via del Lavoro, 6 - 31033 Castelfranco Veneto (TV) - Italia	g) Person authorized to draw up the Technical File: GGP ITALY S.p.A. Via del Lavoro, 6 - 31033 Castelfranco Veneto (TV) - Italia	g) Zur Vorlegung der technischen Unterlagen befugte Person: GGP ITALY S.p.A. Via del Lavoro, 6 - 31033 Castelfranco Veneto (TV) - Italia	
r) Castelfranco V.to, 00.00.2013	r) Castelfranco V.to, 00.00.2013	r) Castelfranco V.to, 00.00.2013	r) Castelfranco V.to, 00.00.2013	
Vice Presidente R&D & Quality Ing. Riccardo Hippoliti	Vice Président R&D & Qualité Ing. Riccardo Hippoliti	Vice President R&D & Quality Ing. Riccardo Hippoliti	Vizepräsident F&E & Qualität Ing. Riccardo Hippoliti	
doc_base / 3 - w3h-p_0				

Guarantee

Congratulations on the purchase of your Mountfield lawnmower. This product has been manufactured to the highest quality standards and is guaranteed for domestic use against faulty parts or manufacture for a period of 1 year from the date of purchase. Please note that if the machine is used commercially the guarantee period is 90 days from the date of purchase. If you experience any problem with your Mountfield lawnmower please call our technical helpline on 0845 601 4221 and our operators will endeavour to solve your problem. In the event your problem cannot be resolved over the phone the operator will refer you to one of our local authorised service centres.

This guarantee is subject to the following terms;

- This guarantee is not transferable. An original proof of purchase will be required in the event of a claim.
- The product must be serviced at the recommended intervals by an authorised service centre. A service schedule should be kept including invoicing and receipts. Please phone 0845 601 4221 to locate your nearest Mountfield service centre or visit www.servicelink.org.uk. Service procedures (for example carb cleaning, draining engine oil, blade sharpening, belt and cable adjustment) and consumable parts that require periodic replacement (for example the spark plug, air filter and oil) are not covered under this guarantee. This also applies to parts subject to fair wear and tear (for example wheels, bearings, starter cord, cables, belts and blade).
- Delivery and collection of the machine is your responsibility and not covered under this guarantee.
- The guarantee does not cover any breakages or damage that are a result of the following; misuse, alteration, improper assembly or adjustment, neglect or accident.
- Expenses and costs incurred from loss of utility will not be compensated.
- The guarantee does not cover machines that are transported outside of the UK & Eire.
- Where a mower is fitted with an engine not manufactured by Mountfield, the engine manufacturer guarantees the engine.

This guarantee is in addition to and does not detract from your contractual rights under statute or common law.

On delivery of your new Mountfield mower, we suggest that you complete the box to the right.

The information for your machine is on the serial number label, which is fixed on the cutter deck at the base of the handles. You will be asked for these details if you have any problems or require spare parts.

Please keep your receipt, proof of purchase will be required in the event of a claim.

 LWA
 dB
CE

Model:

Type:

(Year) S/N^o

Service Record	
<u>1st Service</u>	<u>2nd Service</u>
Date of service	Date of service
Next service due	Next service due
Dealer's Signature	Dealer's Signature
Dealer's Stamp:	Dealer's Stamp:

GGP UK LIMITED
Unit 8, Bluewater Estate, Bell Close, Plympton, Plymouth, Devon, PL7 4JH, England.

manufactured by GGP ITALY SpA Via del Lavoro, 6 I-31033 Castelfranco Veneto (TV) Italy