

PurSteam
World's Best Steamers

PROFESSIONAL GRADE STEAM IRON

Model No: PSSI-01



USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS


Read all instructions before using the iron.

When using your iron, basic safety precautions should always be taken, including the following:

1. Make sure that the voltage indicated on the rating plate of the appliance corresponds to your outlet voltage.
2. Use the iron only for its intended use.
3. To protect against the risk of electric shock, do not immerse the iron in water or any other liquids.
4. The iron should always be turned to Minimum (Min) before plugging or unplugging from the outlet. Never yank the cord to disconnect from the outlet, instead grasp the plug and pull to disconnect.
5. We do not recommend using an extension cord, but if it is necessary, a proper gauge extension cord rated for the appropriate power must be used.
6. Do not allow the cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around the iron when storing.
7. Always disconnect iron from electrical outlet when filling with water, emptying or when not in use.
8. Do not operate the iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron.
9. Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended while plugged in or on an ironing board.
10. Burns can occur when coming in contact with any hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down there may be hot water in the Water tank.
11. Do not touch the appliance with wet or damp hands.

Your satisfaction is guaranteed. If you are not completely satisfied with our Steam Iron and the results it brings, we insist that you let us know. We'll help you make the Steam Iron work for you, or we'll refund your money.

PARTS

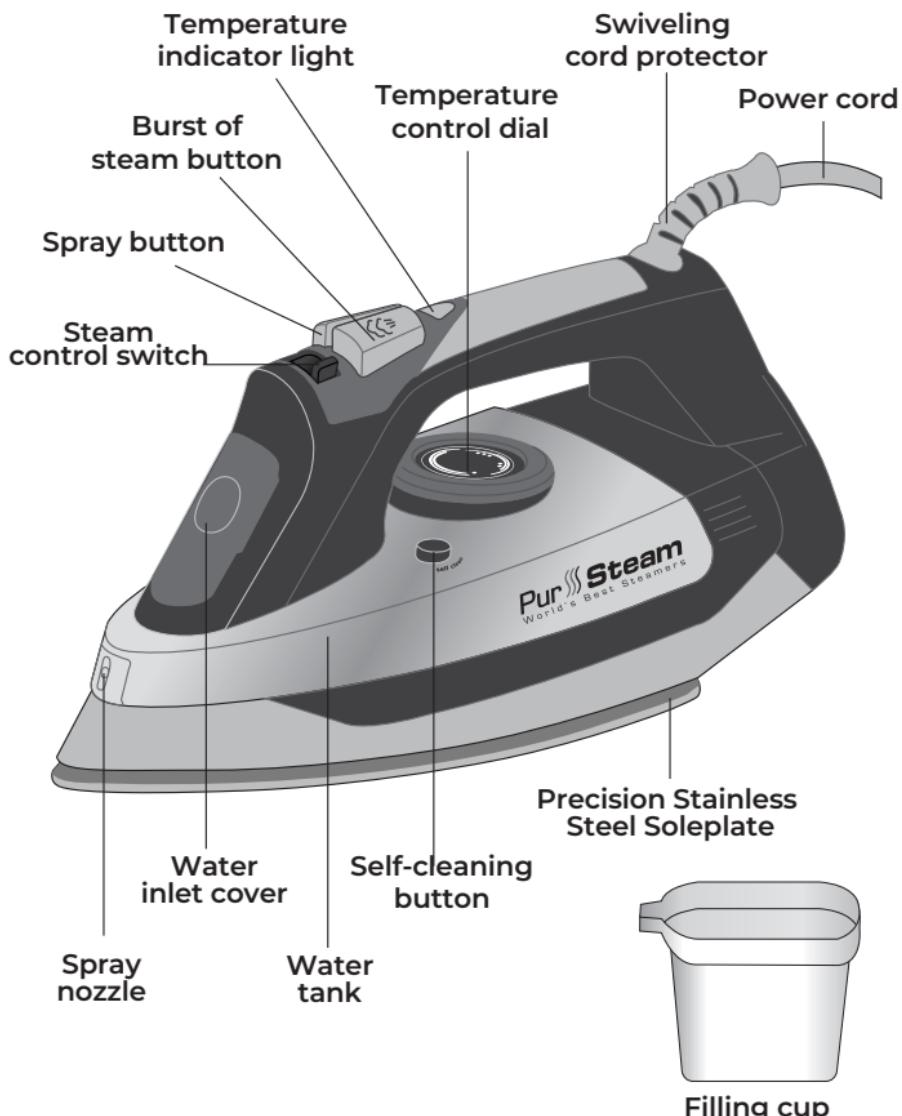

BEFORE USE

- Please read the instructions and the Important safety instructions carefully.
- Remove the transparent soleplate protective foil.
- It is normal for a small amount of smoke to be produced the first time the iron is used. This will quickly disappear.
- To avoid damage to clothes from dust or dirt that may collect in the iron, before the first use or after the iron has been stored for some time, first iron an old cloth, testing both the "Spray" and the "Burst of steam" features.



IMPORTANT FEATURES

- Stainless Steel Soleplate
- Anti-drip
- Anti-calc
- Auto shut off
- Self-cleaning
- PurSteam iron is 120V/60Hz and 1700W
- Water tank is 420 ml /14 fl.oz. capacity
- Cord length is 8ft/2.46m
- Temperature of the steam is 100°C/212F - use with caution
- Ergonomic material and design of the handle

3-WAY AUTO-OFF

If the iron is not moved while it is plugged in, an internal safety switch will turn it off. Your PurSteam iron will beep 3 times and will automatically shut-off if left for:



30 seconds
horizontally



8 minutes
vertically



30 seconds
tipped over


When this happens, the Temperature light indicator will flash **GREEN** until you unplug the iron from the power socket.

To avoid automatic switch off while the iron is heating up, always keep the iron on its heel.

STEAM IRONING


Filling with water

- Ensure the iron is unplugged.
- Slide the steam switch entirely to the left.
- Open the Water inlet cover.
- Hold the appliance upright so that the Water tank stands horizontally. Fill with water (containing no additives) to the "Max" water level mark using the provided Filling cup, and close the cover.

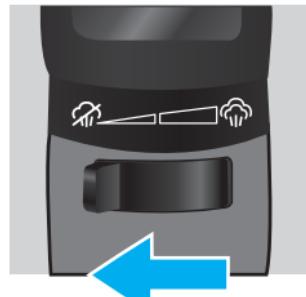

! NOTE:

- If you need to add water during ironing, UNPLUG the iron and repeat the above steps.
- Ensure the iron is fully reheated after filling (temperature indicator light turns **GREEN**) before ironing.

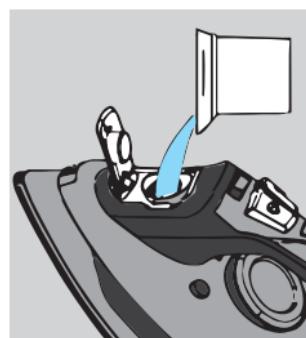

SELECTING THE TEMPERATURE

1. Place the iron upright on its heel, on an even and stable surface.
2. Insert the power cord into an electric power socket.
3. Set the Temperature control dial according to the type of fabric you are ironing. Check the fabric's label for appropriate setting. For delicate fabrics, we recommend carrying out a test on a hidden part of the garment (inner seam).
4. The desired temperature has been reached when the Temperature indicator light turns **GREEN**. The Temperature indicator light will turn from **RED** to **GREEN** intermittently, indicating that the selected temperature is being maintained.

Laundry label	Fabric	Temperature setting	Soleplate temperature
	synthetics e.g. viscose, polyester	●	70~120°C (158~248 °F)
	silk, wool	●●	100~160°C (212~320 °F)
	cotton, linen	●●●	140~235°C (248~455 °F)
	Do not iron	/	/

THE STEAM CONTROL SWITCH

The amount of steam is being regulated by the Steam control switch.

1. Ensure there is water in the Water tank.
2. Wait for the Temperature indicator light to turn **GREEN**.
3. Set or turn off the continuous steam output using the Steam control switch.



! NOTE: This function can be used only when the Temperature control dial is set in the range from ●●● to MAX.

! NOTE: The iron continuously emits steam **only if you hold it in a horizontal position**.

You can **stop the release of steam** by standing the iron on its heel or sliding the Steam control switch entirely to the left.

! ATTENTION: Do not use the steam function for silk and synthetics so as not to damage the surface of the fabric.

If the Temperature control dial is set to a lower setting, to prevent potential dripping, the iron is equipped with the **ANTI-DRIP SYSTEM**.


The anti-drip system automatically reduces the volume of steam when ironing at low temperatures to prevent dripping.

During use, the anti-drip system may emit a **clicking sound**, particularly during heat up or when the iron is cooling down. This is normal and indicates that the anti-drip system is functioning correctly.

SPRAY SETTING

The spray function can be used at any temperature setting. Use this function to make wrinkle removal easier.

1. Ensure there is water in the Water tank.
2. Aim the Spray nozzle towards the garment.
3. Press the Spray button down slowly for a jet or press quickly and firmly for a mist.

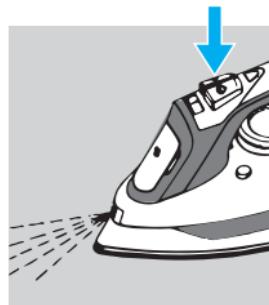

! NOTE: Do not use the spray function on silk and synthetics.

BURST OF STEAM

Use the Burst of steam function to remove stubborn wrinkles or to press in a sharp crease.

1. Ensure there is water in the Water tank.
2. Wait for the Temperature indicator light to turn **GREEN**.
3. Press the Burst of steam button firmly to generate a strong flow of steam.
4. Wait at least 4 seconds before pressing the Burst of steam button again.



! NOTE: This function can be used only when the Temperature control dial is set in the range from **•••** to **MAX**.

! ATTENTION: Do not use the Burst of steam function on silk and synthetics.

VERTICAL STEAM


The iron can also be used vertically. This is especially useful for getting creases out of hanging clothes, curtains, tapestries, etc. To steam vertically, press the Burst of steam button while holding the iron in the upright position.



! WARNING: Never iron clothes while they are being worn.

DRY IRONING

1. Slide the Steam control switch entirely to the left.
2. Set the Temperature control dial to the desired setting according to the type of fabric you are ironing.
3. The iron is ready for use when the Temperature indicator light turns **GREEN**.

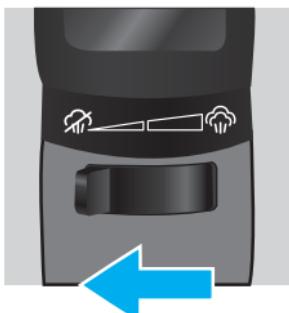

! NOTE: We recommend dry ironing with an empty tank to be sure there are no drips, however, dry ironing can also be performed with water already in the tank.

STORING YOUR IRON

1. Slide the Steam control switch entirely to the left and turn the Temperature control dial to **MIN**.
2. Disconnect the **power cord** from the power socket and allow the soleplate to cool down.
3. **Empty the Water tank** into a sink by turning the iron upside down and gently shaking it.
4. **Roll up the power cord** around the iron.
5. Always store the iron in an **upright position**.



WATER TO USE IN IRON

Tap water

PurSteam irons are designed to be used with REGULAR TAP WATER (up to 12 grains of hardness). If your water is harder than this, PurSteam recommends mixing half tap water with half distilled water, which reduces the hardness; or just use inexpensive bottled

! spring water. **Never use 100% pure distilled water** since this can cause the iron to spit and leak.

Always remember:

Water containing additives (such as starch, perfume or fabric conditioner) may not be used. Such additives can affect the properties of the steam and, at high temperatures, can form deposits in the steam chamber, which will mark the laundry when they are emitted through the steam vents. For this reason, descaling liquids should not be used.

SELF CLEANING FEATURE

The self-cleaning feature cleans inside the sole-plate, removing scale and impurities.
We recommend using it every 10-15 days.

Instructions on how to perform the self-cleaning:

- **Fill the Water tank up to the maximum level** and set the Steam control switch to "OFF".
- Set the **Temperature control dial** to the maximum and wait for the light to turn **GREEN**.
- **Pull the plug out** of the socket and hold the iron horizontally over the sink.
- Hold the **Self-cleaning button** until all the boiling water, steam, impurities and scale come out.



CLEANING AND MAINTENANCE

! NOTE: Before cleaning the iron, make sure that it is unplugged from the wall outlet and cooled down.

- When cold and unplugged, the iron can be cleaned with a damp cloth and wiped dry. Never use household cleaners or solvents.
- If the iron has not been used for a long time (e.g., several weeks) the steam channels should be cleaned, and any deposits removed from the iron. To do this, hold the iron horizontally before you start to use it and allow it to produce steam for about 1 minute. Also, activate the Burst of steam button several times.

Cleaning the soleplate

PurSteam stainless steel soleplates have excellent non-stick properties and can be simply wiped clean when cold.

- During normal use, a sticky coating may build up on the soleplate (starch, detergent buildup, burnt synthetic fibers). This can be easily removed by using quality hot iron soleplate cleaner available at most stores.
- Do not use abrasive household cleaners or abrasive cleaning pads.
- The soleplate of your iron makes ironing easier. To prevent scratching of the soleplate, do not iron over sharp objects (zippers, etc.). Do not place the iron on rough surfaces, e.g., metal iron support, which may scratch the soleplate.

ADVICES FOR GOOD IRONING

- We recommend using the lowest temperatures with fabrics that have unusual finishes (sequins, embroidery, flush, etc.).
- If the fabric is a blend (e.g., 40% cotton 60% synthetics), set a lower ironing temperature.
- If you don't know the composition of the fabric, determine the suitable temperature by testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.
- Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.
- To avoid marking silk, wool, or synthetic garments, iron them inside out.

- To avoid marking velvet garments, iron in one direction (following the fiber) and do not press down on the iron.
- Many fabrics are easier to iron if they are not completely dry. For example, silk should always be ironed damp.

IRON TROUBLESHOOTING

Problem	Possible cause	Solution
Iron is leaking	DISTILLED WATER SOFTENED WATER Auto-off activated? Overuse of burst of steam	DO NOT use 100% pure distilled water, use tap water. In very hard water areas mix half tap water with half distilled to reduce hardness; or use inexpensive bottled spring water. Most softened water is alright, but if you experience leaks or spitting, change to untreated tap water or inexpensive bottled spring water. DO NOT use 100% distilled water. Move iron or gently shake. Allow more time between each burst.
Iron won't heat	Is iron plugged in? Temperature dial set too low? Auto-off activated?	Make sure the plug is in the socket. Turn Temperature dial higher. Move iron or gently shake.
Temperature indicator light turns GREEN and RED intermittently	This is normal	The Temperature indicator light will turn from RED to GREEN intermittently, indicating that the selected temperature is being maintained.
Iron does not steam	Iron is not hot enough Steam valve is clogged	If the iron is not hot enough, the anti-drip system will activate and stop the iron's steam production. Set thermostat to the ●●● position. Always allow sufficient time for the iron to heat up (indicator light turns GREEN) before activating the Steam control switch. Move the Steam control switch from min to max several times to clear blockage.



2-Year Limited Warranty

This product is warranted to be free from defects in material and workmanship under normal use and service for two years from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.



Your purchase comes with a 100% satisfaction guarantee from PurSteam

If you are not happy with the product for any reason, please contact us at support@pursteam.us or (855) 530-6800 with your feedback or questions, and we will do our best to make things right for you!

PurSteam
World's Best Steamers

Cheyenne, Wyoming 82001 USA

Telephone: (855) 530-6800

E-mail: support@pursteam.us

Web: www.pursteam.us