


Fanttik

v9 / v9 Pet Pro Cordless Handheld Vacuum Cleaner


User Manual

Please read this instruction manual carefully before use and keep it for future reference.

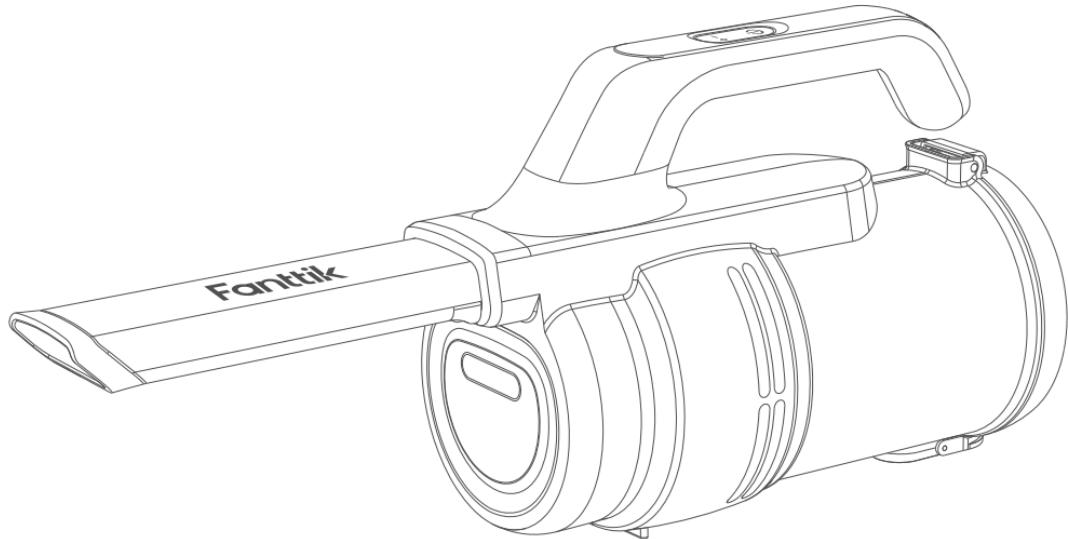


Quick Start Guide


How to assemble

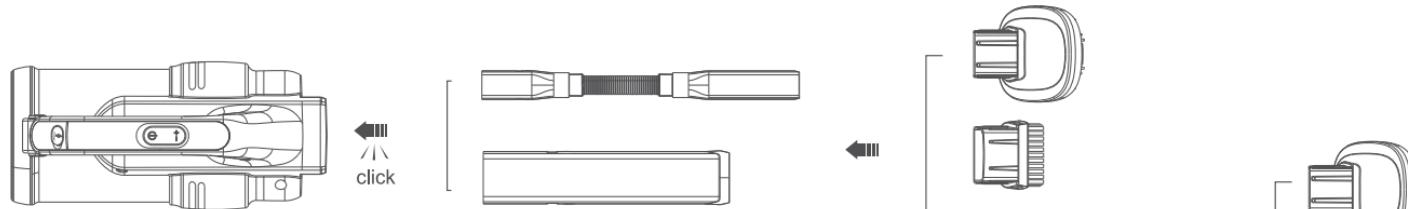

Cleaning

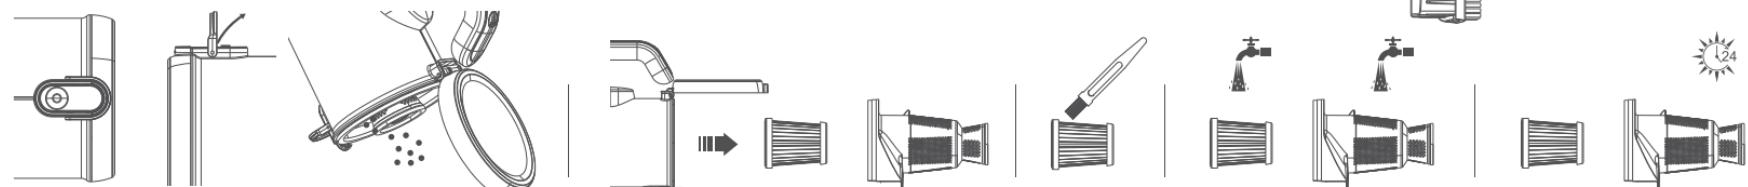

Charge

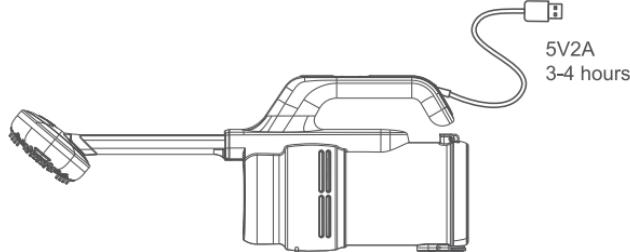

Thank you for choosing Fanttik

Thank you for purchasing Fanttik vacuum cleaner. This is a cordless handheld vacuum cleaner with strong suction and multi-functional brush.

CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	01
2. PRODUCT OVERVIEW	03
3. PACKAGE CONTENTS	03
4. HOW TO USE	04
5. CLEAN AND MAINTENANCE	05
6. LED INDICATOR	05
7. TOXIC AND HAZARDOUS SUBSTANCES	06
8. TROUBLESHOOTING	06
9. SPECIFICATIONS	06

1. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, please observe the following rules:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING – To reduce the risk of fire or injury:

1. This product has an internal battery. Do not put the device into fire or heat it. Do not charge, use, place it under high temperature conditions, and do not store it in the car in case of overheating, ignition or explosion.
2. It is recommended to charge, use or store the device between 32°F and 104 °F.
3. People with physical, mental or sensory disabilities should not use the device for your safety.
4. Children should not use, clean or play with the device.
5. Do not use the device with wet hands to avoid injury.
6. Do not leave the appliance when plugged in.
7. Do not use the appliance outdoors or on wet surfaces
8. Do not pull the power cord to unplug. To unplug, please grasp the plug, not the power cord. Keep the appliance free of dust, lint, hair and anything that may reduce airflow.
9. Do not use this device to vacuum up any liquid such as water and cola.
10. Do not vacuum smoking or burning things such as cigarette butts ,matches,or hot ashes.
11. Do not vacuum hard or sharp objects to avoid injury when cleaning the Dustbin.
12. Do not use scented products on this equipment to avoid fire caused by the flammable chemicals in them.
13. Do not modify or repair the internal battery.
14. Do not use it in heated or moist places such as heating room and bathroom.
15. When the vacuum cleaner's service life is over, please give it to the recycling location designated by the government because the internal battery cannot be taken out.

16. If the charging wire is damaged or broken, please stop using it immediately.

17. If you don't use it for a long time, please unplug the charging cable after full charge and place it in a cool dry place. Charge it at least once every 3 months to avoid battery loss.

18. If the device needs to be transported, it is recommended to use the original packaging box and keep it in the "OFF" state.

19. Unplug from outlet when not in use and before servicing.

20. Do not allow to be used as a toy. Close attention is necessary when used near children.

21. Use only as described in this manual. Use only manufacturer's recommended attachments.

22. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

23. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.

24. Do not put any object into openings. Do not use with any opening blocked.

25. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

26. Use extra care when cleaning on stairs.

27. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

28. Do not use without dust bag and/or filters in place.

29. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance.

30. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.

31. Recharge only with the charger specified by the manufacturer.

32. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

33. Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

34. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.

35. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions.

Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

36. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

37. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care. Use only with Listed/Certified Information Technology (Computer) Equipment, or Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit


38. This appliance contains batteries that are non-replaceable

SAVE THESE INSTRUCTIONS


Please follow the safety and operating instructions. We assume no responsibility for your property loss caused by improper use.

This product is only for household use .

2. PRODUCT OVERVIEW

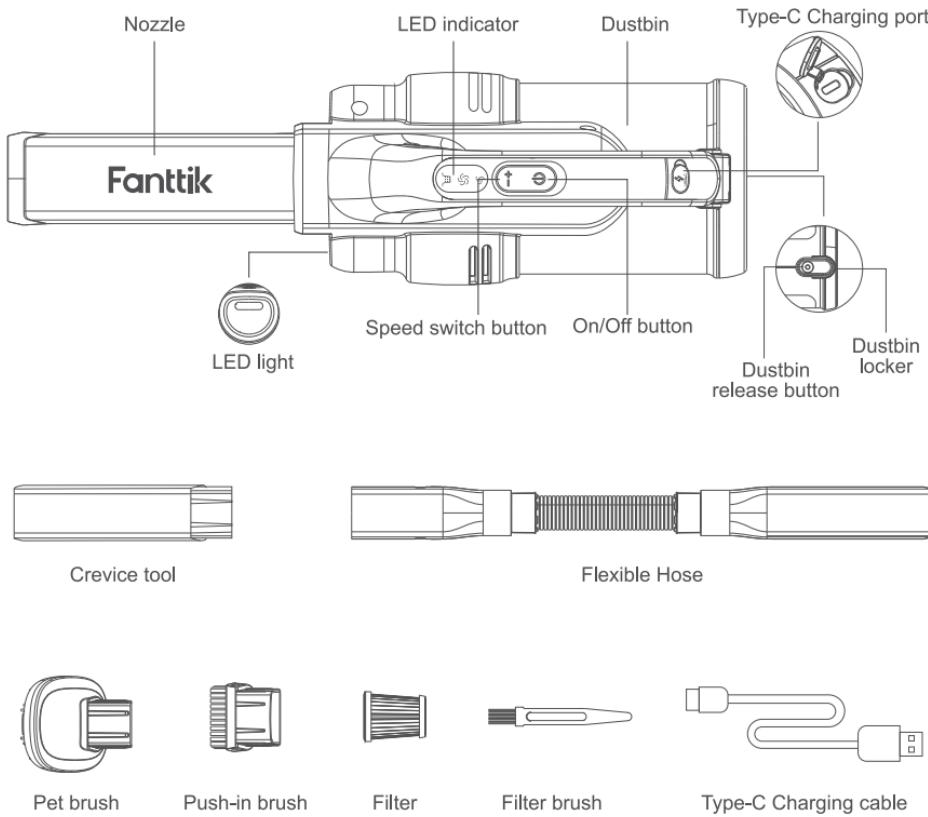


3. PACKAGE CONTENTS (Applicable model :V9)

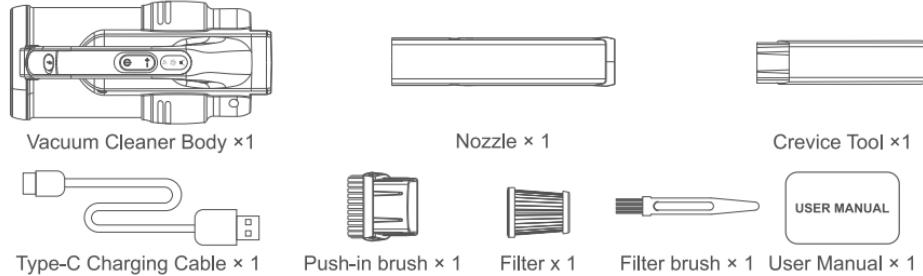

Carefully check the package contents, if anything is missing or damaged, please contact our online customer service for support.


3. PACKAGE CONTENTS (Applicable model :V9 Pet Pro)

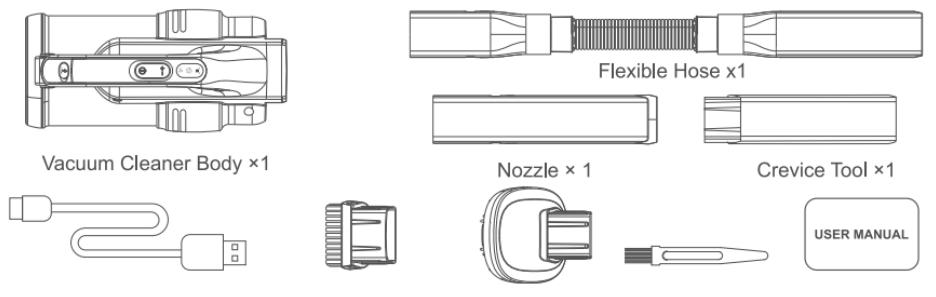

Carefully check the package contents, if anything is missing or damaged, please contact our online customer service for support.

4. HOW TO USE

How to assemble

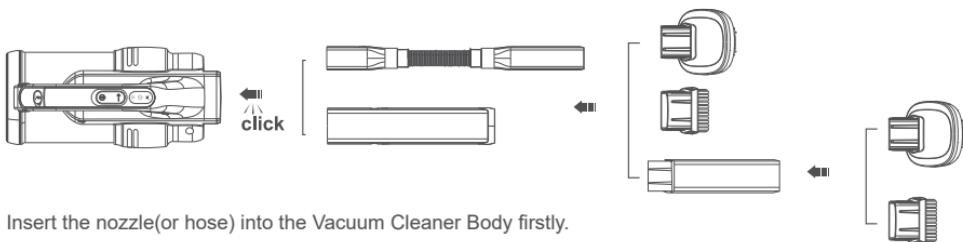

Insert the nozzle(or hose) into the Vacuum Cleaner Body firstly.


Select the suction head according to your needs and install it to the corresponding port to use.

The two cleaner heads can be used separately or in combination.

How to disassemble

Press the nozzle(or hose) button by hand or other tool and pull out the nozzle (or hose).


Other accessories can be pulled out directly

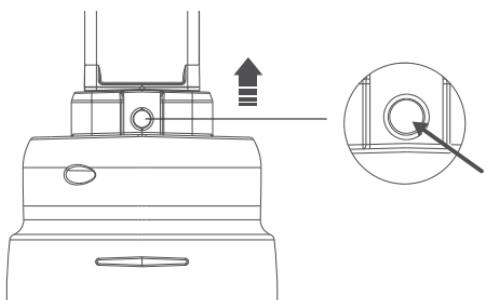

Hose and pet brush are included in the pet version only

How to charge


1. Please use a 5V/2A max power adapter (not included) and the type-C charging cable(included) to charge. The type-C charging cable can only be used for charging.
2. It takes about 3-4 hours to fully charge. You can use the device in high speed mode for about 13 minutes or in low speed mode for about 30 minutes after full charge.
3. The lithium-ion battery must be FULLY charged before first use and after long-term storage.
4. It is recommended to charge the device every three months.

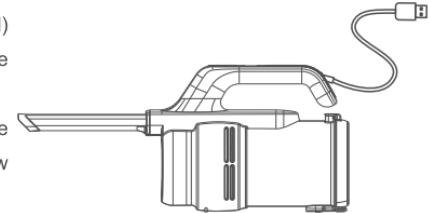

How to use

On/Off Button:

Short press to turn on the device (floodlight on), and press again to turn off (floodlight off).

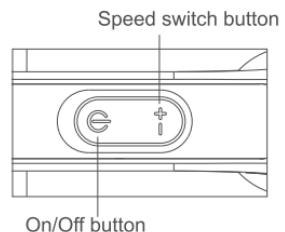


Speed Switch Button:

Low speed by default. Short press the Speed Switch Button to switch to high speed, and press again to switch back (Long press the button for 1.5 seconds to turn off the light).


5. CLEAN AND MAINTENANCE



Push the Dustbin locker upward, press the Dustbin release button to open the door and empty the dirt inside.

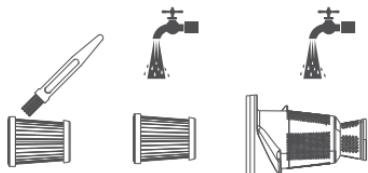


clean filter with cleaning brush
Wash the pre-filter and Filter with warm soapy water.

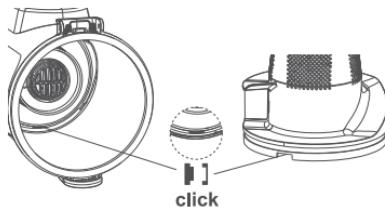


The Pre-filter notch should be matched with the Dustbin bulge.

Do not wash the unit or get the charging port wet. The filter element is recommended to be replaced every 3 months. You can buy replacement filters(model:AV9001) from Amazon

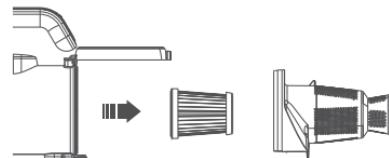

Pull out the Pre-filter and filter from the bottom of the Dustbin.

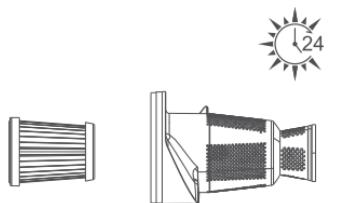

Make sure the filter are dry before refit the filters into dustbin.

6. LED INDICATOR

Vacuum Cleaner	Status	Icon	Indicator
In working	Low speed		Icon light
	High speed		Icon light
	Filter blockage		Icon turn red
	Full battery		All 10 lights are on, forming a complete Ice Blue ring light
	Battery power 90%		The first light is off, and the rest of the lights are steady Ice Blue
	Battery power 80%		The first and second lights are off, and the rest of the lights are Ice Blue, and so on
	Low battery		The last light flashes
	Under voltage		The last light flashes and then goes off
	Full sealed		Halt the ring light flashes for five times and then goes off
In charging	In charging		The first light blinks slowly, then the second light blinks slowly, —— until full
	Full battery		The Ice Blue ring lights for 60 seconds and then goes off
	Wrong adaptor		The ring light flashes for five times and then goes off

7. TOXIC AND HAZARDOUS SUBSTANCES

PRODUCT	NAME HAZARDOUS CHEMICALS					
Handheld Vacuum Cleaner	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
	O	O	O	O	O	O

O Indicates all homogeneous materials' hazardous substances content are below the limit specified in the Standard 2011/65/EU.

X Indicates that the hazardous substances content in at least one homogeneous material of the component exceed the limit specified in the Standard 2011/65/EU.

X Indicates that the replacement of non-environmental protection substances cannot be achieved currently due to the global technology limitations, which will be gradually improved with the technical improvement.

8. TROUBLESHOOTING

If the following operations can not solve your problems, please stop using the device and contact the manufacturer with E-mail: support@fanttik.com

	Problem	Possible Reason	Solution
	Icon turn red	Filter blockage	Taking out the trash in the dustbin and clean the filter before turning on the device
	When the appliance is power off, the ring light flashes for five times and then goes off.	Full sealed	Taking out the trash in the Dustbin and clean the filter before turning on the device
—	The last light flashes and fails to turn on the device after pressing Power Button	Under Voltage	Please charge the device
	No indicator light when charging	The charging cable is loose	Reinsert the charging cable
		Fully charged	Unplug the charging cable

9. SPECIFICATIONS

Items	Parameter	Items	Parameter
Model	V9 / V9 Pet Pro	Rated voltage	10.8V
Size	427*123*189mm	Noise	82dB(A)
Bare unit weight	1.04kg	Runtime	High speed≈13min Low speed≈30min
Battery capacity	2000mAh	Charging voltage	5V DC
Rated power	90W	Dustbin capacity	600mL