 


Fanttik

Slim V10 Max/
Slim V10 APEX

Cordless Handheld Vacuum Cleaner
Kabelloser Handstaubsauger

User Manual

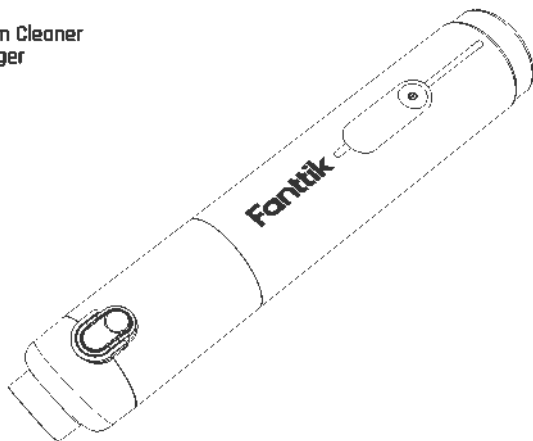


Please read this instruction manual carefully before use and keep it for future reference.

Contents

English	01~11
Deutsch	12~22
Français	23~33
Español	34~44
Italiano	45~55
Warranty	56

 Quick Start Guide

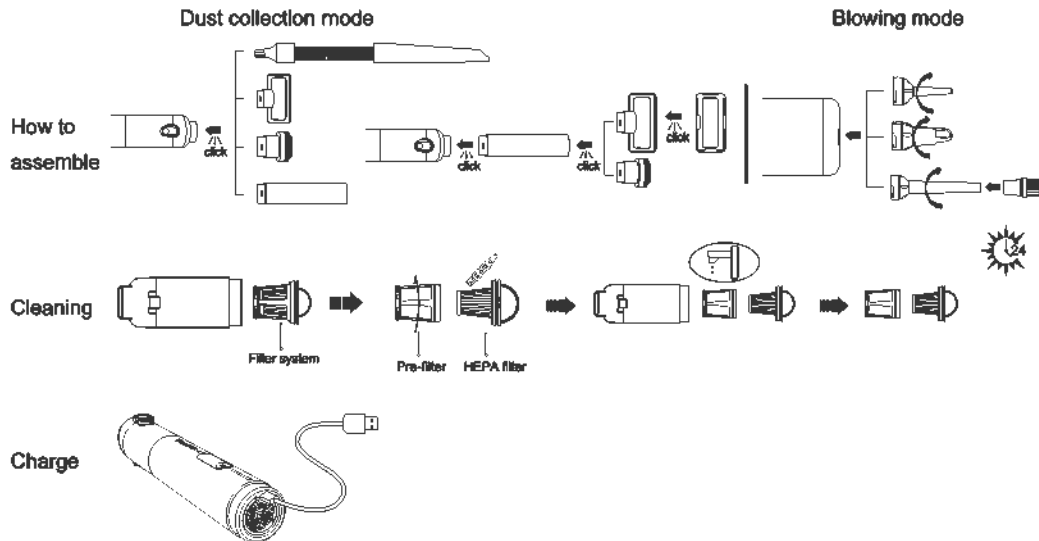

Thank you for choosing Fanttik

Thank you for purchasing Fanttik vacuum cleaner. It is a cordless handheld vacuum cleaner with air-blowing function, at the same time has a variety of accessories as crevice nozzle, multi-functional brush and flexible hose etc.

CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	03
2. PRODUCT OVERVIEW	05
3. PACKAGE CONTENTS	06
4. HOW TO USE	07
5. CLEAN AND MAINTENANCE	08
6. SCREEN DISPLAY	09
7. TOXIC AND HAZARDOUS SUBSTANCES	09
8. TROUBLESHOOTING	10
9. SPECIFICATIONS	11

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire or injury:

 
All the safety and operating instructions should be read before use and should be followed to avoid injury, fire, electric shock, property loss, and other risks.

1. This product is only for household and car use.
2. This product has an internal battery. Do not put the device into fire or heat it. Do not charge, use, place it under high temperature conditions, and do not store it in the car in case of overheating, ignition or explosion.
3. It is recommended to charge, use or store the device between 32°F and 104 °F.
4. People with physical, mental or sensory disabilities should not use the device for your safety.
5. Children should not use, clean or play with the device.
6. Do not use the device with wet hands to avoid injury.
7. Do not use this device to vacuum up any liquid such as water and cola.
8. Do not vacuum smoking or burning things such as cigarette butts, matches, or hot ashes.
9. Do not vacuum hard or sharp objects to avoid injury when cleaning the dust cup.
10. Do not use scented products on this equipment to avoid fire caused by the flammable chemicals in them.
11. Do not modify or repair the internal battery.
12. Do not use it in heated or moist places such as heating room and bathroom.
13. When the vacuum cleaner's service life is over, please give it to the recycling location designated by the government because the internal battery cannot be taken out.
14. If the charging wire is damaged or broken, please stop using it immediately.
15. If you don't use it for a long time, please unplug the charging cable after full charge and place it in a cool dry place. Charge it at least once every 3 months to maintain the battery performance.

16. If the device needs to be transported, it is recommended to use the original packaging box and keep it in the "OFF" state.
17. Unplug from outlet when not in use and before servicing.
18. Do not allow to be used as a toy. Close attention is necessary when used near children.
19. Use only as described in this manual. Use only manufacturer's recommended attachments.
20. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
21. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
22. Do not put any object into openings. Do not use with any opening blocked.
23. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
26. Do not use without dust bag and/or filters in place.
27. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
28. Recharge only with the charger specified by the manufacturer.
29. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
30. Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
31. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
32. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
33. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
34. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
35. Use only with Listed/Certified Information Technology (Computer) Equipment, or Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit
36. This appliance contains batteries that are non-replaceable

SAVE THESE INSTRUCTIONS

2. PRODUCT OVERVIEW

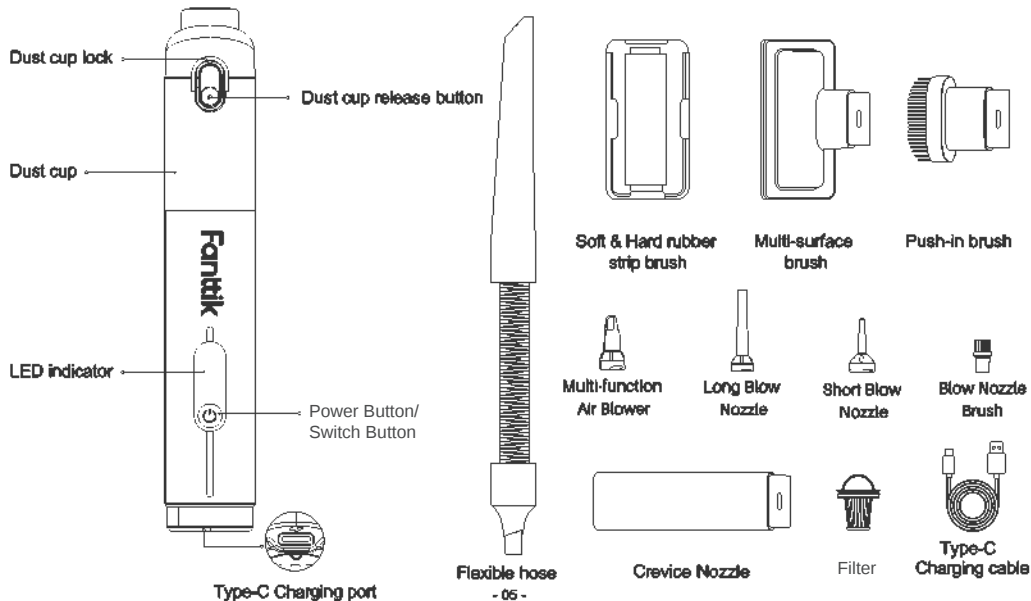

3. PACKAGE CONTENTS



Vacuum Cleaner Body × 1

 


Flexible hose
× 1


Hard rubber strip brush × 1
Soft rubber strip brush × 1



Short Blow
Nozzle × 1

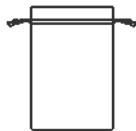

Storage
bag × 1

 

Multi-surface
brush × 1



Crevice
Nozzle × 1



Push-in
brush × 1



Type-C
Charging cable × 1



User
Manual × 1



Blow Nozzle
Brush × 1



Multi-function
Air Blower × 1



Cleaning
brush × 1



Filter

 


Long Blow
Nozzle × 1

Carefully check the package contents, if anything is missing or damaged, please contact our online customer service for support.

4. HOW TO USE

• How to assemble

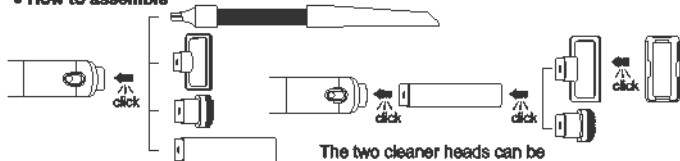

Select the suction head according to your needs and install it to the corresponding port to use.

 
The two cleaner heads can be used separately or in combination.

• How to charge



1. Please use a 5V=3A max power adapter (not included) and the type-C charging cable(included) to charge. The type-C charging cable can only be used for charging.

2. Slim V10 Mate:It takes 2.5 hours (5V = 3A)to fully charge, you can use the device in high speed mode for about 15 minutes or in low speed mode for about 35 minutes
Slim V10 APEX:It takes 3 hours (5V = 3A)to fully charge, you can use the device in high speed mode for about 15 minutes or in low speed mode for about 30 minutes
3. The lithium-ion battery must be FULLY charged before first use and after long-term storage.
4. It is recommended to charge the device every three months.

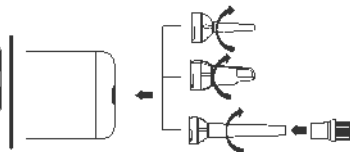


Blowing mode:

Select the blow nozzle according to your needs and install it to use.

The blow nozzle brush can only be fitted to the long blow nozzle.


 
• How to use



Power Button/Switch Button

Long press (0.8s) to turn on the device (In low speed mode), and press again to high speed mode, press repeated to switch the high and low speed mode; long press again (0.8s) to turn off.

  5. CLEAN AND MAINTENANCE

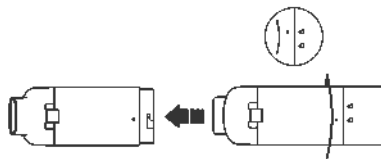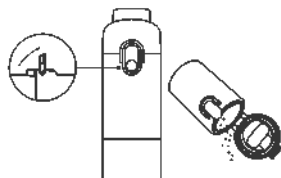


Filter system


- 1 Push the dust cup lock upward, and press the dust cup release button to empty the dirt inside.

- 2 Rotate the dust cup along the direction shown on the back of the unit and pull it out.

 - 3 Pull out the filter system from the bottom of the dust cup.

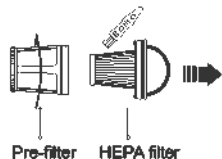

Pre-filter HEPA filter

 

- 4 Rotate the Pre-filter anticlockwise and pull out the HEPA filter. Clean HEPA filter and Pre-filter with cleaning brush

- 5 Wash the dust cup, Pre-filter, HEPA Filter and cleaner head with clean water.

- 6 Wait for the filter system to dry completely before putting them back.

Do not wash the unit or get the charging port wet. The filter element is recommended to be replaced every 3 months.

6.SCREEN DISPLAY

Vacuum Cleaner	Status	Indicator
In working	Low speed	Display low speed icon and the current battery level
	High speed	Display high speed icon and the current battery level
	Power off	The lowest battery level icon and lightning icon red flashes five times then goes off
	Full sealed	The high speed icon flashes five times and then goes off
	Motor fault or overload current	Low speed and high speed icon flashes five times and then goes off
In charging	Battery power less than 10%	The lightning icon flashing red
	In charging	The battery level icon cycle flash
	Full battery	Whole battery icon steady on for 1 minute and then goes off
	Wrong adaptor	Whole battery icon flashes five times then goes off

7. TOXIC AND HAZARDOUS SUBSTANCES

PRODUCT NAME	HAZARDOUS CHEMICALS				
	Pb	Cd	Cr	PBB	PBDE
Handheld Vacuum Cleaner				○	

○ Indicates all homogeneous materials' hazardous substances content are below the limit specified in the Standard 2011/65/EU.

X Indicates that the hazardous substances content in at least one homogeneous material of the component exceed the limit specified in the Standard 2011/65/EU.

X Indicates that the replacement of non-environmental protection substances cannot be achieved currently due to the global technology limitations, which will be gradually improved with the technical improvement.

8. TROUBLESHOOTING

If the following operations can not solve your problems, please stop using the device and contact the manufacture with
E-mail: support@fantik.com

Problem	Possible Reason	Solution
The lowest battery level icon and lightning icon flashes then the device goes off while working	Under Voltage	Please charge the device
The device stops working and the high speed icon flashes five times	Full sealed	Clean the air vent and filter before turning on the device
The lowest battery level icon and lightning icon flashes and fails to power on after pressing power button	Under Voltage	Please charge the device
No display when charging	The charging cable is loose	Plug in charging cable
	Fully charged	Unplug the charging cable

9. SPECIFICATIONS

Items	Parameter
Model	Slim V10 Mate
Size	318*55*65mm
Weight	516g
Battery capacity	2500mAh
Rated power	110W

Items	Parameter
Rated voltage	11.1V
Noise	75dBA
Runtime	High speed≈15min / Low speed ≈35min
Charging voltage	5V DC
Dust cup capacity	120mL

Items	Parameter
Model	Slim V10 APEX
Size	318*55*65mm
Weight	521g
Battery capacity	3000mAh
Rated power	120W

Items	Parameter
Rated voltage	11.1V
Noise	75dBA
Runtime	High speed≈15min / Low speed ≈30min
Charging voltage	5V DC
Dust cup capacity	120mL

WARRANTY CARD

🔗 Your Warranty Includes

• 12-Month Coverage

Within 12 months of purchase, we will provide timely and effective online after-sales service. We will repair or replace any defective product (due to manufacturing fault) within the warranty period.

🔗 How to Return Your Fantik Product

- Contact support@fantik.com with your order number.
- We will issue you a return label for your return.
- Tear off the 'Return Details' page and fill in the details. Include this inside your return package.
- We will issue your replacement/refund on receiving the return package.



support@fantik.com

🔗 Return Details

In order to process your return as quickly as possible, we require the following information. Please fill out this form and include it in your return package.

Purchase Name:	
Order Number:	
Date of Purchase:	
Your Email Address:	
Place of Purchase:	

- 🔗 **If your purchase was fulfilled by Amazon, please use Amazon's 30-day return service.**

929-693-6066 MON-FRI 9AM-5PM (ET)

www.fanttik.com

support@fanttik.com

Manufacturer/Hersteller: METASEE LLC

Address/Adresse:

12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Made In China



points de collecte sur www.guidefrancedechets.fr
privilégiez la réparation ou le don de votre appareil !



Lienco SAS
8 Rue Marcel Cerdan, 77600, Bussy Saint Georges, France
Contact: Ruoyu ZHANG
Phone/Fax: +33766929910
Email: ruoyu@lienco.eu



CET Product Service Ltd.
Bacon House Stokenchurch Business Park, Stone Rd,
Stokenchurch High Wycombe HP14 3FE UK
Email: info@cetproduct.com
Phone/Fax: +44 746328266