



# morphy richards

3 Year  
Guarantee\*

\*Upon registering your product at [morphyrichards.co.uk](http://morphyrichards.co.uk)

GRILLX  
Toasted  
Sandwich Maker



Model No.

**450001**

Please read and keep these instructions for future use

## User Manual





## HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

**Read these instructions carefully and retain for future reference.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cordset is damaged, contact Morphy Richards for advice.





## HEALTH AND SAFETY

- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.
- **WARNING:** Misuse can cause personal injury.



## HEALTH AND SAFETY

### LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Do not use the appliance outdoors or near water.
- **IMPORTANT:** Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- **WARNING:** Do not use underneath cupboards.

### MAINS CABLE

- The mains cable should reach from the socket to the base unit without straining the connections.
- Do not let the mains cable hang over the edge of the worktop or open space where a child could reach it.
- Do not let the cable run across a cooker or hot area which might damage the cable.
- Never leave the appliance connected to the socket outlet when not in use.

### PERSONAL SAFETY

- **WARNING: Do not touch hot parts during or after use, use handles or knobs.**
- To protect against the risk of electrical shock do not put the appliance in water or in any other liquid.
- Do not touch hot surfaces. Use oven gloves or a cloth when removing lid or handling hot containers.
- Extreme caution must be used when moving an appliance containing hot food.

### OTHER SAFETY CONSIDERATIONS

- Do not switch on the appliance when it is upside down or laid on its side.
- Do not operate with a damaged cable or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.
- Do not place on or near a hot gas or electric burner.





## HEALTH AND SAFETY



**CAUTION!**  
**HOT**  
**SURFACE!**

**PLEASE BE AWARE OF HOT SURFACES**

**HANDLE WITH CARE**

### **TREATING SCALDS**

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.

## ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- **WARNING:** The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode is 0.3W.
- The period after which the equipment reaches automatic off mode is after 1 minute.
- **WARNING:** This appliance must be earthed.






## PRODUCT REVIEW



## CONTROL PANEL

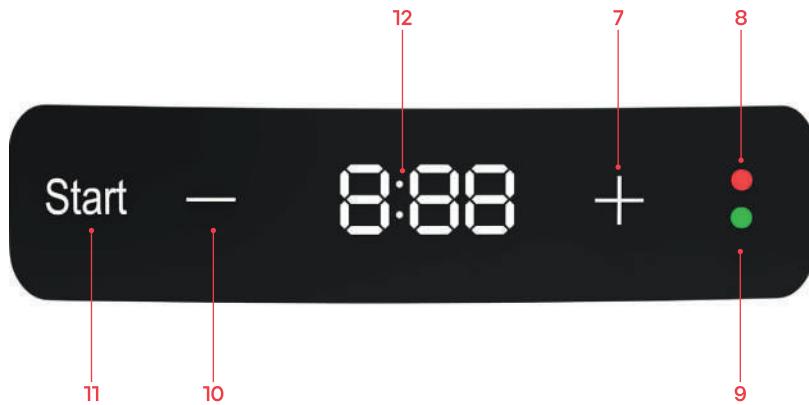



## PRODUCT REVIEW

1. Handle
2. Latch Release Button
3. Latch
4. Sandwich Toasting Plates
5. Cable Storage (underneath, not shown)
6. Control Panel/Display
7. Time Increase Button
8. Power On Indicator (red)
9. Ready to Cook Indicator (green)
10. Time Decrease Button
11. Start Button
12. Time Display

## BEFORE FIRST USE

- Before first use clean the sandwich toasting plates with a damp sponge or dishcloth and dry thoroughly. **DO NOT** use a scouring pad or other abrasive material as this will scratch the non-stick coating.
- Wipe the outside of your sandwich toaster with a soft damp cloth and dry thoroughly.
- The sandwich toaster lid must be fully closed and latched for pre-heating and cooking.
- **Note:** When using for the first time you may notice a fine smoke haze being emitted from the unit, this is normal and is not harmful.



## USING YOUR SANDWICH MAKER

**Note:** Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

- Prepare your sandwich ingredients in advance.
- For the best results lightly butter the OUTSIDE of the bread or use a spread suitable for cooking.

**Note:** Do not use low-fat spread products or one which has a high water content for greasing sandwich plates or spreading on the bread. Do not cut the bread before cooking.

- Plug the appliance into the mains socket and switch on. The red Power On indicator will illuminate and beeps will be heard.

**Note:** Keep the appliance latched while preheating.

- The appliance is ready for use when the green Ready to Cook Indicator (9) comes on; beeps are heard and  is illuminated on the display.

**Note:** The temperature cannot be adjusted.

- Press the Latch Release Button (2) to open the appliance and place the two slices of bread onto the bottom toasting plates 'buttered' side down.

**CAUTION: REMEMBER THE TOASTER PLATES ARE VERY HOT, TAKE CARE.**

- Add the filling. Always allow a gap around the edges of the bread.

**Note:** DO NOT overfill the sandwiches, it makes the lid difficult to latch and may prevent a good seal being made around the sandwich. The filling could also leak.

- Place the remaining bread on top with the 'buttered' side on the outside.
- Using the handle lower the lid, apply a little pressure until the latch clips securely.
- Using the Time Increase button  or Time Decrease  button to set the desired cooking time on the display.





## USING YOUR SANDWICH MAKER

- Press the Start button (11) and the Time Display (12) will start to count down. Beeps will be heard when the timer reaches zero and **End** illuminates on the display.
- When removing sandwiches NEVER use metal utensils. Always use a heat proof plastic or wooden spatula.

**Note:** The sandwiches will take approximately 4-5 minutes until golden and cooked. However, this time should be used as a guide only, as cooking times will vary depending on the type of bread and ingredients used and personal preference.

**IMPORTANT:** The timer serves only as a reminder it DOES NOT turn off the appliance. When cooking is complete the appliance MUST be switched off at the mains and unplugged.

## CARE AND CLEANING

**IMPORTANT:** Before cleaning, the sandwich toaster must be switched off at the mains and unplugged.

- Allow the toasting plates to cool down thoroughly, wipe them with a damp cloth.
- Never use abrasives or cream cleaners.
- Clean other parts of the appliance with a damp cloth or kitchen paper.
- **NEVER IMMERSE THE SANDWICH TOASTER IN WATER.**

## STORAGE

- After the sandwich toaster has cooled down completely, the mains cable can be wound round the cable storage and stored vertically to save space.



## TROUBLESHOOTING

Problem	Solution
<b>No power.</b>	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
<b>Bread is sticking to the toasting plates.</b>	Check that low fat or a high water content spread hasn't been used on the bread.
<b>The sandwich toaster lid is difficult to latch.</b>	Ensure the sandwich hasn't been overfilled. Remove some of the topping if necessary.
<b>Tripping Electrics.</b>	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the sandwich maker.





## CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: [hello@morphyrichards.co.uk](mailto:hello@morphyrichards.co.uk)

[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

## PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





## NOTES





## NOTES

**morphy richards**

13



## REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,  
scan the QR code or register online  
at [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

## YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

**Model no.**

**Serial no.**

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





## REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

### **Exclusions**

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

### **Disclaimer**

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





ST450001MUK Rev1

# morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](http://morphyrichards.co.uk)

**Morphy Richards**  
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

CE UK  
CA

