



**VTP VEHICLE THEFT
PROTECTION
QUICK REFERENCE GUIDE**



To illuminate the keypad:

Pressing any button will illuminate the keypad.

To program a new, personalized PIN code (a PIN code can range from 1-10 digits):

1. Make sure the system is disarmed or in Valet Mode.
2. Turn on the ignition.
3. Enter the existing PIN code and then press . The LED will flash once.
4. Within 5 seconds, enter the new PIN code followed by (the LED will flash twice).
5. Within 5 seconds, enter the new PIN code again followed by (the LED will light solidly for 1 second).
6. Your new PIN code has been programmed. Turn the ignition off for 5 seconds to exit programming.

To disarm:

1. Enter your personalized PIN code, then press .

See reverse side

To activate or deactivate Valet Mode:

1. Make sure that the system is disarmed.
2. Press  .
3. Press  (labeled VALET on the keypad). The light will stay solid red, the system has now entered Valet Mode.

NOTE: Valet Mode prevents the system from arming. This feature is useful when washing or servicing your vehicle.

To arm immediately:

1. Press  .
2. Press  (labeled ARM on the keypad).

NOTE: When not in Valet Mode, the VTP system will automatically arm itself 15 seconds after the ignition is turned off.