

# THE SOUND OF SWAG

## BASIC OPERATION FUNCTIONS

### AUTO POWER-ON/OFF

#### Power On:

To use the earbuds, open the cover of the charging case and take them out from the charging case. The headset will turn on automatically and enter the TWS pairing state accompanied by a "Power On, Pairing" prompt sound. It then enters ready to pair state with "du" prompt sound.

#### Power Off:

If pairing is not done in three minutes, the earbuds will be automatically powered off accompanied by a "Power Off" prompt sound. If you put the earbuds into the charging box, the earbuds will be automatically disconnected from the phone and enter the charging state.



### CONNECTION

Once the lid of the charging case is opened and earbuds are taken out from the charging case, the LED light of master earbud will flash Ice blue & White alternately. Search out "Probuds Aria 911" inside phone Bluetooth list, click connection, accompanied by a "Connected" prompt sound.

To disconnect the earbuds, disconnect the Bluetooth connection. It will be followed by a "Disconnected" prompt sound.



#### Automatic re-connection

After power on (opening the cover case of the charging case), the headset will actively connect back to the last paired device with the "Connected" prompt sound, if in range with BT turned on.



### MANUAL POWER ON

In power off state, long-press earbud (L) or (R) for 3 seconds to power on, accompanied by "Power On" prompt sound.

### MANUAL POWER OFF

In power on state, the long-press earbud (L) or (R) for 5 seconds to power off, accompanied by "Power Off" prompt sound.

### ANSWER CALL

You can answer an incoming call with a single tap on the earbud (L) or (R), accompanied by a "tick" prompt sound.

### REJECT CALL

To reject a call long touch the earbud (L) or (R) for 2 seconds and release it, accompanied by a "du" prompt sound.

### DISCONNECT CALL

During an ongoing call, you can disconnect the call with a double tap on the earbud (L) or (R), accompanied by a "tick" prompt sound.

### CANCEL DIALING

When in dialing mode, you can cancel the dialing with a single tap on the earbud (L) or (R), accompanied by a "tick" prompt sound.

### MUSIC PLAY/PAUSE

In music playing mode, single tap the earbud (L) or (R) to play music, and repeat operation to pause the music.

Note- Same operation is applicable for 'videos' as well

### NEXT SONG

In music playing mode, press and hold the earbud (R) for 2 seconds to play next song, accompanied by a "tick" prompt sound.

Note- Same operation is applicable for 'videos' as well

### PREVIOUS SONG

In music playing mode, press and hold the earbud (L) for 2 seconds to play previous song, accompanied by a "tick" prompt sound.

Note - Same operation is applicable for 'videos' as well

### VOLUME UP

In music/video playing mode, double tap the earbud (R) to increase the volume. There will a prompt sound when the volume reaches the maximum level.



### VOLUME DOWN

In music/video playing mode, double tap the earbud (L) to decrease the volume. There will be a prompt sound when the volume reaches the minimum level.

### VOICE ASSISTANT TURN ON/OFF (SIRI/GOOGLE ASSISTANT)

On standby or music mode, tap the earbud (L) three times to 'turn on' voice assistant. Repeat operation will 'turn off' the voice assistant.

### PRO-GAME MODE

Tap the earbud (R) thrice to 'turn on' the Pro Game Mode (low latency mode), accompanied by a "Pro Game Mode" prompt sound. Repeat operation will 'turn off' the pro game mode, accompanied by a "Du" prompt sound.

### LOST WARNING/OUT OF RANGE

When the device is out of BT range or is disconnecting abnormally, there will be a "Disconnected" prompt sound.

### RESET

In connected or disconnected state, touch earbud (L) or (R) 6 times to clear the connection information with the Bluetooth device.

### LOW BATTERY WARNING

When earbuds battery is low, earbuds will alert with "Battery Low" prompt sound at 20% battery level. The earbud white light flashes after every 5 seconds, and will remind at after 5-minute intervals with a "Battery Low" sound until power off.

## LED LIGHT STATUS

Pairing

The Ice Blue and White lights flash alternately. After pairing timeout, it will automatically power off after 3 minutes.

Standby after connected

LED OFF

In calling

LED OFF

Playing music

LED OFF

While charging

White LED ON

Full charged

LED OFF



Low voltage warning

White LED flashes once every 5 seconds, accompanied by a "Battery Low" sound.

# SAFETY AND MAINTENANCE

Please read the below suggestions in order to help prolong the product's lifespan and understand the warranty clauses clearly.

- » Keep the product dry, do not put it in humid circumstance to avoid short circuit.
- » Do not expose it to the sun or high heat. High heating will shorten the lifespan of electronic components, damage battery and deform plastic parts.
- » Do not put it in cold circumstances to avoid damage to the PCB board.
- » Do not attempt to take apart the product.
- » Do not drop, vibrate strongly, strike with hard objects, to avoid damage to the inner electronic circuit.
- » Do not use high chemical products, detergent to clean the item.
- » Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- » Do not overcharge continuously. This is for the sake of lifespan.



ProBuds ARIA 911  
BY LAVA

[www.lavamobiles.com](http://www.lavamobiles.com)

