

# CALL LIKE A BOSS

## STEPS TO FOLLOW BEFORE USE



### CHARGING

Fully charge the headset before using it

**CELLPHONE :** Choose a Cell Phone which is compatible with Bluetooth headset or other Bluetooth devices to pair with the "Probuds N21"


**TIP** Keep the headset away from your credit card or other magnetic storage media. The stored information may get lost due to demagnetization

## FACTORY RESET




### RESET FACTORY SETTING

Press "Volume+" & "Volume-" for 8 seconds to reset. All pairing records are now deleted

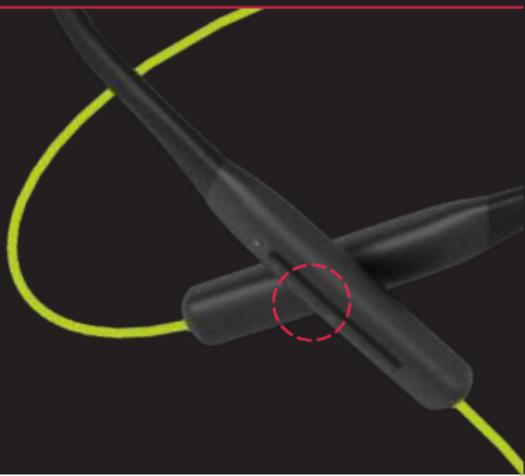

## BUTTON OVERVIEW

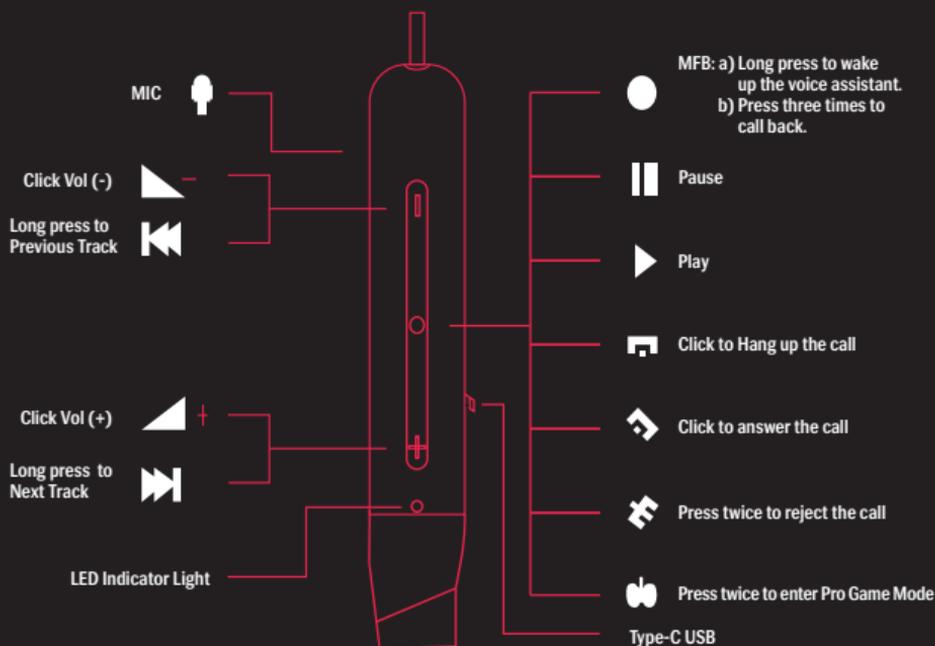

## SWITCHING THE NECKBAND PLAY & PAUSE



### PLAY & PAUSE

**PLAY/PAUSE :** Separate/Attach the earbuds to play/pause your device media content

**ANSWER/CUT THE CALL :** Separate the earbuds to answer the call, and re-attach them to cut the call



## CONNECTING WITH PHONE



### PAIRING

CONNECTION -SHUTDOWN STATE ENTER

**STEP 1**

Turn on your Device. Enter Bluetooth mode with Voice Prompt "Bluetooth Mode". After 1 second Enter Pairing mode with Voice Prompt "Pairing"

**STEP 2**

Search for available devices with Bluetooth on your device

**STEP 3**

Choose "PROBUDS N21" (If a password is required, please input "0000")\*

**STEP 4**

\*Blue LED + Prompt tone "Connected" on PROBUDS N21

**NOTE**

When powered on "PROBUDS N21" automatically connects with the last paired Device if it is in the connection range with Bluetooth turned on: You get a voice prompt notification "Connected". If the device disconnects, you get a voice prompt "Disconnected"

**DUAL PAIRING**


Pair "PROBUDS N21" with "Device A". Once pairing is done, disable the Bluetooth function of A

Pair "PROBUDS N21" with "Device B" and after connecting successfully enable the Bluetooth function of A

Both A & B are now connected in parallel

**NOTE**

If your Device supports the automatic re-connection function, "PROBUDS N21" will be automatically connected to the previous paired device, if its Bluetooth pairing is ON

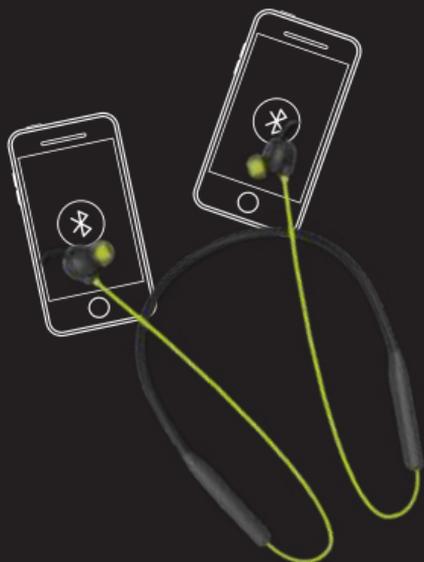

## CONTROLLING THE CALLS WITH MFB



### ANSWER/END CALL

Short press the 'Multi-function button' once to Answer or End Call-It notifies with voice Prompt "Incoming call"



### CALL WAITING/SWITCHING A CALL

Short single press the 'Multi-function button' to put the current call on hold and answer the call waiting. Long Single Press the 'Multi-function button' to switch back to the first call. Short press the 'Multi-function button' and you can end the current call



### REJECT CALL

Press the 'Multi-function button' twice during an incoming call



### REDIAL LAST DIALED

Triple-click the 'Multi-function button'

#### NOTE

After power on, if the device is not connected until 5 minutes, the device will automatically be powered off. Above functions work in Standby Mode, Music Mode

## CONTROLLING THE MUSIC WITH MFB



### MUSIC PLAY/PAUSE

In music mode, press the "Multi-function button" once to Pause, Press it again to play



### VOLUME UP/DOWN

Short press "Volume -" for volume down. Short Press "Volume +" for volume up. The beep sound indicates the maximum/minimum volume reached by the device



### PREVIOUS/NEXT SONG

Press for 2 seconds "Volume -" for the previous song Press for 2 seconds "Volume +" for the next song




## GAME



### GAME MODE

When the phone is connected, press the Multi-function button twice to enter/exit game mode with a Voice Prompt "Pro- Game Mode"

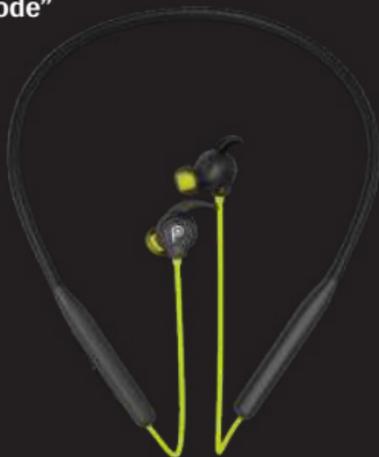

## CONTROLLING THE VOICE ASSISTANT



### ENABLING/DISABLING THE VOICE ASSISTANCE

GOOGLE/SIRI :- In the Standby or Music mode, press the Multi-function button for 2 seconds and release. Beep sound is an indication that it is enabled.

Press MFB again for 2 seconds to disable the same



## CHARGING



### LOW BATTERY

At 20% battery notification with Voice prompt "Battery Low" and red light flash after every 5 seconds to notify for Low battery




### CHARGING

Red light indicator on



### FULL CHARGE

Blue Light on

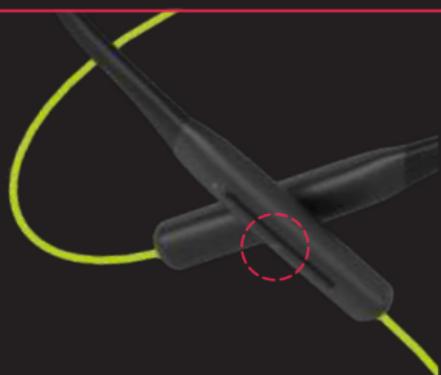

## SAFETY AND MAINTENANCE

Please read the suggestions given below

- » Keep the product dry, do not put it in humid conditions to avoid short circuit
- » Do not expose it to the sun or high heat. High heating will shorten the lifespan of electronic components, damage the battery and deform some plastic parts
- » Do not put it in extreme cold conditions to avoid damage to PCB
- » Do not attempt to take apart the product
- » Do not let it fall, shake it hard, strike it with hard objects to avoid damage to the internal electronic circuit
- » Do not use any chemical products or detergent to clean the product
- » Do not scratch the surface with sharp objects to avert damaging the case and its appearance
- » Do not over charge continuously for the sake of lifespan



ProbudsN21  
BY LAVA

[www.lavamobiles.com](http://www.lavamobiles.com)