

TURN UP THE WAVE

STEPS TO FOLLOW BEFORE USE ///



CHARGING

Fully charge the headset before using it.

CELLPHONE : Choose a Cell Phone which is compatible with Bluetooth headset or other Bluetooth devices to pair with the "Probuds Wave 921".

 
TIP Keep the headset away from your credit card or other magnetic storage media. The stored information may get lost due to demagnetization.

FACTORY RESET ///




RESET FACTORY SETTING

Press "Volume+" & "Volume-" for 8 seconds to reset. All pairing records are now deleted.

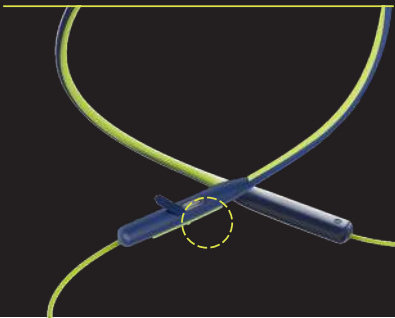

BUTTON OVERVIEW

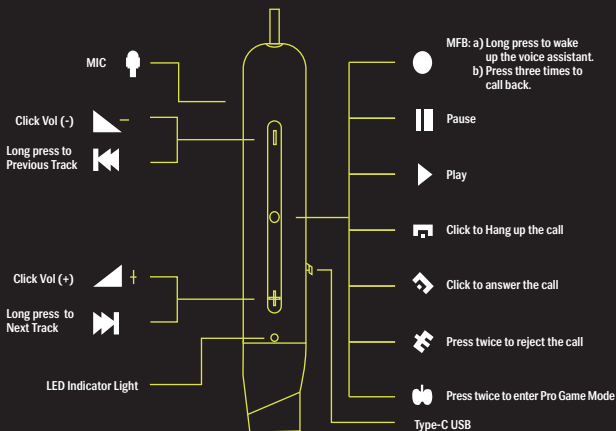 

SWITCHING THE NECKBAND PLAY & PAUSE



PLAY & PAUSE

PLAY/PAUSE : Separate/Attach the earbuds to play/pause your device media content.

ANSWER/CUT THE CALL : Separate the earbuds to answer the call, and re-attach them to cut the call.



CONNECTING WITH PHONE



PAIRING

CONNECTION – SHUTDOWN STATE ENTER

STEP 1

Turn on your Device. Enter Bluetooth mode with Voice Prompt "Bluetooth Mode". After 1 second Enter Pairing mode with Voice Prompt "Pairing".

STEP 2

Search for available devices with Bluetooth on your device.

STEP 3

Choose "Probuds Wave 921" (If a password is required, please input "0000").



STEP 4

*Blue LED + Prompt tone "Connected" on PROBUDS WAVE 921.

NOTE

When powered on "PROBUDS WAVE 921" automatically connects with the last paired Device if it is in the connection range with Bluetooth turned on: You get a voice prompt notification "Connected". If the device disconnects, you get a voice prompt "Disconnected".



DUAL PAIRING

 
Pair "PROBUDS WAVE 921" with "Device A". Once pairing is done, disable the Bluetooth function of A.

Pair "PROBUDS WAVE 921" with "Device B" and after connecting successfully enable the Bluetooth function of A.

Both A & B are now connected in parallel.

NOTE

If your Device supports the automatic re-connection function, "PROBUDS WAVE 921" will be automatically connected to the previous paired device, if its Bluetooth pairing is ON.

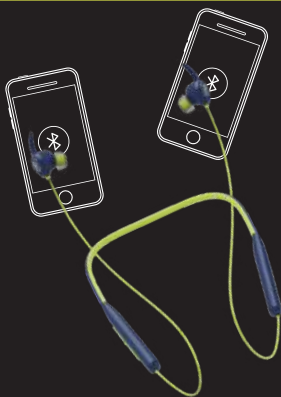

CONTROLLING THE CALLS WITH MFB



ANSWER/END CALL

Short press the 'Multi-function button' once to Answer or End Call-It notifies with voice Prompt "Incoming call".



CALL WAITING/SWITCHING A CALL

Short single press the 'Multi-function button' to put the current call on hold and answer the call waiting. Long Single Press the 'Multi-function button' to switch back to the first call. Short press the 'Multi-function button' and you can end the current call.



REJECT CALL

Press the 'Multi-function button' twice during an incoming call.



REDIAL LAST DIALED

Triple-click the 'Multi-function button'.

NOTE

After power on, if the device is not connected until 5 minutes, the device will automatically be powered off. Above functions work in Standby Mode, Music Mode.

CONTROLLING THE MUSIC WITH MFB



MUSIC PLAY/PAUSE

In music mode, press the "Multi-function button" once to Pause, Press it again to play.



 
VOLUME UP/DOWN

Short press "Volume -" for volume down. Short Press "Volume +" for volume up. The beep sound indicates the maximum/minimum volume reached by the device.



PREVIOUS/NEXT SONG

Press for 2 seconds "Volume -" for the previous song Press for 2 seconds "Volume +" for the next song.

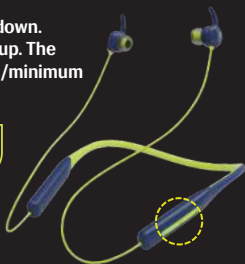

GAME



GAME MODE

When the phone is connected, press the Multi-function button twice to enter/exit game mode with a Voice Prompt “Pro- Game Mode”.



CONTROLLING THE VOICE ASSISTANT



ENABLING/DISABLING THE VOICE ASSISTANCE

GOOGLE/SIRI :- In the Standby or Music mode, press the Multi-function button for 2 seconds and release. Beep sound is an indication that it is enabled.

Press MFB again for 2 seconds to disable the same.



CHARGING



LOW BATTERY

At 20% battery notification with Voice prompt "Battery Low" and red light flash after every 5 seconds to notify for Low battery.



CHARGING

Red light indicator on.



FULL CHARGE

Blue Light on.



SAFETY AND MAINTENANCE

Please read the suggestions given below.

- » Keep the product dry, do not put it in humid conditions to avoid short circuit.
- » Do not expose it to the sun or high heat. High heating will shorten the lifespan of electronic components, damage the battery and deform some plastic parts.
- » Do not put it in extreme cold conditions to avoid damage to PCB.
- » Do not attempt to take apart the product.
- » Do not let it fall, shake it hard, strike it with hard objects to avoid damage to the internal electronic circuit.
- » Do not use any chemical products or detergent to clean the product.
- » Do not scratch the surface with sharp objects to avert damaging the case and its appearance.
- » Do not over charge continuously for the sake of lifespan.



ProBuds Wave 921

BY LAVA

www.lavamobiles.com

