

THE WORLD ON MUTE.



STEPS TO FOLLOW BEFORE USE



CHARGING

Fully charge the headset before using it

CELL PHONE :- Choose a Cell Phone which is compatible with Bluetooth headset or other Bluetooth devices to pair with the "PROBUDS WAVE 931"

TIP TIP :- Keep the headset away from your credit card or other magnetic storage media. The stored information may get lost due to demagnetization

FACTORY RESET




RESET FACTORY SETTING

Press "Volume+" & "Volume-" for 5 seconds to reset.
All pairing records are now deleted



BUTTON OVERVIEW

Some button overview will required like below

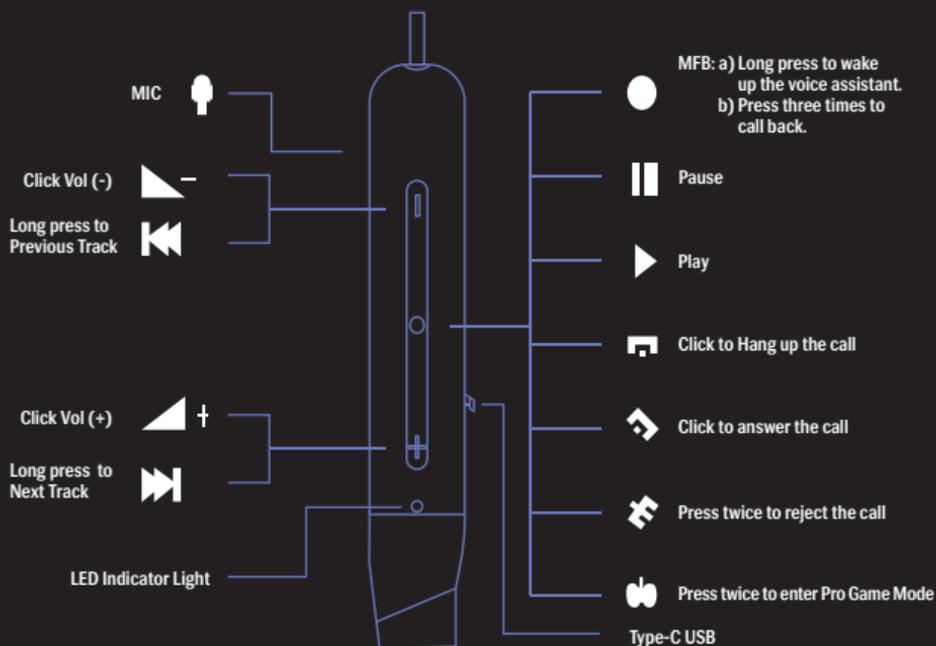

SWITCHING THE NECKBAND ON & OFF



POWER ON/OFF

POWER ON :- Separate the earbuds to power them on

POWER OFF :- Reattach the earbuds to disconnect them from your device and power them off



CONNECTING WITH PHONE



PAIRING

CONNECTION – SHUTDOWN STATE

STEP 1

Turn on your Device. Enters Bluetooth mode with Voice Prompt "Bluetooth Mode". After 1 second Enters Pairing mode with Voice Prompt "Pairing"

STEP 2

Search for available devices with Bluetooth on your Device

STEP 3

Choose "PROBUDS WAVE 931"



STEP 4

Prompt tone "Connected" on PROBUDS WAVE 931

NOTE When powered on "PROBUDS WAVE 931" automatically connects with the last paired Device if it is in the connection range with Bluetooth turned on: You get a voice prompt sound "Connected". If the device disconnects, you get a voice prompt "Disconnected"

PROBUDS WAVE 931 will remain in pairing mode till 5 minutes. If no other device gets connected within that time frame then automatically PROBUDS WAVE 931 will go to switch-off state




DUAL PAIRING

Pair "PROBUDS WAVE 931" with "Device A". Once pairing is done, disable the Bluetooth function of A.

Pair "PROBUDS WAVE 931" with "Device B" and after connecting successfully enable the Bluetooth function of A.

Both A & B are now connected in parallel

NOTE If your Device supports the automatic re-connection function, "PROBUDS WAVE 931" will be automatically connected to the previous paired device, if its Bluetooth pairing is ON

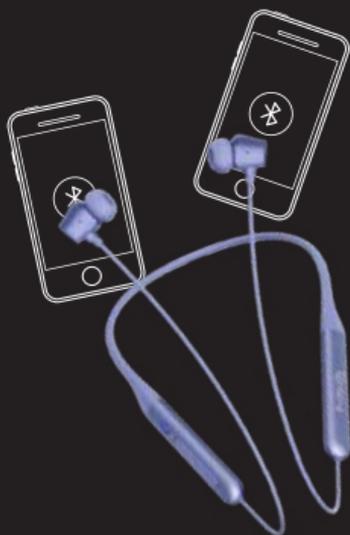

CONTROLLING THE CALL WITH MFB



ANSWER/END CALL

Short press the "Multi-function button" once to Answer or End Call – It notifies with voice Prompt "Incoming call"



REJECT CALL

Press the "Multi-function button" twice during an incoming call



HANGUP CALL

Press the "Multi-function button" once while during the call



REDIAL LAST DIALED

Triple-click the "Multi-function button"

NOTE

Above functions works in Standby State, Music State

CONTROLLING THE SECOND CALL DURING FIRST CALL WITH MFB

During ongoing first call from the PROBUDS WAVE 931, second call can be managed by-



ANSWER SECOND CALL, HANG UP FIRST CALL

Short press the "Multi-function button" during an 2nd incoming call



ANSWER SECOND CALL, HOLD FIRST CALL

Press the "Multi-function button" twice during an 2nd incoming call



REJECT SECOND CALL, CONTINUE FIRST CALL

Hold the "Multi-function button" for 2 seconds during an 2nd incoming call



SWITCH THE CALLS

Press the "Multi-function button" twice during during on-going calls, second call will go on hold

CONTROLLING THE MUSIC WITH MFB



MUSIC PLAY/PAUSE

In music mode, press the "Multi-function button" once to Pause, Press it again to play



VOLUME UP/DOWN

Short press "Volume -" for volume down. Short Press "Volume +" for volume up. The beep sound indicates the maximum/minimum volume reached of device



PREVIOUS/NEXT SONG


Press for 2 seconds "Volume -" for the previous. Press for 2 seconds "Volume +" for next song

GAME



GAME MODE

When the phone is connected, press the Multi-function button twice to enter/exit game mode with a Voice Prompt "Pro- Game Mode"

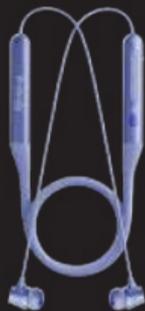

ANC/TRANSPARENCY/NORMAL MODE

Short press the "ANC button" to switch in between different modes

CONTROLLING THE VOICE ASSISTANT



ENABLING/DISABLING THE VOICE ASSISTANCE

GOOGLE/SIRI :- At the standby or Music State, Long press the Multi-function button for 3 seconds and release.

Beep sound is an indication that it is enabled.

CHARGING



LOW BATTERY

At 20% battery notification with Voice prompt "Battery Low" and red-light flash after every 15 seconds to notify for Low battery



CHARGING

Red light indicator on



FULL CHARGE

White Light on



SAFETY AND MAINTENANCE

Please read below suggestions in order to help prolong the product lifespan and clearly understand the warranty clauses.

- » Keep the product dry, do not put it in humid circumstance to avoid short circuit.
- » Do not expose it to the sun or high heat. High heating will short lifespan of electronic components, damage battery and deform some plastic parts.
- » Do not put it in cold circumstance to avoid damage to PCB board.
- » Do not attempt to take apart the product.
- » Do not fall, vibrate strongly, strike with hard objects, to avoid damage to inner electronic circuit.
- » Do not use high chemical products, detergent to clean the item.
- » Do not scratch the surface with sharp items to avert damaging the case and appearance.
- » Do not over charge continuously for the sake of lifespan.



Probuds Wave 931
BY LAVA

www.lavamobiles.com

