



Mueller
*Living*TM

COMPACT GLASS KETTLE

HIGH QUALITY
BOROSILICATE GLASS

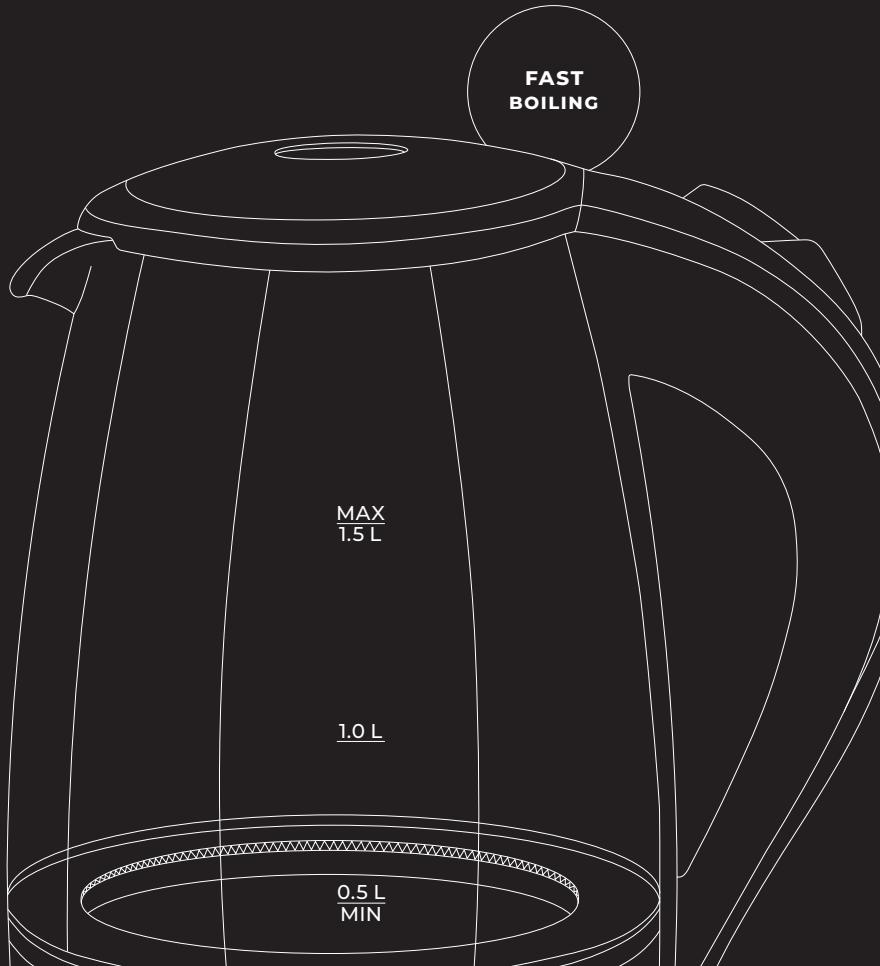

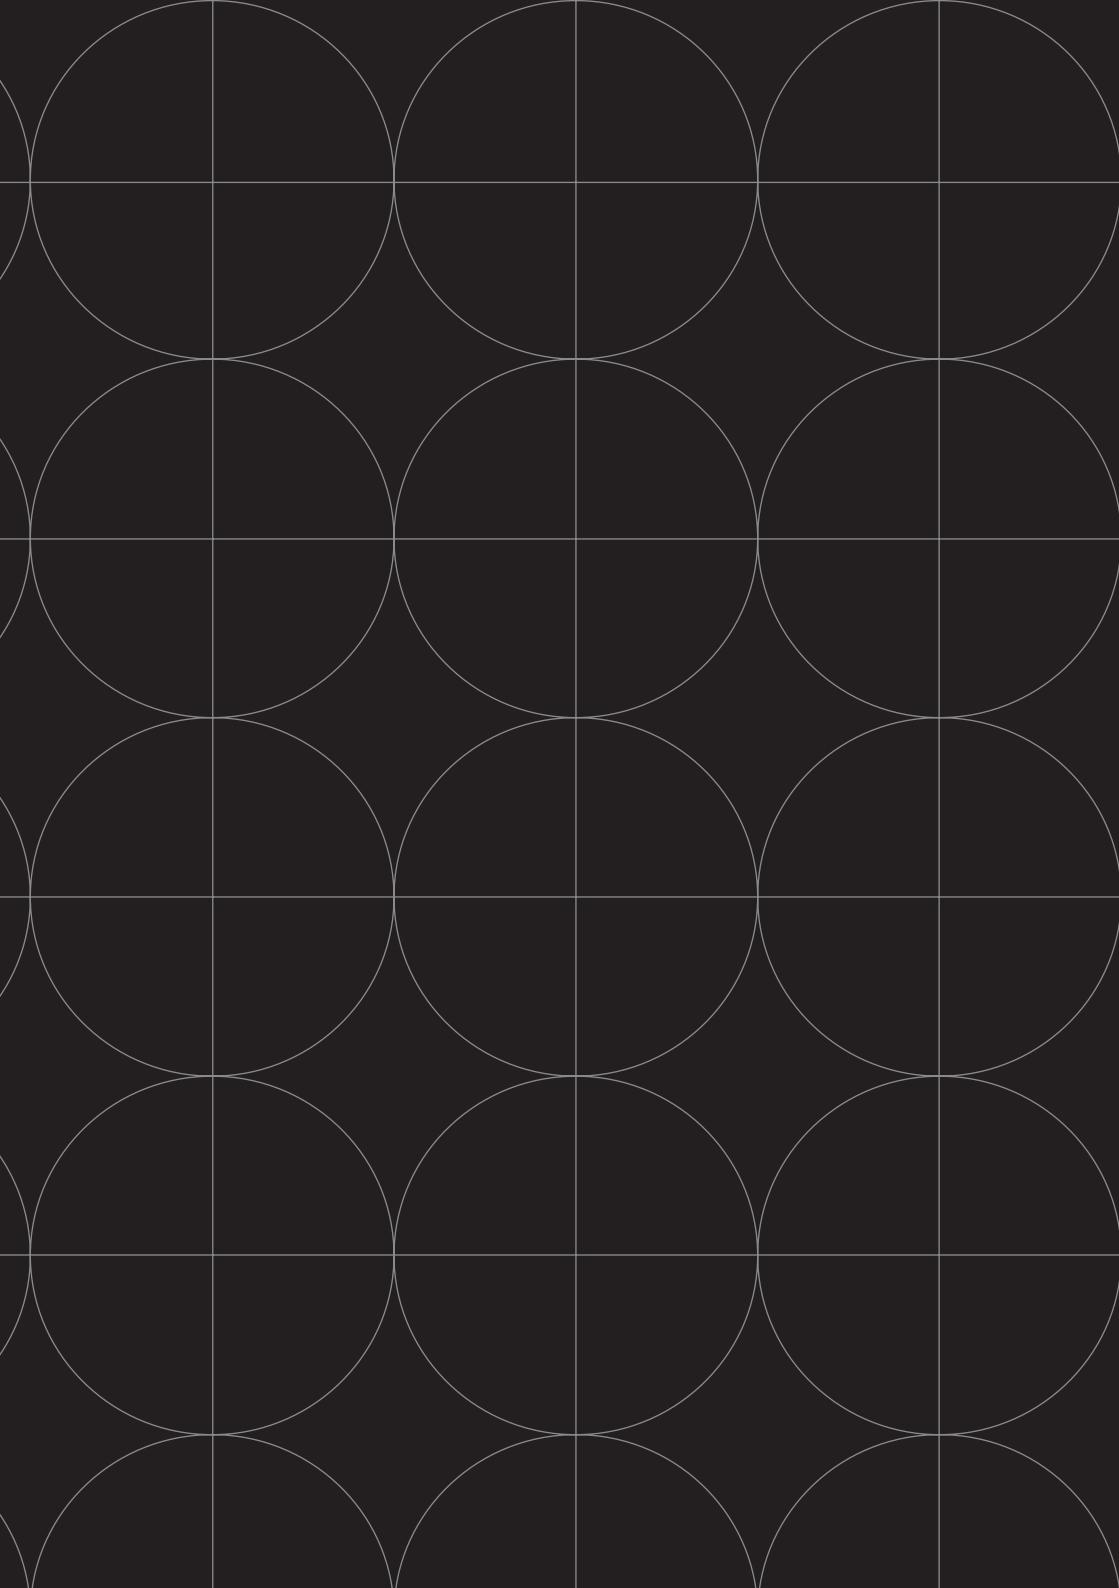

IMPORTANT SAFETY INSTRUCTIONS

Before using the electrical appliance, the basic precautions below should always be followed:

- Read all instructions and save them for future reference.
- Check that the voltage marked on the appliance rating plate matches your local supply. For additional protection, we recommend the use of a power outlet with a rated current of 13 amps. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not use an extension cable, it may result in fire, electric shock, and/or personal injury due to a tripping hazard.
- This appliance is intended for indoor household use only. Do not use this appliance for any purpose other than its intended use. Any other use may invalidate the warranty or may result in serious injury or harm.
- Do not touch the hot surface, the glass body will get hot during and after heating the water. Always use the Handle for moving the Kettle.
- Do not use the appliance if the plug, the mains cord, the base, or the appliance itself is damaged.
- Do not leave the appliance unattended when in use.
- Immediately unplug if the Kettle is not working correctly.
- This appliance is not intended for use by any individual (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, without proper supervision or instruction from an adult or individual responsible for their safety and care.
- Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock, and personal injury, do not immerse the appliance in water or any other liquids.
- Place the appliance on a flat surface. Do not hang the Power Cord over the edge of a table or counter. Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted. Ensure the Power Cord does not touch the hot surface of the appliance.
- Do not place it on or near a hot gas or electric burner, or on the top of another electrical appliance, or near an open flame.
- Always turn appliance off at the power switch and remove the plug from outlet before attempting to move the appliance when not in use, when no water is in the Kettle, or when filling water.
- Remove the power plug from the wall outlet before cleaning or when not in use. Allow the appliance to cool down completely before cleaning the appliance.
- Always grasp the power plug to remove it from the wall outlet. Do not pull on the Power Cord itself.
- Do not try and repair on your own. If the plug is damaged, it must be replaced by the manufacturer to avoid a hazard.
- Steam heat can cause burns. Use extra caution when opening the Lid immediately after the water has boiled. The steam coming out of the Kettle is very hot.

- Do not use the Kettle to heat anything other than water. Do not operate the appliance without water.
- Do not fill the Kettle beyond the maximum level indication. Do not operate the Kettle if the water is below the minimum level (usually 16.9 oz / 0.5 L).
- Do not fill the Kettle when positioned on the Power Base. Dry any water on the bottom of the Body before placing the Kettle onto the Power Base.
- This Kettle is to be used with the supplied base only.
- We recommend cleaning the washable nylon filter periodically.
- Do not insert any object into the slots or holes of the Kettle.
- Do not touch the Power Base or bottom of the Kettle after use to avoid scalding or burns.
- Do not remove the Lid during the heating cycle. Scalding may occur. Never operate the appliance when the Lid is open or removed.
- Do not use the Kettle when you have wet hands or bare feet.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.

⚠ CAUTION!


Ensure that the Kettle is switched off before removing it from the Base. Do not fill Kettle beyond max fill line. If the Kettle is overfilled, boiling water may eject from the Kettle and cause scalding. Do not immerse the Kettle, or its plug, in water or any other liquids. Do not wash the Kettle and its parts in a dishwasher; wash the Kettle by hand with mild soap and water.

⚠ WARNING!

- Do not use this appliance within reach of a bath or sink, or any vessel containing water or other liquids.
- Close the Lid until a click is heard so that steam is directed away from the Handle.
- Do not press the "Lid Release" button to open the Lid while the water is boiling.
- If the appliance is dropped in water, do not reach for it. Switch it off at the outlet, then disconnect it from the electric outlet. Drain the water before retrieving the appliance. Stop using the appliance until it has been checked by a qualified service agent.
- To reduce the risk of fire or electrical shock, do not repair the appliance by yourself. Do not remove the bottom of the Body or the Power Base by yourself.
- Do not remove the Lid while the water is boiling.
- Position the Kettle to the rear of work surfaces to prevent the Power Cord from hanging over the edge of a table or counter. Water can remain hot for a considerable time after boiling and can present a scald hazard.

SAVE THESE INSTRUCTIONS

■ PARTS LIST

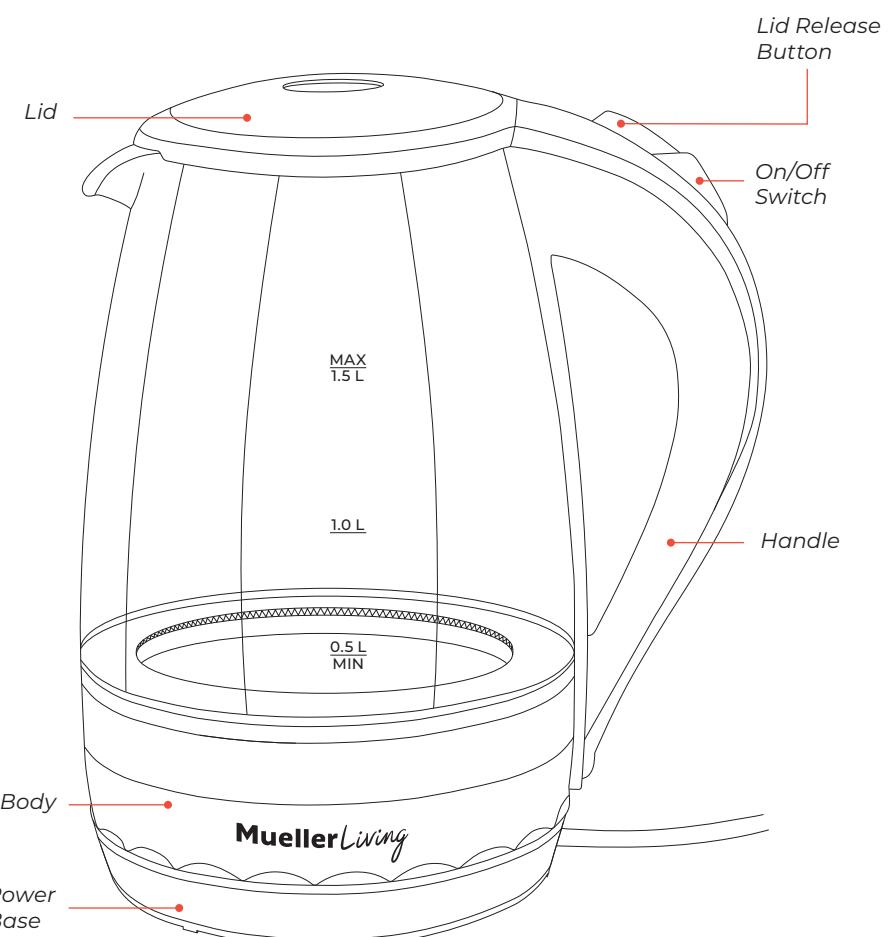

■ BEFORE FIRST USE

⚠️ IMPORTANT!

Check that the product is free of damage. Wash the Kettle. Fill the Kettle with fresh water to the maximum level. Boil the water following the instructions then pour out the water. Boil and discard the water 3-5 times to remove any dust or foreign matter prior to first use.

Water Capacity

- Minimum: 16.9 oz (0.5 L)
- Maximum: 50 oz (1.5 L)


Automatic Switch-Off Protection

This Kettle is equipped with boil-dry protection. If it is accidentally switched on without water in it, the Kettle will automatically switch off. The LED indicator will turn off.

■ OPERATING INSTRUCTIONS

⚠️ WARNING!

Never fill the Kettle while it is on the Power Base.
Do not use without water.

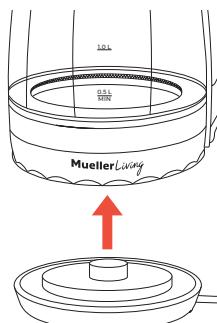


- 1 With the power off, remove the Kettle from its Power Base.




- 2 To open the Lid, press the "Lid Release" button ("Push").




- 3 Fill the Kettle with the desired amount of fresh water through the open Lid.

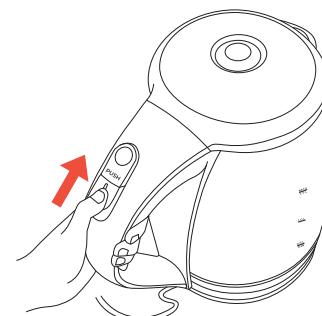

- 4 Close the Lid by pressing down. Place on the Power Base on a flat, stable, heat-resistant surface that is away from water splashes and any heat source.

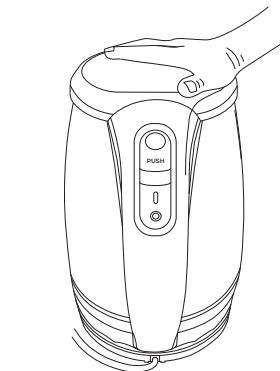

- 5 Insert the plug into the power socket. Push the "On/Off" switch on the Handle to "I" (On). The Kettle will begin heating and blue LED lights will illuminate.

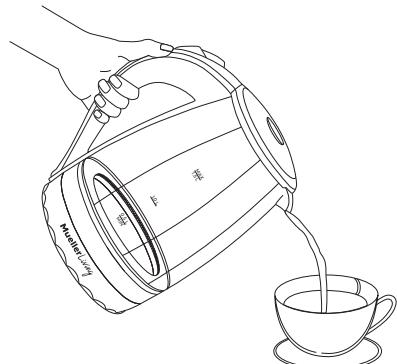


- 6 The Kettle will automatically switch off after the water has boiled for a few seconds. The switch will reset to "O" (Off) and the blue LED lights will turn off.

- 7 When boiling finishes, remove the Kettle from its base. Carefully pour your hot water.

CLEANING INSTRUCTIONS


Cleaning the Kettle

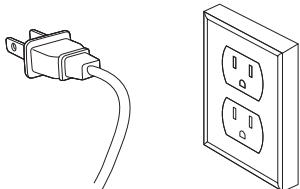

- 1 Unplug the Kettle.



- 2 Allow it to cool down before cleaning.

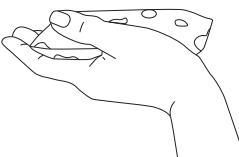

- 3 Use a damp sponge to wipe the interior and exterior.

⚠️ WARNING!

Do not immerse the Kettle, its Power Base, the Power Cord or plug in water. The electrical connections or the switch must not come into contact with water.

DESCALING INSTRUCTIONS

Descale Using White Vinegar

NOTE: Descale regularly. We recommend at least once a month or more frequently, if your water is very hard.

- 1 Allow the Kettle to cool. With the power off, remove the Kettle from its Power Base.
- 2 Open the Lid with the "Lid Release" button. Fill the Kettle with a solution of 1.7 oz (50 ml) white vinegar and 1.7 oz (50 ml) clean water.
- 3 If scale is still present in the Kettle, repeat steps 1–6.

NOTE: Descaling is important because limescale can cause the Kettle to work less efficiently. It also affects the taste and odor of your water. What is limescale? It's a chalky, hard white substance that can build up inside kettles and is mainly composed of calcium carbonate (CaCO_3). This buildup often occurs in areas with hard water.

Descale Using Citric Acid

- 1 Boil 16.9 oz (0.5 L) of water.
- 2 Add 25 g of citric acid in the Kettle. Leave the solution in the Kettle for 15 minutes without heating.
- 3 Empty the solution and rinse the Kettle with clean water.
- 4 Boil, then discard the water.
- 5 If scale is still present in the Kettle, repeat steps 1–4.

⚠️ WARNING!

- Always unplug the appliance from the power outlet and allow it to cool down before cleaning.
- Do not use chemical, steel wool, or abrasive cleaner to clean the appliance.
- The Kettle and its parts cannot be washed in a dishwasher.
- Never use a descaling method other than what is recommended here.

■ TROUBLESHOOTING

Problem	Possible Cause	Solution
The Kettle does not work or stops before the water comes to a boil.	Does the outlet work?	Unplug the cord then plug it back again. If nothing happens, try plugging a different appliance into the same outlet to check if it works.
	Is it the Power Cord?	Make sure the Cord is not damaged. If there is damage to the Cord, please contact Customer Service.
	Has the Kettle been switched on without water?	Allow the Kettle to cool. Fill it with water.
	Is there an accumulation of scale?	Scale can cause the Kettle to enter an overheat protection mode. Allow the Kettle to cool. Descaling the Kettle (see ▶ Page 9).
	Has the Kettle been dropped or is there damage to the Power Cord or is the plug or Power Base damaged?	Please contact Customer Service. Do not use the Kettle.
Cannot power off automatically, or keeps boiling.	The top Lid was not closed properly.	Close the top Lid properly and retry.
	Failure of the steam switch.	Remove the power connection. Contact Customer Service and do not use the Kettle.

If you do not find the cause of the problem listed here, please contact Customer Service. Do not disassemble the Kettle or its safety devices.

■ SPECIFICATIONS

Model Number	Rated Voltage	Power	Capacity
HHB1770	AC 110–120 V, 50/60 Hz	1250–1500 W	50 oz (1.5 L)

■ 1-YEAR LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.

If there is any problem with MuellerLiving Compact Glass Kettle, please contact Customer Service.

MUELLERDIRECT.COM
SUPPORT@MUELLERDIRECT.COM



COMPACT GLASS KETTLE

HIGH QUALITY BOROSILICATE GLASS

HAPPINESS IS HOMEMADE

MUELLERDIRECT.COM

SUPPORT@MUELLERDIRECT.COM

MADE IN CHINA