



Product Manual

OTE Blender

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Portable – To protect against risk of electrical shock do not put in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Portable – Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Permanently Installed – Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Do not attempt to defeat any safety interlock mechanisms. (The second sentence may be omitted if the appliance does not have any interlocks.)
- Portable – Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Hand-held, other than cordless types – Do not let cord contact hot surface, including the stove.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with jar in place
- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- **SAVE THESE INSTRUCTIONS**

(UK)

Important Safeguards

⚠ DANGER:

DO NOT immerse the machine or the power cable in water or any other liquid to avoid electrical shock or short circuit!

⚠ WARNING:

1. Before connecting to the power supply, please make sure that the rated voltage of this product is corresponding to the local voltage. If any incident occurred due to the lack of confirmation, the company is not responsible.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. Close supervision is necessary when unit is used.
4. Be sure to unplug the product after use!
5. Do not touch the blade to avoid injury
6. Please do not unscrew the jar when the machine is working!
7. Please clean the product after each use to prevent odor or mold caused by the food residue.
8. Children being supervised not to play with the appliance
9. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
10. This appliance is intended for household use only.

ⓘ Please pay attention before use:

1. There is a built-in safety mechanism of the machine. The blender will not start working unless the blade base is in place and aligned to the Lock position.
2. When switched off, please wait until the blades stops moving completely before removing the jar to avoid any damage to the machine.
3. When cleaning the blades, please be careful not to get hurt.
4. For the first use, it is normal that there might be some smell of the appliance or the jar, simply clean it with cleanser. The materials we use to manufacture this product are all safe and environment friendly. The jar is made of food grade material, 100% safe guaranteed.
5. The machine is equipped with built-in overheating and overload protection programs. When the motor is overloaded or when used abnormally, the protection program will be activated and the machine will stop working automatically.

(UK)

Product Parameters

Product Name: OTE Blender

Model: Raincolor-C2

Rated voltage: 220V-240V


Rated power: 200W

Model: Raincolor-C3

Rated voltage: 100V-120V

Rated power: 170W


Production origin: China

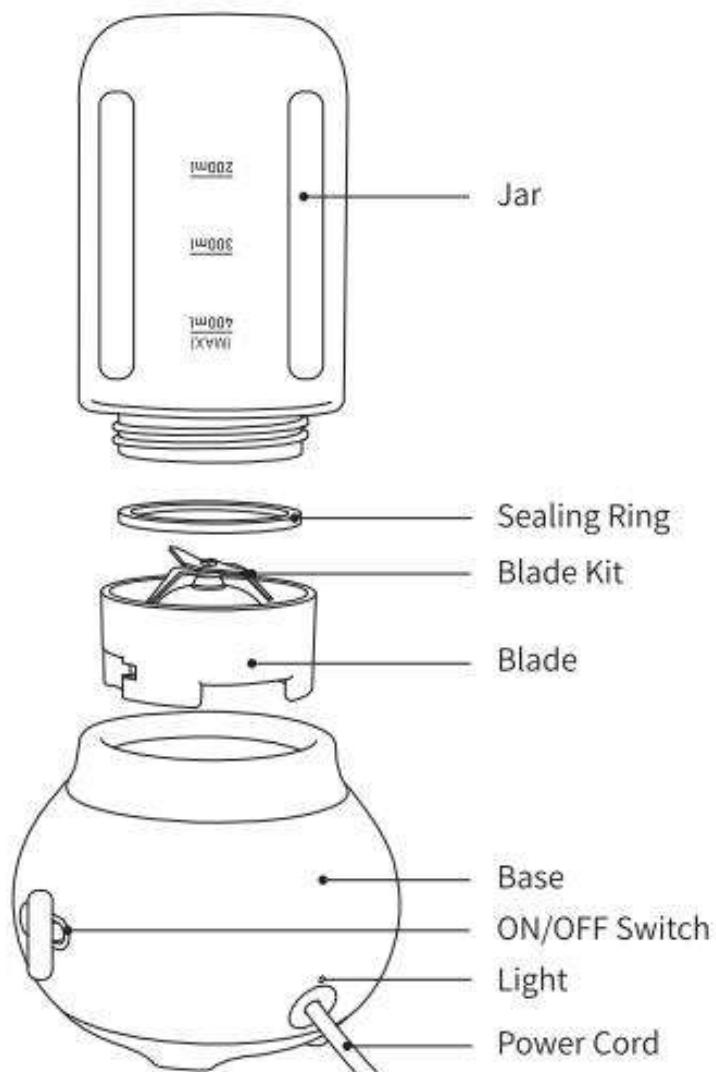

ⓘ Note: Due to slight differences in product appearance, the wireframe diagram and the schematics are for reference only.

(UK)


Instructions for Use

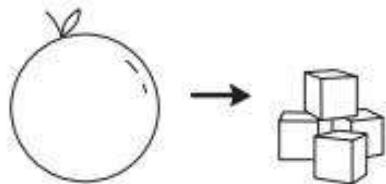


① Wash and peel the fruits, remove the cores, then cut the fruits into $10 \times 10 \times 10$ mm cubes.



② Put the fruit cubes into the jar, add the right amount of water or milk (or other drink). The best blending capacity is advised for 200ml once.

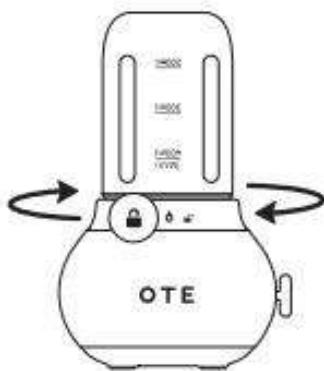


③ Please make sure that the jar and the blade base are screwed and tightened clockwise, and the jar is in the lock position.

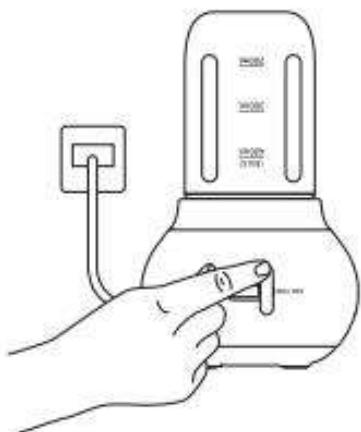


④ After confirming that the local voltage meets the rated voltage of the product, plug in the power cord and press the power switch. The default blending time is 30s.


(UK)

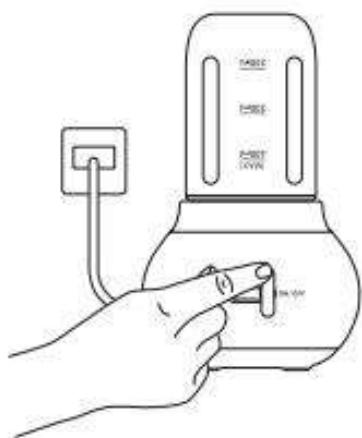

5 If you need to stop the blending process within 30s, just press the power switch again.

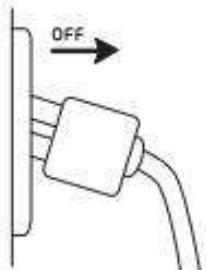

6 Unplug the product after blending.

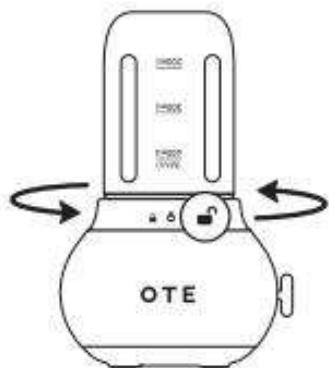

7 After blending, unscrew the jar and the blade base counter clockwise, then remove the blade base from the jar to drink the juice directly from the jar or pour it into other containers.

i Helpful Tips:

The machine is set to work 30s before automatic shut off. If you want the blender to be smoother, just run it once again.

If you need to stop the blender process within 30s, just press the power switch again.

If the machine gets stuck during use, please hold it upside down to make sure there is no hard food stuck between the blades, then restart it to try again.

The light shines white color when the machine is working;

(UK)

Cleaning & Maintenance

Immediate detachment and cleaning is necessary after use. Please refer to the following cleaning steps:

1. Unscrew the jar off of the main part, please note that the main part is not washable. To clean the main part, please use a damp cloth. It must not be put in a sterilizer, either; the blade edges are sharp, please be careful not to get hurt;
2. Rinse the detached parts under a water faucet or wash them in warm water with cleanser;
3. After juicing, add clean water in the juicer cup immediately then install it back to the main part and blend for about 5s, which can provide better cleaning of the jar;
4. If the components are colored by the blender, you can remove the color by wiping the component with few drops of oil before washing;
5. After rinsing the components, wipe them dry thoroughly.

1 Maintenance:

It is recommended to use the machine frequently to keep the motor dry;

If not in use for a long time, please store the machine in a dry and ventilated place.

Trouble Shooting

Trouble	Possible Cause	Solution
Product failed to work	The jar and the blade base are not installed in	Screw the jar and the blade base tightly in place, and make sure they are aligned to the Lock
The blades get stuck	The blades get stuck by the food when starting	Turn the blender upside down and shake
	Too much food or the food is too hard	Reduce the amount of food in the jar
	The ingredients are too sticky	Remove food from blender
Abnormal smell, noise	Too much, too large or too hard food in the jar	Reduce the amount of food in the jar
	The continuous working time is too long, which cause the motor to overheat	Shorten the blending time
	The ingredients is hot	Turn off the machine and let the food cool down below 60 degrees celcius
Leackage from the base or the cup lid	The lid is not tightly installed	Screw the lid and the jar tightly together
	The sealing ring is not correctly installed	Open the jar, adjust the sealing ring
The blender stops working abruptly (within 30s pre-set working time)	The water or the ingredients amount added into the jar is inappropriate	Add the right amount of water ingredients

(UK)