

BUTURE

User Manual

BP20 Cordless Vacuum Cleaner



Language

English _____ 01~20

Deutsch _____ 21~40

Français _____ 41~60

Español _____ 61~80

Italiano _____ 81~100

日本語 _____ 101~120

CONTENT

1. WARNING	- - - - -	2
2. PACKAGE LIST	- - - - -	3
3. KNOW THE PRODUCT	- - - - -	4
3.1 Product Details	- - - - -	4
3.2 Digital Touch Screen	- - - - -	5
3.3 Accessories Function	- - - - -	5
4. PRODUCT ASSEMBLY	- - - - -	6
4.1 Install Vacuum Cleaner	- - - - -	6
4.2 Install Wall Mount	- - - - -	7
5. HOW TO USE	- - - - -	8
5.1 Charging	- - - - -	8
5.2 Operating	- - - - -	9
6. MAINTENANCE	- - - - -	13
6.1 Clean the Main Body	- - - - -	13
6.2 Clean the Dust Cup/Filters	- - - - -	14
6.3 Wash Dust Cup and Filters	- - - - -	14
6.4 Brush Roller Cleaning	- - - - -	16
7. SPECIFICATION	- - - - -	18
8. TROUBLESHOOTING	- - - - -	18
9. WARRANTY	- - - - -	19

1. WARNING


 

 
Thank you for purchasing the BUTURE BP20 cordless vacuum cleaner. Before using this machine, please read the following safety warning first and take safety protection measures to avoid malfunctions caused by improper operation.

Note: The vacuum cleaner adopted thermal protection technology to prevent overheating, will stop working when the item is over-heated.

- ① This BUTURE appliance is for domestic use only. Use as described in this instruction booklet.
- ② Before using this appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate.
- ③ Do not use the appliance to vacuum all the latter things:
 - Water and other liquids
 - Lighted stub, hot ashes and other combustible things
 - Sharp matter
 - Wood pieces, gesso, cement, calcimine and other tiny granules
- ④ Keep the vacuum cleaner away from stoves and heat-emitting appliance. Heat can deform and discolor the plastic parts of unit.
- ⑤ Always remove the plug from the power socket when the appliance is not in charging.
- ⑥ Never use spirits or other solvents to clean the appliance.
- ⑦ Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm.
- ⑧ Do not use a damaged cable or plug. If the device or charger does not work properly, dropped, damaged, missed or dropped into water, please contact official@ibuture.com, BUTURE after-sales team for support.
- ⑨ The battery must be removed from the appliance before it is scrapped.
- ⑩ The battery is to be disposed of safely.
- ⑪ The appliance must be disconnected from the supply when removing the battery.
- ⑫ Only the adapter provided by the manufacturer can be used.
- ⑬ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.


2. PACKAGE LIST

Please check and confirm the accessories and parts according to the following sheet before using.

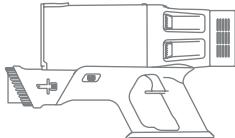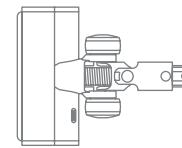
			
			
			
Chargable Wall Mount	Nail*4	Mini Cleaning Brush	Quick User Guide

3. KNOW THE PRODUCT

3.1 Product Details

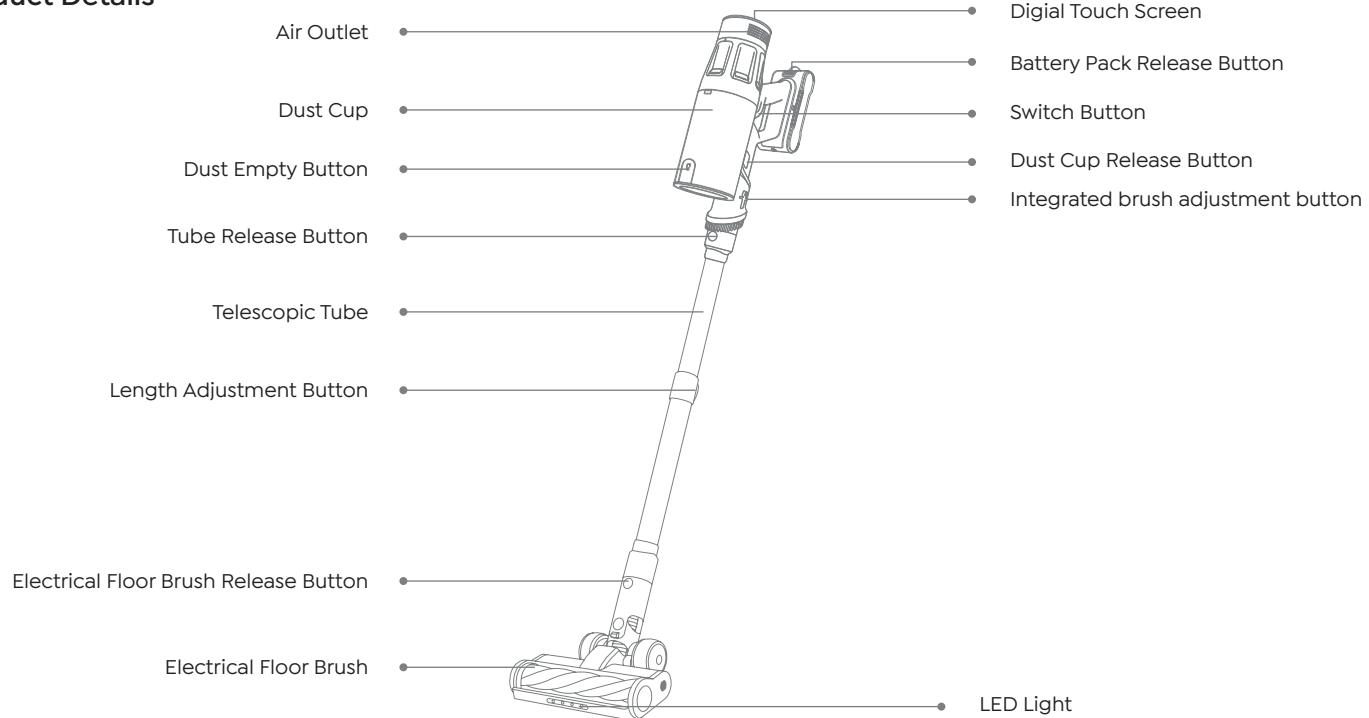


3.2 Digital Touch Screen

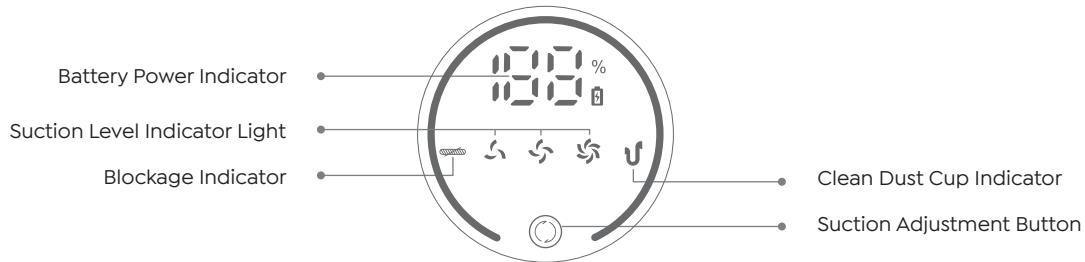

3.3 Accessories Function

Integrated brush

Press the adjustment button to stretch the brush head, can help you remove dust and hair on the Sofa/Desktop.

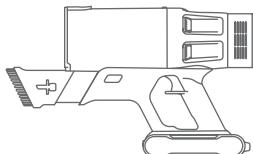

Long Crevice Nozzle

Remove dust on the hard-to-reach areas like windows, bed feet, gaps between sofa, etc.



Mini Cleaning Brush

Remove dust, debris, and hair from all kinds of floors, carpets, and velvet.



Chargable Wall Mount

Fix the vacuum cleaner and accessories on the wall hanger for easy storage, and it will charge automatically.



Multi-fuction Rolling Brush


Remove dust, debris, and hair from all kinds of floors, carpets, and velvet.




4. PRODUCT ASSEMBLY

4.1 Install Vacuum Cleaner


- Directly Install Cleaning Accessories

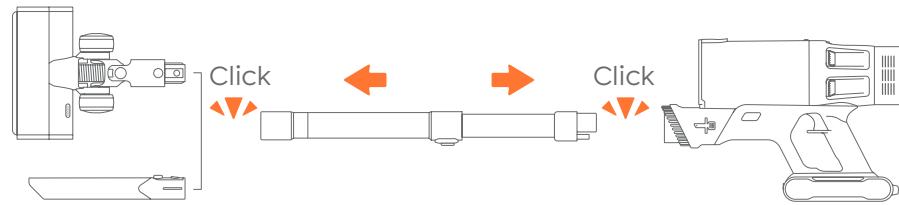

- Install Extension Tube & Cleaning Accessories

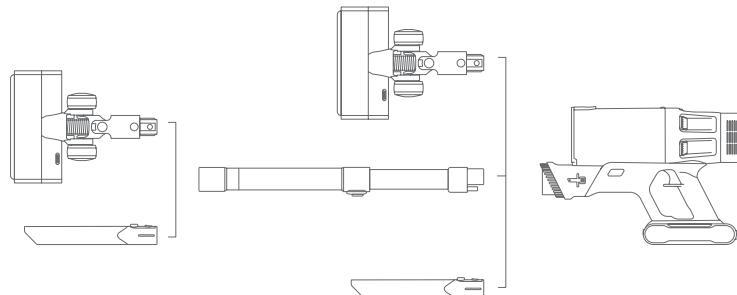

4.2 Install Wall Mount

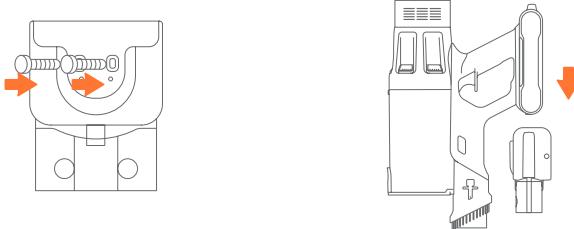

⚠ WARNING

- Please make sure there is no gas, water, or electrical cables and wires behind the mounting area.
- To avoid the dock dropping down, please make sure it must be installed firmly.
- Store appropriately indoors in a dry place. Do not expose the machine to sunlight or freezing temperature.
Recommended temperature range: 39.2°F (4°C)-104°F(40°C).

5. HOW TO USE

5.1 Charging




- When using a new battery or using it for the first time after long-term storage, please fully charge the battery first.
- When storing and not using the vacuum cleaner for a long time, please ensure that it is charged and discharged at least once every three months.


• Charging Methods

⚠ Warning: Do not use any mains power adaptor other than that supplied, as using an alternative will increase the risk of injury and/or damage to main product.

① Charge the battery directly.

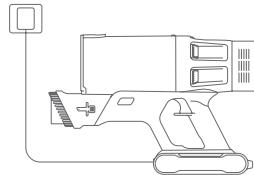

② Charging on the stand.

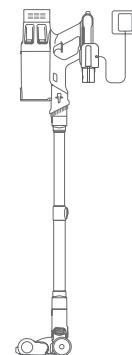

Tip:

Green light flashing: Charging
Green light: Fully Charged Or during Use

5.2 Operating




Before each use, make sure that

- Before first time use, ensure the vacuum cleaner has been charged 4 hours.
- The dust cup and filters are cleaned, and fixed in place.

• Start To Work

Press the switch button to turn it on, and it will start.

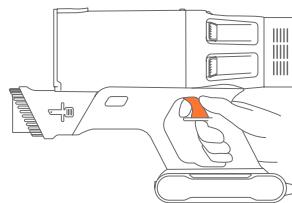

- **Select Cleaning Mode**

When turned on, the default suction is medium. Touch the "Q" button to switch the suction level. As the suction mode is adjusted, the red part of the suction indicator light will change, and the suction gears are MID MAX MIN respectively.



- **Siphon function**

When turning off from the lowest mode, the vacuum surges for 3 seconds, ensuring thorough garbage removal. And then the vacuum turns off automatically.

• Abnormal Indicator

① If the floor brush inhales large foreign objects or entangles too much hair, the indicator "➡" will flash.

- Remove the floor brush and clean up the foreign matter wrapped around and roller. Please ensure that the brush head has been detached from the main unit to prevent accidental starting of the machine and cause personal injury.




② When the air passage or dust cup is blocked, the indicator "U" will flash.

- Clean the aluminum tube and the filters in the dust cup thoroughly.



③ If the screen displays "E1": it Indicates motor malfunction or continuous blockage causing high temperature.

- Remove the dust cup and run it on a single host. If the abnormality still persists, contact BUTURE Team to replace the host. If it disappears, clean the dust cup and floor brush.

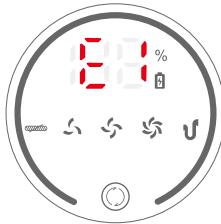

④ If the screen displays "E2": battery temperature protection.

- Place the machine at room temperature and let it stand for 10-20 minutes. If the abnormality disappears, it can be restored to normal. If it persists, contact BUTURE Team to replace the battery pack.




⑤ If the screen displays "E3": Using the wrong adapter.

- Please use the original adapter. (output specification is 36V)



⑥ If the screen displays "E4": Floor brush short circuit and Tube short circuit protection.

- Remove the telescopic tube and run it directly using the floor brush and the host. If the abnormality disappears, contact BUTURE Team to replace the tube. If there is still abnormality, the floor brush needs to be replaced.

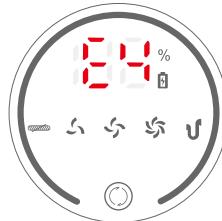


6. MAINTENANCE

Tip: Please clean the vacuum cleaner regularly to extend its lifespan.

6.1 Clean the Main Body


- Turn off the power before cleaning the body.
- Please use a neutral detergent, wipe the body with half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.

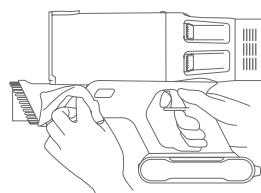


6.2 Clean the Dust Cup/Filters

- Empty Dust Cup

When using, if the garbage in the dust cup exceeds MAX Line, please empty it in time.

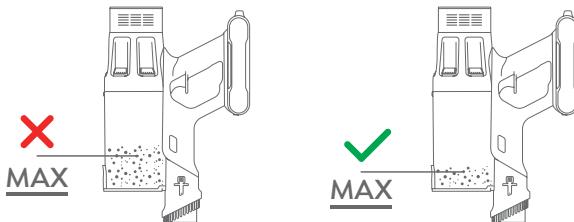

- Press the dust empty button to empty the dust.

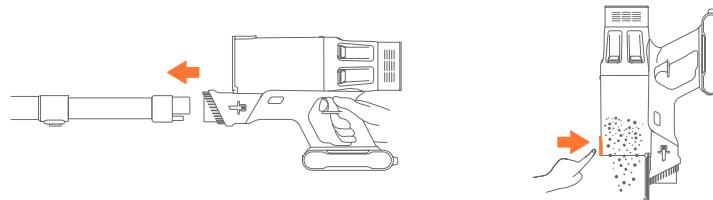


6.3 Wash Dust Cup and Filters


⚠ Warning: Do not use the Cordless Vacuum cleaner without the removable filter or dust bin in position.

- Remove dust cup from main body.


Press the dust cup release button on the main body, then get the dust cup released from the main body.

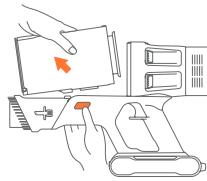


- Remove filters from dust cup.
Take out the HEPA filter upwards.

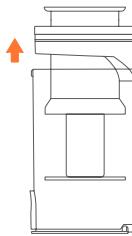

- Remove the stainless steel filter from dust cup.
Take out the stainless steel filter upwards.

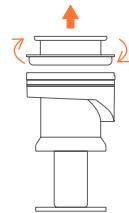


- Clean dust cup and filters with water. Make sure that the dust cup and filters have dried before use.

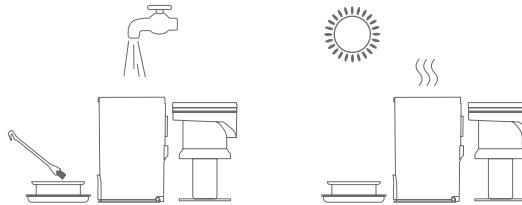

- Installation steps


- ① Align the stainless steel filter with the gap and install it into the dust cup.
- ② Put the HEPA filter on the top.
- ③ Get the dust cup connected to the main body.

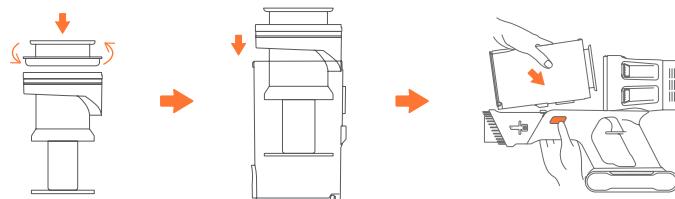


6.4 Brush Roller Cleaning

Tip: After long periods of use, the bristle may be jammed by hair or similar build-up. It's recommended to clean the brush roller periodically to ensure efficient operation and maintain suction.


- Open the brush bottom fixed device. Turn the brush to unlock position.(pictured)

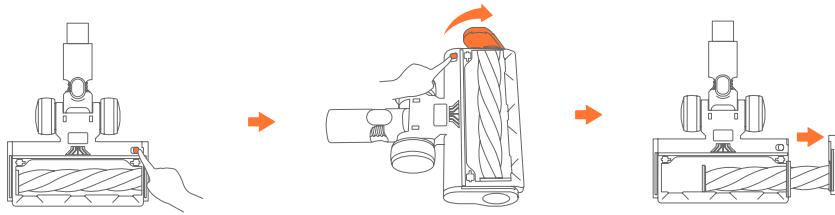

- Remove the debris wrapped around the roller with the mini cleaning brush, then flush the roller with water.

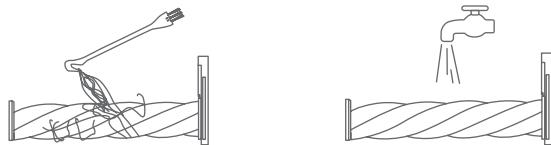

- Push the roller brush to the bottom and then rotate it to install it.

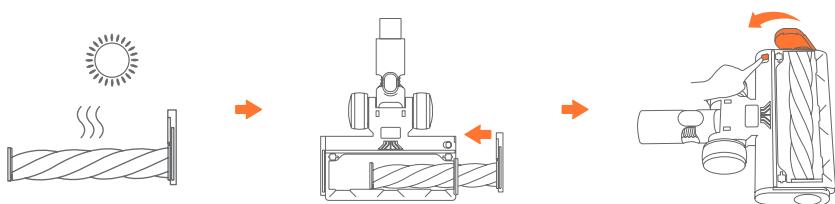

7. SPECIFICATION

Product	Cordless Vacuum Cleaner
Model	BP20
Rated Voltage	DC 29.6V
Suction level	Mid-Max-Min
Charge time	4-5H

8. TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Vacuum cleaner not work	<ul style="list-style-type: none"> Out of power. Battery pack not installed in place or has failed. Motor has failed. 	<ul style="list-style-type: none"> Full charge the vacuum cleaner. Battery pack installed in place. Contact BUTURE Team via email for replacing the battery or motor.
Weak suction	<ul style="list-style-type: none"> Dust cup is full of garbage. Motorized floor brush, tube or filters is clogged with garbage. Low battery power. Dust cup or filter are not installed correctly. 	<ul style="list-style-type: none"> Empty the dust cup. Clear out any garbage that is blocking the motorized floor brush, tube or filters. Full charge the vacuum cleaner. Install the multi-cone filter, HEPA filter and dust cup according to the instruction correctly.

ISSUE	CAUSE	SOLUTION
Charging is not normal	<ul style="list-style-type: none"> Charger is not correctly connected. Battery pack or charger has failed. Charger is not original. 	<ul style="list-style-type: none"> Make sure the charger are fully plugged in socket. Contact BUTURE Team via email for replacing the battery or charger. Use the original charger provided by BUTURE only.
Insufficient use time after charging	<ul style="list-style-type: none"> Insufficient charging time. Motorized floor brush, dust cup, tube or filters is clogged with garbage. Battery aging. 	<ul style="list-style-type: none"> Full charge the vacuum cleaner. Clear out any garbage that is blocking the motorized floor brush, dust cup, tube or filters. Contact BUTURE Team via email for replacing the battery.
Motorized floor brush stops with four indicators on the battery pack flashing	<ul style="list-style-type: none"> Motorized floor brush is clogged with garbage. 	<ul style="list-style-type: none"> Clear out any garbage that is blocking the Electrical floor brush.

9. WARRANTY

9.1 The 2-Year Warranty

- Our BUTURE machine has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the BUTURE Instruction Manual.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

9.2 What is covered?

Only applies to purchases made from authorized retailers of BUTURE.

This warranty will only be valid if the machine is used in the country in which it was sold.

9.3 How to claim?

Please keep your proof of purchase. To make a claim under our warranty, you need to provide your original purchase receipt with the purchase date and order number on it.

If your machine is not functioning properly, or you still have any questions after reading this manual carefully, please feel free to contact us, we will reply to you in 24 hours and try our best to provide you with a satisfactory solution.

Email Our Customer Service : official@ibuture.com