

FRIDJA



f800 AUTOMATIC CITRUS JUICER

INSTRUCTION MANUAL

www.fridja.com



Thank you for purchasing this Fridja f800 automatic citrus juicer! This product has been designed and manufactured to give you years of trouble free service at home and when travelling! Please take time to read these instructions prior to use - they have been written to ensure you get the very best from your purchase.

CONTACT US

We are very proud of our new automatic juicer and want you to be fully satisfied with your purchase. Please feel free to contact us if there is anything we can help with at info@fridja.com. Please also check our [YouTube](https://www.youtube.com/c/Fridja) channel for full video instructions - <https://www.youtube.com/c/Fridja>.

TECHNICAL SPECIFICATIONS

Brand: Fridja | Model Number: F800/BLK
Input Voltage: 220-240V 50/60 Hz | Power Consumption: 50W
Maximum Use: Less than 20 minutes | Instruction Booklet: 1.0

CONTENTS

SAFETY INSTRUCTIONS	3
YOUR FRIDJA JUICER	4
HOW TO DISASSEMBLE FOR CLEANING.....	5
HOW TO ASSEMBLE.....	6
HOW TO OPERATE.....	7
CLEANING AND CARE.....	8
TROUBLESHOOTING.....	9
PLUG SAFETY	10
GUARANTEE.....	11

SAFETY INSTRUCTIONS

Please retain these instructions for future reference. Only use the appliance as described in this manual to avoid fire or electric shock. Do not use the appliance for any purpose other than that for which it is designed.

When using electrical appliances basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. This product complies with all binding CE labelling directives.

If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard. Ensure that the supply cord is kept away from heat or sharp edges that could cause damage.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision and instruction in the use of the appliance by a person responsible for their safety. Do not leave the appliance unattended whilst connected to the mains power supply. Children should be supervised to ensure they never play with the appliance.

Caution: Keep any packaging materials well away from children — these are a potential source of danger, e.g. of suffocation.

Do not allow the appliance or its power cord to touch hot surfaces or to come into contact with any heat sources. When removing the plug from the wall socket, never pull on the power cord. Do not let the power cord hang free.

Avoid submerging the main body, which includes the motor components, in water. Refrain from washing it directly under a tap. Instead, clean it using a damp cloth for wet cleaning.

This appliance is intended for use in domestic settings only. Always remove the plug from the wall socket before assembling, disassembling the appliance and before cleaning.

YOUR FRIDJA JUICER

1. Top Lid
2. Lower Lid
3. Lid Lock
4. Juice Outlet
5. Start/Reset Button
6. Main Body
7. On/Off Switch
8. Coaster
9. Juicing Cone
10. Filter Tray
11. Juicing Bowl
12. Silicon Anti Drip Cover



HOW TO DISASSEMBLE FOR CLEANING

For a [YouTube](#) video showing an overview of how to use the f800 - scan this QR code!




Alternatively head to <https://www.youtube.com/c/Fridja> to see all our [YouTube](#) videos.

Carefully unpack all parts of the juicer including those in the packaging. Before the juicer is used for the first time, it must be fully cleaned.

1. Remove all parts of the lid. Opening the lid by opening the lid lock.

Once open, detach the lid from the main unit by pulling away gently. Slide the lid away one side at a time.

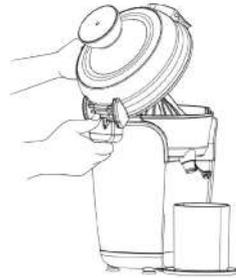

2. Separate the top lid by pushing the top lid down whilst holding the lower lid.

3. Remove the juicing cone, filter plate and juicing bowl by lifting. Wash all parts with warm soapy water or in the dishwasher under 40 degrees. Utilise only natural cleaning agents for the machine; avoid highly abrasive cleaners.



HOW TO ASSEMBLE

For a **YouTube** video showing an overview of how to use the f800 - scan this QR code!

Alternatively head to <https://www.youtube.com/c/Fridja> to see all our **YouTube** videos.




1. Position the juicing bowl by inserting it vertically downward into the top of the main body. Ensure that the juice outlet of the bowl faces forward. The grooves will guide to the correct position.



2. To install the filter plate, align the three anti-rotation grooves of the filter plate with the three protruding ribs of the juice bowl. Then, lower vertically into the juice bowl.

3. Add the juicing cone and all parts of the assembled lid to the main unit.



Now you are ready to juice!

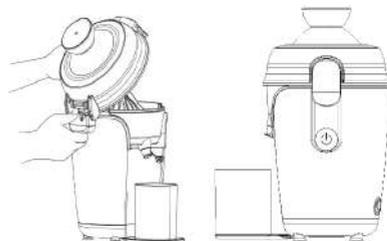

F800 AUTOMATIC CITRUS JUICER

HOW TO OPERATE


1. Open the lid by lifting the lid lock. Slice the citrus fruit horizontally into halves. Position one half upside down onto the centre post of the juicing cone. Apply gentle pressure to secure fruit onto the juicing cone.

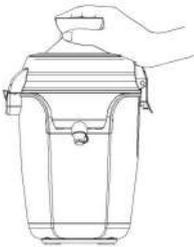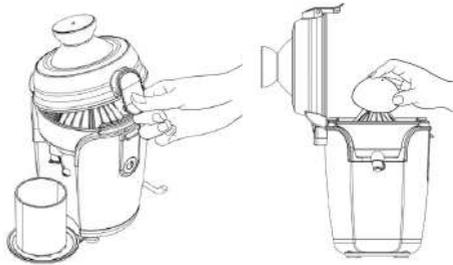

2. Securely close the cover, ensuring it is locked to prevent any accidental opening during juicing.

Position a cup beneath the juice outlet. Close the silicone anti drip cover for the juice outlet to prevent juice from flowing out directly.

3. Activate the power switch. The power switch only requires activation initially.

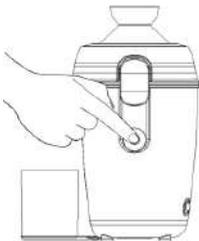


4. Press the start button. The juice cone will ascend automatically and pause briefly at the top before. Once the motor stops, the juicing process is complete. Pressing the start button twice consecutively initiates two consecutive juicing cycles. descending.

Note: An indicator light within the start button flashes green during juicing, remains green until completion, and turns red if any abnormalities occur during the process.

F800 AUTOMATIC CITRUS JUICER

4. To replace the fruits, unlock the cover by pulling the lock, remove the juiced fruits, and then replace them with fresh ones. Repeat this process until you have juiced all the citrus you desire.

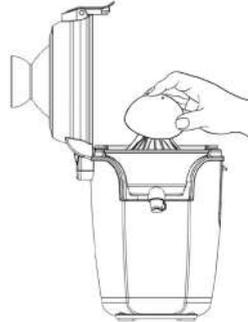

5. Retrieve the juice by opening the silicone anti drip cover to allow juice to flow out.

■ **Ensure the juicer is positioned on a level surface while in use. Check that the outlet is unobstructed and the cup is positioned on the coaster before starting the juicing process. If the motor component is not reset, the machine will automatically reset upon powering on.**

CLEANING AND CARE

Clean all detachable parts with hot water and a mild detergent immediately after use.

Only use a dishwasher at low temperatures. Never put the main body of the juicer in the dishwasher.

■ **We do not advise using a dishwasher above 40 degrees. This juicer has been designed to be used for years. High heat from a dishwasher will warp plastic parts and shorten the life of this appliance. Please wash at a low temperature or hand wash this juicer.**

F800 AUTOMATIC CITRUS JUICER

TROUBLESHOOTING

Problem	Reason	Solution
Unit fails to operate, light does not turn on	The juicer is not plugged in	Plug the unit into a suitable power outlet and turn on if applicable
Unit fails to operate	On/off switch is not switched on	Turn on by the on/off switch
Juice spills/drips from the juice spout	The silicon cap is not attached.	Attach the silicon cap to stop the juice escaping the bowl
The top disconnects during operation	The lid is not locked	Make sure the lid is securely locked in before you start juicing
The juicer becomes jammed half way through juicing	The fruit has got caught and made the unit stuck	Press the start/reset button to return the spindle to the lowered position. Clean the juicer thoroughly

PLUG SAFETY

The appliance is fitted with a 13 amp plug. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1363) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the Earth symbol or coloured green and yellow. Under no circumstances should either the Neutral or Live be connected to the earth terminal

The wire coloured blue or black must be connected to the terminal "N". Under no circumstances should either the Earth or Live be connected to the Neutral terminal. Under no circumstances should either the Earth or Neutral be connected to the Live terminal. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. If in doubt please contact a qualified engineer for advice.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ATSTA approved one (conforming to BS1362) of the same rating. If in doubt, consult a qualified electrician. If you need to remove the plug – **DISCONNECT IT FROM THE MAINS** and then cut off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it in a socket outlet as there is a danger of an electric shock.

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



GUARANTEE

This guarantee is applicable for goods bought directly from Fridja. If you purchased your juicer from another vendor please contact them.

If by chance you are unhappy with your purchase, please contact us within seven days of delivery for a refund. Returned items must be in unused condition with all supplied Fridja accessories and packaging. You are responsible for the condition of your goods until they reach us, so pack your items carefully to prevent damage in transit. Worn, damaged or incomplete returns will not be eligible for a refund and will be returned to you.

All our goods are supplied with a 12 month warranty from the date of purchase, covering defects in materials and workmanship under conditions of normal use and maintenance. If your goods develop a fault within this period, we will repair or replace the item. If we cannot do this we will refund your actual purchase price. If goods become defective within three months of delivery, we will pay for collection of the items and delivery of the replacement. After this time, we will not pay to collect items. In the unlikely event that your goods arrive damaged, please inform us within 24 hours of delivery, including photos of the damage. The claim will be assessed, and if approved we will arrange for the goods to be collected and we will replace or refund as necessary.

It is your responsibility to securely package items for their safe return to us using a trackable service. Not doing so will void your warranty.

To arrange the return of your item please contact: info@fridja.com.

This guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the instructions contained in these operating instructions.
- This guarantee does not cover accidental damage or misuse.
- This guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacturers disclaim any liability for incidental or consequential damages.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.



FRIDJA



UK REGISTERED ADDRESS

12 CELIA ROAD, LONDON, UK

EU REGISTERED ADDRESS

77 CAMDEN STREET, DUBLIN 2, D02
XE80, REPUBLIC OF IRELAND

www.fridja.com

