



CE FC O W K

GAMAKAY



MK61 MANUAL



Fn+U= PS
Fn+O= PB
Fn+K= Home
Fn+M= Del
Fn+= PD
Fn+right ALT= Left
Fn+right Ctrl= Right
Fn+P= Light Down

Fn+1~+= F1~F12
Fn+A= Play/Pause
Fn+S= Previous
Fn+D= Next
Fn+F= Volume Mute
Fn+G= Volume Down
Fn+H= Volume Up
Fn+J= Ins

Fn+shift+ESC=~
Fn+ESC=~
Fn+Q= Profile 1
Fn+W= Profile 2
Fn+E=Profile3
Fn+R=Profile4

Fn+J= User Light Mode
Fn+| = Light Mode
Fn+[= Light Up
Fn+P= Light Down
Fn+Enter= Light Color
Fn+Backspace= On/Off Light
Fn + WinKey = Windows key lock / Press again to release windows key lock.
After pressing Fn, windows key lights up white

Fn+Tab= Reset (press and hold for 5 seconds)

Fn+n= Change N/6Key (when it is set to Nkey,
the backlight of N key lights up in red)

Fn+space= Fn lock and Fn always lights red when it is locked.
Press space again to unlock it.