



Steamfast™

MODAL



DUAL-VOLTAGE TRAVEL
+ CRAFT STEAM IRON
OWNER'S GUIDE

READ ALL INSTRUCTIONS BEFORE USING IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See steamfast.com to view, download, and print the most current version of this owner's guide.

When using an iron, basic precautions should always be followed, including:

INTENDED USE: Use appliance only for its intended use. This product is intended to be used indoors for steam ironing in the United States. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty. This mini travel iron is not intended for regular use.

 **WARNING: Risk to Children and Impaired Persons**

Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

- Close supervision is required for any appliance used by or near children and pets. Do not leave the iron unattended while the iron is connected or on an ironing board.

 **WARNING: BURN HAZARD - To reduce the risk of burns or injury to persons, observe the following:**

- Use caution when handling this steam unit. Burns could occur from touching hot metal parts, hot water, or steam. Use caution to avoid contact with hot water when turning the product upside down to empty the reservoir.
- Avoid contact with the hot metal ironing plate.
- Do not point steam vents at people or pets as serious injury or damage can occur.
- Do not iron or steam articles while wearing. Remove article before using this appliance.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button. Do not operate unit if steam vents are blocked.

 WARNING - To avoid damage to the unit or power cord, and to reduce risk of fire, electrical shock and injury to persons, observe the following:

- Do not use the iron if it has been dropped, if there are visible signs of damage, or if it is leaking. Shock, fire, or injury may occur.
- Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Do not wrap cord around the unit, use the cord tie provided for storage.
- Do not use power cord as handle, allow it to hang over edge of counters, or be crimped or closed in doors.
- The iron must not be left unattended while it is plugged into any power outlet.
- Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- To reduce likelihood of circuit overload, do not operate another high wattage appliance on this same circuit.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock

-
- due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or tripped over.
- For use in the U.S.A., the voltage selector switch should be placed in the 120 volt position. For use in several other countries, the voltage selector switch may need to be placed in the 240 volt position. Confirm the voltage available at each location before using the appliance. For connection to a 240 volt supply, use a suitable attachment plug adapter of the proper configuration for the power supply receptacle.
 - Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage operation contained in this manual.
 - This appliance was set at the factory to operate at 120 volts. Refer to the instructions in this manual for conversion to 240 volt operation.
 - This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
 - To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
 - Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use. Do not open water tank cap during use.

-
- Only use distilled water to fill unit. Do not use cleaning agents or other substances to fill unit. Cleaning agents and other substances could result in injury or damage to the unit.
 - The iron must be used and rested on a flat stable surface. The iron must only be used with the stand or base provided. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
 - Always allow unit to cool completely (at least 30 minutes) before storing. Place unit on stand or base when cooling, to avoid heat damage to surfaces.

 **SERVICING WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:**

- Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. For information about available products and parts replacement, visit steamfast.com or contact Steamfast Consumer Service by phone (1-800-711-6617) or email (consumerservice@steamfast.com).
- If Power Light does not illuminate when unit is turned ON, unit is not operating normally. Immediately unplug

-
- and have unit serviced by qualified service personnel.
- If Heating Indicator Light does not illuminate when Temperature Control Dial is turned to a selected heat setting, unit is not operating normally. Immediately unplug and contact Steamfast Consumer Service.
 - Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the cleaning instructions provided.

SAVE THESE INSTRUCTIONS

PRODUCT INFORMATION



-
- 1 IRONING PLATE**
The heated, non-stick surface that is used to press fabrics, remove wrinkles and create creases.
 - 2 MAIN BODY**
Contains the units' internal heating components.
 - 3 HEATING INDICATOR LIGHT**
Illuminates while heating up to one of the four heat settings on the Temperature Control Dial.
 - 4 WATER TANK CAP **
Covers the Water Tank fill hole. The Water Tank Cap is tethered to the unit, and cannot be completely removed.
 - 5 WATER TANK WINDOW**
Monitor the level of water in the Water Tank. The unit must be sitting upright to correctly read the water level.
 - 6 STEAM BUTTON **
Press to activate the unit's steam function. Locking the Steam Button down disables steam; pressing the Steam Button releases it into the unlocked position, enabling steam.
 - 7 TEMPERATURE CONTROL DIAL**
Turn to select one the four heat settings, and to turn heating off.
 - 8 HAND GRIP**
Ergonomically designed for user comfort. The Hand Grip contains the unit's Water Tank.
 - 9 WATER TANK (INTERNAL)**
Located inside the Hand Grip and designed to hold a maximum of 1.1 oz (32 ml.) water.

10 STANDS

Three supports located at the rear of the Main Body. The Stands are designed to support the unit in an upright position when the Ironing Plate is hot, to help prevent damage to surfaces.

11 VOLTAGE SELECTOR

The recessed switch which is used to set the unit to either 100-127V or 220-240V electrical voltage standards. By default the Voltage Selector is set to 100-127V.

12 MEASURING CUP

Designed to help you easily and consistently fill the Water Tank with the optimum amount of water.

13 TRAVEL BAG

For easy storage.

SETTING VOLTAGE

This product features dual-voltage functionality, which allows it to function correctly in regions with either 100-127V or 220-240V electrical voltage standards. Voltage is set using the Voltage Selector.

For use in Canada or North America, the voltage selector switch should be placed in the 120 volt position. For use in most foreign countries, the selector switch must be placed in the 240 volt position. CONFIRM the voltage available at each location before using the iron.

NOTE: For connection to a 240 volt supply an adaptor plug may be needed.

IMPORTANT: By default, the Voltage Selector is set to the 100-127V setting. Be sure to select the correct voltage for your location before plugging power cord into an electrical outlet.

To change the voltage setting:

NOTE: These steps assume that Voltage Selector is still set to 100-127V default.

1. Locate Voltage Selector, recessed inside slot at rear of Main Body. Note the open notch in middle of Voltage Selector (FIGURE 1-A).
2. Find a tool with a fine tip - a pen is ideal.
3. Carefully insert tip of pen into notch. Slide Voltage Selector to the right, towards 220-240V label (FIGURE 1-B).

IMPORTANT: Be sure that Voltage Selector is moved as far to the right as possible for voltage setting to take effect correctly. Voltage Selector should appear as shown (FIGURE 1-C).

4. Unit is now ready for use in a 220V region. To set unit back to 100V, reverse STEPS 2 & 3, this time sliding Voltage Selector as far to the left (towards 100-127V label) as possible.

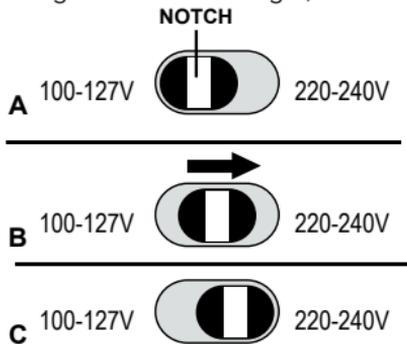


FIGURE 1

FILLING WATER TANK (FOR STEAM IRONING)

1. Turn off and unplug unit.
2. Place unit (Ironing Plate down) on a flat, heat-resistant surface.
3. Fill Measuring Cup with water up to (1.1 oz. / 32 ml.).

NOTE: In order to extend the life of your unit and keep it functioning at its maximum potential, it is highly recommended that distilled or de-mineralized water be used in Water Tank.

Using tap water could result in mineral buildup which could block the steam vents. This will reduce the effectiveness of this unit and may cause unit to spit or spurt hot water. Follow cleaning instructions provided.

4. Open Water Tank Cap. Pour water from Measuring Cup into Water Tank. Close Water Tank Cap.

While steam-ironing, the Water Tank Windows let you monitor the water level in the Water Tank. When the water level becomes low:

1. Turn off and unplug unit. Allow to cool for at least 5 minutes.
2. Follow STEPS 1-3 above.
3. Plug power cord back in and resume ironing as usual.



OPERATING UNIT

DRY IRONING

IMPORTANT: Make sure Steam Button is locked in lowered position before dry ironing. This will prevent any water from accidentally dripping.

1. Plug power cord into a convenient electrical outlet.
2. Turn Temperature Control Dial clockwise so that (●) is centered above one of the four heat settings on the Dial. Heating Indicator Light will illuminate.

NOTE: It is recommended to start with lower temperatures first, as high settings designed for heavy materials can damage delicate fabrics.

3. When Heating Indicator Light turns off, Ironing Plate is heated and ready for use.

 **CAUTION: BURN HAZARD.**

Do NOT touch the Ironing Plate or surrounding area.

During use, Heating Indicator Light will cycle on and off as unit works to maintain a consumer controlled temperature.

NOTE: Heating Indicator Light is not intended to indicate whether ironing plate is HOT.



STEAM IRONING

1. Plug power cord into a convenient electrical outlet.
2. Turn Temperature Control Dial clockwise as far as possible to set unit to high temperature (●●●●). Heating Indicator Light will illuminate.
3. When Heating Indicator Light turns off, press Steam Button. Button will lock into raised position, and unit will begin emitting steam from steam vents on Ironing Plate.

NOTE: Unit is designed to steam horizontally. Steam flow will stop whenever unit is in vertical upright position. If unit is leaking excessively in vertical position, check that steam button is disengaged.



CAUTION: Burn Hazard. Hot steam may temporarily vent when the unit is positioned vertically.

4. To stop steam flow during use, press Steam Button again to lock it into the lowered position. This will prevent dripping in the upright position.

Once all ironing tasks are finished, immediately turn Temperature Control Dial counter-clockwise until it is set to OFF position. Be sure that Steam Button is locked in lowered position - this will prevent water from accidentally dripping during next use. Prop unit upright on Stands to cool, and refer to CARE & STORAGE for proper cleaning and storage.

STORAGE & CARE

CLEANING & STORAGE

1. Turn Temperature Control Dial to Off (●) position. Unplug power cord.
2. Prop unit upright on Stands and allow Ironing Plate to cool for 30 minutes.
3. Open Water Tank Cap and drain any remaining water into a sink or tub. Close Cap when finished.
4. Wipe Main Body and Ironing Plate with a soft cloth lightly moistened with water.
 - **DO NOT** clean Ironing Plate with detergents or descalers.
 - **DO NOT** clean Ironing Plate with abrasive or corrosive products.
 - **DO NOT** submerge unit or hold unit under running water.
5. Bundle cord with supplied cable tie when storing. **DO NOT** wrap cord around the product.
6. Place unit and Measuring Cup inside Travel bag and store in a cool, dry location.

MINERAL BUILD-UP

1. Follow STEPS 1-3 under CLEANING & STORAGE section above; however, leave Water Tank Cap open.
2. Make a mixture of 0.5 oz. distilled water and 0.5 oz. vinegar. Never add soap, detergent or other cleaners as this could cause damage to the product.
3. Using included Measuring Cup, pour water-vinegar solution into Water Tank. Close Water Tank Cap.
4. Follow normal steam ironing procedure. Allow unit to steam out full contents of Water Tank. When finished, lock Steam Button in lowered position and unplug unit.
5. Allow to cool for 5 minutes, then refill Water Tank with fresh distilled water. Repeat STEP 4 until vinegar odor dissipates.
6. Store unit as normal.



CAUTION: Burn Hazard. Using tap water could result in mineral buildup which could block the steam outlets, causing this unit to spit or spurt hot water. Follow cleaning instructions provided.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE & SOLUTION
Unit fails to heat up.	Unit is not plugged in. Plug power cord into electrical outlet.
	Household circuit breaker / ground fault interrupter has tripped or blown a fuse. Reset circuit breaker / ground fault interrupter, or replace fuse. For assistance, contact a licensed electrician.
	Temperature Control Dial has not been turned to a heat setting.
Unit is leaking water.	Steam Button is in the unlocked position, but Temperature Control Dial is not set to high enough temperature. Refer to Steam Ironing section for further instructions.
	Water tank is overfilled. Do not fill unit to top of Water Tank.
	There is mineral build-up. Refer to MINERAL BUILD-UP section for further instructions.
Unit is not producing continuous steam	The Steam Button is not set in the correct position. Ensure it is set to raised position.
	The Temperature Control Dial is not set to high enough heat. Refer to Steam Ironing section for further instructions.

WARRANTY

Steamfast, a division of Vornado Air, LLC. Steamfast warrants to the original consumer or purchaser this Steamfast ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.


For warranty service: Call 1-800-711-6617 or email consumerservice@steamfast.com to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code, email, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit www.steamfast.com/contact

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties.

The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation, connection and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

© 2025 Vornado Air, LLC. Andover, KS 67002, U.S. Specifications subject to change without notice. Steamfast® is a trademark owned by Vornado Air, LLC. Manufactured in China.

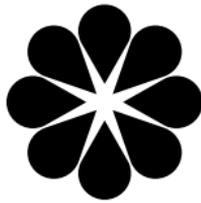

SteamfastTM

1-800-711-6617 | steamfast.com | consumerservice@steamfast.com