



DCCM00101

COTTON CANDY MAKER

Instruction Manual | Recipe Guide



**WELCOME
TO THE FOODIE
FAMILY**

We hope you *love* our
products as much as
our team does. 



COTTON CANDY MAKER



Important Safeguards.....	4-7
Parts & Features.....	8
Before First Use	9
Using The Cotton Candy Maker.....	10-12
Making Additional Swirling Sticks.....	13
Tips & Tricks	14
Cleaning & Maintenance.....	15
Recipes.....	17-21
Customer Support	22
Warranty.....	23

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not submerge the base or any electric parts in liquid.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Cotton Candy Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Unplug the appliance prior to assembly/disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not operate this appliance with a damaged cord [damaged charging cable], damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday - Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified

IMPORTANT SAFEGUARDS

electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Ensure that there is enough space surrounding the appliance while in use, as the appliance becomes very hot.
- Do not add excess sugar while using the Cotton Candy Maker. Excess sugar may cause noise or vibration of the Cotton Candy Maker.
- **Caution:** The Extractor Head will be hot after preheating! To avoid burns or personal injury, avoid contact with the extractor head.
- **WARNING:** To ensure optimal functioning of the Cotton Candy Maker, do not use more than 1 scoop of granulated or superfine sugar at a time. Overfilling the Extractor Head can cause clogs.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- Ne plongez pas la base ni aucune pièce électrique dans du liquide.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le S'Mores Maker n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Débrancher l'appareil [et laissez refroidir] avant [montage/démontage,] déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- N'utilisez pas cet appareil avec un cordon endommagé [câble de charge endommagé], une prise endommagée, ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 du lundi au vendredi, ou par courriel à support@bydash.com.

GARANTIES IMPORTANTES

- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmêlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.
- Veillez à ce qu'il y ait suffisamment d'espace autour de l'appareil lorsqu'il est utilisé, car il devient très chaud.
- Ne pas ajouter de sucre en excès lors de l'utilisation de la machine à barbe à papa. Un excès de sucre peut provoquer du bruit ou des vibrations de la machine.
- **Attention:** La tête d'extraction sera chaude après le préchauffage ! Pour éviter les brûlures ou les blessures, évitez tout contact avec la tête d'extraction.
- **AVERTISSEMENT:** Pour garantir un fonctionnement optimal de la machine à barbe à papa, ne pas utiliser plus d'une cuillère de sucre cristallisé ou de sucre ultra-fin à la fois. Un trop-plein dans la tête d'extraction peut provoquer des obstructions.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

PARTS & FEATURES



BEFORE FIRST USE



Remove all packaging material from the product.

Rinse the Upper Splash Guard Bowl and Bottom Bowl with warm water, then dry them with a paper towel.

ASSEMBLY



- 1 Place the Bottom Bowl over the Extractor Head and push down. Turn it counterclockwise until it's locked into place by the grooves on the base (**photo A**).
- 2 Attach the Upper Splash Guard Bowl by placing it on top of the Bottom Bowl (**photo B**) and pressing down until it snaps securely into place.

USING THE COTTON CANDY MAKER



- 1 Place the Cotton Candy Maker on a dry, clean, and level surface before plugging it in.
- 2 Switch the Power Switch to ON (**photo A**). The Extractor Head will start to spin and heat up. When using granulated, superfine, or flossing sugar, allow the machine to run for 3-5 minutes to ensure proper preheating.
- 3 Once preheated, switch the Power Switch to OFF (**photo B**).



CAUTION: The Extractor Head will be hot after preheating! To avoid burns or personal injury, avoid contact with the extractor head.

USING THE COTTON CANDY MAKER



- 4** Once the Extractor Head has completely stopped spinning, add no more than 1 scoop of granulated or superfine sugar, or flossing sugar (**photo C**). Then switch the Power Switch to ON (**photo D**). The Extractor Head will begin to spin, and the heating element will activate.



WARNING: To ensure optimal functioning of the Cotton Candy Maker, do not use more than 1 scoop of granulated or superfine sugar at a time. Overfilling the Extractor Head can cause clogs.

WARNING: Do not leave the Cotton Candy Maker unattended while it is on and in use.

USING THE COTTON CANDY MAKER



- 5** As the spun sugar fibers start to collect around the bowl, slowly spin the paper cone in your fingers while circling the bowl **(photo E)**.
- 6** Once the cotton candy begins to form on the cone, hold it horizontally over the Extractor Head and continue to spin the cone, moving it from side to side to gather all the candy from inside the bowl **(photo F)**.
- 7** When no more cotton candy fibers are being emitted from the Extractor Head, switch the Power Switch to OFF. Prepare additional servings by repeating the previous steps.
- 8** When you finish making cotton candy, switch the Power Switch OFF and unplug the Cotton Candy Maker from the electrical outlet.

MAKING ADDITIONAL SWIRLING STICKS



- 1** Begin by laying out a clean, dry sheet of paper on a flat surface. An 8.5" x 11" sheet works well.
- 2** Take one corner of the paper and roll it toward the opposite edge to form a cone shape. Adjust the tightness of the roll according to how wide you want the opening to be.
- 3** Once the cone is formed, use tape or glue to secure the overlapping edge, ensuring that the cone keeps its shape.
- 4** If needed, trim the bottom of the cone to make it even and stable. The Swirling Stick is now ready to hold cotton candy (**photo A**)!

TIPS & TRICKS



Ensure that the Extractor Head is clean and free of any sugar before use.



Do not add more than 1 sugar scoop (1 tablespoon) of granulated, superfine or flossing sugar to the extractor head at one time.



Avoid placing the Swirling Sticks too close to the Extractor Head, as it is hot and may cause the cone to melt or tear into the cotton candy.



Don't add sugar while Maker is on and the Extractor Head running.



To keep the classic fluffy shape, stand finished cotton candy cones in a drinking glass until you are ready to serve them.



When finished making cotton candy, run the Maker for a few additional minutes until it stops spitting out sugar. Then let it cool down prior to moving or cleaning.

CLEANING & MAINTENANCE

CAUTION: Never immerse base unit or cord in water or other liquid.

- Always unplug the Cotton Candy Maker and allow to cool completely before cleaning.
- Once fully cooled, remove the Upper Splash Guard Bowl by lifting it up and off the Bottom Bowl. Remove the Bottom Bowl by gripping both sides and turning it clockwise. Once loosed, pull it straight up.
- To clean the Upper Splash Guard Bowl and Bottom Bowl, wash by hand in warm, soapy water. Never use abrasive cleansers or scouring pads, as they may damage the surfaces. Rinse and dry thoroughly.
- Allow the Extractor Head to cool completely before removing or cleaning.
- Once cool, grip it firmly from the top and pull straight up to remove. Soak in warm water, then wipe with a soft cloth. Shake off excess water and dry thoroughly.
- Never store Cotton Candy Maker while it is hot or wet.
- Make sure the Cotton Candy Maker is clean and dry before storing.
- To store, place the Cotton Candy maker in its box or in a clean, dry place.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



CLASSIC COTTON CANDY

Prep Time: 10 minutes • Cook Time: 20 minutes • Serves: 3-4

Ingredients:

1 scoop of sugar or floss sugar

Food coloring, if desired

Swirling sticks

Directions:

1. Power on the Cotton Candy Maker and allow it to reheat for 3-5 minutes. Then, power off the Maker. Add 1 scoops of sugar into Sugar Compartment, taking care not to overfill.
2. Power on the Maker to begin spinning the sugar. The Maker will begin melting the sugar and strands/floss will begin to appear.
3. Move a Swirling Stick around the inside of the Maker to roll the floss sugar onto the paper cone. Use the cone to pick up the strands of sugar, then rotate the cone to wrap the floss sugar around it.
4. After all sugar has turned into floss/strands, repeat with more sugar if desired.
5. Hand out cotton candy cones to anyone who loves a fluffy sweet treat!



COTTON CANDY POPCORN

Prep Time: 15-20 minutes • Cook Time: 45-60 minutes • Serves: 8-10

Ingredients:

16-ounce package marshmallows or vanilla candy melts	2 cups cotton candy torn into small pieces
12 cups popped popcorn, divided	3 ounces blue candy melts
¼ cup sprinkles	3 ounces pink candy melts

Directions:

1. Prepare Classic Cotton Candy as per recipe on Page 18.
2. In a microwave-safe bowl, melt marshmallows or vanilla melts according to the package.
3. In a large mixing bowl, add 8 cups of popcorn. Pour on the marshmallow coating and use tongs to stir until well coated, working quickly before marshmallow has a chance to harden.
4. Add cotton candy and gently mix to distribute throughout the popcorn.
5. Line a baking sheet with parchment paper. Spread out popcorn mixture on the baking sheet and top with sprinkles on top.
6. In two separate bowls, melt the blue and pink candies in the microwave.
7. In two mixing bowls, divide the remaining popcorn equally. Pour the blue coating over one bowl of popcorn, and pour the pink over the other.
8. Stir each one until well-coated. Line another baking sheet with parchment paper. Spread out the pink and blue popcorn mixtures, keeping them separate.
9. When cooled, in a large mixing bowl, add all three batches of popcorn. Stir to combine all colors.
10. Serve and enjoy this POP of sweetness!



COTTON CANDY FLOOF CAKE

Prep Time: 7-10 minutes • Cook Time: 10-12 minutes • Serves: 6-8

Ingredients:

Cotton Candy in a variety of colors

Sprinkles

Directions:

1. Prepare Classic Cotton Candy as per recipe on Page 18.
2. Make a "cotton candy cake" by placing prepared cotton candy into a cake pan or tall plastic container to form a cake shape, using different colors to form layers.
3. On a serving plate, flip cotton candy cake over.
4. Top with sprinkles and enjoy!



COTTON CANDY MOCKTAIL

Prep Time: 3-5 minutes • Cook Time: 0 minutes • Serves: 1

Ingredients:

1-2 limes

¼ cup sprinkles

3-5 ounces cotton candy

12 ounces lemon lime soda or seltzer

Garnish:

More cotton candy

Cherry optional

Directions:

1. Prepare Classic Cotton Candy as per recipe on Page 18.
2. Ready a serving glass by rimming its edge with fresh lime. Cut a wedge of lime and run it along the rim of the glass so that the rim of the glass inside and out is moist.
3. In a small plate, pour out sprinkles. Flip the glass upside down dip the rim of the glass into the sprinkle, making sure the rim is coated with sprinkles.
4. Without messing up the sprinkle rim, add a cup of cotton candy to the inside the glass.
5. When ready to serve, pour soda into glass, careful not to mess up the sprinkle rim. Watch the cotton candy disappear!
6. Garnish with more cotton candy and a cherry on top! (Take note that garnish cotton candy will also dissolve if it touches the soda.)
7. Serve and savor this sweet sipper!




CUSTOMER SUPPORT



We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or support@bydash.com.

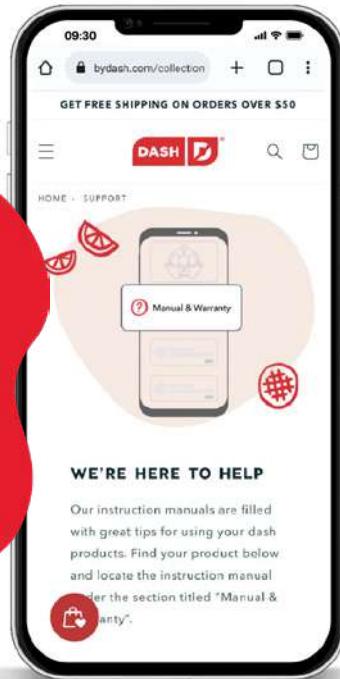

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Cotton Candy Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Power Rating: 120V~60Hz

Wattage: 500W

Stock#: DCCM00101_20250310_v4



This product has passed food safety testing in accordance with FDA guidelines.





1-800-898-6970 | @bydash | bydash.com