


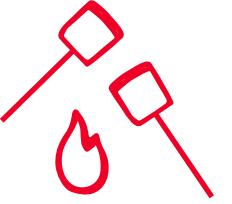

#DSMR00101

S'MORES MAKER

Instruction Manual | Recipe Guide



S'MORES MAKER



**WELCOME
TO THE FOODIE
FAMILY**
We hope you *love* our
products as much as
our team does. 



- Important Safeguards..... 4-7
- Parts & Features 8
- Before First Use 9
- Using the S'Mores Maker 10-12
- Tips & Tricks 13
- Cleaning & Maintenance..... 15
- Recipes 17-25
- Customer Support 26
- Warranty 27

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The S'mores Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Unplug the appliance prior to assembly/disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not operate this appliance with a damaged cord [damaged charging cable], damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday - Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided

to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children

- or tripped over unintentionally.
- Ensure that there is enough space surrounding the appliance while in use, as the appliance becomes very hot.
- DO NOT use abrasive cleaners on the unit or its accessories.
- ALWAYS Keep hands and face away from Electric Heater when unit is in use.
- Do not place metallic objects such as knives, forks, spoons and lids on the Electric Heater since it can get hot.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le S'Mores Maker n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Débrancher l'appareil [et laissez refroidir] avant [montage/démontage,] déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- N'utilisez pas cet appareil avec un cordon endommagé [câble de charge endommagé], une prise endommagée, ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 du lundi au vendredi, ou par courriel à support@bydash.com.
- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut

entraîner des dommages matériels ou même des blessures corporelles.

- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmêlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de

manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.

- Veillez à ce qu'il y ait suffisamment d'espace autour de l'appareil lorsqu'il est utilisé, car il devient très chaud.
- Nettoyez uniquement à l'aide d'un chiffon légèrement humide. N'utilisez pas d'agents nettoyants corrosifs. Laissez l'appareil sécher complètement avant de le ranger.
- Gardez TOUJOURS les mains et le visage éloignés du radiateur électrique lorsque l'appareil est en cours d'utilisation.
- Ne placez pas d'objets métalliques tels que des couteaux, des fourchettes, des cuillères et des couvercles sur le Chauffage Électrique car il peut devenir chaud.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Stainless Steel
Top Cover

Electric Heater
(inside)

Power
Switch

Detachable
Food Trays




Roasting Forks

ASSEMBLING THE S'MORES MAKER




- 1 Before first use, remove all packaging material and thoroughly clean the S'mores Maker (**Photo A**).
- 2 Attach the four Detachable Food Trays to the unit by sliding them into the grooves on the side of the S'mores Maker (**Photo B**).
- 3 Carefully tuck the Power Cord underneath the assembled Food Tray.

USING THE S'MORES MAKER

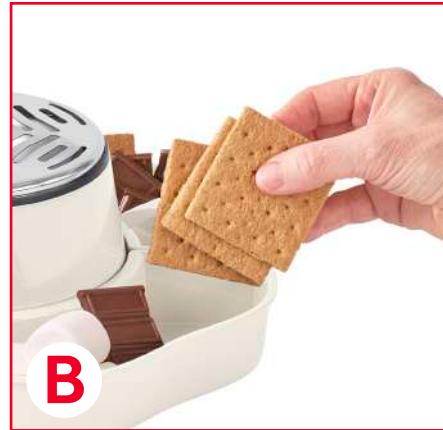

- 1 Place the S'mores Maker on a flat, stable surface near an electrical outlet in the area where you plan on eating your S'mores. Allow at least a foot of space around the unit to ensure proper ventilation.
- 2 Plug the appliance into an electrical outlet and switch the Power Switch to ON to begin preheating the S'Mores Maker (Photo A). Allow it to preheat for about 3-5 minutes.
- 3 While the unit is preheating, fill the Detachable Food Trays with marshmallows, graham crackers, chocolate, or other desired food items (Photo B).

USING THE S'MORES MAKER

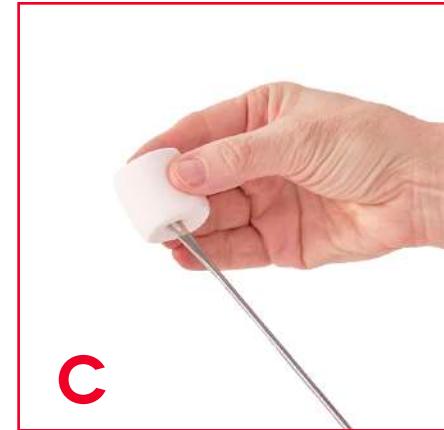

- 4 Carefully push marshmallows onto the tines of the Roasting Fork (Photo C). When ready to roast, use the handle of the Roasting Fork to position the marshmallow above the Heater, rotating frequently to ensure even heating (Photo D).



- 5 Once the marshmallow is roasted to desired doneness, it is ready to be served or assembled into a cookie sandwich (Photo E). To roast additional marshmallows, repeat the previous steps.
- 6 Once finished with the S'Mores Maker, switch the Power Switch to OFF (Photo F) and unplug from electrical outlet.



DO NOT overcook the marshmallow as it may melt and fall on the Top Cover, causing smoke, fire, and a stain mark. In the event any object or food item falls onto the Top Cover, flip the Power Switch to OFF and unplug the unit. Wait until the unit has completely cooled before cleaning.



Packaged marshmallows can often lose their shape. To ensure even heating, reshape them into a cylindrical form before placing them on the Roasting Fork for cooking.





CLEANING & MAINTENANCE



- Flip the Power Switch to OFF and unplug the unit from the electrical outlet then allow the unit to cool completely before handling or attempting to clean.
- Allow the unit to cool for at least 20 minutes before cleaning, as the Top Cover will be hot to the touch. Once the appliance has cooled, carefully remove the Top Cover from the S'mores Maker.
- To clean the Top Cover, Detachable Food Trays, & Roasting Forks, hand wash in warm, soapy water, then rinse thoroughly.
- Dry the S'Mores Maker, Detachable Food Trays, and Roasting Forks thoroughly before storage.
- **DO NOT** use abrasive cleaners or sponges on the appliance or its accessories.
- **DO NOT** place any part of the S'Mores Maker in the dishwasher. All accessories should be hand washed only.
- **DO NOT** submerge the unit in water as it is an electrical unit.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



CLASSIC CAMPFIRE S'MORES

Prep Time: 10-12 minutes • **Cook Time:** 5 minutes • **Serves:** 10-12

Ingredients:

Graham crackers

Milk or dark chocolate bars of choice

Large marshmallows

Directions:

1. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with graham crackers, chocolate bar pieces, marshmallows, and any other desired ingredients.
2. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
3. Assemble the s'mores by making a sandwich with the graham crackers, roasted marshmallow, and chocolate squares.
4. Gather round the "campfire" and enjoy!

Other Great S'mores Ideas:

Nut Butter S'mores: Spread a thin layer of nut butter on graham crackers and proceed as directed.

Chocolate Banana S'mores: Place slices of banana on top of chocolate square and proceed as above.

Raspberry S'mores: Spread a thin layer of raspberry jam on graham crackers and proceed as directed.





CHOCOLATE CHIP COOKIE NUTELLA® S'MORES

Prep Time: 10-12 minutes • Cook Time: 5 minutes • Serves: 10-12

Ingredients:

Chocolate chip cookies (storebought or homemade)
Nutella® hazelnut spread
Large marshmallows

Directions:

1. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with chocolate chip cookies, marshmallows, and any other desired ingredients. Keep the jar of Nutella® nearby.
2. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
3. Spread Nutella® on the flat side of the cookies. Assemble the s'mores by making a sandwich with the cookies and roasted marshmallows.
4. Gather round the "campfire" and go loco for cocoa!



SALTED CARAMEL S'MORES

Prep Time: 10-12 minutes • Cook Time: 5 minutes • Serves: 10-12

Ingredients:

Graham crackers
Milk or dark chocolate bars of choice
Large marshmallows
Jar salted caramel sauce

Directions:

1. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with graham crackers, chocolate bar pieces, marshmallows, and any other desired ingredients. Keep the jar of caramel sauce nearby.
2. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
3. Drizzle the roasted marshmallow with the caramel sauce. Assemble the s'mores by making a sandwich with the graham crackers, roasted marshmallow, and chocolate squares.
4. Gather round the "campfire" and enjoy this sweet and salty treat!



DASH MINI WAFFLE S'MORES

Prep Time: 10-12 minutes • **Cook Time:** 5 minutes • **Serves:** 10-12

Ingredients:

For Waffles:

- 1 cup flour
- 1 tablespoon sugar
- 2 teaspoons baking powder
- ¼ teaspoon salt
- 1 egg
- 1 cup milk
- 2 tablespoons melted butter


For S'mores:

- Milk or dark chocolate bars of choice
- Large marshmallows

Directions:

1. In a medium bowl, combine flour, sugar, baking powder, and salt. In a separate bowl, add egg, milk, and melted butter and whisk to combine. Add the wet ingredients to the dry and mix until just incorporated.
2. Preheat the Mini Waffle Maker and grease both cooking surfaces with a light coating of cooking oil. Pour ¾ cup of batter into the Waffle Maker and cook until crispy, about 3-4 minutes per waffle. Repeat with remaining batter.
3. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with the mini waffles, chocolate bar pieces, marshmallows, and any other desired ingredients.

4. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
5. Assemble the s'mores by making a sandwich with the mini waffles, roasted marshmallow, and chocolate squares.
6. Gather round the "campfire" and enjoy this waffly delicious treat!

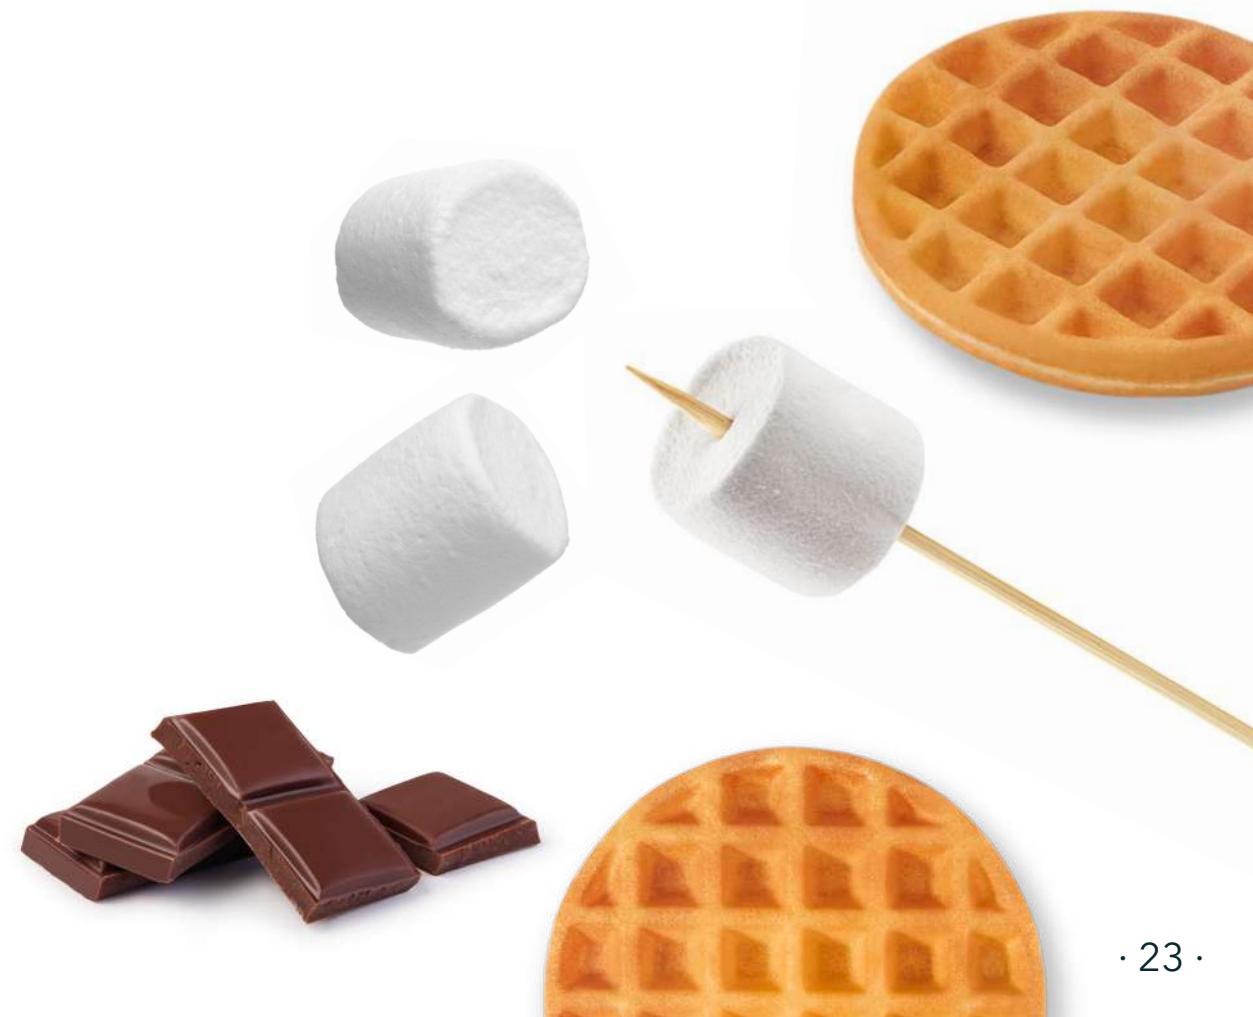



ROASTED BERRY S'MORES

Prep Time: 15-20 minutes • **Cook Time:** 5 minutes • **Serves:** 10-12

Ingredients:

Graham crackers	2-3 cups mixed berries, fresh or frozen
Milk or dark chocolate bars of choice	1 tablespoon sugar, optional
Large marshmallows	

Directions:

1. Preheat the oven to 400°F. Line a small roasting pan or rimmed cookie sheet with parchment paper. Add washed and dried berries and sprinkle on sugar. Roast for 10-12 minutes, or longer until soft and syrupy, but still holding their shape. Transfer to a serving bowl.
2. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with graham crackers, chocolate bar pieces, marshmallows, and any other desired ingredients. Keep roasted berries nearby.
3. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
4. Spread the roasted berries onto the graham crackers. Assemble the s'mores by making a sandwich with the graham crackers, roasted marshmallow, and chocolate squares.
5. Gather round the "campfire" and enjoy this berry delicious treat!



CANDIED BACON S'MORES

Prep Time: 10-12 minutes • **Cook Time:** 5 minutes • **Serves:** 10-12

Ingredients:

Graham crackers	6-8 bacon slices
Milk or dark chocolate bars of choice	3 tablespoons brown sugar
Large marshmallows	

Directions:

1. Preheat the oven to 400°F. Line a baking sheet with aluminum foil and add bacon strips. Sprinkle with brown sugar. Bake until crispy, about 20-25 minutes. Transfer to plate lined with paper towels to cool and drain.
2. Power on the S'Mores Maker and allow it to preheat for 5-7 minutes. While it's preheating, fill Food Trays with graham crackers, chocolate bar pieces, marshmallows, and any other desired ingredients. Keep cooked bacon nearby, tearing strips into smaller pieces if necessary.
3. Pierce a marshmallow with each Roasting Fork, securing it to the tines of the Fork. Roast marshmallows until desired doneness.
4. Top the roasted marshmallow with a piece of a bacon strip. Assemble the s'mores by making a sandwich with the graham crackers, roasted marshmallow, and chocolate squares.
5. Gather round the "campfire" and enjoy this savory s'more!



We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or support@bydash.com.



STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

COPYRIGHT NOTICES

All trademarks not owned by StoreBound that appear in the manual are property of their respective owners, who are not affiliated with StoreBound.

Nutella® name, characteristic logo, and jar are registered trademarks of Ferrero S.p.A.

REPAIRS

DANGER! Risk of electric shock! The Dash S'mores Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Specs: 120V~60Hz, 200W
Stock#: DSMR00101_20250218_V6



This product has passed food safety testing in accordance with FDA guidelines.





1-800-898-6970 | @bydash | bydash.com