 



EN LCD WEATHERSTATION ALARM CLOCK OPERATING INSTRUCTIONS

Thank you for your purchase of this quality clock. Please read these instructions carefully and keep in a safe place for future reference.


Display (fig 1)

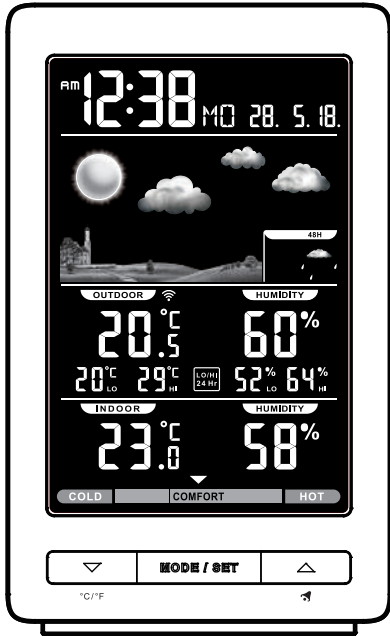

 
Back view (fig 2)

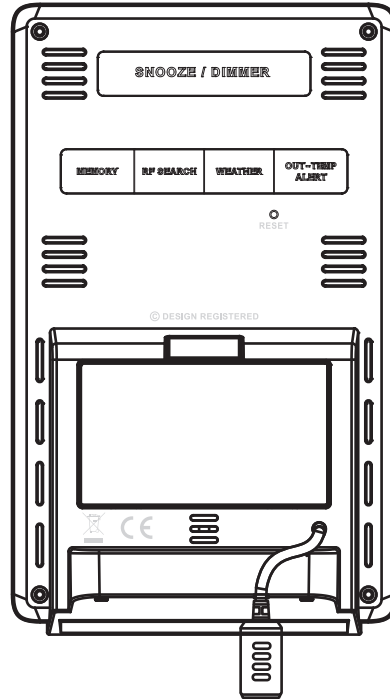

Outdoor Sensor (fig 3)

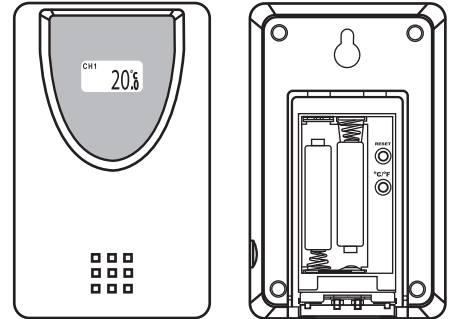

Weather Forecast (fig 4)

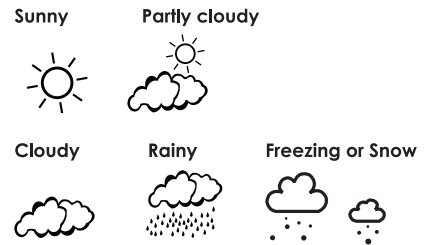

Connect to your USB charger (not supplied)

ACTIVATING THE OUTDOOR SENSOR

Insert 2 x AAA battery into the battery compartment, taking care to observe the polarity. The outdoor sensor will automatically start to transmit the temperature and humidity reading. The sensor should be securely mounted onto a horizontal surface in a dry and shaded area. The maximum transmission range is up to 70 meters from the clock. **Note:** Reset the sensor if it is moved to a new location. To select °C or °F display, press the °C /°F button at the back of the sensor.

ACTIVATING THE CLOCK

Remove the protective film from the LCD screen.

To activate the clock you can use either the battery or USB power.

Battery power: Insert 2 X AA batteries into the battery compartment, taking care to observe the polarity.

Note: On battery power the backlight will only light up for 5 seconds and the Alarm will not sound.

USB power: Insert the DC jack of the supplied USB lead into the back of the clock and connect other end to your USB charger (not supplied), now plug the charger into a standard household outlet.

Note: On USB power the backlight will light up continually. It is recommended to use USB power when setting the clock.

When the clock is activated the weather forecast icon will flash on the display, enter the current weather by pressing the ▲ or ▼ button. Press the WEATHER button to confirm the setting. The clock automatically starts searching for the signal from the outdoor sensor for 3 minutes. RF "📶" icon will start to flash.

Note: Press "RF SEARCH" button for 3 seconds to start or stop transmission manually.

Note: Always reset the clock if it is moved to a new location.

TO SET THE CLOCK

Press and hold the MODE/SET button for 3 seconds, the 12Hr will flash. Press ▲ or ▼ button to select between 12/24 format.

Press the MODE/SET button once again, the hour digits will flash.

Press ▲ or ▼ button to set the hour, ensuring AM/PM is set correctly.

Press the MODE/SET button once again, the minute digits will flash.

Press ▲ or ▼ button to set the minute.

Press the MODE/SET button once again, the seconds will flash.

Press the MODE/SET button once again, the year digits will flash.

Press ▲ or ▼ button to set the year.

Press the MODE/SET button once again, the month digits will flash.

Press ▲ or ▼ button to set the month.

Press the MODE/SET button once again, the date digits will flash.

Press ▲ or ▼ button to set the date.

Press the MODE button once again.

SETTING THE ALARM

In normal time, press the MODE/SET button twice and the display will show the Alarm time (AL), then press and hold the MODE/SET button until the hour will flash. Press ▲ or ▼ button to set the desired alarm hour, ensuring AM/PM is set correctly. Press the ALARM button once again, the minute digits will flash.

Press ▲ or ▼ button to set the minutes. Press the MODE/SET button to return to the normal time display.

TO TURN ON/OFF THE ALARM

Press the ▲ button once to turn ON/OFF the alarm. When the alarm is activated (🔔 icon will show). When the alarm sounds, press the SNOOZE/LIGHT button to stop the alarm. The alarm will sound again 5 minutes later. Press any other button to stop the snooze function.