

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, especially when children are present, basic precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after use and before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquids.
4. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
5. Use only in a dry area.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **Children should be supervised to ensure that they do not play with the appliance.**
2. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

3. The iron must not be left unattended while it is connected to an electrical outlet.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Conair.
5. The iron must be used and rested on a stable surface.
6. **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
7. Do not allow cord to touch heated surfaces. Do not pull or twist cord. Let appliance cool completely before emptying or putting away. Wrap the cord loosely around the iron when storing.
8. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
9. Never drop or insert any object into any opening.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. We recommend you do not use an extension cord to operate this appliance. If an extension cord is absolutely necessary, a 15 ampere-rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
12. Surfaces of this appliance are hot when in use. Do not let heated surfaces touch eyes or skin.

13. Do not place the soleplate directly on any surface or on the appliance power cord while the iron is hot or plugged in.
14. The plug must be removed from the electrical outlet before the water reservoir is filled with water.
15. Do not operate steam function without properly filling the water tank with water.
16. The iron should always be turned off before plugging in or unplugging from an outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
17. Burns could occur from touching hot metal parts, hot water, or steam. Use caution when turning a steam iron upside down to empty water, as there may be hot water in the reservoir.
18. If you need to clean the iron, unplug and allow to cool. Use a slightly damp cloth and wipe down the outside of the iron. DO NOT use cleaning agents or place the iron in water or cleaning fluids.
19. Do not hold hand in front of steam.
20. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.
21. Never steam or iron clothes that are being worn.
22. When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.

23. When placing the iron on its base, ensure that the surface on which the base is placed is stable.
24. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
25. Always disconnect the iron from the electrical outlet before filling the reservoir with water, emptying the water from the reservoir, and when the iron is not in use.
26. Close supervision is required for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.

SAVE THESE INSTRUCTIONS

IMPORTANT FOR HOUSEHOLD USE ONLY

DO NOT let children use the appliance.

DO NOT let untrained persons use the appliance without supervision.

NEVER immerse the iron, cable or plug in any liquids.

DO NOT leave the hot iron touching fabrics or inflammable surfaces.

DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the outlet when the appliance is not being used.

NEVER touch the appliance with wet or damp hands.

DO NOT use the power cord or the appliance in order to pull the plug out of the outlet.

DO NOT leave the appliance exposed to the weather (rain, sun, etc.).

DO NOT leave the iron without supervision when it is connected to the power supply.

DO NOT fill the reservoir with water before removing the plug from the outlet.

PLEASE NOTE!

Do not use chemical additives, scented substances or decalcifiers in the reservoir.

Failure to comply with the above-mentioned regulations will lead to the loss of warranty.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: Conair®

Model No.: GI500

Description: Steam Iron

Responsible Party: Conair LLC, 1 Cummings Point Road, Stamford, CT 06902 (203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

DATE OF ISSUE: 10/18/2022



OPERATING INSTRUCTIONS

PREPARING FOR FIRST USE

Before first use, remove all labels from the soleplate and housing. Plug iron in. Turn the iron on, allow to heat up, then turn the iron off. Unplug iron.

When using the iron for the first time, you may notice a slight emission of smoke and hear some sounds made by the expanding plastics. This is quite normal and will stop after a short time. We also recommend passing the iron over an ordinary cloth before using it for the first time.

This GlideLite Iron features advanced One-Temp technology. No settings are needed. The iron is safe and effective on all fabric types.

FILLING THE RESERVOIR

1. The reservoir can be filled with ordinary tap water. But distilled or demineralized water is preferred.
 - a. Open the water reservoir door.
 - b. Using a clean measuring cup, slowly fill the reservoir until the water reaches the max fill indicator. **DO NOT OVERFILL.**
 - c. Close water reservoir door.
 - d. Wipe off any water that may have spilled on the outside of the iron with a soft clean cloth.
2. Set the iron on a stable, flat surface. We recommend using a quality ironing board as the pressing surface. Be sure to give yourself enough room to maneuver the iron when pressing.

GLIDELITE[™] PROFESSIONAL IRON



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR[®]
All GI500 Models

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Service Center
Conair LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For information on any Conair[®] product, call **1-800-3-CONAIR** or visit us on the web at **www.conair.com**


Please register this product at **register.conair.com**

©2023 Conair LLC
Glendale, AZ 85307
Made in China

23PA086205

IB-17891

GET TO KNOW YOUR GLIDELITE PROFESSIONAL SERIES 1700 WATT IRON (MODEL GI500)

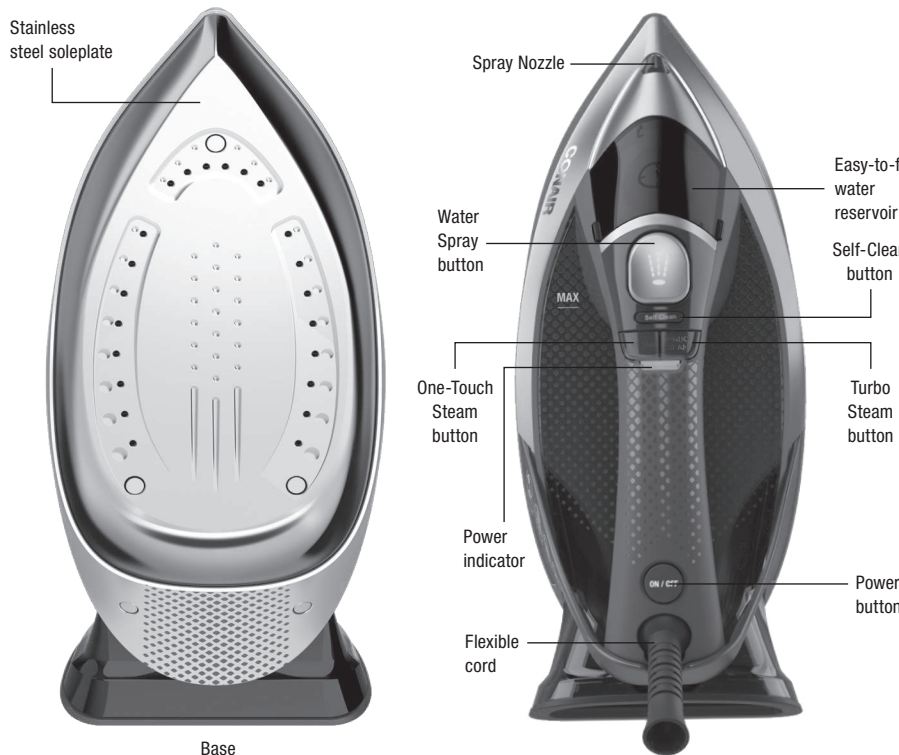

SELF-CLEANING DIRECTIONS

- Fill the reservoir up to the maximum level indicated and hold the iron horizontally over the sink.
- Plug in the iron and press the Power button. A blue light will blink for 30 seconds and then turn solid. Make sure the Steam button is off and remains off.
- Hold Self-Clean button for 3 seconds to enter the self-clean mode.
- Blue light will flash for approximately 2 minutes while in self-cleaning mode.
- When blue light is constant, cleaning has finished and the unit has entered normal mode.
- Turn iron off, unplug from outlet. When soleplate has cooled, you may clean it with a damp cloth.

HOW TO STORE

- Disconnect the plug of the iron from the outlet.
- Let the iron cool down completely.
- Empty the water reservoir by turning the iron upside down over a sink and gently shaking it.
- Always put the iron away in a vertical position.

ANTI-DRIP SYSTEM

With the Anti-Drip System, you can perfectly iron even the most delicate fabrics. It prevents water from dripping out of the soleplate when the temperature is too low.

DRY IRONING

To iron without steam, do not press the One-Touch Steam button.

SPRAY FUNCTION

Make sure that there is water in the reservoir. (See Filling the Reservoir.) Press the Water Spray button slowly for a dense spray or quickly for a vaporized spray.

WARNING: For delicate fabrics, we recommend moistening the fabric beforehand using the spray function or putting a damp cloth between the iron and the fabric.

To avoid staining, do not use the spray on silk or synthetic fabrics.

CLEANING

Please Note: Before cleaning the iron in any way, make sure that the appliance plug is not connected to the outlet.

Any deposits or starch residue left on the soleplate can be removed using a damp cloth or a nonabrasive liquid detergent after the iron has cooled.

Avoid scratching the soleplate with steel wool or metallic objects.

The plastic parts can be cleaned with a damp cloth, then wiped with a dry cloth.

SELF CLEANING

The self-cleaning feature cleans inside the soleplate, removing impurities. We recommend using this function every 10–15 days.

3. Plug in the iron. Make sure that no other high-wattage appliances are plugged into the same circuit.

4. Press the Power button. A blue light will blink for 30 seconds while heating. The iron is ready to use when blue light turns solid.

5. There are no temperature or fabric type settings to select. One-Temp technology safely removes wrinkles with one setting thanks to powerful steam.

6. If steam is desired, press the One-Touch Steam button. For stubborn wrinkles, press the Turbo Steam button to get a turbocharged amount of steam. The iron will only release steam when it's in the horizontal position.

7. After use, turn iron off, unplug, and let it cool for 10 minutes before putting it away.

3-WAY AUTO OFF

As a safety feature, your iron will turn off automatically if left in the upright position and not moved for 8 minutes. It will also turn off automatically if left in the horizontal or left or right side positions and not moved for 30 seconds. In these instances, the blue light will flash. Only when the iron is held horizontally can steam be released. When the unit is held vertically, the steam function will shut off automatically and the white steam light will flash.

Please Note:

DO NOT use chemical additives, scented substances or decalcifiers in the water reservoir. Failure to comply with this regulation will lead to the loss of warranty.