




Russell Hobbs

A BRITISH ICON SINCE 1952

27730

 www.russellhobbs.com

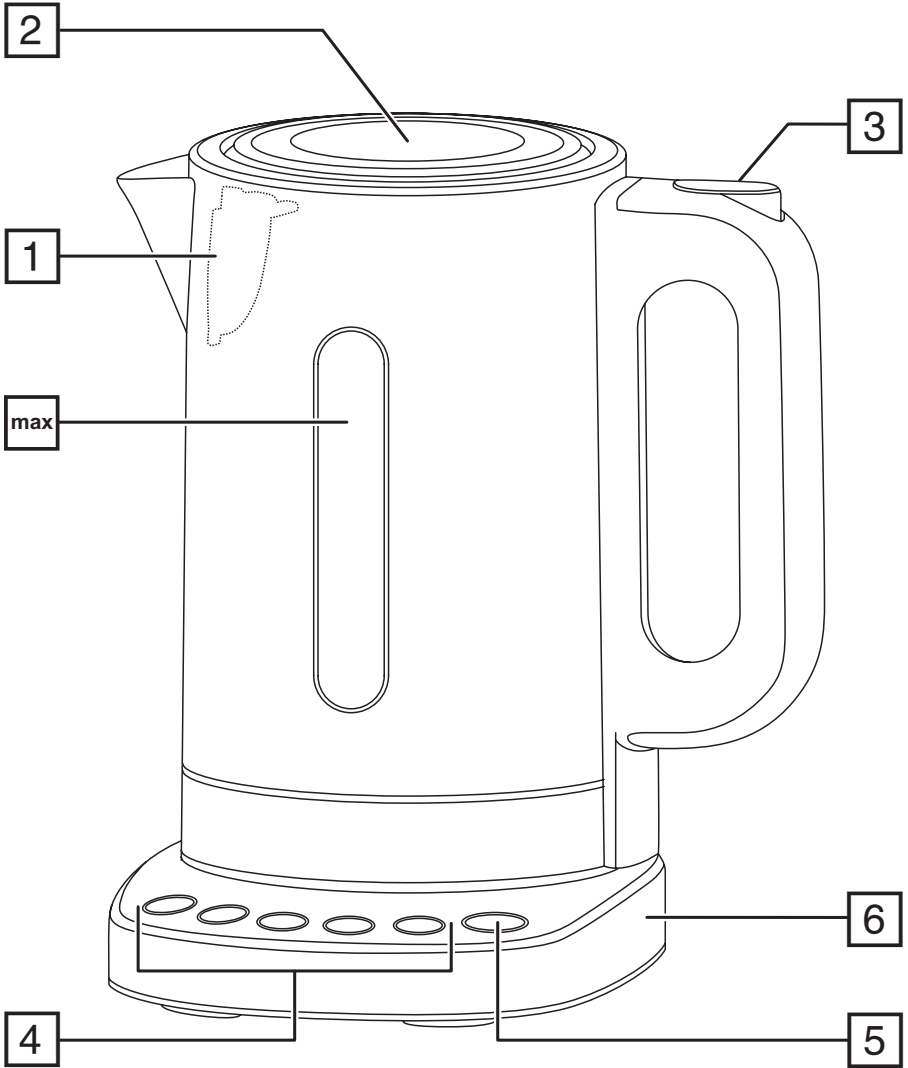

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8 years.

 Parts of the appliance will get hot during use.

If you overfill, the kettle may spit boiling water.

Use the kettle only with the stand supplied (and vice versa).

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

Avoid spillage on the stand/connector.

The surface of the heating element is subject to residual heat after use.

Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.

 Do not immerse in any liquid.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - farm houses.
- Don't use the kettle for any purpose other than heating water.
 - Don't operate the appliance if it's damaged or malfunctions.

PARTS

- | | |
|-----------------------|-------------------------------|
| 1. Filter | 4. Temperature select buttons |
| 2. Lid | 5. Keep warm button |
| 3. Lid release button | 6. Power base |

BEFORE USING FOR THE FIRST TIME

Fill to max, boil, discard the water, then rinse. Do this twice to remove any manufacturing dust, etc.

FILLING

Caution: If the kettle has just boiled it will be full of steam. Keep hands clear as steam will escape from the kettle when opening the lid.

1. Remove the kettle from the power base.
 2. Push the lid release button.
 3. Fill the kettle with at least 2 cups of water.
 4. Do not fill above the 'max' line. If overfilled, boiling water may be ejected from the spout.
 5. Close the lid.
 6. Check the lid is fully closed or the kettle may not switch off when it boils.
-

USING YOUR KETTLE

1. Plug the power cord into the wall power outlet and switch it on, all temperature buttons will illuminate.
 2. Place the kettle on the power base – take care not to spill any water.
 3. Press the desired temperature button.
 4. The button will flash and the kettle will heat up simultaneously.
 5. When the water reaches the set temperature, the kettle will switch itself off, and the flashing light will change to solid light.
- To switch off manually, press the illuminated temperature button or lift the kettle from the power base and replace it.
 - Note: If activated, it is necessary to deactivate the keep warm function prior to switching off.

TEMPERATURE SETTINGS

- Press the button for the temperature you desire.
- The temperatures available are: 100°, 95°, 90°, 80° and 70° (°C).
- Note: When selecting temperatures below 100, you may hear the element switching on and off as your kettle works to control the temperature accurately.
- Once the kettle reaches the set temperature, the kettle will beep twice to indicate it is ready.

KEEP WARM

NOTE: The keep warm function only operates for temperatures 70°, 80°, 90° and 95°, and does not operate with 100°C to prevent the kettle from boiling dry.

1. Press the Keep Warm button after selecting the desired temperature, or during the heating cycle.
 2. The Keep Warm button will illuminate and your kettle will maintain the water at the selected temperature for up to 2 hours.
 3. During this time the kettle may cycle on and off to maintain the temperature at the desired setting.
- To deactivate the keep warm function, press the Keep Warm button. The function will be deactivated and button illumination will switch off.

SLEEP MODE

If the kettle is inactive, and you don't touch the controls for 1 minute, the lights will go out to save power. To wake the kettle, press any of the controls, or lift off and replace the kettle from the power base, all temperature buttons will illuminate with a solid light.

OPTIMUM TEMPERATURES FOR TEAS AND COFFEES

The temperature of the water used in the preparation of different types of tea and coffee is important for extracting optimal flavour. The following can be used as a guideline.

Tea Type	Temperature °C	Brewing time (min)
Black	90 – 100	3 - 5
Oolong	70 – 80	2 – 3
White tea	70 – 80	1 – 3
Green tea	70 – 85	1 - 3
Rooibos	90 – 100	5 - 6
Hibiscus	70 – 75	5 - 7
Pu-erh	80 – 100	2 - 5
Mate	90 – 100	5 - 6
Herbal/Fruit	90 – 100	3 - 5
Coffee	Temperature °C	Brewing time (min)
Instant coffee	85 - 95	-
Filter ground coffee	80 - 90	-

GENERAL

Note: When you lift your kettle, you may see moisture on the stand. This is normal and is caused by the steam used to switch your kettle off automatically.

BOIL DRY PROTECTION

If your kettle boils dry, a safety cut-out device will automatically switch it off. If this happens, unplug your kettle and allow it to cool down until the cut-out resets itself. Allowing your kettle to boil dry will shorten the life of the element.

CARE AND MAINTENANCE

1. Unplug the stand, and let the kettle cool before cleaning.
2. Wipe all surfaces with a clean damp cloth.
3. Open the lid.
4. Using the tab at the top of the filter pull the filter up and out of its housing.
5. Rinse the filter under a running tap while brushing with a soft brush.
6. Turn the filter so the tab at the top of the filter faces the rear of the kettle.
7. Slide it down into its guides until the tab clicks into place.
8. Close the lid.

Descale regularly, (at least monthly).

Descale the appliance with a proprietary descaler. Follow the instructions on the package of descaler.

Products returned under guarantee with faults due to scale will be subject to a repair charge.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

 **ONLINE**

www.russellhobbs.com for more products

BEAUTIFULLY BRITISH IDEAS
SINCE

1952