

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.

- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not open the filling cap during use.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories other than those supplied with this appliance.
- Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.
- Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.
- Always unplug the appliance after use and allow to cool fully before any cleaning or user maintenance.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: The appliance emits very hot steam; always exercise extreme caution during use. Hot surface – do not touch the hot section or heating components of the appliance.



WARNING: Danger of scalding. Keep the appliance away from flammable materials.

UK CE

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.

CD151124/MD000000/V1

Troubleshooting

Problem	Possible cause	Possible solution
The iron will not heat up.	The iron is not connected to the mains power supply.	Plug in and switch on the iron at the mains power supply.
	The temperature is set too low.	Increase the temperature using the temperature control dial. Always follow the fabric's care instructions.
	The fuse has blown.	Replace the fuse on the plug with one of the same rating.
No steam is being emitted from the iron.	There is insufficient water in the water tank.	Fill the water tank following the instructions in the section entitled 'Filling the water tank' .
	The pump is still drawing water from the water tank.	Press and hold the steam control trigger a while longer to allow the water to pump into the iron; this should take approx. 1 minute.
Excess water is dripping from the ceramic soleplate.	There is condensation inside the ceramic soleplate.	Allow the iron to heat up to the '●●●' heat setting before using any steam.
The cord makes a buzzing noise.	The cord is tangled.	Untangle the cord.
The temperature indicator light does not illuminate.	The fuse has blown.	Replace the fuse with one of the same rating.
	The iron is not connected to the mains power supply.	Plug in and switch on the iron at the mains power supply.
The iron is emitting dirty liquid.	The iron hasn't been cleaned recently or regularly enough.	Clean the iron by following the instructions in the section entitled 'Care and maintenance' .





WARNING: To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

Specifications

Product code: BEL02131
 Input: 220–240 V ~ 50–60 Hz
 Output: 3000 W
 Water tank capacity: 2.5 L
 Power consumption (off mode): 0.48 W

User manual

Steam iron

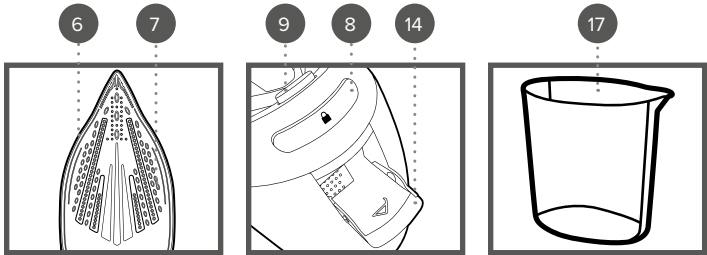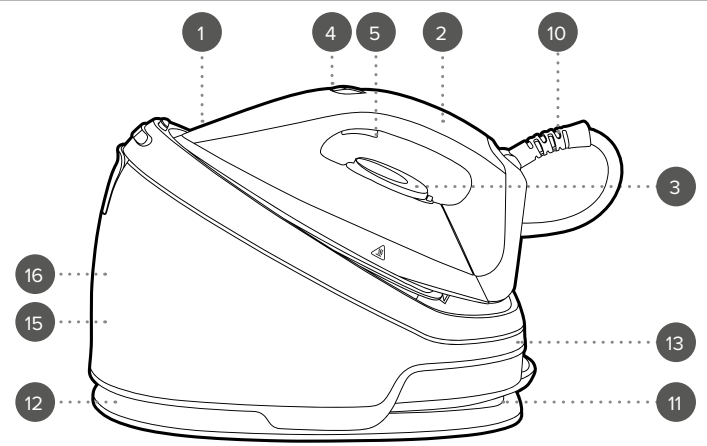

- 1. Steam iron
- 2. Steam iron handle
- 3. Control dial
- 4. Temperature indicator light
- 5. Steam control trigger
- 6. Ceramic soleplate
- 7. Steam holes
- 8. Safety lock button
- 9. Safety unlock button
- 10. Cord guard
- 11. Cord storage
- 12. Base unit
- 13. Water tank
- 14. Water tank cap
- 15. Water tank max. fill mark (2.5 L)
- 16. Water tank min. fill mark (1 L)
- 17. Measuring cup



To register for your extended guarantee, scan the QR code or visit guarantee.uppic.com/beldray and register your product within 30 days of purchase. For any further queries, visit www.beldray.com.

Manufactured by:
 Ultimate Products UK Ltd.,
 Victoria Street, Manchester OL9 0DD. **UK.**
 Ultimate Products Europe Ltd.,
 19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.
 ©Beldray trademark. All rights reserved.
 CD250425/MD000000/V1



Please retain instructions for future reference.

Dos and don'ts


- DO:**
Only use this appliance rested on a stable surface.
Always hold the appliance by its handle.
- DON'T:**
Overfill the water tank past the max. fill mark.
Iron clothing while it's being worn.
Press the steam trigger when the control dial is set to the '●' or '●●' heat setting, as this could water leakage from the soleplate.

Care and maintenance

- Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply, drain the water tank and allow it to cool sufficiently. To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft damp cloth and dry thoroughly.
- STEP 1:** Drain the remaining water from the water tank to prevent it from leaking during cleaning.
- STEP 2:** Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.
- STEP 3:** If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.
- STEP 4:** To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Anti-calc filter

The water tank has a built-in anti-calc filter to prevent calcium and limescale build-up. Calcium build-up, which is prominent in areas with hard water, can hinder performance and lower the lifespan of the iron. This is an automatic feature which is permanently activated.




NOTE: The anti-calc filter is built in and does not need replacing.

Instructions for use

Before first use


- Before connecting to the mains power supply, wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly. To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.
- STEP 1:** Plug in and switch on the iron at the mains power supply, place the iron onto the cloth and then hold down the steam control trigger for approx. 15–20 seconds.
- STEP 2:** Repeat this 2–3 times, waiting approx. 5 seconds in-between; this will remove any impurities from the ceramic soleplate.




NOTE: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

Filling the water tank

- STEP 1:** Check that the iron is switched off and unplugged from the mains power supply, with the control dial set to the 'MIN' position.
- STEP 2:** Open the water tank cap.
- STEP 3:** Fill a suitable measuring vessel with water and then carefully pour the contents into the water tank.



CAUTION: Do not let the water fall below the min. fill mark. Do not overfill the water tank.




WARNING: Do not fill the water tank with hot water. Never add aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.


Using the steam iron

Ironing with steam


- The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.
- STEP 1:** Fill the water tank following the instructions in the section entitled 'Filling the water tank'.
- STEP 2:** Plug in and switch on the iron at the mains power supply.
- STEP 3:** To increase the temperature of the iron, rotate the control dial in a clockwise direction until the desired heat setting is reached. Reduce the temperature by rotating the control dial in an anticlockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the control dial is set to the '●●●' heat setting.
- STEP 4:** To iron with steam, press and hold the steam control trigger. It may take up to 1 minute for water to be drawn from the water tank and for the iron to produce steam.
- STEP 5:** After use, rotate the control dial to the 'MIN' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.



NOTE: Allow the iron to fully heat up before pressing the steam control trigger; not doing so may cause water to leak from the ceramic soleplate. Rest the iron on the base unit when not in use. The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light. The temperature indicator light will cycle on and off during use to regulate the temperature.



CAUTION: The cord will become very hot during use; do not touch it.




WARNING: Do not use the iron on any area of fabric for long periods of time, as this will damage the fabric.

Ironing without steam

- For removing creases from more sensitive fabrics, try ironing without steam.
- STEP 1:** Plug in and switch on the iron at the mains power supply.
- STEP 2:** To increase the temperature of the iron, rotate the control dial in

- a clockwise direction until the desired heat setting is reached. Reduce the temperature by rotating the control dial in an anticlockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use.
- STEP 3:** Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.
- STEP 4:** After use, rotate the control dial to the 'MIN' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.



NOTE: Always make sure that the water tank is filled to the min. fill mark even when ironing without steam to prolong the iron's life.

Vertical steam ironing

- STEP 1:** Hang up the item to be vertically steamed.
- STEP 2:** Fill the water tank following the instructions in the section entitled 'Filling the water tank'.
- STEP 3:** Plug in and switch on the iron at the mains power supply.
- STEP 4:** Rotate the control dial to the '●●●' heat setting.
- STEP 5:** Hold the iron approx. 20 cm away from the item and press the steam control trigger for a short burst of steam, or hold the steam control trigger for prolonged, continuous steaming.

Ironing guide

Fabric type	Temperature control dial setting	Is steam ironing possible?
Nylon, synthetic (e.g. acetate, acrylic, viscose, polyamide, polyester...)	●	NO
Wool, silk	●●	NO
Cotton, linen	●●●	YES

Hints and tips

- Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.
- The temperature of the iron is hottest when it has initially heated up and will therefore need time to stabilise. Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.
- Before each use, check the care labels on the fabrics to be ironed so that the correct temperature is selected.

Storage

- Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place. Wrap the cord loosely around the iron; never wrap it tightly, as this could cause damage. Position the iron on the rubber support on the base unit; this will help to prevent the ceramic soleplate from getting scratched. Lock the iron into place using the safety lock when storing; when the iron is cool, pull this down to secure the iron onto the base unit.