

Blue Pure 311 Auto/411 Auto

User Manual

Please read this user manual carefully and keep it for future reference.
The latest version of this user manual can be found on www.blueair.com

Note: There may be local variations of these models.

Product name: Regulatory model number:

311 Auto	3431101000
411 Auto	3231101000

Content

Blue Pure 311 Auto/411 Auto	4
Safety instructions	6
Get started	8
Filters	11
Care and maintenance	15
Disposal and recycling	17
Help and support	17
Warranty information	17
Specification	18
Regulatory information	19

Blue Pure 311 Auto/411 Auto

 
Blue Pure air purifiers are available in two models. All models have a pre-filter and a HEPASilent™ main filter to purify air. All Blue Pure models have control functions and a built in sensor.

The air purifier is mainly composed of a motor, a fan and filters. The air purifier removes contaminants from the air in a room to improve indoor air quality.

You can change the air purifier settings at any time, using the control panel on the air purifier

Recommendations for best performance

- Use the air purifier in a room that does not exceed the room size recommendation.
- Place the air purifier in a location where air can circulate freely in, out and around the air purifier.
- Do not place the air purifier closer than 10 cm (4 inches) to another object.
- During operation, keep doors and windows in the room with the air purifier closed.
- Change the main filter when the filter replacement indicator appears on the control panel.
- Follow the maintenance instructions in this user manual.

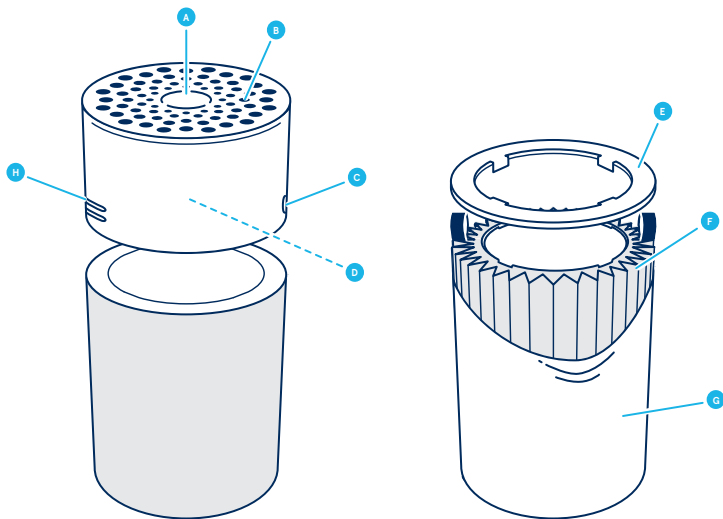

A Touch button

B Air outlet

C Air quality indicator

D Fan and motor

E Filter shelf ring

F Main filter (Particle + Carbon filter)

G Pre-filter

H Air quality sensor

I Power cable (not in picture)

J User Manual (not in picture)

Safety instructions

Blue Pure 311 Auto/411 Auto air purifiers are electrical appliances for indoor use only, take the necessary precautions to reduce the risk of fire, electric shock or injury.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the power supply before maintenance.
- If your Blueair appliance is found to be defective, we will replace it with the same or a similar model at no cost, per the warranty terms. Please use caution attempting repairs yourself, as this presents the danger of electrical shock or injury.
- Ensure that the power cable and the power plug are not at risk of getting damaged.
- If the appliance is damaged or malfunctions, turn it off, disconnect it from the power supply and contact Blueair.
- The power plug must be firmly inserted in the power socket.
- When disconnecting the unit from the power supply, do not pull on

 
the power cord, pull on the power plug.

- Use the power cable provided with your Blueair air purifier to plug directly and firmly into an appropriate, electrical outlet.
- Do not use an extension cord or a power strip. Refer to the rating label on your appliance.
- Do not alter the power plug in any way. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet.
- Do not use the included power cord for anything else but the appliance.
- Do not allow objects to enter or block the air inlets and air outlets as this can cause electric shock or damage the appliance.
- Do not place any objects on top of or directly against the appliance.
- Do not sit on, stand, climb onto or hang from the appliance.
- Keep the appliance, including the power cable, at a safe distance from heated surfaces and open fire.
- Keep the appliance and power plug away from water and other liquids.
- Keep the appliance and power plug away from chemicals such as pesticides and deodorants.
- Place the appliance on the floor. The appliance must be placed on a stable surface.
- Do not use the appliance outdoors or in wet environments such as bathrooms, laundry rooms or pool areas.

Get started


Step 1

Plug the power cable into a wall outlet.

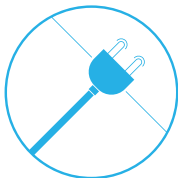

Step 2

 Press the button to turn the air purifier on and adjust the fan speed mode.

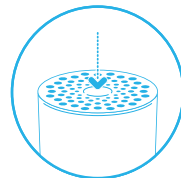

On/Off and fan speed controls

Available settings are: Auto, Night, Everyday, Boost and Off.

The indicator lights on the touch button indicate the selected fan speed. The lights automatically dim down completely 5 seconds after pressing the touch button, indicating a deactivated fan speed control mode. Press the touch button once to reactivate on/off and fan speed control. The indicator lights light up and you can adjust the fan speed mode again.

 
Autostart

The autostart feature automatically restarts the air purifier at the last set speed if it has been unplugged, used with a power switch timer, or if a power failure occurs.

Auto mode


In auto mode the air purifier automatically controls the airflow based on air quality information from the sensor.

On/Auto mode

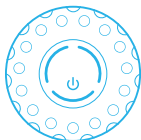


Press once to turn the unit On and to set it to Auto mode.

 Night mode

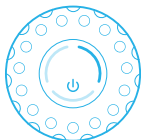


Press twice to set to Night mode (low fan speed)

 Everyday mode

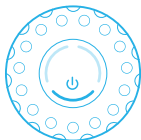


Press three times to set to Everyday mode (medium fan speed).

 Boost mode

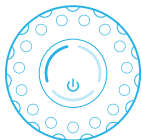

Press four times to set to Boost mode (high fan speed).

 Off

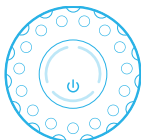

Press five times to turn the unit Off.

Air quality information

The air quality levels for particulate matter (PM) are indicated using a color scale on the air quality indicator. The air quality indicator is completely dimmed in Night mode.

PM2.5, Particulate matter, particles with diameter of size 2.5 micrometers or less.

Air quality level (PM 2.5)

	Polluted
	Moderate
	Good

Filters

The air purifier is delivered with a fabric pre-filter and a main filter. The filters purify the air from both particles and gases. For best performance, clean the pre-filters regularly and change the main filter when the air purifier indicates filter change. For best performance, clean the pre-filters regularly and change the main filter when the air purifier indicates filter change.

To find the right main filter for your air purifier, use the Blueair app or visit www.blueair.com. The model number of your air purifier can be found on the rating label on the air purifier.

Important! Always turn off and disconnect the appliance from the power supply before changing filters, cleaning or carrying out maintenance procedures.

 
Blueair filter subscription program

Use the Blueair app or visit www.blueair.com to sign up for the Blueair filter subscription program. (Not available in all markets)

Button control functions


Change filter

When the indicator light turns red (after 6 months of operation) you should change the main filter.

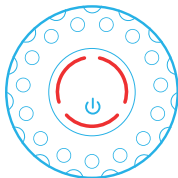

Filter replacement indicator

 Press the button down for 7 seconds to reset the filter replacement indicator.

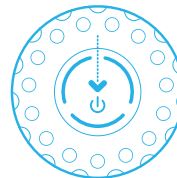


Clean and change the pre-filters

For best performance, clean the pre-filter regularly. Vacuum the exterior of the fabric pre-filter with a soft brush attachment to remove dust. If the pre-filter requires a deeper clean, wash it on a gentle, low-temperature cycle in the washing machine.

Important! Press the Velcro strips together on the pre-filter before machine wash.


Step 1

 Turn the unit off and unplug it.

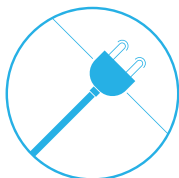


Step 3

 Remove the top cylinder from the unit.

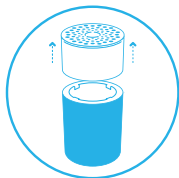


Step 5

 Wash the pre-filter in the washing machine, according to instructions on the pre-filter's label.

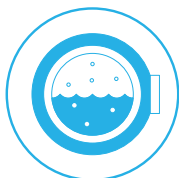


Step 7

 Carefully push the top cylinder down, at the same time rotating it clockwise to secure it back into the lock.

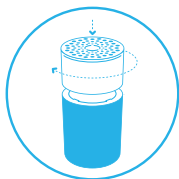


Step 2

 Carefully push the top cylinder down while rotating counterclockwise to unlock.

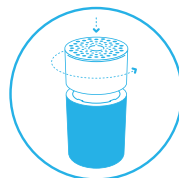


Step 4

 Open the pre-filter panel and remove the pre-filter.

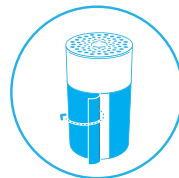


Step 6

 Place the pre-filter back onto the unit. Adjust the pre-filter and the panel to hide the power cord in the back.

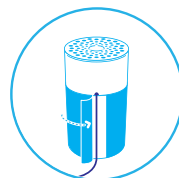

Step 8

 Plug in the unit.

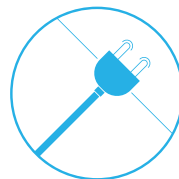


Change the main filter

When changing the filter, vacuum any dust that may have accumulated inside the unit.


Step 1

 When the indicator light glows red, it's time to change the main filter.

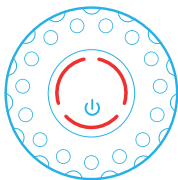


Step 2

 Turn the unit off and unplug it.

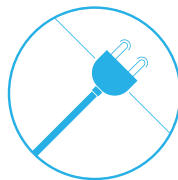


Step 3

 Carefully push the top cylinder down while rotating counterclockwise to unlock.

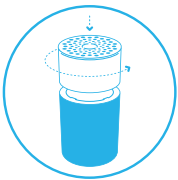

Step 4

 Remove the top cylinder from the unit.

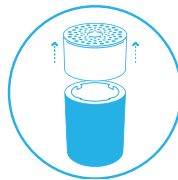


Step 5

Open the pre-filter panel and remove the pre-filter.




Step 6

 Carefully remove the filter shelf ring.

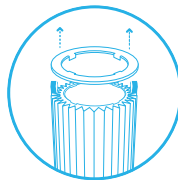


Step 7

 Grip the filter handles and pull upwards to remove the main filter from the inner structure.

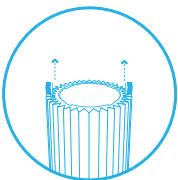


Step 8

 Position the new main filter onto the inner structure. The filter handles should face upwards.

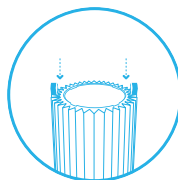


Step 9

 Press the filter shelf ring firmly into position above the main filter. The filter shelf ring protects the top edge of the main filter from damage.

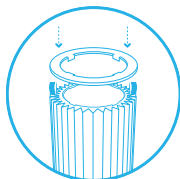

Step 11

 Carefully push the top cylinder down while rotating clockwise to secure the lock.

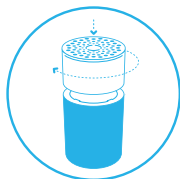


Step 13

Press the touch button for a duration of 7 seconds to reset the filter replacement timer.


This lets the air purifier know that you have changed the filter.

 The indicator light flashes for 4 seconds, and then changes from red to white.

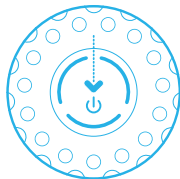


Step 10

 Place the pre-filter back onto the unit. Adjust the pre-filter and the panel to hide the power cord in the back.

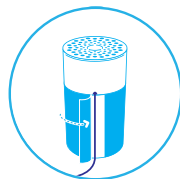

Step 12

 Plug in the unit.

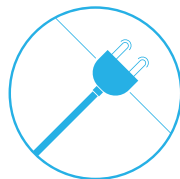

Care and maintenance

General

- Disconnect the air purifier from the power supply before maintenance.
- Do not allow foreign objects to enter the air inlets or air outlets. This may cause electric shock or damage the air purifier.
- Never clean with gasoline, chemical solvents or corrosive materials as these agents may damage the air purifier.
- Make sure the air purifier is completely dry before connecting it to power.
- Do not wash the main filter. The main filter is not washable or reusable.

Cleaning

- Wash the pre-filter according to the instructions on the pre-filter's label or vacuum the pre-filter with a soft brush attachment.
- Wipe the exterior of the air purifier with a soft, clean, damp cloth.
- Clean and check the power cable and power plug for wear or damages.
- Clean the sensor when changing the main filter.

 
Clean the air quality sensor

The inlet for the air quality sensor is located at the back of the air purifier.

Important! Do not use fingers or any unrecommended objects to clean inside the sensor inlet.


Step 1

Turn the unit off and unplug it.

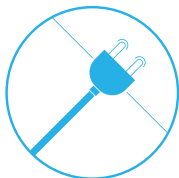


Step 3

 Remove the top cylinder from the unit.

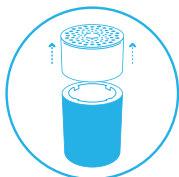


Step 5

 Gently clean the sensor with a cotton swab, and attach the sensor lid

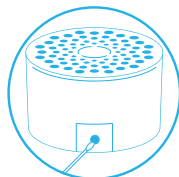


Step 7

 Plug in the unit.

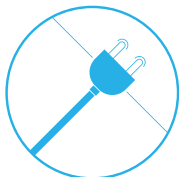

Step 2

 Carefully push the top cylinder down while rotating counterclockwise to unlock.

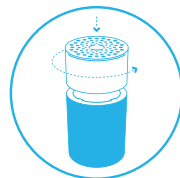


Step 4

Press the button on the inside of the unit to open the lid covering the sensor and remove the lid.



Step 6

 Carefully push the top cylinder down while rotating clockwise to secure the lock.

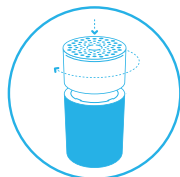

Disposal and recycling

This air purifier should be recycled as electronic waste and the filter recycled as plastic according to local regulations. If you have questions regarding the disposal of this air purifier, please contact your local authorities or Blueair dealer and ask for the correct method of recycling.

Help and support

If you have questions about your product, please visit www.blueair.com or contact your local Blueair retailer.

To contact Blueair for personalized support, please visit www.blueair.com/customer-support

Warranty information

For warranty conditions, please visit www.blueair.com/warranty

Warranty and returns

If you purchased the air purifier at one of our authorized retailers, please contact the same store to request assistance.

Specifications

	Blue Pure 311 Auto	Blue Pure 411 Auto
Input Power, Frequency	100-240V 50/60Hz	100-240V 50/60Hz
Power consumption/ Rated input power	3-35W	2-10W
Sound level (min/max) ¹	23-53 dB	18-48 dB
Recommended room size ²	36 m ² (388 ft ²)	17 m ² (190 ft ²)
CADR Smoke ²	250 cfm (425 m ³ /h)	123 cfm (210 m ³ /h)
CADR Dust ²	250 cfm (425 m ³ /h)	107 cfm (181 m ³ /h)
CADR Pollen ²	244 cfm (415 m ³ /h)	96 cfm (163 m ³ /h)

¹ Sound pressure according to GB/T18801 and GB4214.1

² According to ANSI/AHAM AC-1-2019

Regulatory information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.