



cüraa

Electric Pepper Mill

O W N E R ' S G U I D E

By **YFL home**

THANK YOU FOR PURCHASING

Electric Pepper Mill



REGISTER YOUR PURCHASE



curaahome.com



+91 7948223620



Scan QR code using mobile device

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____

(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Battery:	300 mAh
Voltage:	3.7 V
Wattage:	25 W
Motor:	DC
Charging Port:	C Type
Charging Time:	2 Hours
Working Time:	15 mins
Capacity:	110 mL
Model No.:	CUEPMBL02

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

 
 
IMPORTANT SAFEGUARD

HOUSEHOLD USE ONLY

BEFORE USING FOR THE FIRST TIME

- 1** To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.
- 2** Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.
- 3** Use for pepper and salt only, please do not use for others purposes.
- 4** Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- 5** Keep body parts (e.g. finger) and utensils away from the grinding head to avoid damage. Please hold the grinder tightly when using.
- 6** Keep this product away from children.
- 7** Do not dismantle the product by yourself, or otherwise warranty will be invalid.

GETTING TO KNOW YOUR ELECTRIC FROTHER

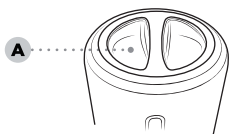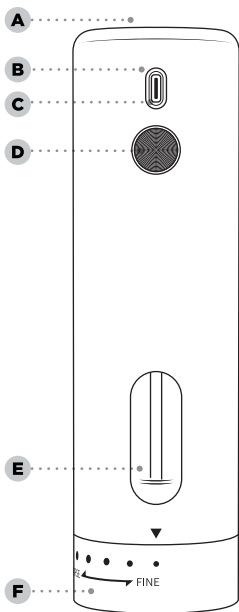

A Container Cover

B Indicator Light

C Charging Socket

D On/Off Button

E Container

 
F Adjustable Coarseness Settings

G Type-C Charging Cable



HOW TO CHARGE

- 1** Connect the Type-C charging cable with an adapter, plug the adapter into an electric socket, then connect the charging cable to the Type-C interface at the front of the pepper grinder.
- 2** While charging, the indicator light remains on to confirm proper charging
- 3** The indicator light stops lighting when the battery is fully charged.
- 4** It takes about 2 hours to fully charge the battery.

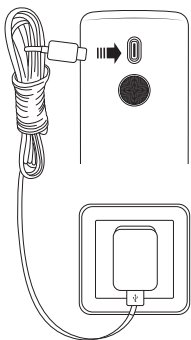


NOTE: Adapter not Included

⚠ CAUTIONS


- 1** This is a rechargeable lithium-Ion battery product, when not in use it is recommended to charge every three months to ensure service life of the battery.
- 2** Adapter is not included with this product. Charge with UL/GS or equivalent safety approved adapters with output voltage of 5V.
- 3** Before connecting to the power source, ensure the adapter, charging cable plug, and the charging port on the device are completely dry.
- 4** Always disconnect the device from the power supply if it is to be left unattended.
- 5** Before each use, check that the appliance and cord are in good condition. Never use the appliance if the cord is damaged.

HOW TO USE

 
- 1 Hold the grinder tightly, and switch the container cover to open according to the indication icons. Put pepper or salt into the container, then restore and lock the cover.

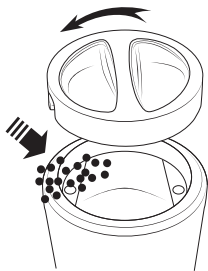

 - 2 Rotate the external dial to adjust the preferred grind size, from fine to coarse.

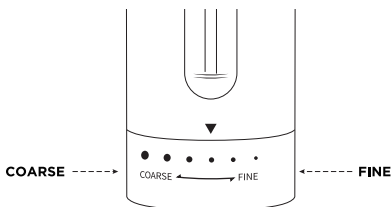

 - 3 Press and hold the on/off button to grind, release the button to stop.

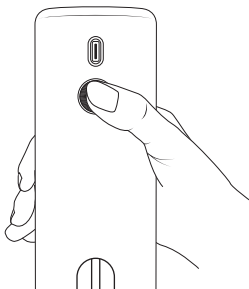

NOTE: It is not recommended to use the product while charging.

COARSE ADJUSTMENT SETTINGS

This product adopts an external adjuster. The container could be rotated between the finest and the coarsest grinding.

Adjust to Fine: Rotate the container clockwise until the desired fineness is achieved.

Adjust to Coarse: Rotate the container counterclockwise.

NOTE: If the adjuster becomes loose, it may be due to pepper grains getting stuck in the burr. To fix this, simply start the grinder—the burr will loosen, allowing you to adjust it again. This is a normal characteristic of ceramic burrs and does not affect the product's performance.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Grinder not turning ON	Battery is not charged	Charge the grinder fully (usually takes around 2 hours).
	Power button malfunctioning	Test the button. If faulty, contact YFL Home's Customer Support.
Grinder turns ON but doesn't grind	Peppercorns are jammed	Empty the grinder and remove jammed peppercorns.
	Grinding chamber overfilled	Reduce the amount of peppercorns in the chamber.
Uneven Grind size	Grind setting is misadjusted	Adjust the coarseness setting and test again.
	Mixed Spices or debris inside	Clean the chamber and use only peppercorns.
Grinder makes unusual noise	Loose parts inside	Check for loose screws or components and tighten.
Light not working (if Not charging applicable)	LED burnt out or disconnected	Contact YFL Home's Customer Support.
	USB cable or adapter issue	Try using a different cable and adapter.
	Charging port damaged	Inspect for damage and contact YFL Home's Customer Support.

cüraa

Electric Pepper Mill

ONE (1) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cüraa by YFL home** consumer product. All Cüraa products are designed and manufactured to the highest standards to deliver high quality performance as well as easy installation and use. At Cüraa, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts, which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at yflhome.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cūraa. These defects include damages caused in the process of shipping, altering, or repairing the Cūraa product (or any of its parts) when the repair is performed by a repair person not authorized by Cūraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com,

Phone: +917948223620,

to assist with product support and warranty service options. To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yflhome

Sevenchef Consumers Home & Kitchen Private Ltd.
+917948223620
www.curaahome.com

Illustrations may differ from actual product.
We are constantly striving to improve our products,
therefore the specifications contained herein are
subject to change without notice