

Tablet PC X86 User's Manual

X Mobile Co., Ltd.



- => 1 Main functions
- => 2 precautions
- => 3 Buttons overview
- => 4 Basic operations
- => 5 Home screen
- => 6 setting
- => 7 Troubleshooting



Main functions

- 7.85 1024&768IPS capacitive touch screen.
- Support MP3/AAC/OGG/WAV music format.
- Support video of AVI/3GP/MP4 format.up to1080p.
- Support external TF card.
- Support picture auto browse in JPG/BMP/JPEG/GIF format.
- Support multil languages.



- Support GPS function.
- Support multi-point touch function.
- Support wifi wireless connection(802.11b/g/n)
- Support Bluetooth V3.0.
- Support APK program installation.
- OTG function.
- G-seneor function.




precautions

1. During the formatting or uploading/downloading ,do not disconnect the tablet from the PC. disconnection during updating or data transfer may damage files or the tablet.
2. Dismantling the tablet will void the warranty, please check the trouble shooting section of this manual if experiencing problems.
3. Our company reserves the right to improve the product ,different Software and hardware versions might affect the product performance and functions,therefore the product shall be subject to change without further notice.
4. All warranty information,product features and specifications are subject to change without notice.



Buttons overview

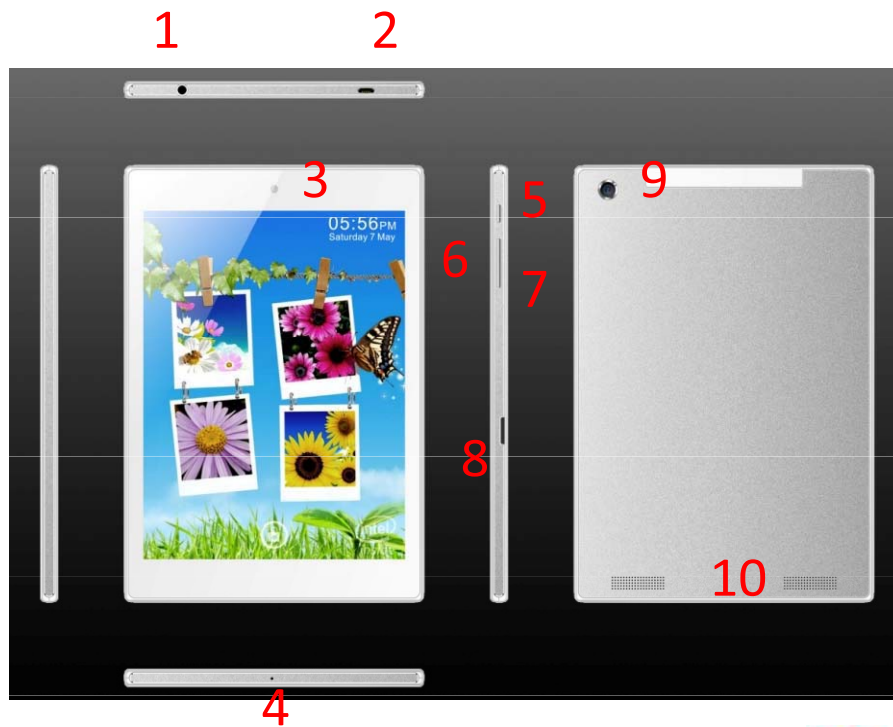

- 1 Headphone connector
- 2 Usb connector
- 3 front camera
- 4 microphone
- 5 powr key
- 6 volume+
- 7 volume-
- 8 TF card slot
- 9 rear camera
- 10 speaker



- 1. press volume button to increase or decrease the volume.
- 2. press and hold power button 5s to turn on the tablet. Press and hold power button for 3s to show “power off” window .choose “ok”to turn off the tablet, choose cncel to return.



Basic operations

1.How to save power?

The battery icon on the screen shows the rest volume of electricity. To save the power, in system setting interface, please set brightness and sleep to a reasonable level.

2.How to charge the tablet?

please charge the tablet timely before the battery icon shows blank. the tablet can be charged via the commanded DC charger.



It is normal to find that the machine surface is warm under charging state.

3. G-sensor

If you do settings setting---display---Auto rotate screen---on, the tablet will switch the screen orientation automatically when it is being rotated.

4. Connect to computer and file transfer

When the tablet is on, connecting the tablet using the supplied USB cable to the computer, then you can operate the data on PC.



Home screen

Press power key and hold for 3S to power on the tablet, then the Default homescreen is shown as the below.



Xmobile

At the bottom of the screen, you'll find three navigation buttons. They're always available. No matter what you're doing with your tablet, you can always get back to the home screen or return to previous screens;



Back; opens the previous screen you were working in, even if it was in a different app. Once you back up to the home screen, you can't go back any further in your history.



Recent APPS ; opens a list of thumbnail images of apps you've opened.





Home; opens home, if you're viewing a left or right home screen, opens the central home screen.



All apps; touch it to see all your apps and widgets.
To open an app, folder, or widget, touch its icon,





Status icons; it is used to show the current status of network connection, battery volume and system time.



setting

From a home or all apps screen ,touch the settings icon “setting” to nerer the system settinginterface,on which user can do setting shown below;

1.WIFI;turn on or ture off the wifi connection.the tablet can scan all available wifi neiwork by itseif .

Choosing the target wifi and typing the correct password,then you can use the wifi.

2.Bluetooth; turn on or turn off the bluetooth funcuion. The tablet can automatically scan the available bluetooth device.matching the device then you can transmit the data between the devices.



3.hotspot;turn on ot turn off the hotspot function the tablet
neiwork connection can be used for other devices, please be noted
that hotspot function cannot be enabled with WIFI at the same
time.

4.Data usage; touch to see the detail data usage

5.sound; touch to setting “volume, default notification touch
sonmds screen lock sounds ”wifi
Networks scanned

6.Display ;touch to etting “brightness, wallpaper,
Auto-rotate screen. Sleep ,font size”

7.battery ;touch to check the situation of the battery.



8.storage; touch to view SD card &device storage setting.

9.apps; touch to scan the APPS.

10.USERS; touch to cerate different users on this tablet.

11.location&servics; location setting .

12.security; user can do screen security here.

13.backup&reset; touch to enter “factory data reset”interface.

14.Add account; touch to add youraccount to this tablet.



15.language&input; touch to set system language and text inputting method.

16.date&time; touch to set system time and date.

17.accessibility; accessiblity setting.



Troubleshooting

1.The tablet cannot be turned on.

Please charge it via the DC charge to check if the battery is low.

2.Incorrect language displayed.

please make sure that you have selected the correct language.set
language in(setting)=>(personal)=>(language)
&input)

3.Files cannot be downloaded.

=>make sure the proper connection between computer and tablet.

=>check if the memory is full.

=> check if the USB cable is damaged and replace if necessary.



4.Audio files not playable.

this tablet cannot play audio files that are copy protected. Please ensure that only files that contain no copy protection are transferred to the tablet.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter.

THANKS!

