



Roborock Auto-Empty Dock Pure

User Manual

Read this user manual carefully before using this product and store it properly for future reference.

English	04
Français	16
Deutsch	29
Italiano	42
Español	55
Polski	68
Norsk	81
Svenska	94

Contents

05	Safety Information
07	Accessories
08	Product Introduction
10	Getting Started
11	Routine Maintenance
13	Basic Parameters
14	FAQs & Troubleshooting
15	EU Declaration of Conformity
15	WEEE Information
15	Warranty Information

Safety Information

Restrictions

- This product is designed for indoor use only, do not use it outdoors (such as on an open-ended terrace), on any surface other than the ground (such as a sofa), or in any commercial or industrial environment.
- The product must be switched off and the plug must be removed from socket outlet before cleaning or maintaining the product.
- Do not place any object near the suction inlet of the dock.
- Do not put fingers into the seam of the dock to avoid possible injury.
- Do not operate the product in a room where an infant or child is sleeping.
- Do not carry the product using the dock base or dustbin.
- Make sure the robot is compatible with the dock, otherwise emptying or charging may fail.
- Do not use the product to clean hard or sharp objects (such as decoration wastes, glass and nails).
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety (CB).
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision (EU).
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the dock to pick up stones, paper scraps, or other objects that may block the air duct. If the air duct gets blocked, clean it immediately.
- Do not use the product when the ambient temperature is higher than 40°C (104°F), lower than 4°C (39°F).
- Place the dock on a flat floor away from fire, heat, and water. Avoid narrow spaces or locations where the robot may be suspended in air.
- Do not place any object (including children and pets) on the dock or cover it with any item (including dust-proof cover), whether it is in operation or not.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use the dock to pick up flammable or explosive objects such as fire lighter, gasoline, and toner used in printers or copiers.

Safety Information

Battery and Charging


WARNING

- Do not charge non-rechargeable batteries.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Be sure that the supply voltage meets the requirements listed on the dock.
- Only use the power cable provided with the product to prevent potential smoke, heat or fire.
- Do not use the product with any type of power adapter, as this may cause danger and void the warranty.
- Do not dismantle, repair or modify the battery or charging dock.
- Do not wipe the charging contacts with wet cloth or wet hands.
- If the power cord is damaged, stop using it immediately. It must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- If the dock is placed in an area susceptible to thunderstorms or with unstable voltage, take protection measures.
- Use of the original packaging for transportation is advised.
- Unplug the power cable before placing the dock into storage.


Accessories




Dustbin Cover

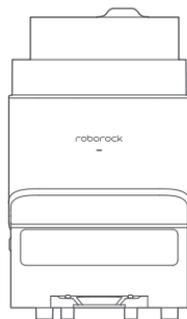

Dustbin (Disposable Dust Bag Pre-Installed)

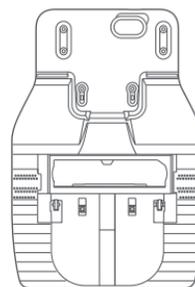


Base

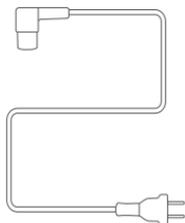

Power Cable




Screwdriver

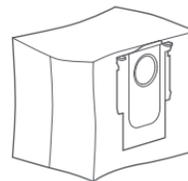


Disposable Dust Bag

Product Introduction

Auto-Empty Dock

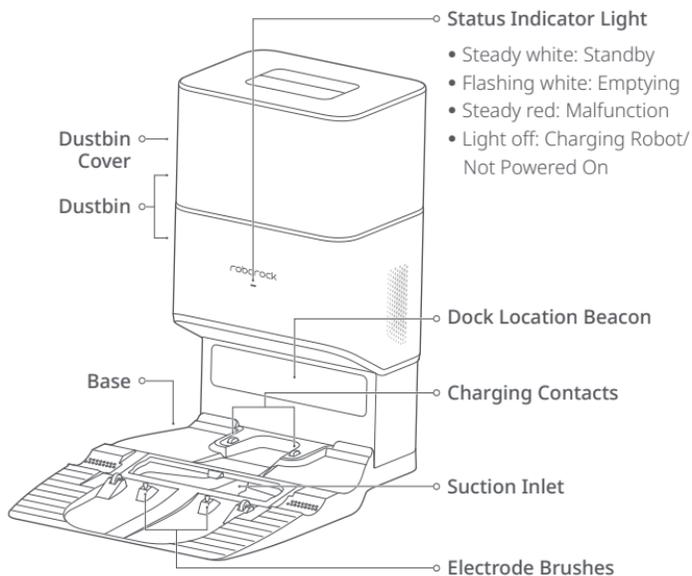


Base

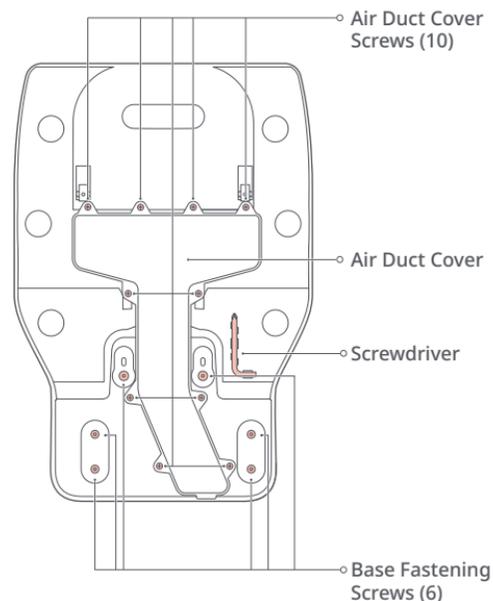


Product Introduction

Power Cable Storage

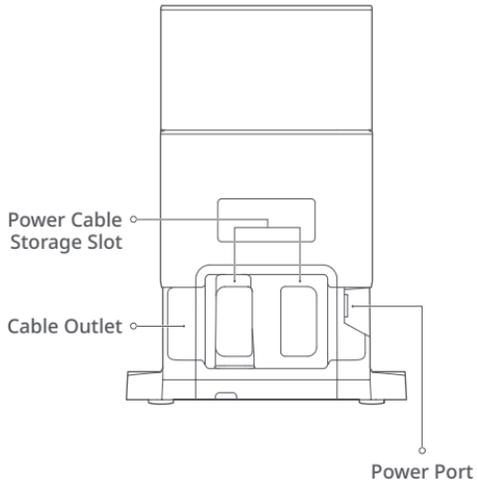


Note: Power cable can be pulled out at both sides.

Auto-Empty Dock (Cover Removed)

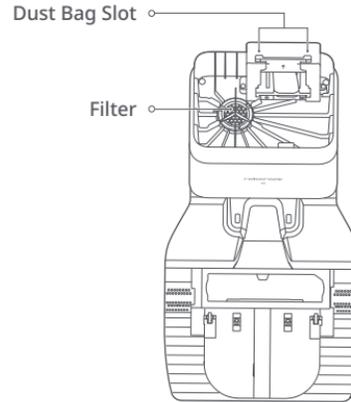


Dust Bag

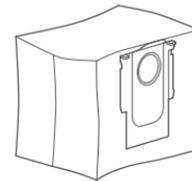


Getting Started

Assembly

1. Take the screwdriver from its storage bin at the bottom of the base.

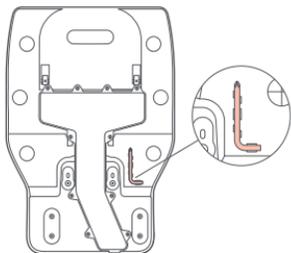


2. Place dock upside down on a soft, flat surface (carpet/towel/ cloth) and attach the base by using the six screws provided.

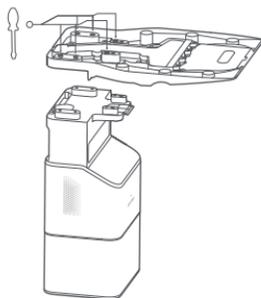


Note: Hold the dustbin cover securely when upside down to prevent damage from falling.

3. Connect the power cable to the dock, and keep the excess cable inside the storage slot.

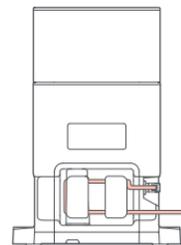


4. Place the dock on a hard and flat floor (wood/tile/concrete etc.). Keep at least 0.5 m (1.6 ft) of clearance on either side, 1.5 m (4.9 ft) in front, and 1 m (3.3 ft) above. Check the location has good WiFi then plug it in.

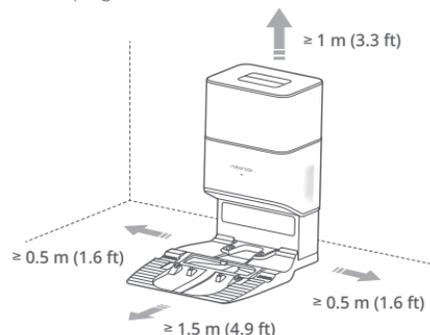

Getting Started

Emptying

Auto-emptying will begin when the robot returns to the dock after cleaning. Press the Dock button to trigger emptying manually. Press any button to stop emptying.

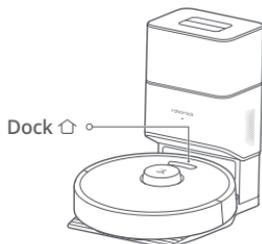


Notes:

- The status indicator light turns off automatically when the robot is charging.
- Do not use without dustbin cover or dust bag.
- Place the dock on a flat floor away from fire, heat, and water. Avoid narrow spaces or locations where the robot may be suspended in the air.
- Placing the dock on a soft surface (carpet/mat) may cause the dock to tilt over and cause problems docking and departing.
- Keep excess power cable inside the storage slot so that the robot will not get tangled in the cables, and the dock will not be dragged away or disconnect from the power supply.
- Keep the dock away from direct sunlight or anything that may block the dock location beacon; otherwise, the robot may fail to return to the dock.
- The Auto-Empty Dock recharges and empties. Store the standard robot dock before use. Failure to do so may cause issues returning to dock.
- Maintain the dock according to the maintenance instructions. Do not clean the dock with a wet cloth.
- Avoid frequent manual emptying.
- Images are for illustration purposes only and may not exactly represent the product.


Routine Maintenance

1 Dust Bag Replacement * Replace as needed

1. Remove the dustbin cover vertically as shown.

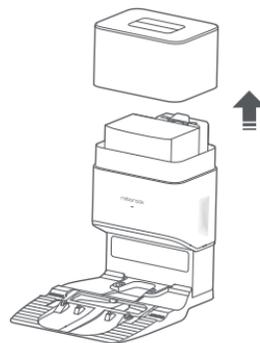


2. Lift the dust bag out of the dustbin and discard it.

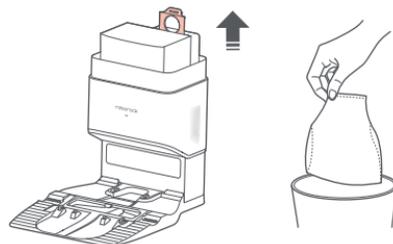


Note: The dust bag handle seals the bag on removal to prevent dust leakage.

Routine Maintenance

3. Clean the filter with a dry cloth.

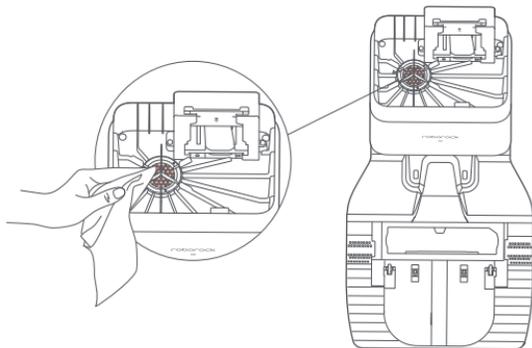


4. Install a new dust bag in place along the slot and put the dustbin cover back.

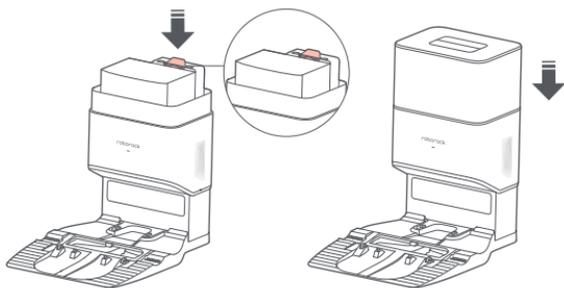


2 Air Duct * Clean as needed

1. Unscrew the screws (10) and remove the cover.

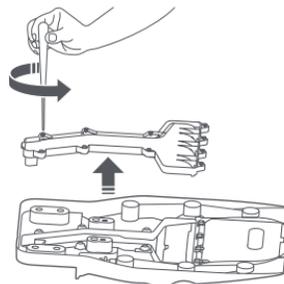


2. Wipe the air duct and cover with a dry cloth.

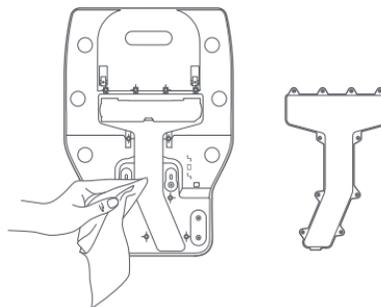


Routine Maintenance

3. Re-install the cover and screw it back in place.

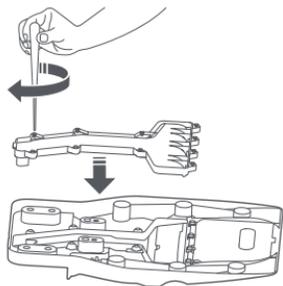

3 Charging Area Cleaning * Clean as needed

Clean the dock location beacon, charging contacts, and electrode brushes with a dry cloth.

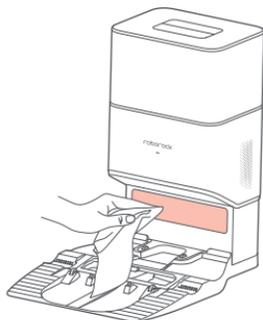

Basic Parameters

Auto-Empty Dock	
Name	Auto-Empty Dock
Model	AED03HRR, AED04HRR
Rated Input Voltage	220-240VAC
Rated Frequency	50-60Hz
Rated Input (Dust Collection)	5A
Rated Input (Charge)	0.5A
Rated Output	20VDC 1.2A
Charging Battery	14.4V/5200mAh lithium-ion battery

FAQs & Troubleshooting

Operating conditions are indicated by the LED status indicator light on the dock.

Conditions	Possible Causes & Solutions
Red LED indicator on the Auto-Empty Dock.	<ol style="list-style-type: none">1. The dustbin cover is not in place. Check and correct installation.2. The fan is not operating properly. Potentially due to overheating protection resulting from frequent starting and stopping. Unplug the power cable and try again after 30 minutes.3. Voltage error. Check that local voltage meets the requirements listed on the dock.
Reduced emptying performance or unusual noise when emptying.	<ol style="list-style-type: none">1. The robot dustbin has not been replaced with the auto-empty dustbin. Use the auto-empty dustbin.2. The plate covering the air vent has not been removed. Remove the plate.3. The main brush or main brush cover is not properly installed. Check and correct installation.4. The filter, air duct, suction inlet, air inlet, or dustbin is blocked. Clean to remove blockages.
Auto-emptying does not start when the robot returns to the dock.	<ol style="list-style-type: none">1. Auto-emptying is disabled. Check in-app settings.2. Dustbin cover is not in place. Check and install.3. Auto-emptying will not be triggered if the robot is moved to the dock manually. Start emptying manually.4. Auto-emptying will not be triggered if the robot returns to the dock without cleaning.5. The robot will not auto-empty after returning to the dock in Do Not Disturb (DND) mode. Adjust cleaning or DND duration, or start emptying manually.6. The battery level is lower than 10%. Charge the robot until the battery reaches 10%.
The robot cannot return to the dock or cannot be charged.	<ol style="list-style-type: none">1. The dock is surrounded by obstacles. Clear any obstacles around it or move it to an open area as recommended in the User Manual.2. The dock is not connected to a power supply. Make sure the power cable is securely plugged in and power is on.3. Poor contact. Clean charging contacts.

If the problem persists after using the recommendations in the table above, email our after-sales service team:

Europe Support: support@roborock-eu.com

Australia Support: service@roborock.com.au

EU Declaration of Conformity

We Beijing Roborock Technology Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:
<https://global.roborock.com/pages/compliance>

WEEE Information

Correct Disposal of this product . This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Warranty Information

The warranty period depends on the laws of the country in which the product is sold, and the warranty is the responsibility of the seller.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear.
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories, use of force.
- Damage caused by external influences.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.
- Partially or completely dismantled appliances.