

Hamilton Beach

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use. Lire avant l'utilisation. Lea antes de usar.

For questions and other information:

hamiltonbeach.com
hamiltonbeach.ca
hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01 800 71 16 100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against risk of electrical shock, do not immerse cord, plug, or cooking unit in water or other liquid.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. To disconnect, remove plug from wall outlet.
14. Do not use appliance for other than intended use.
15. Do not use appliance unattended.

16. When using this appliance, provide 4 to 6 inches air space above, behind, and on both sides for air circulation. Do not use on surfaces where heat may cause a problem.
17. Never remove the waffle with any kind of cutting device or other metallic kitchen utensil.
18. Always allow the appliance to cool down completely before putting it away, and never wrap the cord around the appliance while it is still hot.
19. Do not operate the appliance by means of an external timer or separate remote-control system.
20.  **CAUTION: HOT SURFACE.** The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information


This appliance is intended for household use only.

 **WARNING Electrical Shock Hazard:** This appliance is provided with either a polarized (one wide blade) or grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a polarized or grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. If the appliance is of the grounding type, the extension cord should be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and features

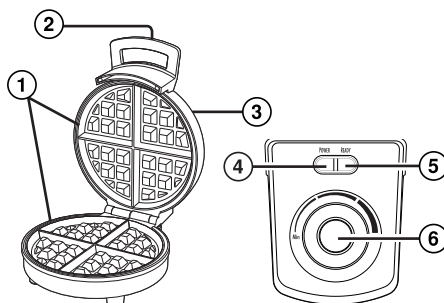

1. Grids
2. Handle
3. Lid
4. Red Power ON Light
5. Green Ready Light
6. Temperature Control Dial

How to use

 **WARNING Burn Hazard.** Always use an oven mitt to protect hand when opening a hot waffle maker. Escaping steam can burn.

BEFORE FIRST USE: Wipe the bottom and top cooking grids with a soapy, damp cloth. Rinse cloth; then wipe grids again.

1. Plug into outlet. The POWER ON light will illuminate and stay on until the unit is unplugged. Turn temperature control dial from Min to Max to adjust waffle doneness. Min for light brown waffles and Max for crispy brown waffles.
2. Preheat with lid closed until READY light illuminates. This light will cycle on and off during baking.
3. Use a cooking spray before pouring batter onto the grids, especially for dessert waffles or recipes with sugar.
4. Hold handle to lift lid to open. Pour batter onto center of grids. Lower the lid.
5. Waffles are done in about 3 to 6 minutes, depending on recipe, or when steaming begins to stop. Remove waffle with plastic or wooden utensil. Never use metal. This will damage the nonstick coating.
6. Unplug. Let cool.

Care and cleaning

 **WARNING Electric Shock Hazard.**

To reduce the risk of electrical shock, do not immerse the cord, plug, or base in water or any other liquid.

1. Unplug and let cool.
2. Wipe cooking grids and outside of unit with a damp, soapy cloth. Rinse cloth and wipe grids again.
3. Do not use steel wool, scouring pads, or abrasive cleansers on any part of the unit. Never use sharp or pointed objects for cleaning purposes.
4. Always allow the appliance to cool down completely before storing.

Usage tips

- Most waffle recipes can be poured directly onto the nonstick cooking grids. Use a cooking spray for dessert waffles or any recipe with a lot of sugar. If your waffles start to stick, the grids may need to be scrubbed with a nylon brush to remove any cooked-on food particles.
- Waffles can be made ahead of time and kept warm in a 200°F (93°C) oven.
- To store waffles, let cool and then pack in an airtight container. Store in refrigerator or freezer. Waffles can be reheated in a microwave oven, a toaster oven, or regular oven.
- Most waffles are done in about 3 to 6 minutes. Recipes made from scratch may take longer. Check for doneness after approximately 5 minutes or when the steaming stops. If the lid doesn't lift easily, let waffles cook a minute more before checking again.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free of defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and

our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS INSTRUCTIONS

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

1. Lire toutes les instructions.
2. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
3. Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
4. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons.
5. Pour prévenir les chocs électriques, ne pas immerger le cordon, la fiche ou l'unité de cuisson dans l'eau ou d'autres liquides.
6. Débrancher de la prise murale lorsque l'appareil n'est pas en utilisation ou avant son nettoyage. Le laisser refroidir avant d'ajouter ou d'enlever des pièces et avant le nettoyage.
7. Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée

de façon à éviter tout danger. Appeler le numéro de service à la clientèle fourni pour des renseignements concernant l'examen, la réparation ou l'ajustement.

8. L'utilisation de pièces accessoires non recommandées par le fabricant de l'appareil peut occasionner des blessures.
9. Ne pas utiliser à l'extérieur.
10. Ne pas laisser le cordon pendre d'un coin de table ou d'un comptoir, ou entrer en contact avec une surface chaude y compris la cuisinière.
11. Ne pas mettre près d'un brûleur chaud à gaz ou électrique ni dans un four allumé.
12. Des précautions extrêmes doivent être prises lors du déplacement d'un appareil contenant de l'huile bouillante ou tout autre liquide brûlant.
13. Pour débrancher, enlever la fiche de la prise murale.
14. Ne pas utiliser l'appareil pour un usage auquel il n'est pas destiné.
15. Ne pas faire fonctionner l'appareil sans supervision.
16. Lors de l'utilisation, laisser 4 à 6 po (10 à 15 cm) de libre au-dessus, derrière et sur les deux côtés de l'appareil pour permettre la circulation d'air. Ne pas utiliser sur une surface susceptible d'être endommagée par la chaleur.
17. Ne jamais enlever la gaufre avec un genre d'ustensile coupant ou autre accessoire métallique.
18. Toujours laisser refroidir l'appareil complètement avant de le remiser et ne jamais enrrouler le cordon autour de l'appareil pendant qu'il est encore chaud.
19. Ne pas faire fonctionner cet appareil avec une minuterie externe ou un système de télécommande distinct.

20.  **ATTENTION : SURFACE CHAUDE :** La température des surfaces extérieures sera plus élevée pendant le fonctionnement de l'appareil.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.

 **AVERTISSEMENT Risque de choc électrique :** Cet appareil est fourni avec une fiche polarisée (lame plus large) ou d'une fiche (3 lames et mise à la terre) pour réduire le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée ou prise avec mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de

l'appareil. Si cet appareil est du type à mise à la terre, la rallonge doit être du type à mise à la terre, à 3 fils. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Pour éviter la surcharge du circuit électrique, ne pas utiliser un autre appareil à haute puissance sur le même circuit que cet appareil.

Pièces et caractéristiques

- | | |
|-----------------------------------|--------------------------------------|
| 1. Grilles | 5. Témoin préchauffage vert |
| 2. Poignée | 6. Cadran de commande de température |
| 3. Couvercle | |
| 4. Témoin d'alimentation ON rouge | |

Utilisation

 **AVERTISSEMENT Risque de brûlures.**

Toujours utiliser un gant de cuisinier pour protéger les mains pendant la manipulation d'un gaufrier chaud. La vapeur s'échappant peut brûler.

AVANT LA PREMIÈRE UTILISATION :

Essuyer les grilles de couvercle et de fond avec un linge humidifié d'eau savonneuse. Rincer le linge puis essuyer à nouveau les grilles.

1. Brancher dans la prise de courant. Le témoin d'alimentation s'allumera et sera fixe tant que l'appareil n'est pas débranché. Tourner le cadran de commande de température de MIN à MAX pour régler la cuisson de la gaufre. MIN est utilisé pour des gaufres légèrement grillées et MAX est utilisé pour obtenir des gaufres rôties et croustillantes.
2. Fermer le couvercle et préchauffer jusqu'à ce que le témoin de préchauffage VERT s'allume. Ce témoin s'allumera et s'éteindra pendant la durée de la cuisson.
3. Utiliser un enduit pour cuisson avant de verser la pâte sur le moule à gaufres, surtout pour des gaufres desserts ou des recettes contenant beaucoup de sucre.
4. Ouvrir le couvercle en tenant la poignée. Verser la pâte au centre du moule à gaufres. Fermer le couvercle.
5. Les gaufres sont cuites après 3 à 6 minutes environ, selon la recette ou lorsque la vapeur ne s'échappe plus. Retirer les gaufres avec un ustensile en plastique ou en bois. Ne jamais utiliser d'ustensiles métalliques. Ceci pourra endommager l'enduit antiadhésif.
6. Débrancher. Laisser refroidir.

Entretien et nettoyage

 **AVERTISSEMENT Risque de choc électrique.** Pour réduire le risque d'électrocution, ne pas immerger le cordon, la fiche ou le socle dans l'eau ou tout autre liquide.

1. Débrancher et laisser refroidir.
2. Essuyer les grilles de cuisson et l'extérieur de l'appareil avec un linge imbibé d'eau savonneuse. Rincer le linge et essuyer les grilles à nouveau.
3. Ne pas utiliser de tampon métallique à récurer ou de poudre à nettoyer sur aucune pièce de l'appareil. Ne jamais utiliser d'objets affûtés ou pointus pour les besoins de nettoyage.
4. Toujours permettre le refroidissement complet de l'appareil avant de le ranger.

