

Manuel d'instruction:

Réglages de la montre:


1. appuyez sur A deux fois pour afficher le mois and date, puis sur B pour le régler.
2. Appuyez sur A trois fois pour afficher la date, puis sur B pour la régler.
3. Appuyez sur A quatre fois pour afficher l'heure, puis sur B pour la régler.
4. Appuyez sur A cinq fois pour afficher les minutes, puis sur B pour la régler.
5. Appuyez à nouveau sur A pour revenir à l'affichage normal de l'heure, puis appuyez sur B une fois pour terminer le réglage

Affichage:

1. Appuyez sur B une fois pour afficher le mois et la date. Appuyez sur A une fois le retour à l'affichage normal de l'heure
2. Appuyez sur B deux fois pour afficher les seconds. Réinitialiser seconde à "00" by Appuyez sur A une fois.
3. Appuyez à nouveau sur B une fois pour revenir l'affichage normal de l'heure.

How to Light Up:

Appuyez sur C une fois : la lumière clignote

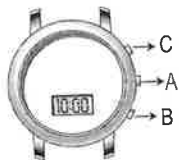

NE PAS PLONGER DANS L'EAU
NE PAS PORTER SI LE DOS DU BOÎTIER EST MANQUANT OU DÉMONTÉ
NE PAS MÉLANGER DES PILES NEUVES AVEC DES PILES USAGÉES
NE PAS MÉLANGER LES PILES ALCALINES NORMALES (CARBONE-ZINC)
AVEC LES PILES RECHARGEABLES (NICKEL-CADMIUM).

FABRIQUÉ EN CHINE

Instruction Manual:

Adjusting Date & Time:


1. Press button "A" once, Month & Day will be shown.
Press button "A" twice to adjust the Month; press button "B" to set.
2. Press button "A" three times, Day will be shown. To adjust the Day, press button "B" to set.
3. Press button "A" four times, Hour will be shown. To adjust the Hour, press button "B" to set.
4. Press button "A" five times, Minutes will be shown. To adjust the Minutes, press button "B" to set.
5. Press button "A" again to finalize the adjustments, confirm the adjustments by pressing button "B" to cycle through Time, Date & Seconds.

Displaying Date & Time:

1. Press button "B" once, Month & Day will be shown; the proper Month & Day can be adjusted by pressing button "A"
2. Press button "B" twice, Second will be shown. Reset Seconds to "00" by pressing button "A".
3. Press button "B" once more to return to normal time display.

How to Light Up:

Press button "C" once, Flashing lights will be shown.

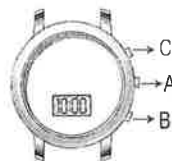

DO NOT IMMERSE IN WATER
DO NOT WEAR IF CASEBACK IS MISSING OR DISASSEMBLED
DO NOT MIX OLD AND NEW BATTERIES
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

MADE IN CHINA