Installing the Batteries

ATTENTION: Batteries should only be installed by an adult.

The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries at home:

1. Use a Philips screwdriver to open the battery compartment door.
2. Install 2 "AAA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw. Don't over tighten.

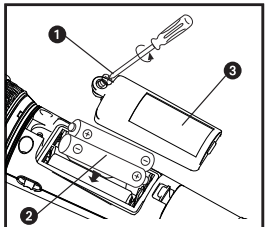

Battery Installation

For the Best Possible Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/–) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Batteries must be disposed of separately at your local waste recycling center. Do not dispose of them in your household waste bin.

Remove Demo Tab

- The unit is equipped with a Try Me feature. Before using the unit, pull out the plastic Demo Tab located on back panel.

Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Questions or Comments

☎ For questions or comments regarding this or other eKids, LLC products, please call our toll-free number: 1-888-TOP-TOYS.

Please also visit our website: www.ekids.com

Limited One-Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.
Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.
If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions.
Disclaimer of Warranty
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.
This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Questions? Visit www.ekids.com
For any other questions: 1-888-TOP-TOYS Toll Free
1299 Main Street Rahway NJ 07065
© Disney
Visit www.disney.com/Frozen

Important Message to Customers
Thank you for purchasing one of Disney's many top-quality
to help you understand the safe and proper way to use

FCC Information
This device complies with Part 15 of the FCC Rules. C
cause harmful interference, and (2) this device must acc
operation.
NOTE: This equipment has been tested and found to
FCC Rules. These limits are designed to provide reasc
equipment generates, uses and can radiate radio frequ
may cause harmful interference to radio communications
installation. If this equipment does cause harmful inter
the equipment off and on, the user is encouraged to tr

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment anc
- Connect the equipment into an outlet on a circuit di
- Consult the dealer or an experienced radio/TV techr

WARNING: Changes or modifications to this unit not
user's authority to operate the equipment.
CAN ICES-3 (B)/NMB-3(B)

Playing with the Microphone

There are two ways to have musical fun with your Magica
along to the built-in songs, or to any song on your MP3 p
connecting it via the included MP3 Cable (see instructions
excitement! Have a great show!

Song Mode

- Slide the **Mode Switch** located on the side of the micr
to enable song mode.
- Press the **Song Button** to turn on the microphone. Lights
the microphone will automatically start playing the first
- Press and hold the **Mic Button** to sing along to the sc
- Press the **Song Button** again to play the next song.
- Press the **Song Button** again to turn the microphone

MP3 Mode

- Slide the **Mode Switch** to **MP3** position to enable
- Press the release tab on the MP3 cable compartment
- Connect the plug on the MP3 Audio Cable (included)
or line out jack on your MP3 player or other audio devi
- Fit the MP3 Audio Cable into the cable slot towards th
microphone and close the MP3 compartment door.
- Turn on and play your MP3 player/audio device.
- Press the **Song Button** to turn on the microphone anc
- Press and hold the **Mic Button** to sing along with your
- Press the **Song Button** again to turn the microphone
device, too. There is a 5 minute timer that will
resume MP3 playback