


room essentials

5 Shelf Bookcase - Espresso Brown	dpci 249-05-0297
5 Shelf Bookcase - White	dpci 249-05-0298
5 Shelf Bookcase - Black	dpci 249-05-0299

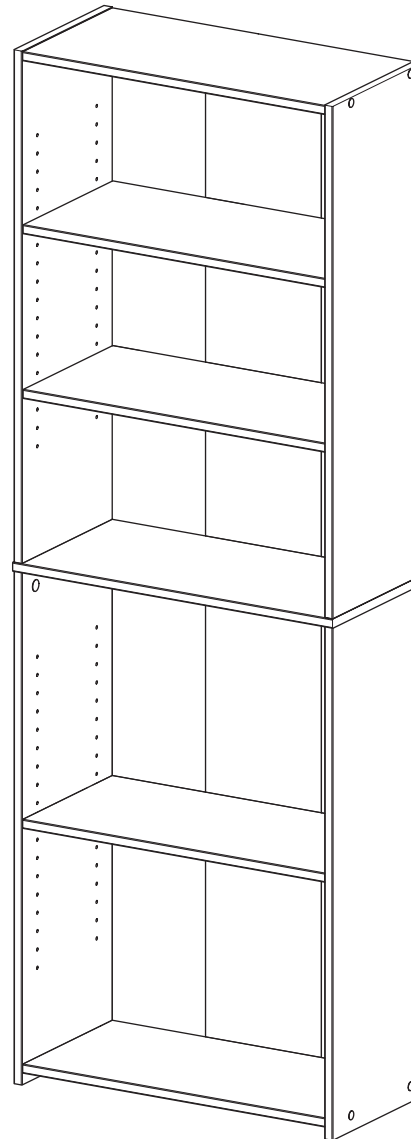

>> assembly instructions

5S – TALL BOOKCASE_MFG_B_01



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck—though we're confident you won't need it.

before you begin

1. Check for damaged or missing parts. Call 1-800-440-0680 to order missing supplies.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.

tools needed

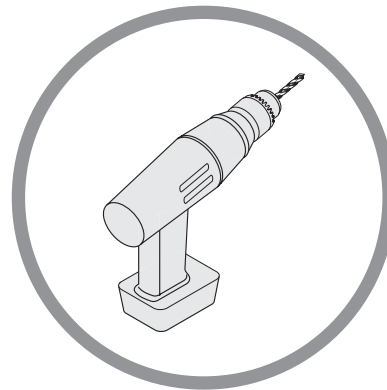
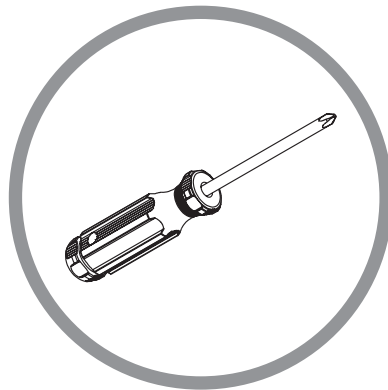
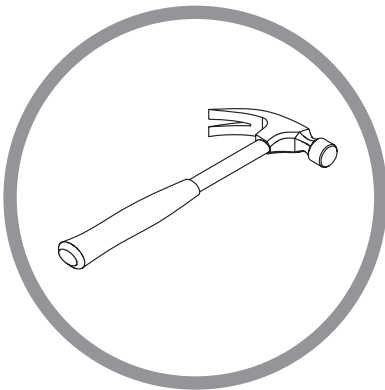



table of contents

.....

introduction	2
hardware	6
parts list	7
assembly	9-24

WARNING

this product is intended for floor use only and not for wall mount use.

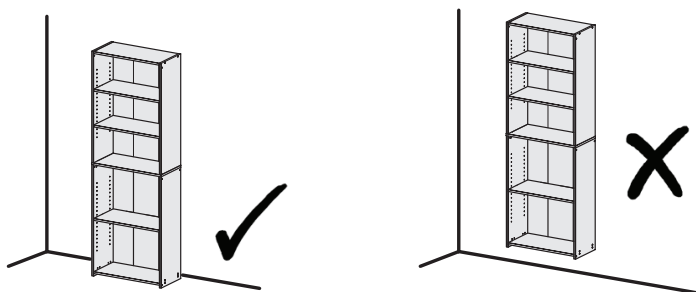

Serious or fatal crushing injuries can occur from furniture tip-over.

To help prevent tip over:

- Anchor unit to stud or wall
- Place heaviest items on the lowest surfaces as far back from the front edge as possible. Do not set TVs or other heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Do not allow children to climb or hang on unit.
- Use of tip-over restraints may only reduce, but not eliminate the risk of the tip over.
- This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- Do not mount or attach anything to the sides, rear or front of the unit as this can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- Do not stack units. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.
- All units must be secured individually to wall
- DO NOT use this item if any parts are missing, damaged or worn.
- DO NOT use this item unless all fixings are secured.
- Always use on a level, even surface.

This product is TSCA Title VI Compliant

This product is California 93120 Compliant For Formaldehyde Phase II



WARNING: This product can expose you to chemicals including Formaldehyde, which is known to the State of California to cause cancer or birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov/furniture.

Manufactured by Friul Intagli Industries spa, Via Oderzo 68, 33080 Villanova di Prata, Italy
Imported and distributed by Target Corporation, 1000 Nicollet Mall, Minneapolis, MN 55403, USA
Guest Services: 1-800-440-0680

⚠ WARNING	
	Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over: <ul style="list-style-type: none">• Install tip-over restraint provided.• Place heaviest items on the lowest surfaces as far back from the front edge as possible.• Do not set TVs or other heavy objects on top of this product, unless the product is specifically designed to accomodate them.• Never allow children to climb or hang on drawers, doors, or shelves.
	Use of tip-over restraints may only reduce, but not eliminate, the risk of the tip-over.
	<i>This is a permanent label. Do not attempt to remove!</i>

weight capacity/care instructions




WARNING: This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

WARNING: Please ensure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability, product collapse, and/or serious injury.

Cleaning Instructions:

- Gently wipe the cabinet with a soft cloth
- To clean the cabinet, dampen the cloth with a neutral detergent and water, wipe the cabinet and follow with a dry cloth.
- DO NOT clean with benzene thinner, alkaline detergent, alcoholic system detergent, glass cleaner, wax, polish cleaner, soap powder, or insecticide.
- Rubber or vinyl should not be in contact with the cabinet for an extended period of time. These types of fluids and materials can cause the finish to deteriorate, crack or peel.
- No lubrication required.

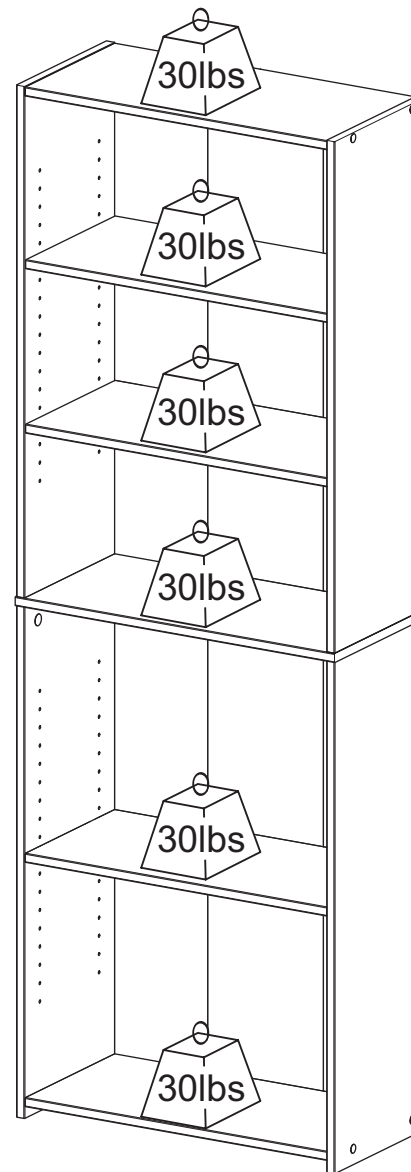


hardware


(H1) x 12
wood dowel




(H2) x 12
conformat screw




(H3) x 12
shelf pin




(H4) x 48
nail




(H5) x 1
nail holder




(H6) x 1
screw cover Ø15

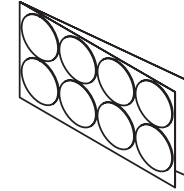


(H7) x 1
screw cover Ø20



(H8) x 4
cam



(H9) x 4
assembly dowel




(H10) x 4
iron plate



anti-tip hardware


(H11) x 1
L Bracket

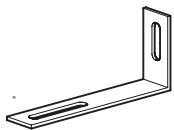


(H12) x 2
washer




(H13) x 1
wall Anchor



(H14) x 1
2 3/8" screw TC





(H15) x 1
3/8" flat-head screw




ITEM DESCRIPTION QUANTITY

A	upper side Lh	1
B	upper side Rh	1
C	lower side Lh	1
D	lower side Rh	1
E	back panel	1
F	back panel	1
G	top/bottom panel	2
H	shelf	3
L	top panel	1

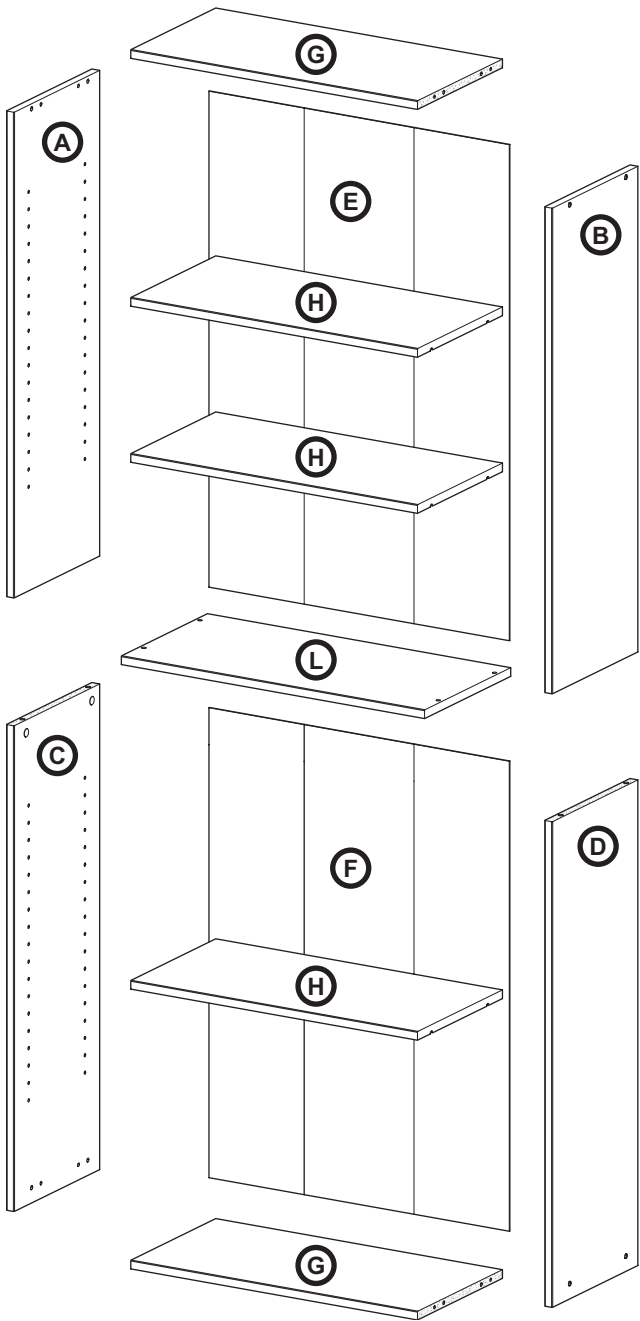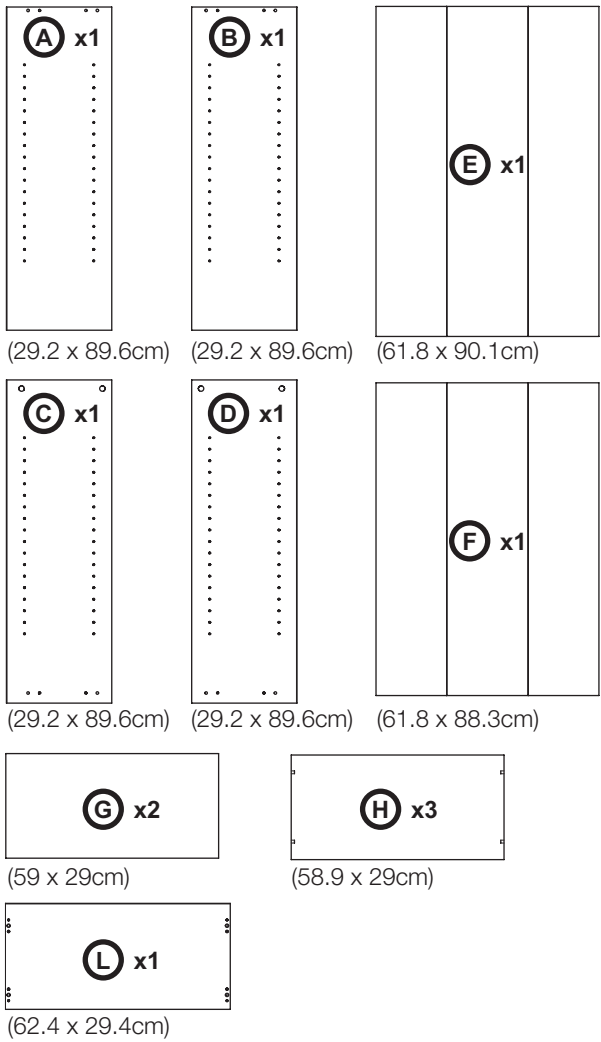

helpful hints

We recommend you protect your work surface during assembly to prevent scratching or damage to table tops, wood floors, etc.

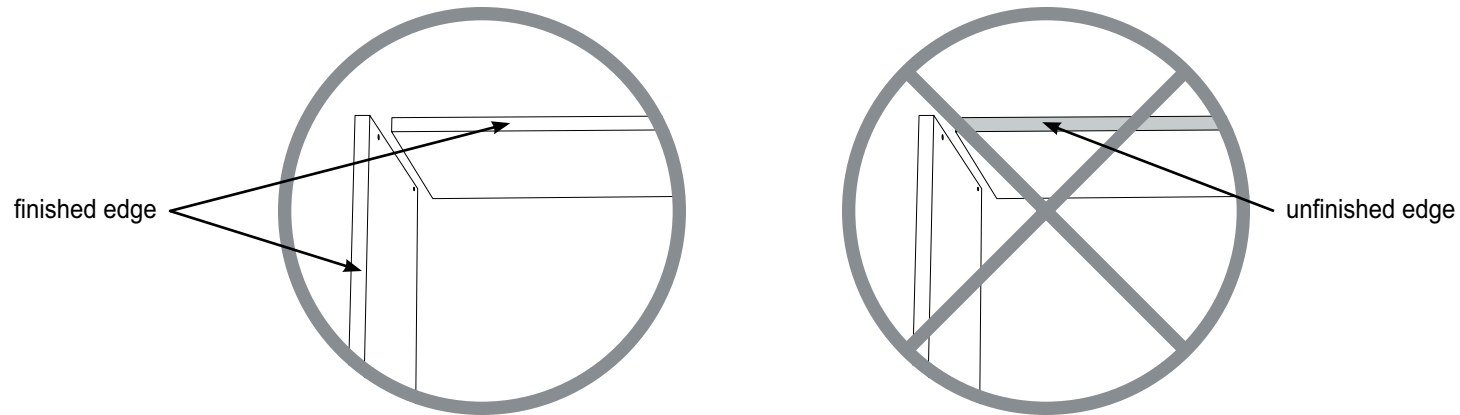


Unfinished edges are shaded in gray. It is important to understand how finished edges go together. Take a moment to lay out all the wood pieces and note the finished and unfinished (raw wood) edges. Arrange pieces so all finished edges are facing the same way. While assembling, take care to note in each diagram which way finished edges are facing. In general, all finished edges will face forward and all finished sides (large area of piece) will face up when product is fully assembled and upright.


hand tighten screws

We recommend you hand-tighten screws. Use care not to overtighten if using power tools.

step 1.

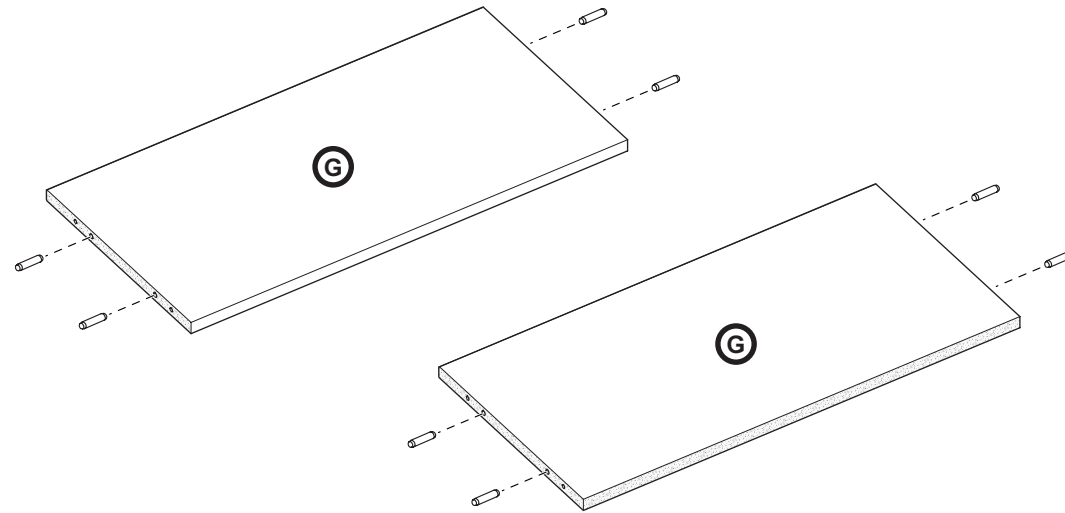


(H1) x 12
wood dowel


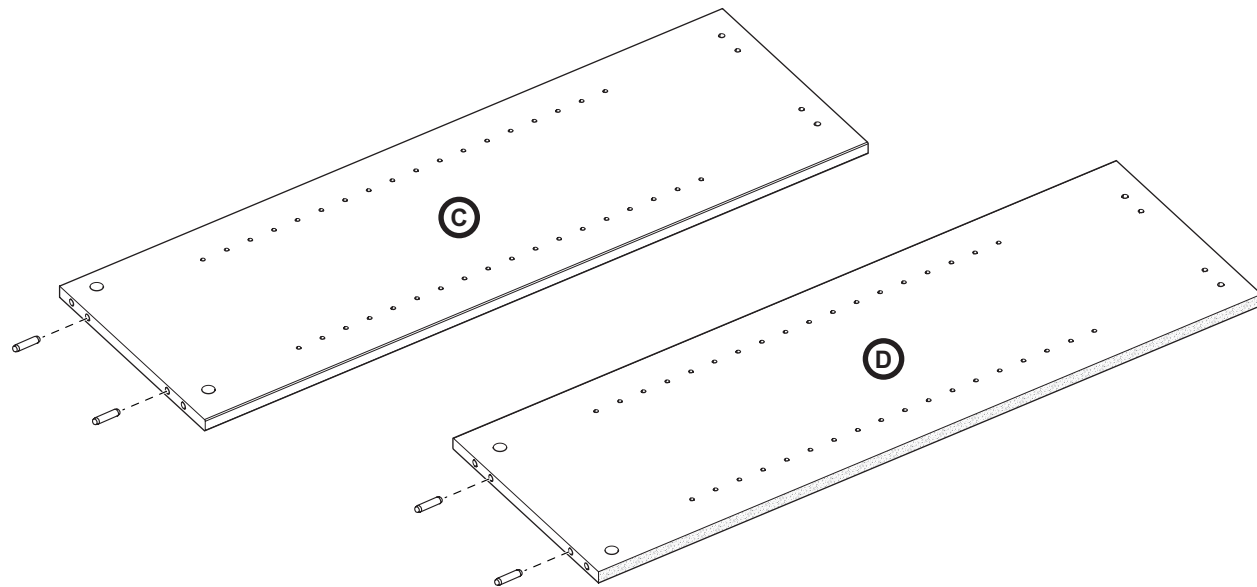


1. Carefully tap wooden dowels (H1) into place.

step 2.

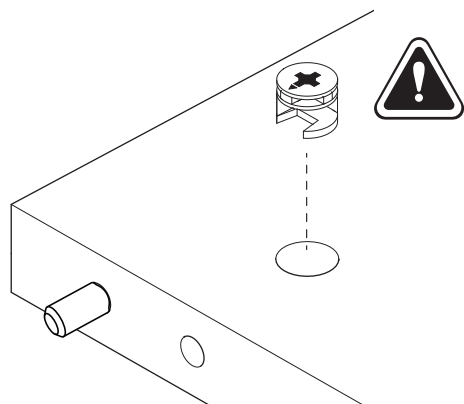


(H8) x 4
cam

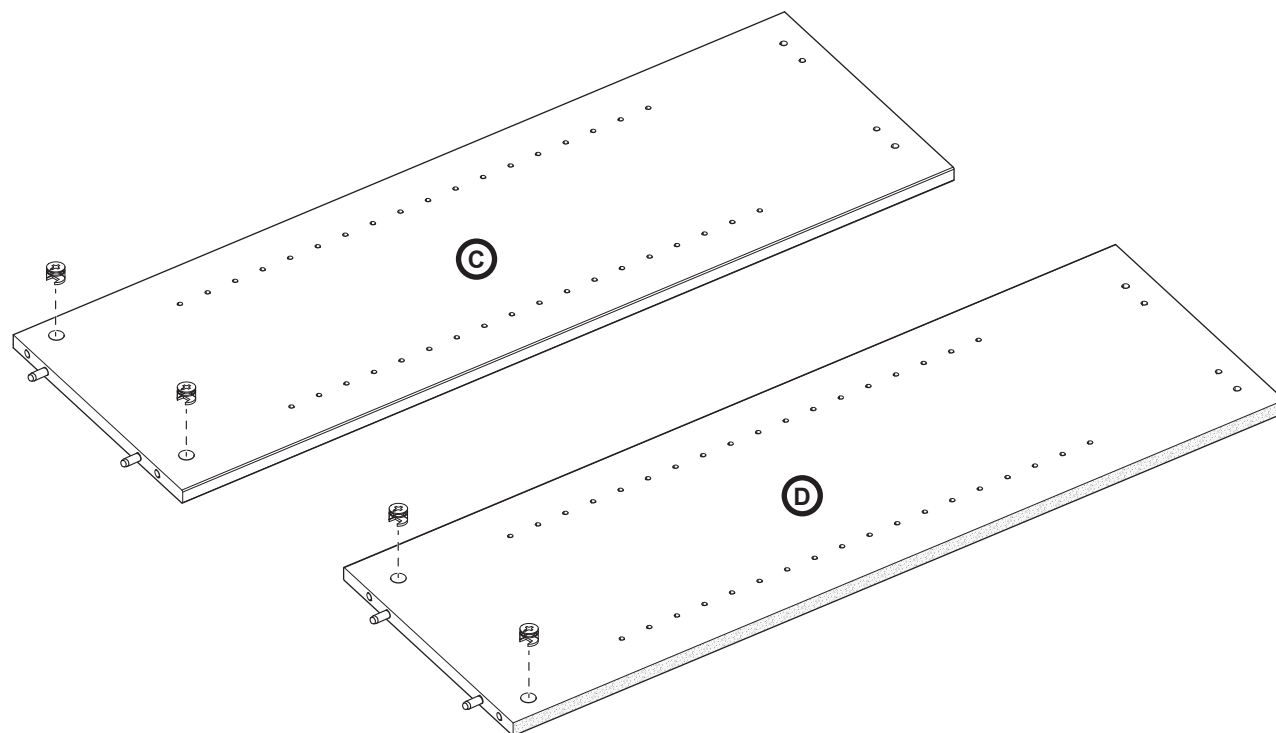


1. Carefully tap cam (H8) into place.

step 3.

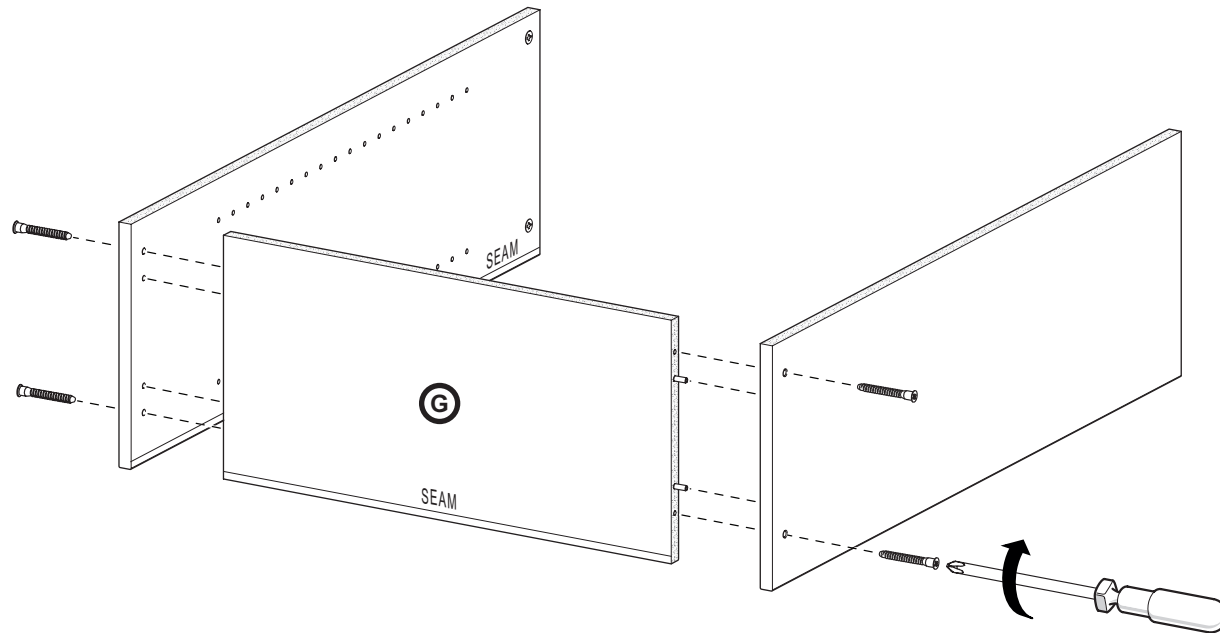


(H2) x 4
conformat screw



1. Attach bottom panel (G) onto side panels (C) and (D) as shown. Ensure wooden dowels are aligned correctly with the holes of matching parts before attaching.
2. Secure bottom panel (G) onto side panels (C) and (D) using screwdriver to turn fitting conformat screw (H2) to fix.

step 4.

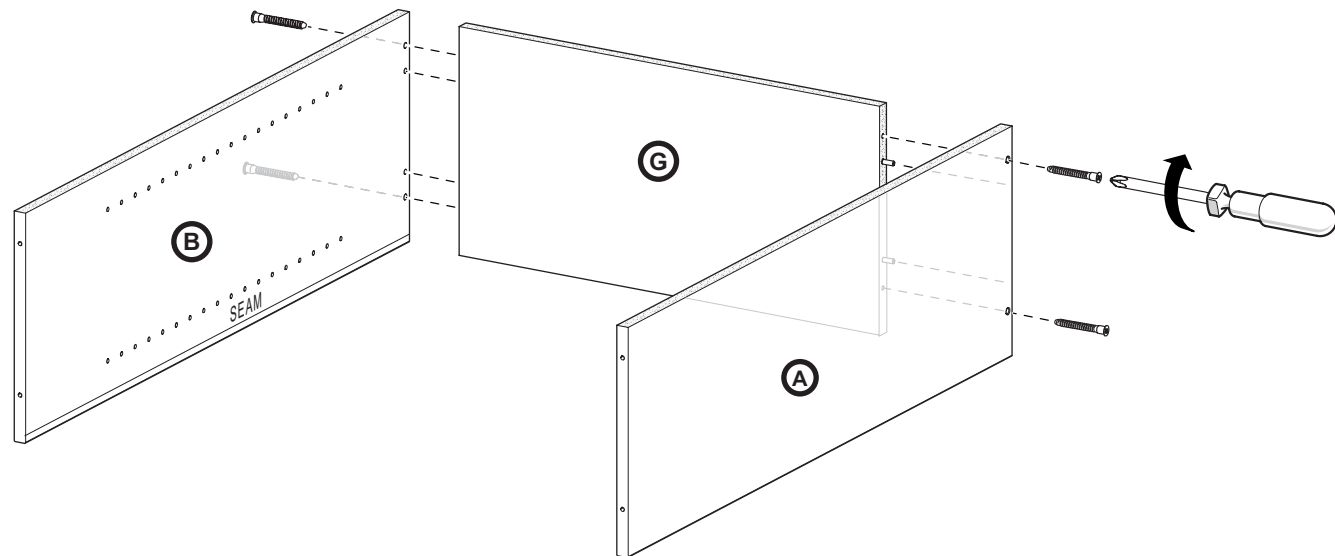


(H2) x 4
conformat screw





1. Attach top panel (G) onto side panels (A) and (B) as shown.
Ensure wooden dowels are aligned correctly with the holes of matching parts before attaching.
2. Secure top panel (G) onto side panels (A) and (B) using screwdriver to turn fitting conformat screw (H2) to fix.

step 5.

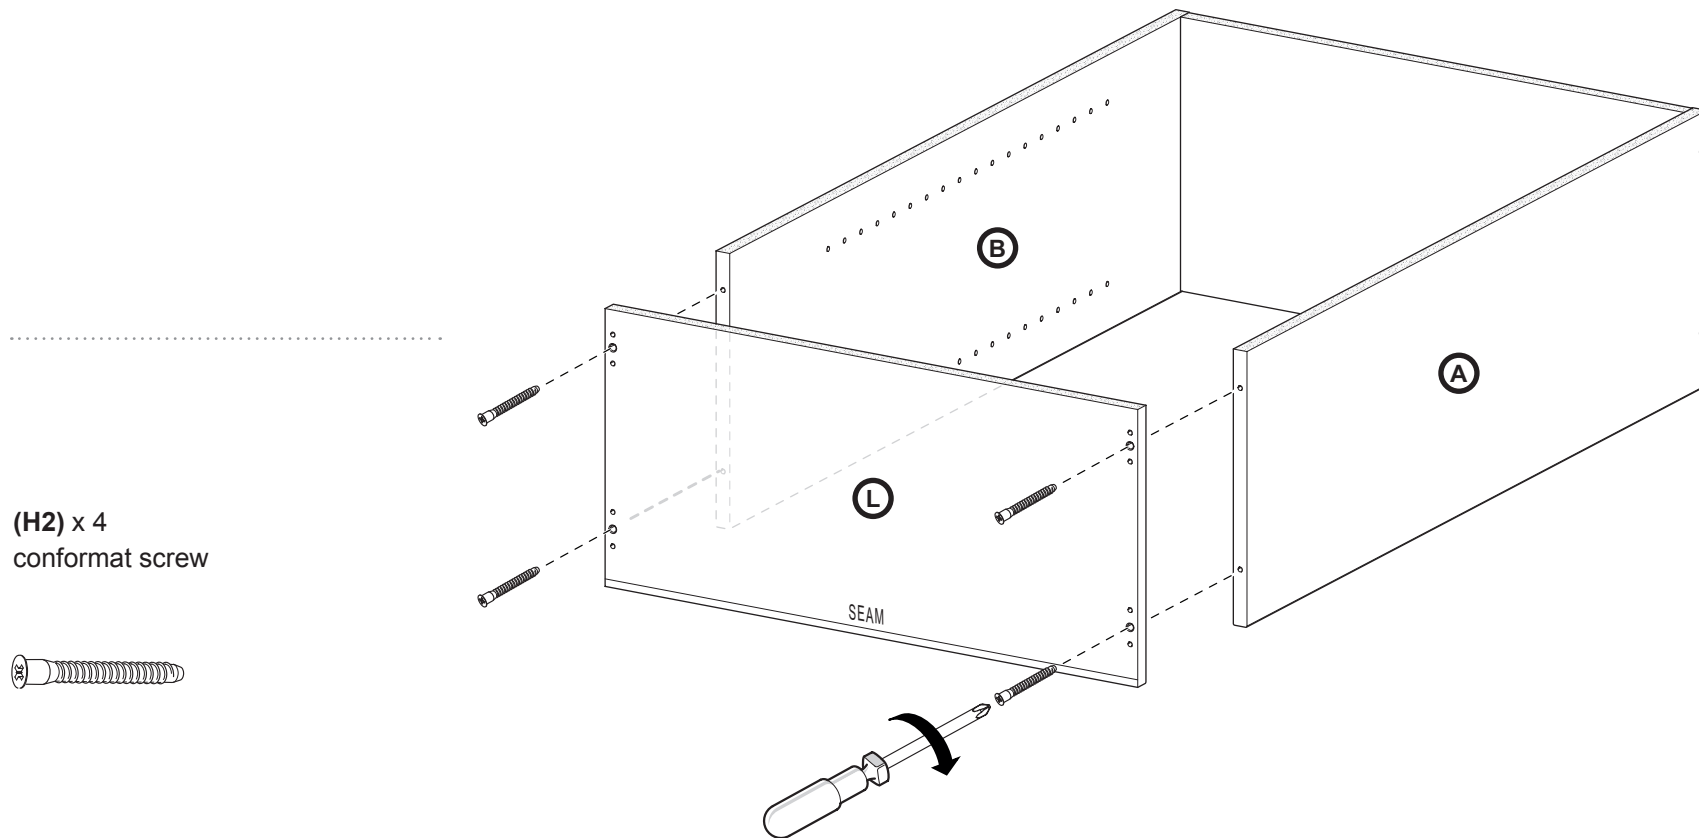


1. Attach central panel (L) onto side panels (A) and (B) as shown.
2. Secure central panel (L) onto side panels (A) and (B) using screwdriver to turn fitting conformat screw (H2) to fix.

step 6.

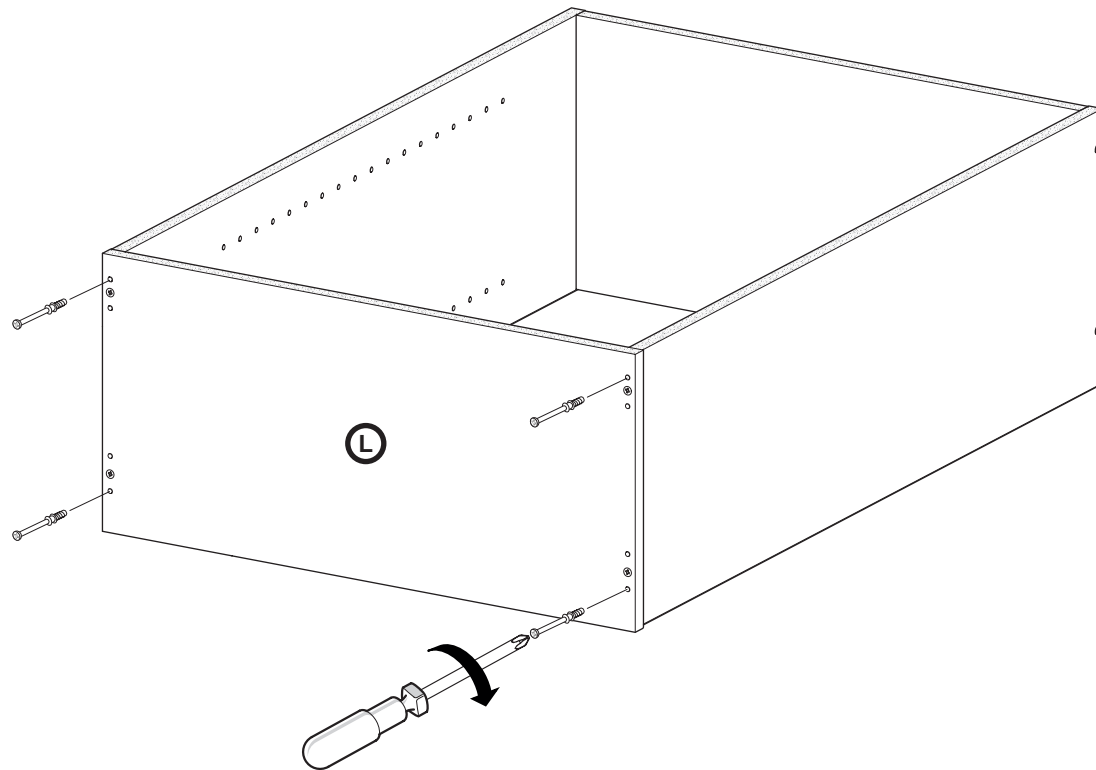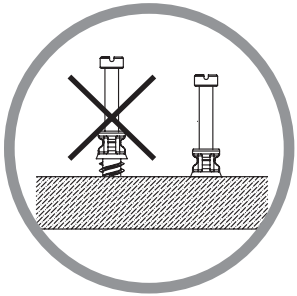


(H9) x 4
assembly dowel



1. Attach 4x assembly dowel (H9) into the pre-drilled holes on central panel (L), screw-in cam bolts must be screwed down flush.

step 7.

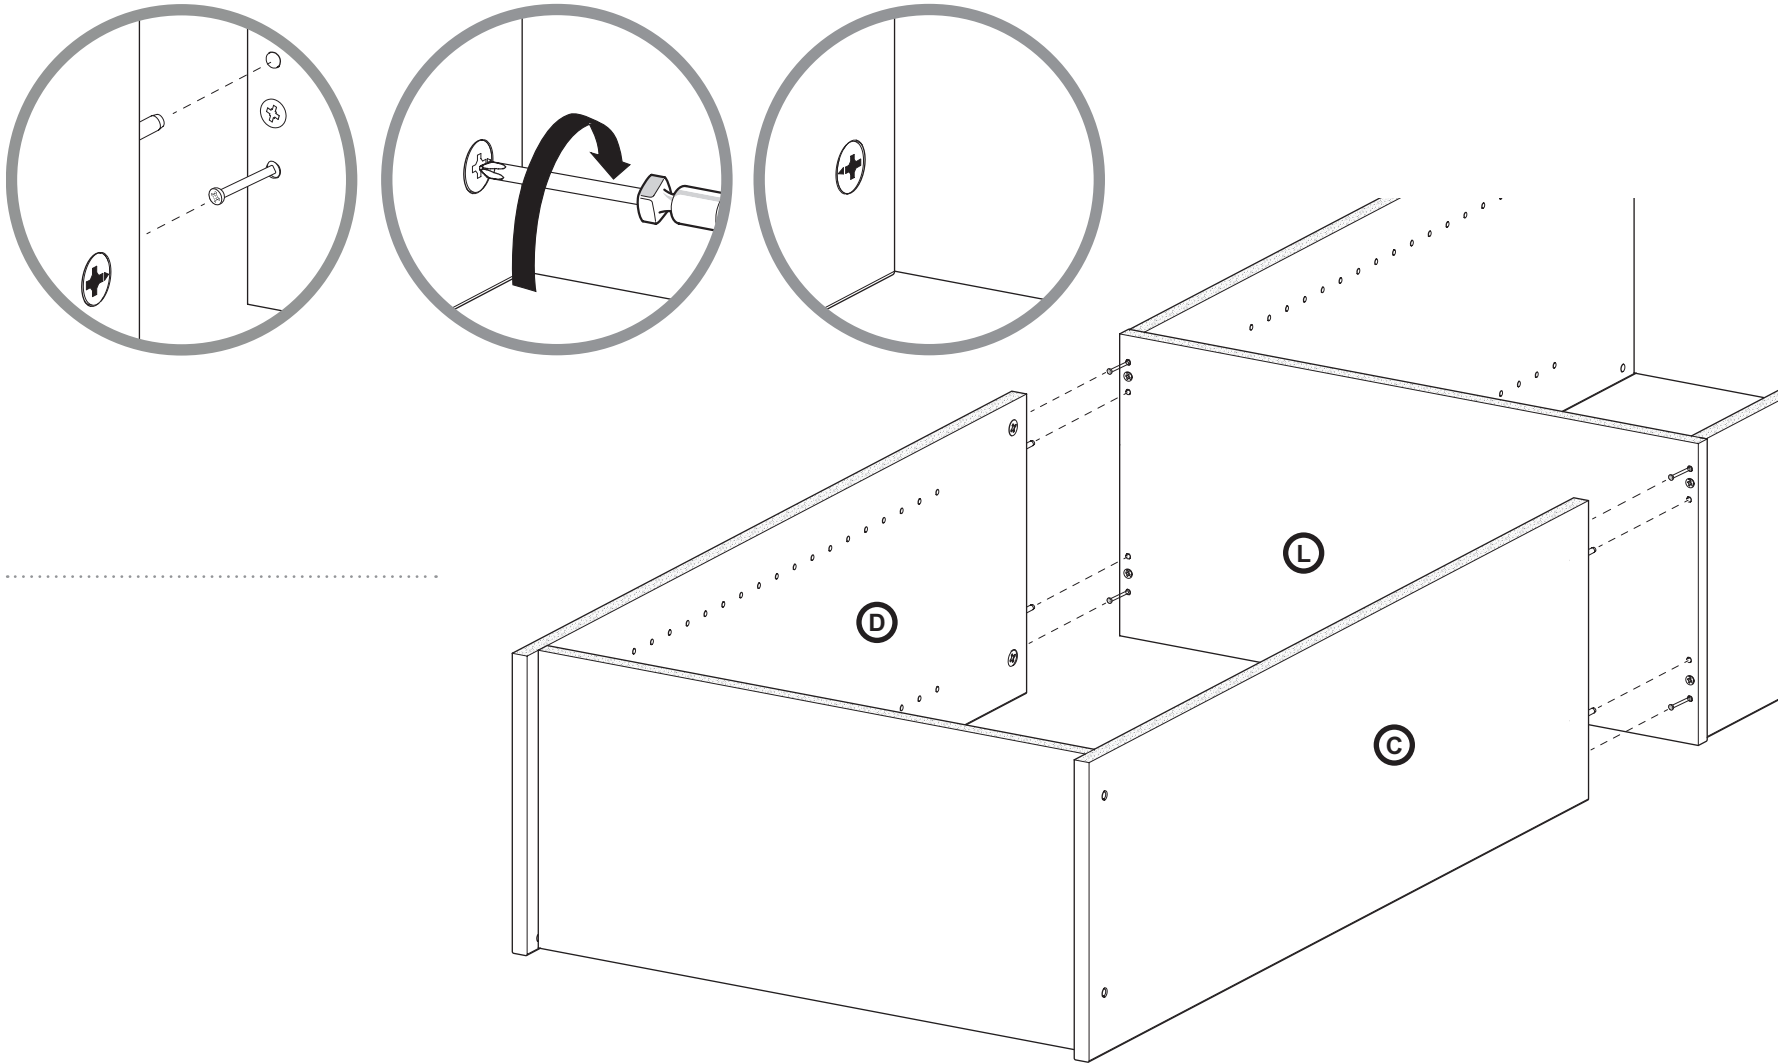

1. Attach central panel (L) onto side panels (C) and (D) as shown. Ensure assembly dowels are aligned correctly with cam of matching parts before attaching.
2. Secure central panel (L) onto side panels (C) and (D) using screwdriver to turn fitting cam to fix.

step 8.


⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Place heaviest items on the lowest surfaces as far back from the front edge as possible.
- Do not set TVs or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.



Use of tip-over restraints may only reduce, but not eliminate, the risk of the tip-over.

*This is a permanent label.
Do not attempt to remove!*

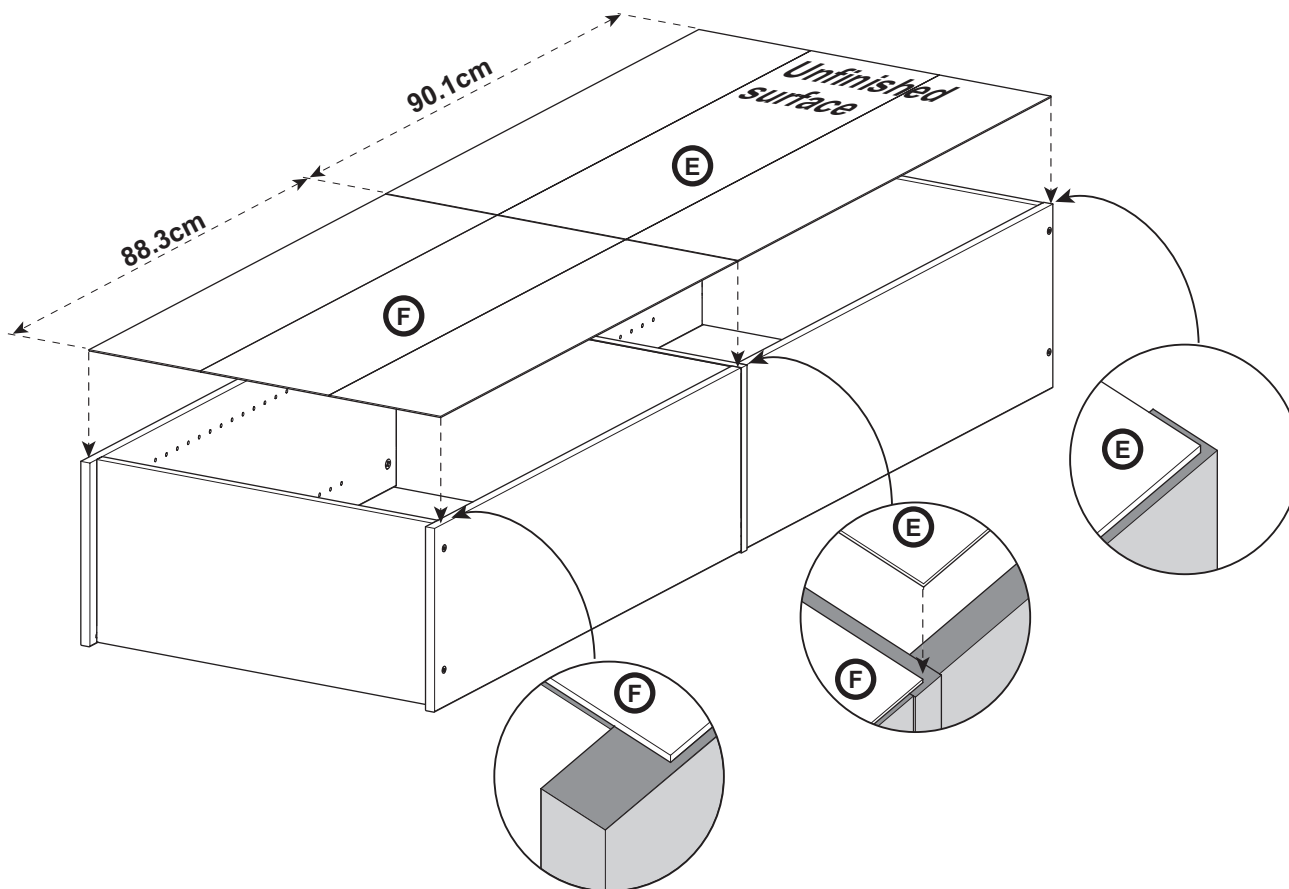


1. Position back panels (E) and (F) as shown.

step 9.

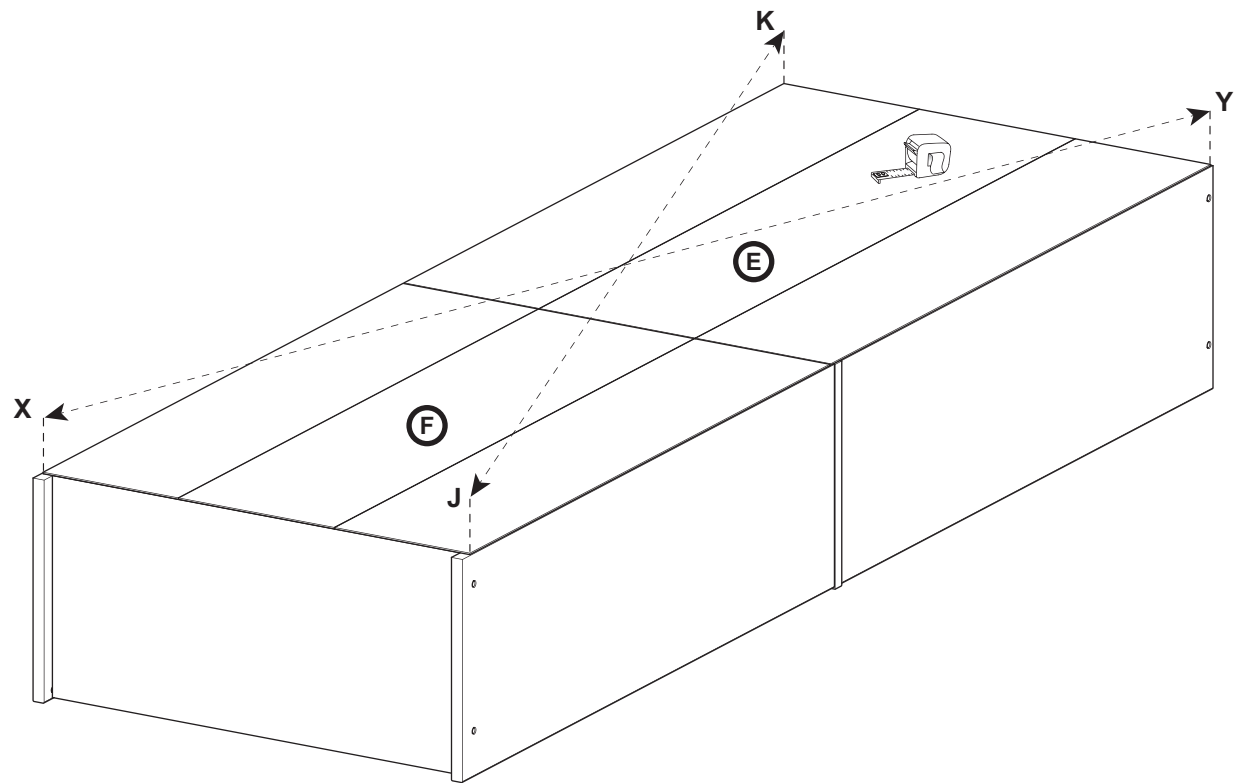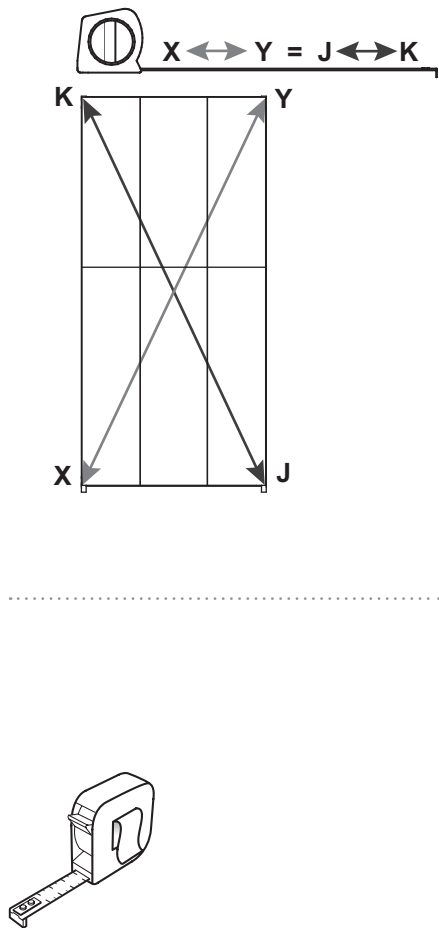


1. Before attaching the back panels (E) and (F), checking the correct allocation.

step 10.


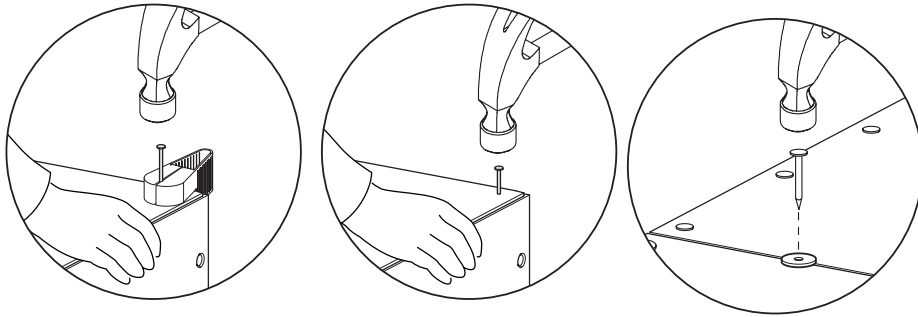


(H4) x 48
nail

(H10) x 4
iron plate




(H5) x 1
nail holder

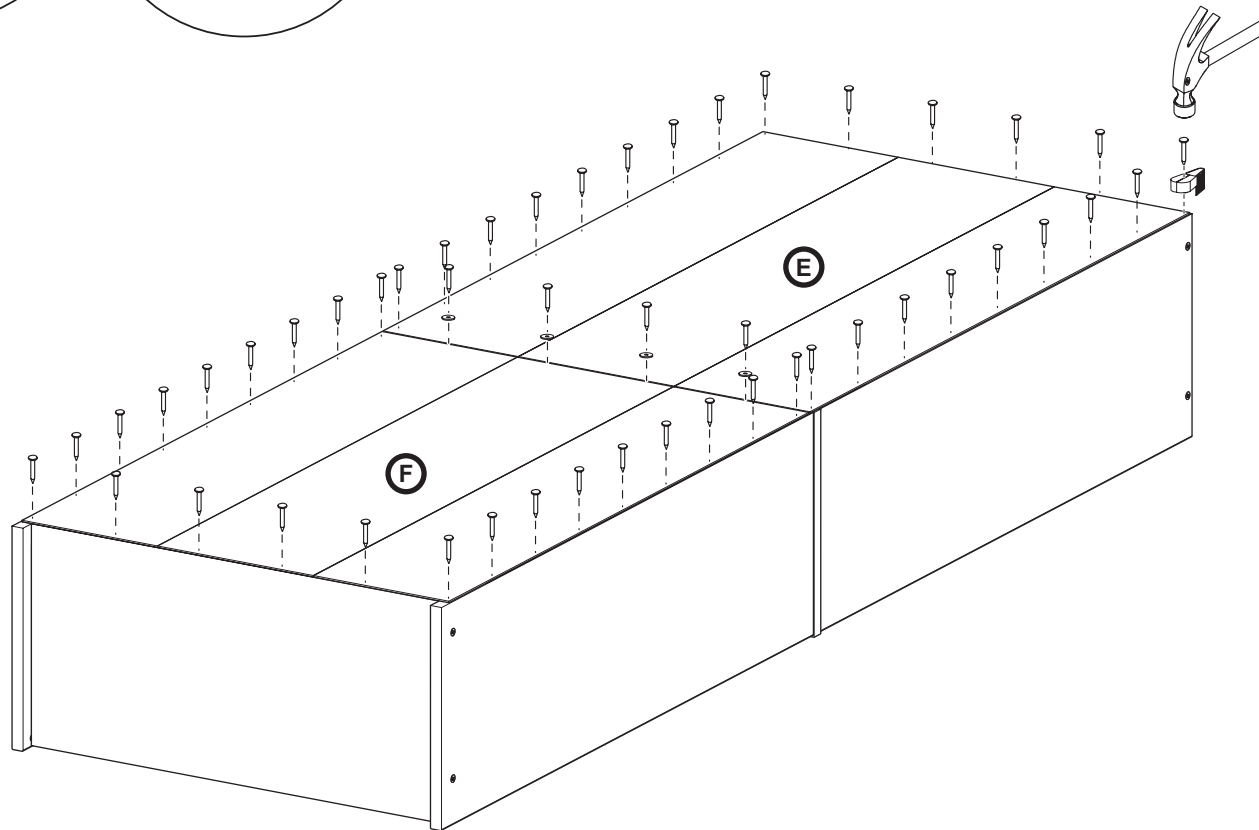

1. Attach back panels (E) and (F) onto back side of the unit using all 44x nail (H4), evenly distributed with the help of the nail holder (H5), and 4 iron plate (H10) with 4x nail (H4), as shown.


step 11.

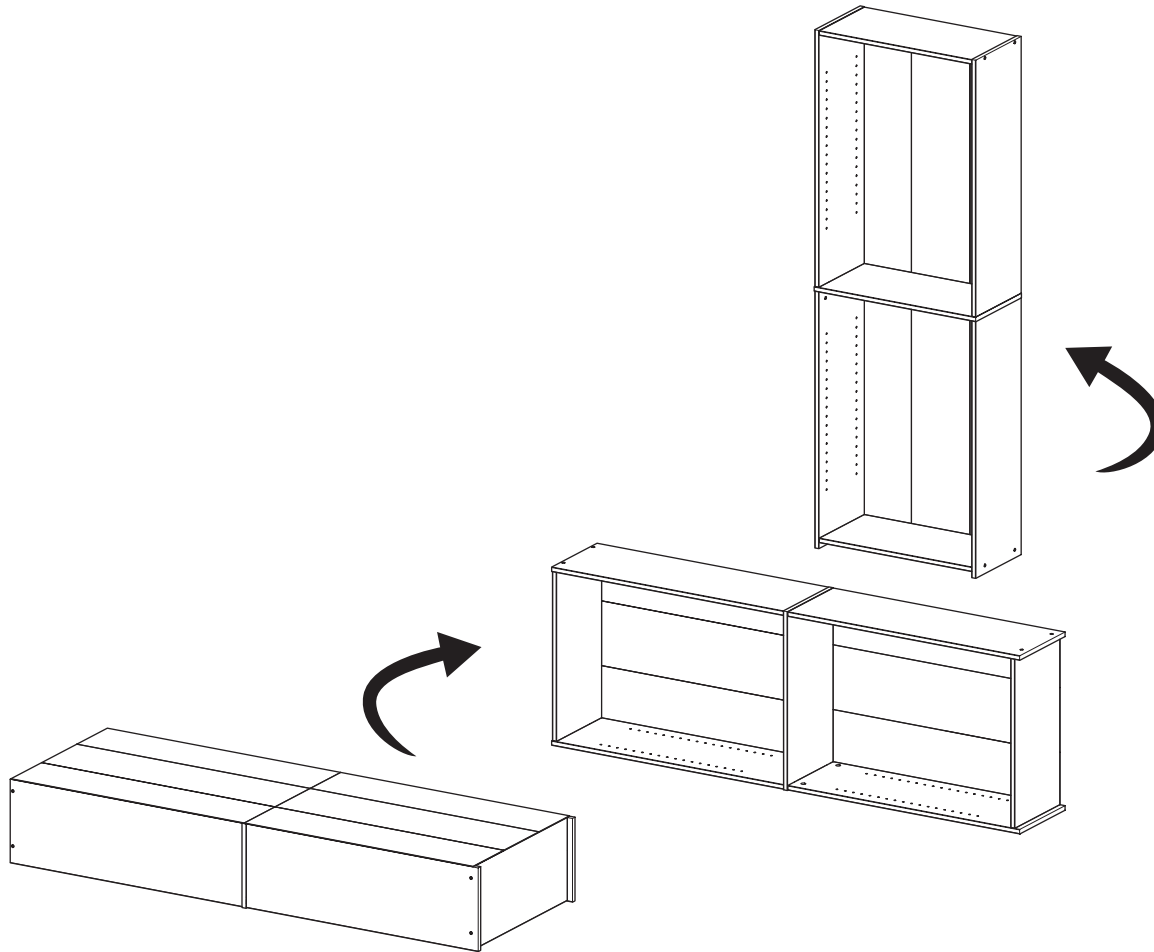



1. With help of an assistant carefully stand up the unit

step 12.

(H6) x 1
screw cover Ø15

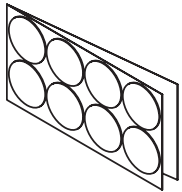


(H7) x 1
screw cover Ø20

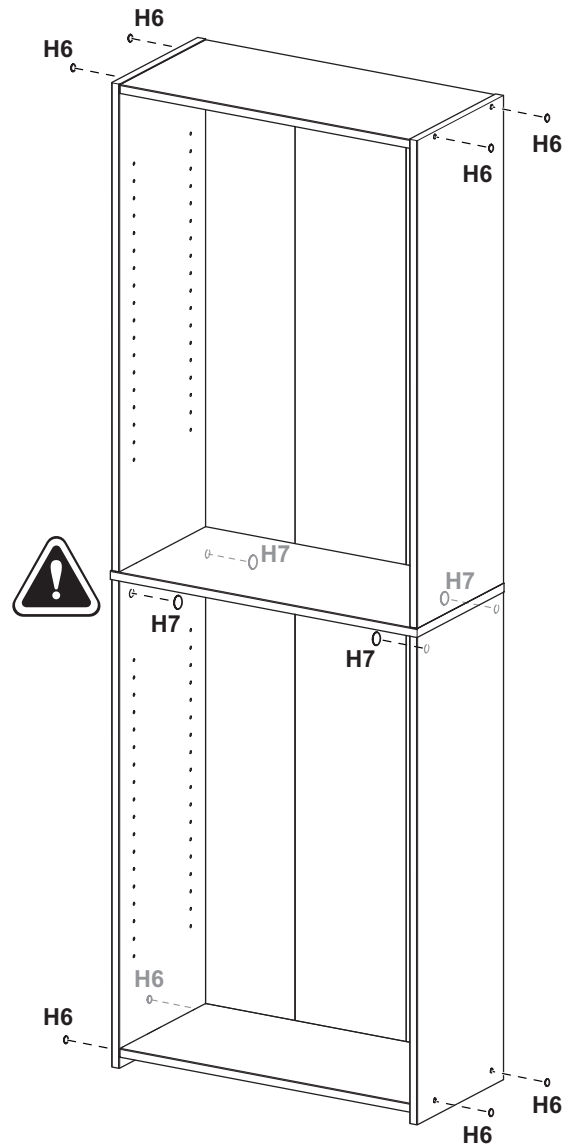

1. Attach screw cover Ø15 (H6) over screwheads.
2. Attach screw cover Ø20 (H7) over camheads.


step 13.

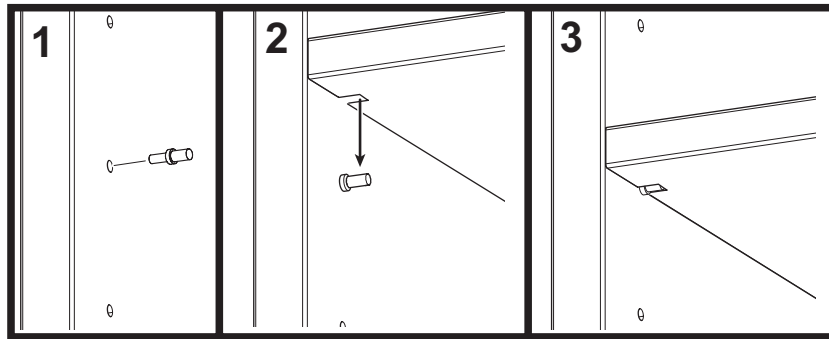

(H3) x 12
shelf pin




1. Insert shelf pin (H3) as shown.
2. Position the shelves (H) on the shelf pin (H3) as shown.
3. Press firmly until you don't see the shelf pin (H3).

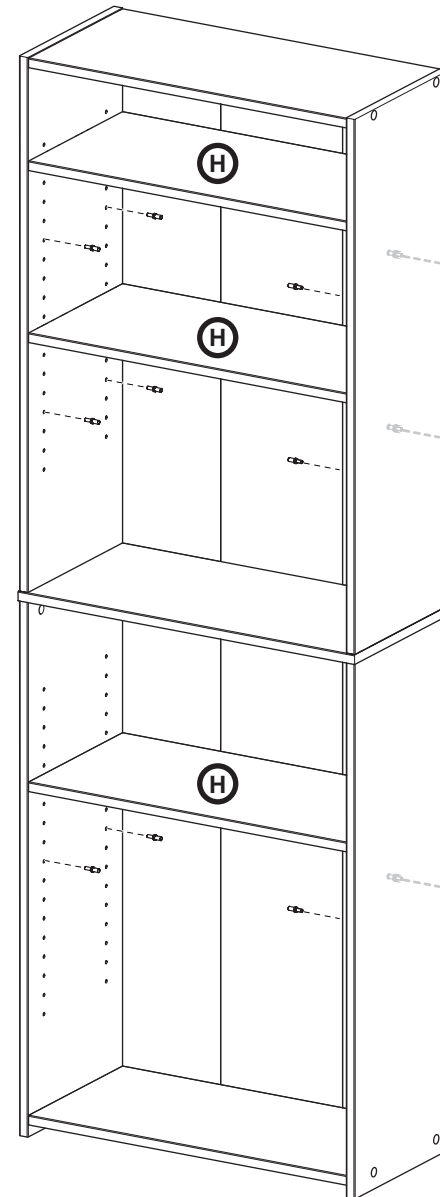


step 14.


All units must be secured to the wall with anti-tip hardware.

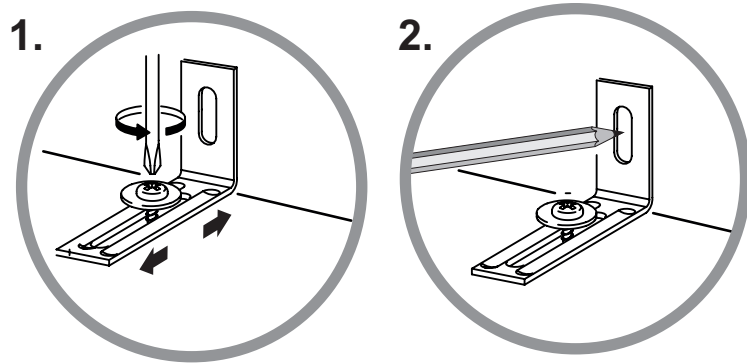

(H11) x 1
L Bracket

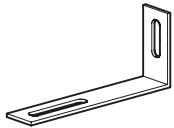



(H15) x 1
3/8" flat-head screw



(H12) x 1
washer





screw driver

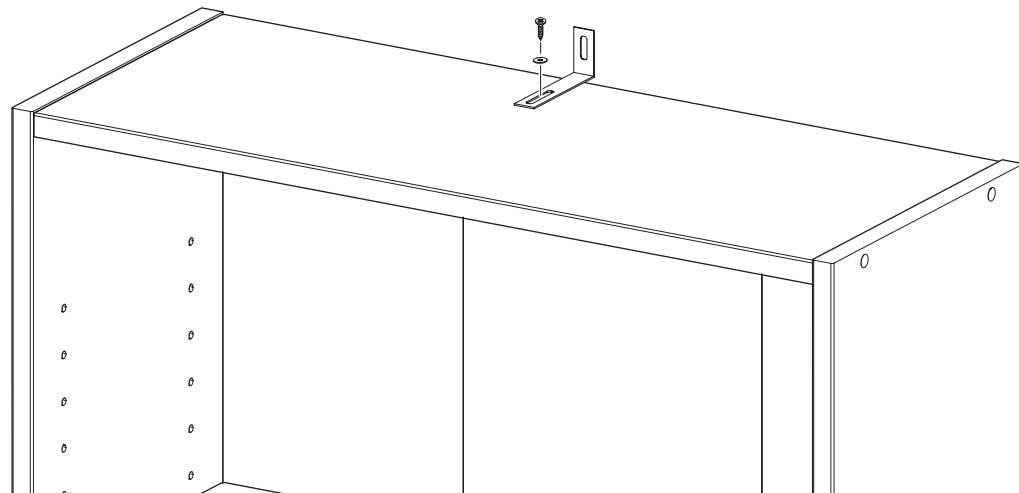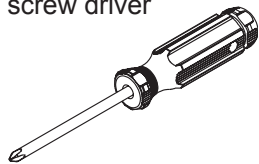


1. Fix the L Bracket (H11) onto the top of the unit using washer (H12) and 3/8" screw (H15).
Do not fully tighten.
2. Align the unit against the wall and mark the location of the L Bracket (H11) against the wall .

step 15.

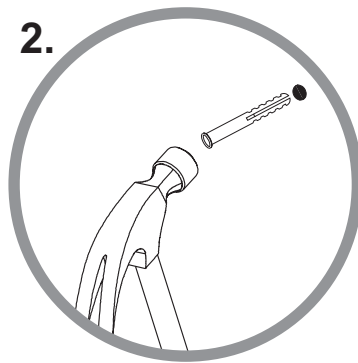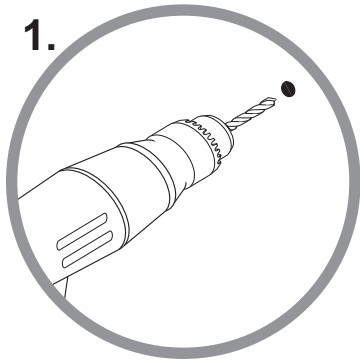


(H13) x 1
wall anchor

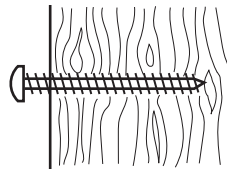


Wood.

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure. Drill 1/8 inch diameter pilot hole, at the height you marked with pencil (picture 1).

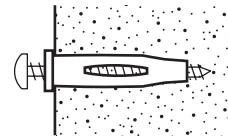

Masonry or brick.



Drill 5/16 inch diameter pilot hole and 3/4 inch deep into the wall at the height you marked with pencil. Drive plastic plug into the hole, using an hammer if needed (picture 1 and 2).

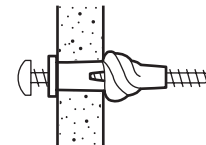

Cavity wall.

Drill 5/16 inch diameter pilot hole at the height you marked with pencil. Drive plastic plug into the hole, using an hammer if needed (picture 1 and 2).

step 16.

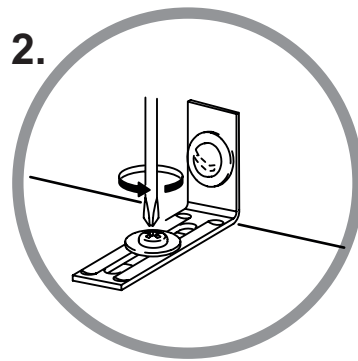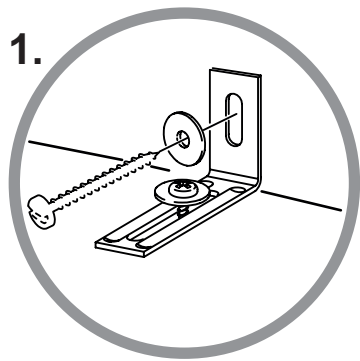


(H12) x 1
washer



(H14) x 1
2 3/8" screw TC



screw driver

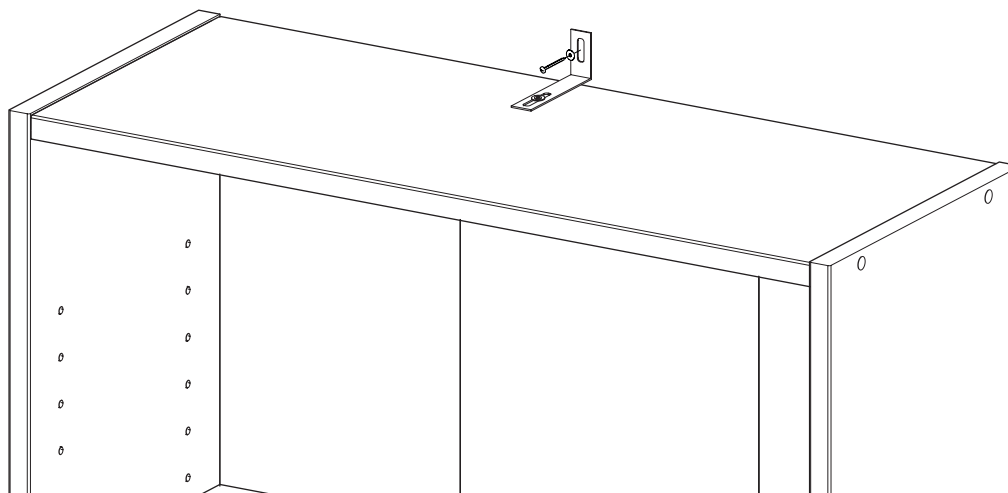

1. Fix the L Bracket (H11) to the wall using washer (H12) and 2 3/8" screw TC (H14).

2. Tighten screw (H15) into unit and screw (H14) into wall .

.....

.....

.....

