

Jabra
Elite 85t



User manual

© 2020 GN Audio A/S. All rights reserved. Jabra® is a trademark of GN Audio A/S. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by GN Audio A/S is under license.

Made in China

MODEL: OTE130R / OTE130L /
CPB130 / 5190001



Declaration of Conformity can be found on
www.jabra.com/doc

1. Welcome.....	5
2. Jabra Elite 85t overview	6
2.1 Included accessories	
3. How to wear.....	8
3.1 Changing EarGels	
4. How to charge.....	10
4.1 Charging the earbuds	
4.2 Fast charge the earbuds	
4.3 Charging the charging case using USB	
4.4 Charging the charging case using the Jabra wireless charging pad	
5. What the LEDs mean	14
6. How to pair.....	16
6.1 Pairing with a mobile device	
7. How to use	17
7.1 Power the earbuds off/on	
7.2 Music controls	
7.3 Call controls	
7.4 ANC, HearThrough and Voice assistant controls	
7.5 Advanced ANC	
7.6 HearThrough	
7.7 Sidetone	
7.8 Mono earbud use	

7.9	Auto-pause music and calls	
7.10	Sleep mode	
7.11	MyControls	
7.12	Multiple call handling	
7.13	Multi-connect	
7.14	Voice assistant	
7.15	Voice guidance and languages	
7.16	Update firmware	
7.17	Reset the earbuds	
8.	Jabra Sound+ app.....	32
9.	Support	33
9.1	FAQ	
9.2	How to care for your earbuds	
9.3	Replacement accessories	
9.4	Using replacement earbuds	
9.5	Using a replacement charging case	

1. Welcome


Thank you for using the Jabra Elite 85t. We hope you will enjoy it!

Jabra Elite 85t features


- **Accept No Compromise.** Jabra Advanced ANC™ gives you fully adjustable noise cancellation in a compact design.
- **Big sound. Small body.** 12mm speakers for massive sound and powerful bass.
- **Talk the talk.** 6-microphone technology and wind protection for outstanding call clarity anywhere.
- **Best buds.** Up to 5.5 hours battery (ANC on), with up to 25 hours in the compact charging case.
- **Semi-open design.** Compact size, oval EarGels and pressure relief vents keep your ears feeling great all day.
- **Made of tough stuff.** IPX4-rated earbuds with a 2-year warranty against dust and water*.
- **MySound is your sound.** Our in-app hearing test tailors your music to your individual hearing profile.
- **Full control.** Choose your own button functions with MyControls.
- **Voice assistant enabled.** Elite 85t works with Siri® and Google Assistant™.
- **Get more with the app.** Download Jabra Sound+ for MySound, MyControls, call settings, updates and more.

2. Jabra Elite 85t overview

Jabra Elite 85t earbuds

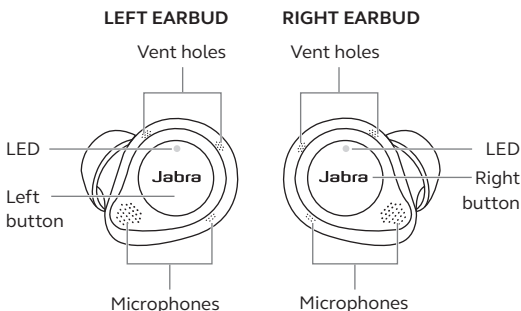


Wireless charging case

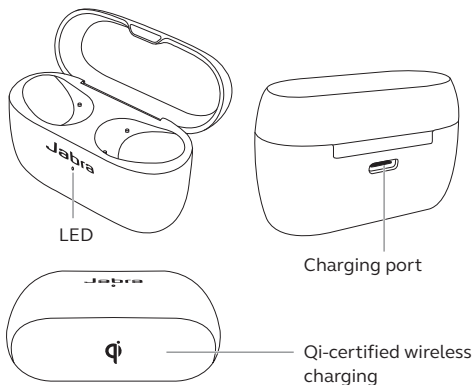


2.1 Included accessories


EarGels

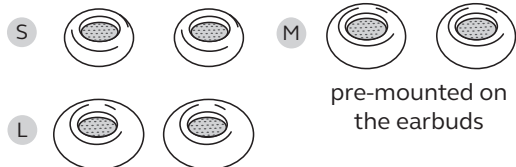

USB-A to USB-C charging cable




3. How to wear

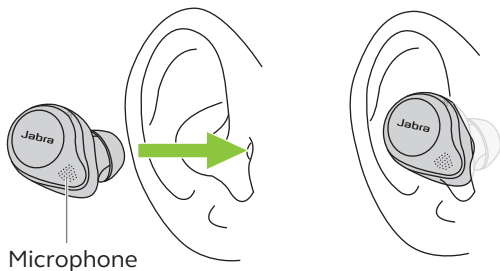


Insert each earbud into your ear and ensure the microphones are pointed towards your mouth.

The EarGels have an oval shape to provide you a better fit in the ear. This means that the body of the earbud does not sit as deeply within the ear. To further improve the comfort and audio experience, each earbud features a semi-open design with pressure relief vents to reduce the 'earplug effect' in your ears.

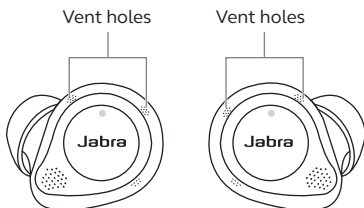

3.1 Changing EarGels

For the optimal audio and ANC experience, it is recommended to try each of the different EarGel sizes. The fit should feel light and comfortable in your ear. The medium EarGels are pre-mounted on the earbuds.

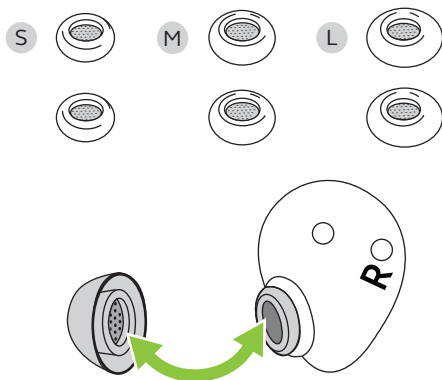

When attaching a new EarGel, ensure the oval mounting tip on the earbud is aligned with the oval attachment on the EarGel. Press the EarGel firmly onto the earbud.


4. How to charge

Get up to 5.5 hours on a single charge with ANC on, with a total charge of up to 25 hours with the charging case. If you use the earbuds without ANC and HearThrough, you'll get even more battery, with up to 7 hours in the earbuds and a total of 31 hours with the charging case.

4.1 Charging the earbuds

Place the earbuds in the charging case and close the lid. It takes up to 2.5 hours to fully recharge the earbuds.

When the charging case is opened, the LEDs on the earbuds will light up red, yellow or green to indicate the battery status of the earbuds. The LED on the front of the charging case indicates the battery status of the charging case.

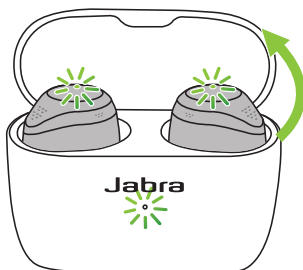


4.2 Fast charge the earbuds

When the earbuds are at low battery, placing them in the charging case for 15 minutes will fast charge the earbuds and give up to 60 minutes of battery. Fast charging the earbuds requires that the charging case has a minimum of 30% battery.

You can see the current battery status of the earbuds and charging case using the Jabra Sound+ app.

4.3 Charging the charging case using USB

Plug the supplied USB-A to USB-C charging cable into the charging case and a USB-A power supply or certified wall charger. It takes up to 3 hours to fully charge the earbuds and the charging case.

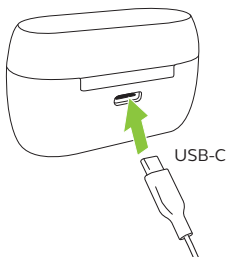


The charging case uses the standard USB voltage of 5v $\pm$ 0.25v. It is not recommended to charge the earbuds using a power supply with a higher voltage.

Note: Third-party USB chargers may take longer to charge the charging case.

4.4 Charging the charging case using the Jabra wireless charging pad


The charging case is Qi-certified. Place the charging case in the center of the Jabra wireless charging pad. The LED on the charging case will flash to indicate the charging case is placed correctly. It takes up to 3.5 hours to fully charge the earbuds and the charging case.

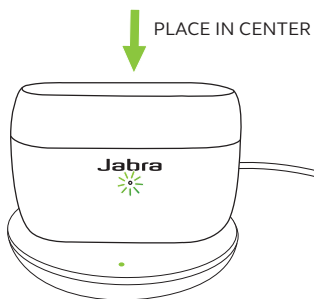

Because wireless charging pads take longer to fully charge a device, this may result in the device becoming warm. The elevated temperature is within safe operating requirements and has no bearing on the lifespan or performance of the device.


Note: Third-party wireless charging pads may take longer to charge the charging case.

5. What the LEDs mean

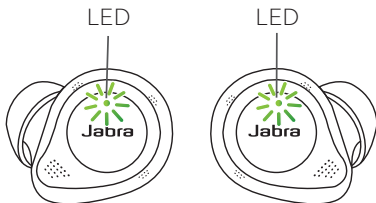


EARBUD STATUS

- | | |
|--|---|
|  High battery/Power on |  Power off |
|  Medium battery |  Pairing |
|  Low battery |  Resetting |

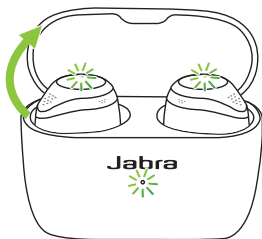


BATTERY STATUS WHEN OPENING CHARGING CASE

- | | |
|---|---|
|  High battery |  Low battery |
|  Medium battery |  Critically low battery (earbuds not charging) |

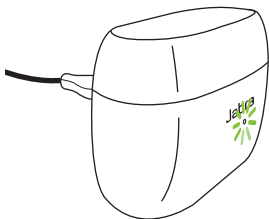

CHARGING CASE STATUS WITH USB CABLE

- | | | | |
|---|----------------|---|---|
|  | High battery |  | Firmware updating |
|  | Medium battery |  | Firmware update error
(see Section 7.16) |
|  | Low battery | | |
|  | Fully charged | | |

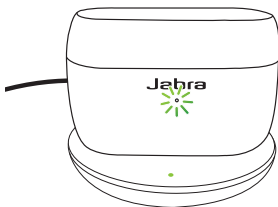

CHARGING CASE STATUS WITH WIRELESS CHARGING PAD

- | | | | |
|---|----------------|---|---|
|  | High battery |  | Firmware updating |
|  | Medium battery |  | Firmware update error
(see Section 7.16) |
|  | Low battery | | |

Note: When fully charged, the LEDs on the charging case and wireless charging pad will turn off.


6. How to pair

6.1 Pairing with a mobile device



1. Power on the earbuds by removing them from the charging case. Alternatively, press the **Left** and **Right** buttons simultaneously to power the earbuds on.
2. Press and hold (3 sec) the **Left** and **Right** buttons simultaneously until the earbud LED flashes blue. The earbuds will now be ready to pair to your phone.
3. Wear the earbuds and follow the voice-guided pairing instructions to pair to your mobile device.

7. How to use


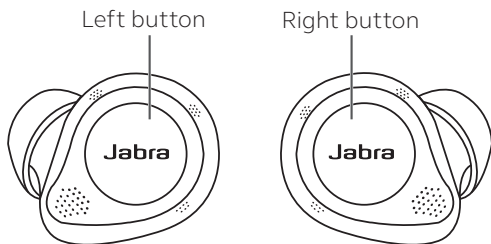


7.1 Power the earbuds off/on

Place the earbuds in the charging case to power them off, or remove them from the charging case to power them on.

Alternatively, the earbuds can be manually powered off by pressing the **Left** and **Right** buttons on the earbuds simultaneously. To power on, press the **Left** and **Right** buttons simultaneously.



7.2 Music controls

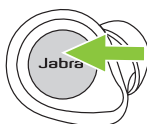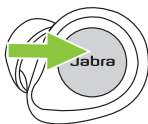

Left earbud	Function	Right earbud
	Play/pause music	Press the Right button when not on a call
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	
Double-press the Left button when listening to music	Next track	
Triple-press the Left button when listening to music	Restart track or previous track	
Repeat to skip to the previous track		

All button functions can be reassigned using MyControls in the Jabra Sound+ app.



7.3 Call controls

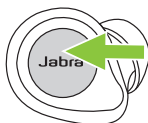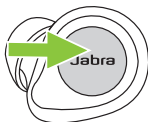

Left earbud	Function	Right earbud
Press the Left or Right button	Answer call	Press the Left or Right button
Double-press the Left or Right button	End/Reject call	Double-press the Left or Right button
Press the Left or Right button	Mute/unmute microphone	Press the Left or Right button
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

7.4 ANC, HearThrough and Voice assistant controls

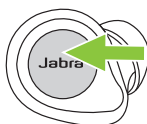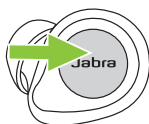

Left earbud	Function	Right earbud
Press the Left button when not on a call	Cycle between ANC and HearThrough	
	Activate Voice assistant (Siri, Google Assistant)	Double-press the Right button when not on a call


All button functions can be reassigned using MyControls in the Jabra Sound+ app.

7.5 Advanced ANC

Advanced Active Noise Cancellation (ANC) counters noise by detecting and analyzing the pattern of incoming sound, and then generating an anti-noise signal to cancel noise out. As a result, you experience a reduced level of surrounding noise during music and calls.

Left button	ANC
	Cycle between ANC and HearThrough Press the Left button when not on a call

Advanced ANC can be adjusted using the Jabra Sound+ app to suit your specific hearing profile

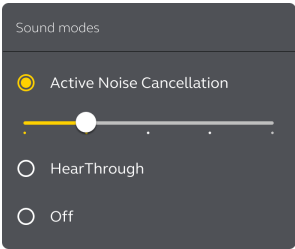


By default, ANC cannot be turned on/off during calls. However, ANC on/off in calls can be added to the earbuds using MyControls in the Jabra Sound+ app.

7.6 HearThrough

HearThrough lets you pay attention to your surroundings and engage in conversation, when not on a call, without needing to remove the earbuds. The microphones pick up surrounding sounds and transmit them to the speakers.

Left button	HearThrough
	Cycle between ANC and HearThrough Press the Left button when not on a call


HearThrough can be adjusted using the Jabra Sound+ app.

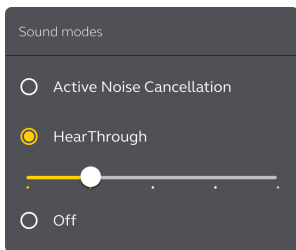

7.7 Sidetone

Sidetone enables you to hear your own voice when you are on a call. The benefit of Sidetone is that it enables you to determine how loud you are speaking.

Sidetone is on by default during calls and can be turned on/off using the Jabra Sound+ app.

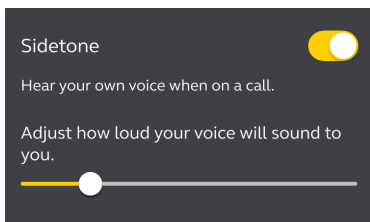


By default, Sidetone on/off cannot be controlled using the earbuds. However, it can be added to the earbuds using MyControls in the Jabra Sound+ app.

7.8 Mono earbud use

The right earbud can be used individually for mono music playback or for calls. When used as a mono earbud, the right earbud retains its current button functionality.

To use the right earbud as a mono earbud, place it in your ear and place the left earbud in the charging case. You may need to tap the button on the right earbud to activate mono earbud use.


Right button	Mono earbud use	
	Play/pause music	Press the Right button when listening to music
	Answer call	Press the Right button
	End/Reject call	Double-press the Right button
	Mute/unmute microphone	Press the Right button when on a call
	Activate Voice assistant (Siri, Google Assistant)	Double-press the Right button when not on a call
	Adjust volume	Use the volume controls on the paired mobile device

The earbuds will automatically relink when you place both of them in your ears.

7.9 Auto-pause music and calls

When one of the earbuds is removed from your ear, music will automatically pause.

To unpause the music, return the earbud to your ear within 60 seconds. After 60 seconds, the music can be manually unpaused by pressing the **Right** button.

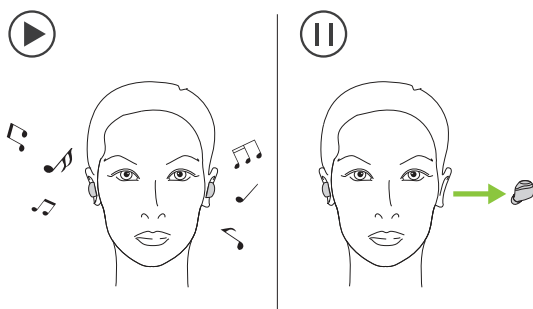


7.10 Sleep mode

To conserve battery, the earbuds will automatically power off when they are out of range of your mobile device for 15 minutes and are not in the charging case, or when they have been inactive for 30 minutes.

To power the earbuds on, press and hold (1 sec) the **Left** and **Right** buttons simultaneously. Alternatively, place them in the charging case and then take them back out.

Sleep mode can be configured in the Jabra Sound+ app.

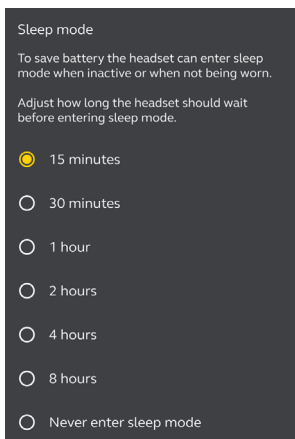

7.11 MyControls

MyControls is a feature in the Jabra Sound+ app that enables you to reassign any function to each of the earbud buttons, offering you the flexibility to configure the earbuds precisely to your personal preference.

By default, the functions listed below cannot be controlled using the earbuds, however these functions can be added to the earbuds using MyControls in the Jabra Sound+ app.

- ANC on/off in calls
- Sidetone on/off
- Hold current call and answer incoming call
- Switch between held call and current call

7.12 Multiple call handling

The earbuds can accept and handle multiple calls at the same time.

Multiple call handling		
	End current call and answer incoming call	Press the Left or Right button
	Reject incoming call, when on a call	Double-press the Left or Right button

7.13 Multi-connect

The earbuds can be paired to two mobile devices at once, and can accept incoming calls from either mobile device.

To pair to two mobile devices, use the normal pairing process separately for each mobile device (refer to section 6). After pairing to both mobile devices, you will need to select the Jabra Elite 85t again on the first mobile device in the Bluetooth settings to complete the pairing to both mobile devices.

Note: Only one of the mobile devices will have an active audio channel, and voice assistant will be activated on the last paired mobile device.

7.14 Voice assistant

Right button

Voice assistant



Activate
Siri, Google
Assistant

Double-press the **Right**
button when not on
a call

Voice assistant settings can be configured using the Jabra Sound+ app.

7.15 Voice guidance and languages

Voice guidance can be turned on/off and the language can be changed using the Jabra Sound+ app.

The following languages are available: English, French, German, Japanese, Mandarin Chinese, Korean.

7.16 Update firmware

The Jabra Elite 85t can be updated to the latest firmware version using the Jabra Sound+ app.

If notifications are enabled in the Jabra Sound+ app, you will receive an automatic notification when a firmware update is available.

After a firmware update, if the LED on the charging case flashes red, this indicates that the charging case was not updated correctly. To complete the firmware update correctly, connect the charging case to a power supply, remove the earbuds from the charging case, place the earbuds back in the charging case, and then close the lid for 5 seconds. This will complete the firmware update.

7.17 Reset the earbuds

Resetting the earbuds clears the list of paired devices and resets all settings.

1. Place both earbuds in the charging case.
2. Press and hold (10 sec) the **Left** and **Right** buttons on the earbuds simultaneously until the LEDs on the earbuds flash purple.
3. Close the lid of the charging case for 5 seconds to complete the reset.

The earbuds will need to be re-paired to your mobile device. Remember to delete/forget the pairing in the Bluetooth menu on your mobile device.

8. Jabra Sound+ app



Jabra Sound+ app



Personalize your music
with MySound



Customize ANC, HearThrough
and MyControls



Register your
2-year warranty



9. Support

9.1 FAQ

View the FAQs on Jabra.com/help/elite85t


9.2 How to care for your earbuds

- Always store the earbuds in the charging case and safely protected.
- To prevent the depletion of the battery lifetime or capacity, avoid storing the earbuds in hot or cold environments, such as a closed car in summer, or in winter conditions.
- It is recommended to store the earbuds between -20°C and 45°C (-4°F and 113°F).
- Do not store the earbuds for extended periods of time without recharging them (max. three months).
- If the earbuds or the charging case become dirty, it is recommended to clean them with a soft, lint-free cloth that has been dampened with clean water.
- The charging case uses the standard USB voltage of 5v +- 0.25v. It is not recommended to charge the earbuds using a power supply with a higher voltage.


9.3 Replacement accessories

Replacement or additional accessories can be purchased online at jabra.com/accessories.


Left and right earbud set

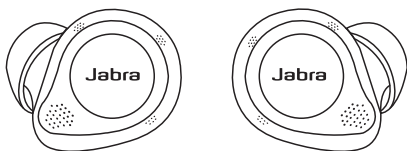


Charging case

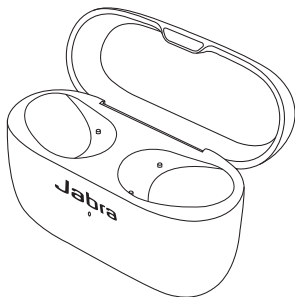


EarGels

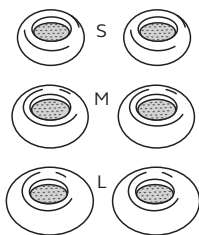

Jabra wireless charging pad

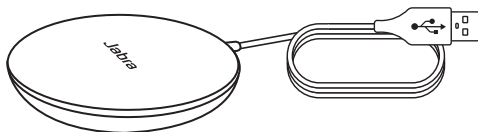

USB charging cables

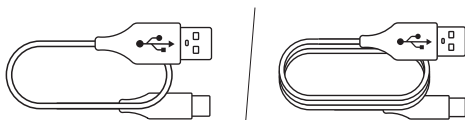

9.4 Using replacement earbuds

1. Place the replacement earbuds into the charging case and close the lid.
2. Open the charging case lid and remove the earbuds.
3. Wear the earbuds and follow the voice instructions to pair to your mobile device.
4. Update the earbud firmware using the Jabra Sound+ app.

9.5 Using a replacement charging case

Before using a replacement charging case for the first time, it will need to be synced with your current earbuds and charged for 1 hour.

To begin syncing, place your current earbuds inside the replacement charging case and close the lid for 10 seconds. If the LED on the charging case flashes purple this indicates that the firmware is being updated. Please wait until the LED stops flashing purple before opening the charging case.