



Product information for:

electric steam steriliser




Please read and retain this important information for future reference.

Ref No: 0300031
Safe material:
Materials listing: polypropylene, polycarbonate, AL Alloy and silicone.
Testing Standard:
GB 4706.1-2005
GB 4706.19-2008
Model No G-936C
Inspection Result: PASSED

EN


electronic steam steriliser

Before using your steriliser, please ensure that you read these instructions thoroughly. Please read and retain this information for future reference.

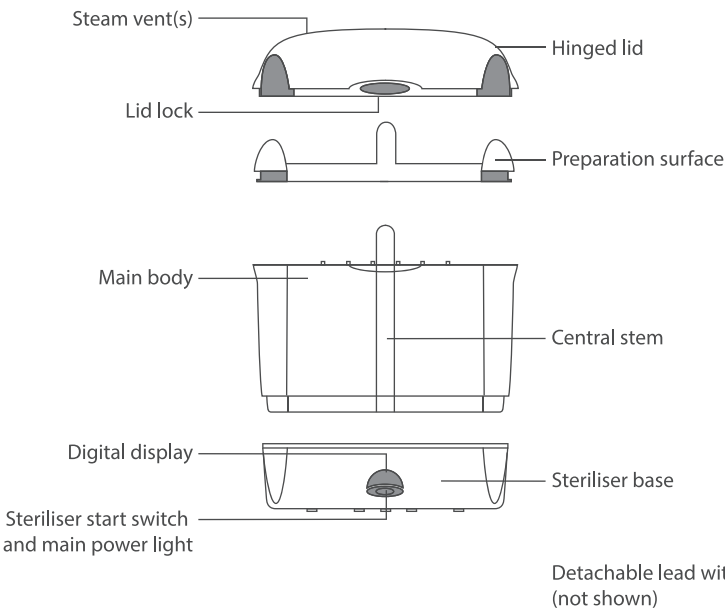

BEFORE FIRST USE – TO ENSURE BEST HYGIENE


1. Insert the central stem into the main body from the bottom.
2. Remove all items from inside the steriliser base.
3. Pour 80ml of water into the steriliser.
4. Close the lid, connect the lead into the back of the steriliser and plug into the mains supply. The digital display will show 0.
5. Press the steriliser start switch and allow the steriliser to progress through a cycle until the digital display shows 3.
6. Switch off at the mains and unplug the lead. Take care: the unit will be hot. Remove the main body and wipe clean any remaining water from the base.

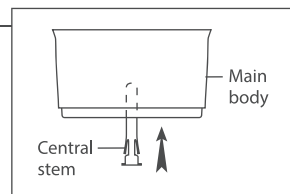

STERILISING BOTTLES AND FEEDING EQUIPMENT

This steriliser is designed for use with all Tommee Tippee bottles and feeding accessories (except bottle brush). The steriliser can fit 5 closer to nature feeding bottles.

1. Before sterilisation, wash all bottles and feeding accessories to remove any milk residues. Separate all components i.e. teats, bottles, screw caps etc.
2. Measure exactly 80ml of water into the steriliser base (Tommee Tippee feeding bottles may be used for measuring water).
3. Load the bottles neck downwards into the slots provide in the bottom of the main body.
4. Place the screw rings on the central stem.
5. Fit the preparation surface in place, and pack the teats and other accessories onto it. Ensure that all the items are arranged so that the steam can circulate around all surfaces, and any condensation can drain easily.
6. Close and lock the lid.
7. Plug the lead into the back of the steriliser, then into the mains power supply and switch on. The digital display will show 0.
8. Press the power button to start the sterilisation cycle.
9. As the steriliser proceeds through the cycle the digital display will indicate the progress:

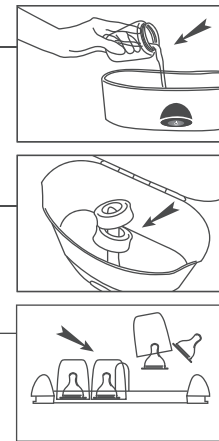

H Heating up



5 Sterilising



C Cooling



3 Cycle completed If the steriliser is left unopened the contents will remain sterile for up to 3 hours.



2 Counting down The contents will remain sterile for 2 hours if the Steriliser is unopened.




1 Counting down The contents will remain sterile for 1 hour more if the Steriliser is unopened.



0 Flashing Indicates that the contents must be re-sterilised. Switch off the mains.

The steriliser can be used for other Tommee Tippee products eg. breast pump, drinking cup. Remove the central stem from the main body to make more space for bigger items.

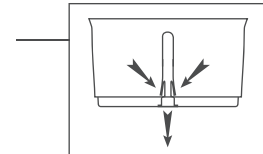

CARE OF YOUR TOMMEE TIPPEE ELECTRONIC STEAM STERILISER

- After each use, pour away any remaining water from the steriliser base.
- You should descale your steriliser every 4 weeks to ensure it continues to work efficiently. Electronic steam steriliser descaling products are widely available. Use according to the manufacturer's instructions.
- Do not use softened water in the steriliser. The hot plate is easily damaged and must be treated with care. Do not use metal objects or scourers.
- Do not use bleach or chemical sterilising solutions/ tablets in your steriliser or on products to be sterilised.
- Do not use abrasive or anti-bacterial material, or scourers to clean the steriliser.

IMPORTANT SAFETY INFORMATION

- Always use on a flat, heat resistant surface.
- Always ensure that the correct amount of water is in the steriliser before switching on.
- If you put too little water into the steriliser it will not operate correctly, and the digital display will display C flashing.
- Do not open whilst in use as this product contains boiling water. Beware of escaping steam from vents in the lid.
- Always wait until the digital display shows 3, 2 or 1 before opening the steriliser. This allows time for the items to cool before handling.
- Take care when opening the steriliser lid after use to avoid risk of scalding
- Keep all components out of reach of children.
- Never place items on top of the steriliser.
- Always unplug from the mains when not in use.
- Do not immerse the steriliser base in water.
- When you are ready to remove the contents from the steriliser, switch off and unplug at the mains first.
- Wash your hands thoroughly before handling sterilised items.
- To stop the steriliser during the cycle, hold down start switch for 6 seconds and then wait to cool for 3 minutes before opening.
- The lead supplied is for use with the Tommee Tippee Electronic Steam Steriliser only. Do not use any other electrical lead with this product. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or it's service agent.
- If you are in any doubt about how to wire a plug or replace a fuse safety, please consult a qualified electrician.
- Children should be supervised to ensure that they do not play with this appliance.

Problem Solving

Problem	Check
Steriliser will not work	Check the mains lead is plugged into the unit and the mains socket is switched on. Check the fuse is in the plug. Check the socket by plugging in another appliance.
Excessive steam	Parts incorrectly loaded. Switch off, allow to cool and reload.
Bottles come out with marks	Unit needs descaling. Refer to care instructions.
Cycle takes too long to complete	Too much water. Use exactly 80mls.
Flashing C “E”	Sterilisation has not been operated correctly(likely cause – too little water). Do not open unit displaying flashing E.
Flashing E “E”	Error has occurred. It is safe to open unit. Empty residual water. Switch on/off – mains – restart programme.

IMPORTANT WARNINGS!

Keep this instruction sheet for future reference as it includes important information.

- Misuse of the product may result in the risk of fire, electric shock and/or personal injury.
- This appliance is intended for household use only. Do not use outdoors.
- Before plugging in the steriliser for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.
- Ensure water has been added to the unit before switching the unit on.
- Do not immerse in water. To protect against fire, electric shock and injury to persons. Do not immerse cord, plugs, or other parts of the unit in water or other liquid.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- User maintenance other than cleaning and de-scaling is not required for this product. Cleaning and user maintenance shall not be made by children.
- **The surfaces are liable to get hot during use.**
- Do not touch hot surfaces use handles and knobs.
- The heating element surface is subject to residual heat after use.
- When in use the steriliser contains hot water and steam. Keep hands away from steam vents as it can cause burns and scalds. Use in a well ventilated area.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid hazard. If the damage is from new the unit must be returned to the distributor. If within a retail warranty period please refer to warranty card enclosed. **Any questions ? visit our website www.tommeetippee.cn**
- Always use on a flat, heat resistant surface.
- Do not move appliance when in use.
- Do not let the cord hang over edge of kitchen work surface or touch hot surfaces.

CLEANING INSTRUCTIONS

After each use pour away any remaining water from the sterilizer base did you know that the build up of limescale can negatively impact the performance of the steriliser? We recommend carrying out the descaling process every 4 weeks to ensure it continues to work effectively. Living in a hard water area can produce limescale quicker than other areas therefore descaling many be required sooner.

Electric steam sterilizer descaling products are widely available . Use according to the manufacturer's instructions. Alternatively you can use white vinegar to to de-scale your sterilise: **Warning: only use white vinegar no variants**

1. Empty the steriliser, wiping down the inside with a sponge or damp cloth.
2. Pour in 250ml of white vinegar.
3. Leave for 30 minutes, or up 24 hours dependent on the extent of the limescale.
4. Pour any remaining liquid down the sink. Rinse the interior of the steriliser well with cool water, using a clean sponge or damp cloth to remove any build-up that came loose as a result of the descaling/cleaning process.
5. Plug your steriliser back in, adding the regular volume of water for a normal cycle. Turn on and run for 5 minutes which will remove any additional build-up.

Do not use metal objects or scourers.
Do not use bleach or chemical sterilizing solutions/tablets in your sterilizer or on products to be sterilized.
Do not use abrasive or anti-bacterial material, or scourers to clean sterilizer.



参考编号: 0300031
型号: G-936C
材质: 聚丙烯、聚碳酸酯、铝合金和硅橡胶
执行标准: GB 4706.19-2008
GB 4706.1-2005
检验合格
中国制造
产地: 中国


欲知更多信息, 请访问我们的官网www.tommeetippee.cn
总经销: 上海家化联合股份有限公司
上海市保定路527号
全国热线 400 820 3988 (手机) 800 820 3808 (座机)

版权所有©Jackel International Limited 2016。
Jackel International Limited保留此产品所有相关知识产权。
TOMMEE TIPPEE为Jackel International Limited 的注册商标。

中文


智能电子蒸汽消毒锅

在使用消毒锅前, 请确保您已充分阅读此使用说明。
请阅读并保存此重要信息, 以便日后参考。

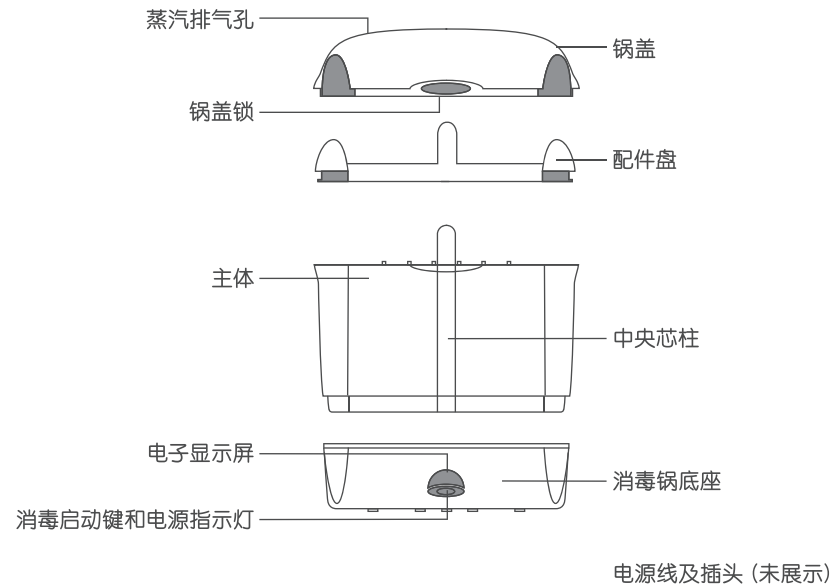

首次使用前- 为确保清洁卫生


- 将中央芯柱插入消毒锅主体的底部。
- 从消毒锅内取出所有的奶瓶和组件。
- 在消毒锅中注入80毫升清水。
- 盖上锅盖, 将电源线插入消毒锅背部接口, 并连接主电源。电子显示屏会显示 0。
- 按下消毒启动键, 消毒锅自动运转一个周期, 直至电子显示屏显示 3。
- 关闭主电源, 拔掉电源线。请小心, 消毒锅此时还很热。取出消毒锅主体, 擦去底座上余留的水份。

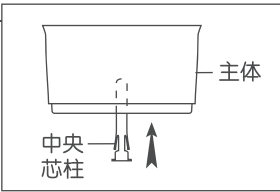

为奶瓶和喂奶用品消毒


智能电子蒸汽消毒锅可适用于所有 Tommee Tippee 奶瓶和喂奶辅助用品 (奶瓶刷除外)
消毒锅可容纳 5 个别具创新的 closer to nature 奶瓶。

- 消毒之前, 请清洗所有奶瓶和喂奶辅助用品, 去除残留奶液。将各组件分开, 如: 奶嘴、奶瓶、螺旋盖等。
- 准确量取 80 毫升清水, 倒入消毒底座中 (可使用 Tommee Tippee 奶瓶量取)
- 将奶瓶瓶口朝下放入消毒锅主体底部的凹槽中。
- 将螺旋盖放在中央芯柱上。
- 将配件盘安装好, 把奶嘴和其他组件放置其上。确保全部摆放妥当, 使蒸汽可以流通接触所有的表面, 同时冷凝水可快速排干。
- 盖上锅盖, 并扣上锅盖锁。
- 将电源线插入消毒锅背部接口, 连接主电源。电子显示屏会显示 0。
- 按下消毒启动键, 消毒锅自动运转一个周期。
- 消毒锅运转周期中, 电子显示屏会提示进程。

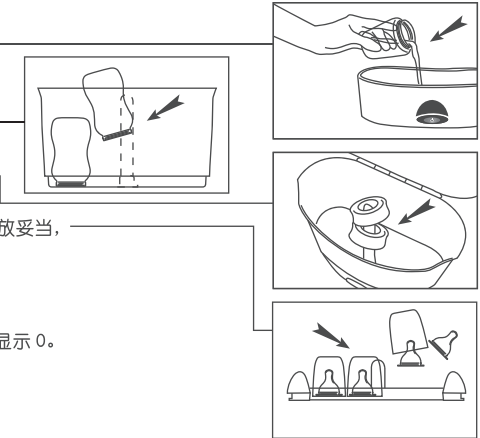

- | | | |
|--|--------|-----------------------------------|
| | H 加热 | |
| | S 消毒 | |
| | C 冷却 | |
| | 3 周期完成 | 若消毒锅处于未打开状态, 里面的物件可在长达3小时内保持无菌状态。 |
| | 2 倒计时 | 若消毒锅处于未打开状态, 里面的物件可在2小时内保持无菌状态 |
| | 1 倒计时 | 若消毒锅处于未打开状态, 里面的物件可在1小时内保持无菌状态 |
| | 0 闪烁 | 表示消毒锅内的物件必须重新消毒。关闭电源。 |

智能电子蒸汽消毒锅也可用于其他 Tommee Tippee 产品, 如 closer to nature吸乳器、学饮杯、喂奶碗等。从消毒锅主体中移除中央芯柱, 腾出空间, 装入更大物件。

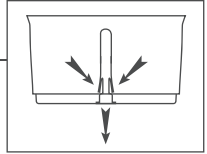

TOMMEE TIPPEE 智能电子蒸汽消毒锅保养说明

- 每次使用后, 倒干净消毒底座上余留的水份。
- 我们建议您每四周对消毒锅进行一次除垢, 确保消毒锅持续高效运行。电子蒸汽消毒锅除垢产品容易购买。请根据生产商的说明指南使用。
- 切勿在消毒锅中使用软化水。电热板易损坏, 操作时需谨慎。请勿使用金属洗刷用具。
- 切勿对消毒锅或待消毒的物品使用漂白剂或化学消毒剂/片。
- 请勿使用带磨损性的、或抗菌材料、或洗刷器清洗消毒锅。

安全注意事项

- 使用消毒锅时, 请置于平坦、耐热表面。
- 消毒启动前, 确保消毒锅中放入的水量准确。
- 若消毒锅中水量过少, 消毒锅将无法正常运行, 电子显示屏会显示C并闪烁。
- 消毒锅运转期间, 因含有沸水, 切勿打开锅盖。小心锅盖上的排气孔有蒸汽排出。
- 等待直至电子显示屏显示3, 2, 或1, 再打开锅盖。从而使得已消毒物件在被取用前有时间冷却。
- 打开消毒锅锅盖时需小心, 以防烫伤。
- 所有组件应放置在婴儿接触不到的地方。
- 切勿在消毒锅顶部放置其他物件。
- 消毒锅不使用时, 确保拔掉电源插头。
- 请勿将消毒锅底座浸泡于水中。
- 准备取出消毒锅内的物件前, 务必先关闭电源并拔掉插头。
- 取用已消毒物件前, 请彻底清洗双手。
- 如需在消毒锅使用中停止运作, 按住启动键持续 6 秒, 然后等待 3 分钟, 冷却后, 再打开。
- 包装内的电源线仅限使用于TOMMEE TIPPEE智能电子蒸汽消毒锅。切勿使用其他电源线。若电源线损坏, 必须采用生产商或代理商提供的特定线缆或配件替代。
- 如您不知道如何连接插座或不知道如何安全更换保险丝, 请咨询电器技师。
- 请好好看管小孩, 不要让他们把玩此产品。

常见问题解决方案

问题	检查
消毒锅未能运作	检查消毒锅是否已接上电源, 同时电源已开启。检查插头内的保险丝。尝试用其他电器插入同一插座, 测试插座是否运作正常。
过多蒸汽 奶瓶出现污渍	配件可能未正确地摆放在消毒锅内。关闭, 冷却, 重新摆放。 需要清理消毒锅内的水垢。参考保养说明。
消毒时间过长	可能倒入过多清水, 请确认只使用80毫升清水。
"C" 闪烁	消毒操作不正确 (可能原因, 水量过少) 此时请勿打开设备, 直至E闪烁。
"E" 闪烁	运作出现错误, 可安全打开设备。清空残留水份。 按下启动键 - 接通电源-重新启动程序

警告!

- 不适当使用此产品, 可能会引起火灾、触电或受伤等危险。
- 产品只供家居使用, 请勿在户外使用。
- 首次使用前, 请确认消毒锅的电压 (参考底部的标签) 与家居电压一致才使用。
- 确保已注入清水, 才启动消毒锅。
- 请勿将消毒锅浸于水中, 以免造成火灾、触电或危害他人。请勿将电线、插头或消毒锅的组件浸于水或任何液体中。
- 此产品不适合给儿童使用。请确保产品和电线远离儿童。
- 生理、感官或精神有残障人士, 或缺乏经验和知识者, 都可操作此产品, 但必须在监督和指导下明白如何安全使用产品, 且了解有关风险。
- 请勿让儿童把此产品当做玩具。
- 除清洁和除垢外, 产品不需要其他特别的保养工序。清洁及除垢工序不应由儿童进行。
- 使用时, 产品的表面会变热。
- 请使用把手, 不要触摸变热的表面。
- 消毒锅的发热部分在使用后会有余热。
- 当消毒锅在运作时, 会产生热水和蒸汽。双手应远离排气孔以免被蒸汽烫伤。请在通风良好的地方使用此产品。
- 如发现产品的电线或插头有损坏, 或产品发生故障, 应立即停止使用。电线如有损坏, 应立即联络有资质的电器技师维修或更换, 以免发生危险。如产品是新购买的, 应把产品退回代理商。如产品在保修期内, 且保存有关购买单据证明, 您亦可参照保修卡上的信息。欲知更多信息, 请访问我们的官网www.tommeetippee.cn
- 使用消毒锅时, 请置于平坦、耐热表面。
- 使用时, 请勿移动产品。
- 请勿把电线挂在厨房的工作桌面边缘或接触高温表面。

清洁说明

每次使用后, 倒干净消毒底座上余留的水份。您知道吗, 累积的水垢会影响消毒锅的表现。我们建议您每四周对消毒锅进行一次除垢, 确保消毒锅持续高效运行。如您所在区域水质较硬, 水垢会更快累积。所以可能需要更频密的除垢处理。

如何为您的智能电子蒸汽消毒锅除垢

电子蒸汽消毒锅除垢产品容易购买。请根据生产商的说明指南使用。
您也可以使用白醋为消毒锅去垢。注意: 只可使用白醋, 不能用其他品种的醋。

- 请把消毒锅内的水份倒出, 用海绵或湿布擦拭。
- 倒250毫升白醋到消毒锅内。
- 根据积垢的程度, 把白醋留在消毒锅内最少30分钟, 或不超过24小时。
- 将白醋倒出。用清水冲洗消毒锅内。用海绵或湿布抹去因除垢或清洁时残留的积垢。
- 把消毒锅接通电源, 倒入正确份量的清水。启动消毒锅并运转5分钟, 去除余下的水垢。

请勿使用金属洗刷用具。

切勿对消毒锅或待消毒的物品使用漂白剂或化学消毒剂/片。
请勿使用带磨损性的、或抗菌材料、或洗刷器清洗消毒锅。

产品中有害物质的名称及含量

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
分线盒-金属块	X	○	○	○	○	○
温控器-黄色扣件	X	○	○	○	○	○
PCB 板-贴片D5 (棕)	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
(企业可在此处, 根据实际情况对上表中打“X”的技术原因进行进一步说明。)