说明书制作说明：

尺寸：110*85mm　　材质：105g书纸　　印刷：单黑　　装订方式：骑马钉

Model: C2023

Shenzhen Charmast Technology Co.,Ltd.
Official Website: www.charmast.com
Email: support@charmast.com
Address: 5/F Bldg.2 Jingwan Indus.Zone,
Shawan Rd, Baoan Dist, Shenzhen,
Guangdong , 518126, CN

EC REP Prolinx GmbH
Brehmstr. 56, 40239 Düsseldorf Germany

RoHS Made in China

Testing Center Technology Japan 合同会社

charmast

User Manual

23800mAh Universal Power Bank

V 1.0

شكراً لشرائك بنك الطاقة الشامل charmast C2023 23800mAh. يرجى قراءة دليل المستخدم هذا بعناية واحتفظ به للرجوع إليه في المستقبل. إذا كنت بحاجة إلى أي مساعدة ، يرجى الاتصال بفريق الدعم الودي مع رقم طرازك المنتج ورقم طلب أمازون

محتويات العبوة

23800mAh بنك الطاقة العالمي * 1　　كابل usb a إلى usb c * 1

دليل المستخدم * 1　　بطاقة الضمان *1

Charmast شهادة * 1

مخطط المنتج

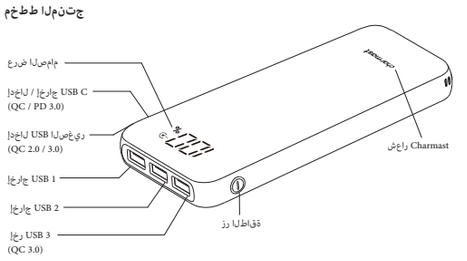

وضع عرض الضمان	عرض الضمان	حالة البطارية
100%		0-100% على شاشة LED تظهر مستوى كهرباء البطارية. (آخر رقم يومض يعرض حالة الطاقة سيومض عند شحن بنك الطاقة ، وتتم عرض مستوى الطاقة بطريقة متزايدة. بعد الشحن الكامل إلى 100% ، سيتوقف عن الوميض)
		الشحن السريع / الشحن

*الملاحظة: ستعرض شاشة LED نسبة 188% في شاشة كاملة لمدة ثانية واحدة للتحقق مما إذا كان أداء شاشة LED صحيحاً أم لا عند شحن كل قابس.

مواصفات

العلامة	charmast
سعة	23800mAh/88Wh
نوع البطارية	الليثيوم بوليمر عالي الكثافة
وقت الشحن	appr 6 ساعة (بواسطة QC 3.0 / PD 3.0 / Samsung AFC / MTK-PE 2.0 / Huawei FCP ومحولات الطاقة Spreadtrum SFCP) 11 ساعة (بواسطة محول الطاقة 5V / 2A) حوالي 16 ساعات (بواسطة محول طاقة 5 فولت / 1.5 أمبير)
إدخال	Micro USB (QC 2.0 / 3.0) 5V-2A 9V-2A ،USB C (QC / PD 3.0) 5 فولت -2 أمبير 9 فولت -2 أمبير
إنتاج	USB C (QC / PD 3.0) 5-6V-3A 6-9V-2A 9-12V-1.5A　USB 1/2 5-2.4A USB 3 (QC 3.0) 5-6V-3A 6-9V-2A 9-12V-1.5A
أبعاد	154.8 * 69.9* 23.3mm/6.09" * 2.75" * 0.92"
وزن	386g/13.62oz
درجة حرارة التشغيل	إدخال:0°C~45°C　إنتاج:-10°C~60°C

البدء

شحن بنك الطاقة

اشحن بنك الطاقة بالكامل قبل الاستخدام لأول مرة.

1. قم بتوصيل كابل شحن micro USB / USB C بشاحن USB أو منفذ شحن
2. قم بتوصيل الطرف الآخر بمنفذ إدخال micro USB / USB C في بنك الطاقة.
3. افصل بنك الطاقة عند الشحن الكامل.

شحن جهازك

1. قم بتوصيل كابل الشحن بمنفذ الشحن الخاص بجهازك.
2. قم بتوصيل الطرف الآخر بمنفذ إخراج USB المناسب على C2023.
3. افصل جهازك عند الشحن الكامل.
4. للتحقق من مستوى البطارية المتبقي ، اضغط على زر الطاقة

العناية بالمنتج والاستخدام

- الابتعاد عن السوائل والنار والحرارة الشديدة.
- لا تشحن أجهزتك أثناء شحن بنك الطاقة.
- اشحن C2023 مرة واحدة على الأقل كل 3 أشهر.
- تخلص من البطاريات وفقاً للقانون البيئية المحلي.
- لا تفكك بنفسك
- تجنب السقوط

ملاحظات الشحن

1. مدخلات / مخرجات USB C متوافقة مع بروتوكولات الشحن السريع PD 3.0 / QC 3.0 /Samsung AFC / MTK-PE2.0 / Huawei FCP.

2. متوافق مع مخرجات إدخال / إخراج USB C و USB C مع بروتوكولات الشحن السريع QC 3.0 / Samsung AFC / MTK-PE 2.0 / Huawei FCP. كما أنه يدعم بروتوكول BC1.2 و شحن التيار العالي مع Samsung و iPhone. إلى جانب ذلك ، ستتوفر مخرجات إدخال /إخراج USB C و USB C مع بروتوكول الشحن السريع PD 2.0 / 3.0

3. تحت وضع الإغلاق ، اضغط مرتين على زر الطاقة في غضون 0.5 ثانية ، وسيتم تنشيط الشحن الالسلكي. إذا لم يكن هناك جهاز يدعم الشحن اللاسلكي متصل به ، فسيتم إيقاف تشغيل مؤشر بنك الطاقة ويدخل في وضع الاستعداد بعد 25 ثانية.

4. عندما يكون خرج USB A أو USB C تحت الشحن السريع ، في هذه الحالة إذا ضغطت على زر الطاقة ، فسيتم إنهاء وضع الشحن السريع ويتحول إلى معيار 5V ، وفي الوقت نفسه ، سيتم تنشيط الشحن اللاسلكي 5W. سيتم إعادة تشغيل بنك الطاقة لمدة 20 ثانية والدخول في وضع الشحن السريع مرة أخرى إذا لم يكن هناك جهاز يدعم الشحن اللاسلكي متصل به.

5. عندما يكون أحد الهواتف المحمولة قيد الشحن السريع ، قم بتوصيل هاتف آخر بمخرج USB A أو مخرج USB C ، سيخرج خرج الشحن السريع من وضع الشحن السريع ، ويتخفض الجهد إلى 5 فولت ، في هذه الحالة ، سيدخل كل الهاتفين في وضع الشحن العادي.

6. عندما يقوم بنك الطاقة بشحن هاتفين سريع الشحن في نفس الوقت ، إذا قمت بفصل شحن الهاتف من خلال مخرج USB A ، فسيتم إعادة تشغيل بنك الطاقة بعد 10 ثوانٍ ، وسيدخل شحن الهاتف الآخر من خلال إخراج USB C في وضع الشحن السريع.وعلاوة على ذلك ، يحتاج شحن الهاتف السلكياً إلى 20 ثانية للدخول في وضع الشحن السريع. إذا فصل الشحن الهاتف من خلال إخراج USB C ، فسيتم إعادة تشغيل بنك الطاقة بعد ثانية واحدة وسيدخل شحن الهاتف الآخر من خلال إخراج USB A في وضع الشحن السريع فورا. وعلاوة على ذلك ، سيدخل شحن الهاتف اللاسلكي في وضع الشحن السريع بعد 20 ثانية. في حالة فصل هاتف الشحن اللاسلكي ، سيتم إعادة تشغيل بنك الطاقة مرة أخرى بعد 20 ثانية ، وسيدخل خرج USB A أو شحن خرج USB C في وضع الشحن السريع.

7. سيغلق بنك الطاقة الإخراج ويدخل في وضع الاستعداد عندما يكون تيار الشحن أو تيار الحمل أقل من 60 ملي أمبير.

8. توجد شريحة IC (الدوائر المتكاملة) في كابل Lightning الخاص بـ iPhone ، والآتي تشبه الاتجاه ليل الخفيف. عندما يكون iPhone متصلاً بمصدر الطاقة للشحن ، إذا كان مقدر قطع الاتصال لأكثر من 35 ثانية ، فسوف تنطفئ أضواء الشاشة ويدخل بنك الطاقة في وضع الاستعداد. في هذا الوقت ، حتى لو أردنا من توصيل iPhone بمنفذ الشحن ، لا يمكن شحنه تلقائياً. تحتاج إلى الضغط على زر الطاقة ، أو فصل كابل USB من بنك الطاقة أولاً ، ثم إعادة توصيل كابل USB للشحن جهاز iPhone الخاص بك. باستثناء Apple IOS الأجهزة ، لا تتأثر الهواتف المحمولة الأخرى.

الضمان ودعم العملاء

دعم العملاء

للأسئلة أو الدعم أو متطلبات الضمان ، اتصل بنا على العنوان أدناه مع رقم طلب Amazon ورقم طراز المنتج.

support@charmast.com

* يرجى ملاحظة أن charmast يمكنها فقط تقديم خدمة ما بعد البيع للمنتجات المشتراة مباشرة من charmast. إذا كنت قد اشتريت من بائع مختلف ، فالرجاء الاتصال به مباشرة للحصول على مشكلات الخدمة أو الضمان.

بطاقة الضمان

شكرا لك على شراء منتجات charmast

من خلال اختبارات الجودة الصارمة ، جميع منتجاتنا مضمونة بنسبة 100% لتوفير الرضا. لمزيد من المعلومات ، يرجى الرجوع إلى موقعنا على الإنترنت:

www.charmast.com

ضمان:

1. العملاء شراء منتجات charmast سوف تحصل متفوقة خدمة ما بعد البيع
2. يمكنك الجودة للاستبدال في غضون 30 يوما إذا كان هناك أي مشاكل الجودة بدون تدمير أو صيانة من صنع الإنسان ، والحفاظ على سلامة العبوة
3. استمتع بسنة واحدة من الصيانة المجانية
4. -الضمان باستثناء:
   ① تدمير من صنع الإنسان ، والعمل في بيئة غير رسمية;
   ② تفريغ المستخدم والإعادة تجهيزه وإصلاحه بشكل خاص دون خدمة مصرح بها;
   ③ تضرر من قوة قاهرة;
   ④ بدون بطاقة الضمان أو فاتورة الشراء الأصلية;
   ⑤ تجاوز فترة الضمان

Thank you for purchasing the charmast C2023 23800mAh Universal Power Bank. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

23800mAh Universal Power Bank * 1　　USB A to USB C Cable * 1

User Manual * 1　　Warranty Card * 1

charmast Certificate * 1

Product Diagram

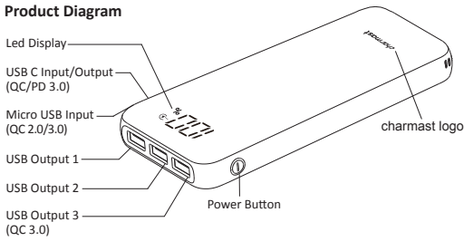

Led Display Mode	Led Display	Battery Status
100%		0-100% on the Led display shows the battery electricity level. (The last digital that showing the power status will flash when charging this power bank, power level display in an increasing manner. After fully charged to 100%, it will stop flashing.)
		quick charging/recharging

* Note: Led screen will display 188% in fully screen for 1 second to check if the Led screen performance right or not when every plug in charging.

Specifications

Brand	**charmast**
Capacity	23800mAh/88Wh
Battery Type	High Density Lithium Polymer
Charging Time	appr 6 hours (by QC 3.0/PD 3.0/Samsung AFC/MTK-PE 2.0/ Huawei FCP Power adapters) appr 11 hours (by 5V/2A Power adapter) appr 16 hours (by 5V/1.5A Power adapter)
Input	Micro USB (QC 2.0/3.0) 5V-2A 9V-2A, USB C (QC/PD 3.0) 5V-3A 9V-2A
Output	USB C (QC/PD 3.0) 5-6V-3A 6-9V-2A 9-12V-1.5A, USB 1/2 5V-2.4A ,USB 3 (QC 3.0) 5-6V-3A 6-9V-2A 9-12V-1.5A
Dimensions	154.8 * 69.9 * 23.3mm/6.09'' * 2.75'' * 0.92''
Weight	386g/13.62oz
Operating Temperature	Input:0°C~45°C Output:-10°C~60°C

Getting Started

Charging the Power Bank

Fully charge your power bank before first use.

1. Connect a Micro USB/USB C charging cable to a USB charger or charging port.
2. Connect the other end to the Micro USB/USB C input port on the power bank.
3. Unplug the power bank when fully charged.

Charging Your Device

1. Connect the charging cable to your device's charging port.
2. Connect the other end to the appropriate USB output port on C2023.
3. Unplug your device when fully charged.
4. To check the remaining battery level, press the power button.

Product Care & Use

- Keep away from liquids, fire and extreme heat.
- When pass-through charging, USB output charging can only up to 5V-1A.
- Charge your C2023 at least once every 3 months.
- Dispose of battery according to local environmental law.
- Do not disassemble by yourself.
- Avoid dropping.

Charging Notes

1. Micro USB and USB C input are compatible with QC 3.0/Samsung AFC/MTK-PE2.0/Huawei FCP quick charge protocols. Besides, USB C input is provided with PD 2.0/3.0 quick charge protocol.

2. USB C and USB 3 output are compatible with QC 3.0/Samsung AFC/MTK-PE 2.0/Huawei FCP and Spreadtrum SFCP quick charge protocols. It also supports BC1.2 protocol, Samsung and iPhone high current charge. Besides, USB C output is provided with PD 2.0/3.0 and PPS quick charge protocol. USB 1/2 output are support BC1.2 protocol, Samsung and iPhone high current charge too.

3. Power bank will shut down and enter into standby mode if you double click the power button when charging your phone. It will back to work again after you pressed the power button.

4. When USB C input/output is under quick charging, in this condition if you press the power button it will quit quick charge mode and turns into standard 5V charging. Power bank will restart and enter into quick charge mode again 16 seconds later. Press the power button only works in this case, it has no effect on quick charging through UBS 3 output or Micro USB input charging.

5. When one mobile phone is under quick charging, plug another phone into USB 1/2/3 output or USB C output, the quick charge output will exit the quick charge mode, and the voltage will down to 5V. At this time, both phones will be entering into the normal charging mode.

6. When power bank is charging 2 quick charge phones at the same time, if you unplug any one of them charging through USB 1/2/3 output, the power bank will restart 10 seconds later, and the other phone will enter into quick charge mode. If unplug the phone charging through USB C output, the power bank will restart 1 second later, and USB 3 output charging will enter into quick charge mode.

7. This power bank support low current charging. When power bank is charging your devices and the Led screen is on, after you long pressed the power button for 2 seconds, the last digital that showing the power status will display circling, and after 5 seconds showed the remaining power status, it will display by circling again. Display circling once in every 5 seconds. Power supply will be always on and it won't enter into standby mode when low current charging. Power bank will exit the low current charging mode automatically 2 hours later if there is no load charging. Or you can long press the power button for 2 seconds or double click it to exit the low current charging mode.

8. There is an IC (Integrated Circuit) chip in iPhone Lightning cable, which is similar to a light loading. When iPhone is connected with the power supply for charging, if the disconnected time for more than 35 seconds, the Led display will turn off and power bank goes into standby mode. At this time, even though iPhone was plugged into the charging port, it can't be charged automatically. You need to press the power button, or unplug USB cable from the power bank firstly, then replug the USB cable to charge your iPhone. Except for Apple IOS devices, other mobile phones are unaffected.

Warranty & Customer Support

Customer Support

For questions, support, or warranty claims, contact us at the address below with your Amazon order number and product model number.

support@charmast.com

*Please note, charmast can only provide after sales service for products purchased directly from charmast. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Warranty Card

Thank you for purchasing charmast products

Through rigorous quality testing, all our products are 100% guarantee satisfaction provided. For more information, please consult our website:

www.charmast.com

Guarantee:

1. Customers buy charmast products will get superior after-sale service
2. You can return back for replacement within 30 days if there is any quality issues without man-made destroy or maintain, keep the packaging integrity
3. Enjoy one year of free maintenance
4. Guarantee excluding:
   ① Man-made destroy, working in an informal working environment
   ② Users unpack,refit and repair privately without authorized service
   ③ Damaged due to force majeure
   ④ Without the guarantee card or effective invoice of purchase
   ⑤ Exceeds the warranty period