



S1 PRO+ WIRELESS PA SYSTEM

Please read and keep all safety and use instructions.

CE Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance

**UK
CA** This product conforms to all applicable Electromagnetic Compatibility Regulations 2016 and all other applicable UK regulations. The complete declaration of conformity can be found at: www.Bose.com/compliance

Bose Corporation hereby declares that this product is in compliance with the essential requirements per Radio Equipment Regulations 2017 and all other applicable UK regulations. The complete declaration of conformity can be found at: www.Bose.com/compliance

Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS/CAUTIONS



This symbol on the product means there is uninsulated, dangerous voltage within the product enclosure that may present a risk of electrical shock.



This symbol on the product means there are important operating and maintenance instructions in this guide.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, dripping, splashing, or moisture and do not place liquid filled objects such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use a power inverter with this product.
- Do NOT use in vehicles or boats.

- Provide an earth connection or ensure the socket outlet incorporates a protective earthing connection before connecting the plug to the mains socket outlet.
 - *Denmark:* "Apparatets stikprop skal tilsluttes en stikkontakt med jord, som giver forbindelse til stikproppens jord."
 - *Finland:* "Laitte on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan"
 - *Norway:* "Apparatet må tilkoples jordet stikkontakt"
 - *Sweden:* "Apparaten skall anslutas till jordat uttag"
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



仅适用于 2000m 以下地区安全使用

Use at altitude less than 2000 meters only.

- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- Only use genuine Bose batteries with this product. Contact Bose customer service for replacement batteries.
- Due to ventilation requirements, Bose does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.
- Do not place or install near any heat sources, such as fireplaces, radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not use the Bose S1 Pro+ Wireless PA System with a tripod/stand that is unstable. The speaker is only designed for use on a 35 mm post, and the tripod/stand must be capable of supporting a speaker with a minimum weight of 15 lbs (6.8 kg) and an overall size of 13.1 x 9.4 x 11 inches (332.6 x 240 x 279.8 mm). Using a tripod/stand that is not designed to support the size and mass of the Bose S1 Pro+ Wireless PA System may lead to an unstable and hazardous condition that could result in injury.
- The product label is located on the bottom of the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between radiator and your body.

For Europe:

Bluetooth Module: Frequency band of operation 2400 to 2483.5 MHz.

Maximum transmit power less than 20 dBm EIRP.

2.4 GHz Module: Frequency band of operation 2402 to 2482 MHz.

Maximum transmit power less than 10 dBm (10mW) EIRP.

Maximum transmit power is below regulatory limits such that SAR testing is not necessary and exempt per applicable regulations.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Low-power Radio-frequency Devices Technical Regulations

Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

Product Power State Table

The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020, is in compliance with the following norm(s) or document(s): Regulation (EC) No. 1275/2008, as amended by Regulation (EU) No. 801/2013.

Required Power State Information	Power Modes	
	Standby	Networked Standby
Power consumption in specified power mode, at 230V/50Hz input	0.4 W	N/A
Time after which equipment is automatically switched into mode	4 hours	N/A
Power consumption in networked standby if all wired network ports are connected and all wireless network ports are activated, at 230V/50Hz input	N/A	N/A
Wireless network port deactivation/ activation procedures. Deactivating all networks will enable standby mode.	N/A	



Please dispose of used batteries properly, following local regulations. Do not incinerate.



Names and Contents of Toxic or Hazardous Substances or Elements						
Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	O	O	O	O	O
Metal Parts	X	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Speakers	X	O	O	O	O	O
Cables	X	O	O	O	O	O
Battery	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.						

Equipment name: Wireless PA System, Type designation: 436469						
Restricted substances and its chemical symbols						
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	-	o	o	o	o	o
Metal Parts	-	o	o	o	o	o
Plastic Parts	o	o	o	o	o	o
Speakers	-	o	o	o	o	o
Cables	-	o	o	o	o	o
Battery	o	o	o	o	o	o
<p>Note 1: "o" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>Note 2: The "- " indicates that the restricted substance corresponds to the exemption.</p>						

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "3" is 2013 or 2023.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Gorslaan 60, 1441 RG Purmerend, The Netherlands | Bose de México S. de R.L. de C.V., Avenida Prado Sur #150, Piso 2, Interior 222 y 223, Colonia Lomas de Chapultepec V Sección, Miguel Hidalgo, Ciudad de México, C.P. 11000 Phone Number: +5255 (5202) 3545 | Bose Limited (H.K.), 9F, No.10, Sec. 3, Minsheng E. Road, Zhongshan Dist. Taipei City 10480, Phone Number: +886-2-2514 7676 | Bose Limited, Bose House, Quayside Chatham Maritime, Chatham, Kent, ME4 4QZ, United Kingdom

Input Rating: 100 – 240V ~ 50/60Hz, 1A

Output Ratings:

- USB POWER Charging Port: 5V --- 1.5A
- Wireless Transmitter Charging Ports: 5V --- 0.3A

Battery Capacity: 5500 mAh

Charging Temperature Range: 32° F – 113° F (0° C – 45° C)

Discharging Temperature Range: -4° F – 120° F (-20° C – 49° C)

Dimensions (H x W x D): 13.1 x 9.4 x 11 in (332.6 x 240 x 279.8 mm)

Net Weight: 14.4 lb (6.5 kg)

Initial turn on inrush current: 12.4A at 120V; 12.8A at 230V

Inrush current after AC mains interruption of 5 s: 2.5A at 120V; 3A at 230V

Model: 436469. The CMIIT ID is located on the bottom of the product.

Please complete and retain for your records

The serial and model numbers are located on the bottom of the product.

Serial number: _____

Model number: 436469

Please keep your receipt with your owner's guide. Now is a good time to register your Bose product. You can easily do this by going to [worldwide.Bose.com/ProductRegistration](https://www.worldwide.bose.com/ProductRegistration)

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Google and Google Play are trademarks of Google LLC.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Bose, the B logo, L1, and ToneMatch are trademarks of Bose Corporation.

Bose Corporation Headquarters: 1-877-230-5639

©2024 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

The following license disclosures apply to certain third-party software packages used as components in the product.

Package: FreeRTOS

Copyright © Amazon Web Services, Inc. or its affiliates. All rights reserved.

Package: LVGL - Light and Versatile Graphics Library

Copyright © 2021 LVGL Kft

The above is/are subject to the license terms reprinted below:

MIT License

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Packages: STM32CubeF4 HAL Driver MCU Component and STM32 LL - STM32 Low Layer API

Copyright 2017 STMicroelectronics. All rights reserved.

The above is/are subject to the license terms reprinted below:

3-Clause BSD License

(Also called "New BSD License" or "Modified BSD License")

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the <organization> nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL <COPYRIGHT HOLDER> BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

WHAT'S IN THE BOX

Contents 15

BOSE APP SETUP

Download the Bose app 16
 Add the system to an existing account 16

CONTROL AND CONNECTION PANEL

Panel overview..... 17

POWER

Connect the system to power 18
 Power on/off..... 18
 Auto-off timer 19
 Disable the auto-off timer 19

CONNECT SOURCES

Connect sources to Channel 1 and 2..... 20
 Connect sources to Channel 3..... 21
 Connect a *Bluetooth*® device..... 21
 Connect to the TS/TRS line input 22
 Connect to the AUX line input 22

ADJUST CHANNEL AUDIO

Adjust channel volume, treble, bass, and reverb 23
 Adjust volume 23
 Adjust treble 24
 Adjust bass..... 24
 Adjust reverb (Channels 1 and 2 only) 25

CHANNEL AND SYSTEM SETTINGS

Access channel and system settings	26
ToneMatch preset settings.....	27
Select ToneMatch presets (Channels 1 and 2 only).....	27
Customize ToneMatch presets using the Bose app	28
Clear a custom ToneMatch preset	28
Channel insert settings.....	29
Channel wireless settings.....	29
Channel Expanders settings.....	29
Live Stream mode settings	30
About Live Stream mode	30
Enable/Disable Live Stream mode.....	30
Connect the system to your computer.....	32
Adjust monitor volume in Live Stream mode	33
Sub EQ settings	34
Enable/Disable Sub EQ.....	34

BOSE APP EXCLUSIVE FEATURES

Mute channels and channel reverb effects.....	36
Save Scenes	36
Enable/Disable Dual Wireless Streaming	36
Customize ToneMatch presets.....	36

WIRELESS TRANSMITTER CONTROLS

Compatible wireless transmitters	37
Pair a wireless transmitter to Channel 1 or 2.....	37
Connect a paired wireless transmitter to an audio source	38
Power on/off a wireless transmitter	39
Auto-off timer	39
Mute/Unmute a wireless transmitter	39
Change between mic and line input.....	40
Connect effects to a channel insert when using a wireless transmitter	40
Enable/Disable channel insert functionality	41
Enable/Disable wireless transmitter functionality.....	42

SPEAKER STAND

Connect a speaker stand.....	43
------------------------------	----

SYSTEM SETUP SCENARIOS

System configurations..... 44

Elevated surface 44

Tilt-back..... 44

Monitor..... 44

Speaker stand 44

Musician with mobile device..... 45

Musician with mobile device and wireless transmitters..... 45

Multi-instrumentalist..... 46

Musician with effects mixer..... 46

Musician with wireless transmitters, effects pedal, and vocal processor 47

Guitarist with wireless transmitter and amp modeler pedal 48

General-purpose PA..... 49

Stereo 49

Dual mono/daisy-chain 51

DJ with Bose Sub1 or Sub2 Powered Bass Module..... 52

Dual Wireless Streaming with the Bose app 53

Musician recording or live streaming to computer 53

BATTERY

Charge the system battery..... 54

Charging time..... 54

Check the system battery level 54

Charge a wireless transmitter 55

Using the charging ports 55

Using a wall charger or computer 55

Charging time..... 56

Check the wireless transmitter battery level 56

Charge your mobile device using the USB charging port 56

SYSTEM STATUS

Signal/clip lights.....	57
Power light.....	58
<i>Bluetooth</i> light.....	58
Channel displays	59
How to read the channel displays	59
Status icons	59
Battery icons.....	60

WIRELESS TRANSMITTER STATUS

Power light.....	62
Connection light	63

BLUETOOTH CONNECTIONS

Connect your mobile device.....	64
Disconnect a mobile device	64
Reconnect a mobile device	64
Clear the system device list.....	64

CARE AND MAINTENANCE

Replace the system battery.....	65
Update the system	67
Update a wireless transmitter.....	67
Clean the system.....	67
Transport and store the system	68
Replacement parts and accessories	68
Limited warranty.....	68

TROUBLESHOOTING

Try these solutions first..... 69

Other solutions..... 69

 System 69

 Wireless transmitter 73


Enable/Disable the Expanders setting..... 75

Reset the system..... 77


Reset a wireless transmitter 77

CONTENTS

Confirm that the following parts are included:

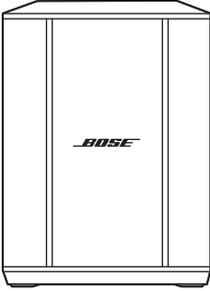

Bose S1 Pro+ Wireless PA System
(with battery included)



Power cord

NOTE: If any part of the product is damaged, don't use it. Contact your authorized Bose dealer or Bose customer service.

Visit: support.Bose.com/S1ProPlus

The Bose app lets you set up and control the system from any mobile device, such as a smartphone or tablet.

Using the app, you can control the system remotely, manage system settings, and access exclusive features like ToneMatch preset customization, channel and reverb mute, saved Scenes, and Dual Wireless Streaming (see page 36).

If you have already created a Bose account for another Bose product, see "Add the system to an existing account."

DOWNLOAD THE BOSE APP

1. On your mobile device, download the Bose app.




2. Follow the app instructions.

ADD THE SYSTEM TO AN EXISTING ACCOUNT

To add your Bose S1 Pro+ Wireless PA System, open the Bose app and add your system.


PANEL OVERVIEW

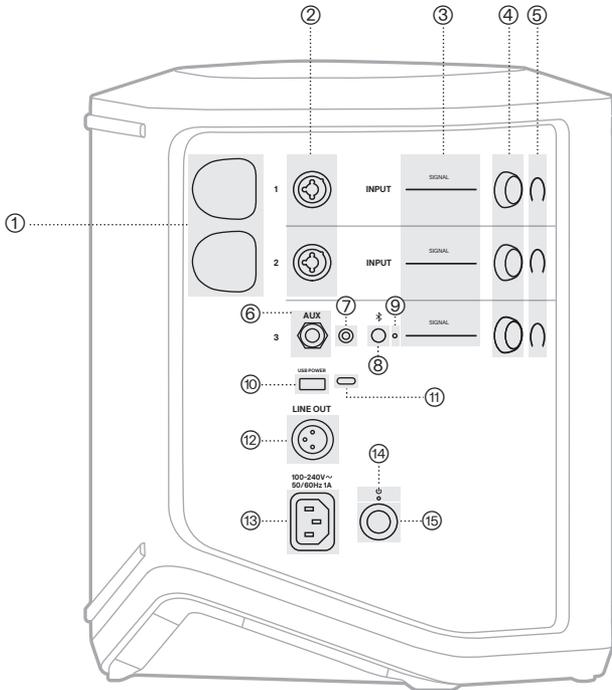

- ① **Wireless transmitter charging ports.**
See page 55.
- ② **Channel inputs** (balanced/unbalanced combined 1/4" or 6.35 mm TS/TRS and XLR). See page 20.
- ③ **Signal/clip lights.**
See page 57.
- ④ **Channel controls.**
See page 23.
- ⑤ **Channel displays.**
See page 59.
- ⑥ **TRS balanced mono line input** (1/4" or 6.35 mm TS/TRS). See page 22.
- ⑦ **AUX stereo line input** (1/8" or 3.5 mm TRS). See page 22.
- ⑧ **Bluetooth button.**
See page 21.
- ⑨ **Bluetooth light.**
See page 58.
- ⑩ **USB charging port (USB-A).**
See page 56.
- ⑪ **USB Type-C® port.**
Use for Live Stream mode (see page 32) and system updates (see page 67).
- ⑫ **Line out (XLR).** Use an XLR cable to connect a post-mix line-level output to another system. This is a variable output that delivers full-spectrum audio. See page 51.
- ⑬ **Power port.**
See page 18.
- ⑭ **Power light.**
See page 58.
- ⑮ **Power button.**
See page 18.

CONNECT THE SYSTEM TO POWER

1. Connect the power cord to the power port on the back of the system.

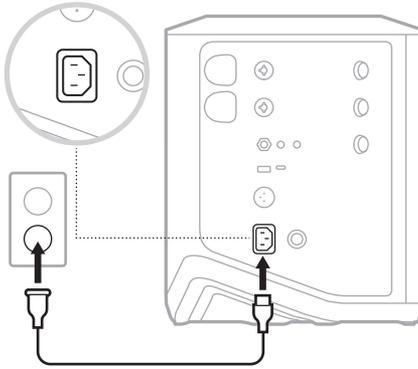


2. Plug the other end of the power cord into an AC (mains) outlet.

POWER ON/OFF

Press the Power button .

The power light glows solid white.

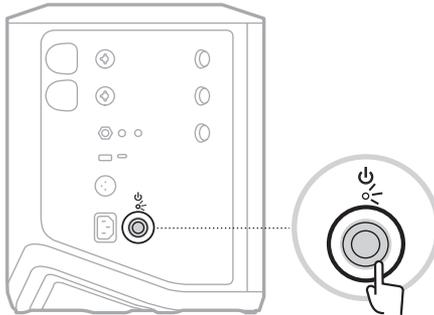


AUTO-OFF TIMER


The auto-off timer conserves power when the system isn't in use. The system powers off when audio has stopped and you haven't adjusted any controls for 4 hours.

Disable the auto-off timer

1. Press and hold the channel control for Channel 3 until the additional controls menu appears on the channel display.

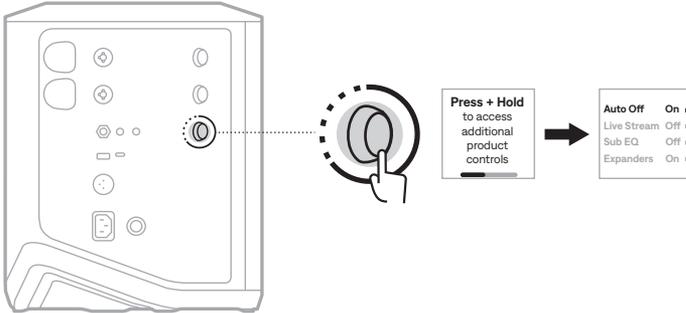

2. Press the channel control to select **Auto Off**.
3. Rotate the channel control to highlight **Off**, then press to select it.

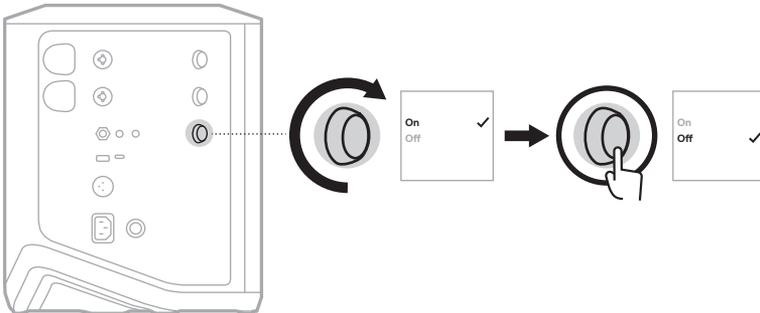


4. Press and hold the channel control until the additional controls menu disappears.

TIP: You can also disable the auto-off timer using the Bose app. You can access this option from the Settings menu.

CONNECT SOURCES TO CHANNEL 1 AND 2

Channels 1 and 2 are for instruments and microphones. The channel inputs are suited for a wide range of input types and have the proper gain staging to minimize noise when channel volume is set for your desired output level.

1. Connect your instrument or microphone to the channel input using the appropriate cable.

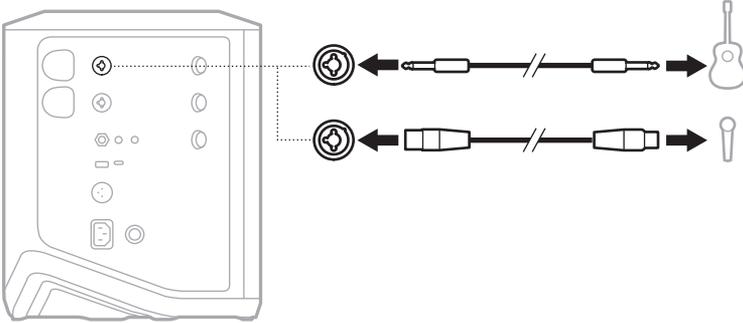

2. Adjust channel volume, treble, bass, and reverb to your desired levels (see page 23).
3. Optionally, you can also apply a ToneMatch preset to optimize the sound of your instrument or microphone (see page 27).

CONNECT SOURCES TO CHANNEL 3


Channel 3 is for *Bluetooth* devices and line-level audio sources.

NOTE: You can connect both your mobile device and a line-level audio source to Channel 3 at the same time. If you do, the system mixes the audio from each source, meaning that any adjustments you make to the channel volume, treble, or bass affect both sources. To adjust your mobile device volume independently, use your device controls.

Connect a *Bluetooth* device

You can connect and play audio from one *Bluetooth* device at a time.

1. Press and hold the *Bluetooth* button  on Channel 3 until the *Bluetooth* light blinks blue.

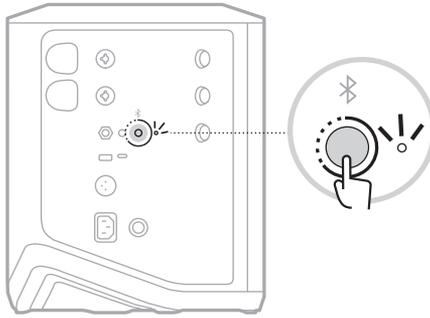


2. On your device, turn on the *Bluetooth* feature.

NOTE: The *Bluetooth* menu is usually found in the Settings menu.

3. Select your system from the device list.

NOTE: Look for the name you entered for your system in the Bose app. If you didn't name your system, the default name appears.

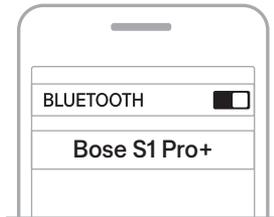

Once connected, the *Bluetooth* light glows solid white. Your system's name appears in the mobile device list.

Connect to the TS/TRS line input


A mono input. Use a 1/4" (6.35 mm) TRS cable to connect a line-level audio source, such as a mixer or instrument effect.

Connect to the AUX line input

A stereo input. Use a 1/8" (3.5 mm) TRS cable to connect a line-level audio source, such as a mobile device or laptop.


ADJUST CHANNEL VOLUME, TREBLE, BASS, AND REVERB

You can make real-time adjustments to channel volume, treble, bass, and reverb (Channel 1 and 2 only) using the channel controls located on the right side of the control panel.

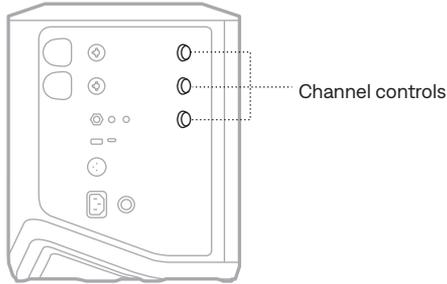

Adjust volume


Rotate the channel control to adjust channel volume.

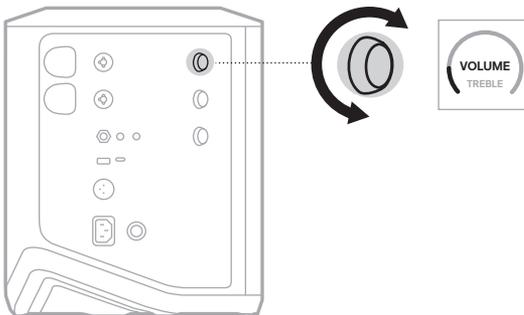


NOTE: You can also mute channels using the Bose app (see page 36).

Adjust treble

1. Press and release the channel control until **TREBLE** appears on the channel display.

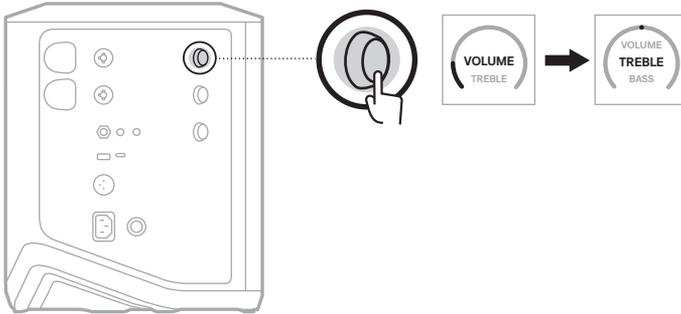


2. Rotate the channel control to either boost or cut the high-frequency balance of the channel.

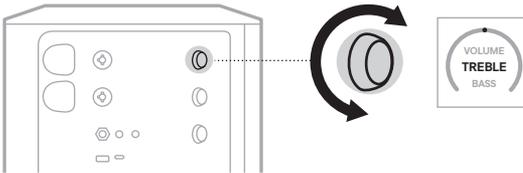


NOTE: After 10 seconds of inactivity, the channel display resets to VOLUME.

Adjust bass

1. Press and release the channel control until **BASS** appears on the channel display.

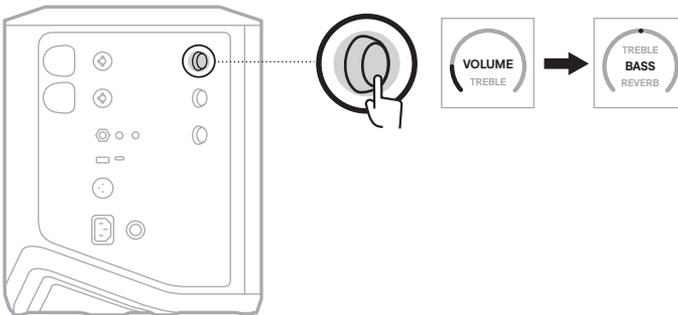


2. Rotate the channel control to either boost or cut the low-frequency balance of the channel.

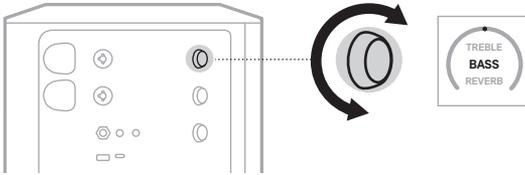


NOTE: After 10 seconds of inactivity, the channel display resets to VOLUME.

Adjust reverb (Channels 1 and 2 only)

1. Press and release the channel control until **REVERB** appears on the channel display.

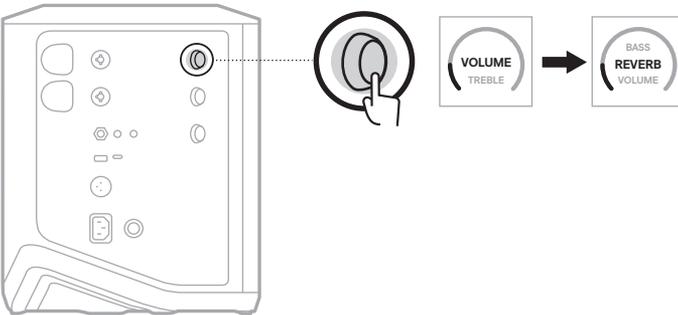

2. Rotate the channel control to adjust the amount of reverb applied to the channel.

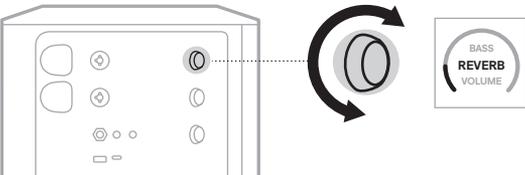


NOTES:

- After 10 seconds of inactivity, the channel display resets to VOLUME.
- You can also mute reverb effects for a channel using the Bose app (see page 36).

ACCESS CHANNEL AND SYSTEM SETTINGS

You can adjust channel and system settings to best support your setup scenario.

To access channel and system settings, press and hold one of the channel controls until the additional controls menu appears on the channel display.

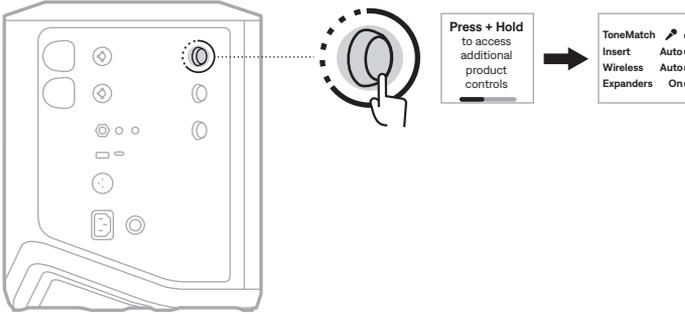

The settings in this menu vary depending on the channel.


CHANNEL	MENU SETTINGS
Channel 1 and 2	The menu contains channel settings that only affect the selected channel.
Channel 3	The menu contains system settings that change overall system behavior.

TONEMATCH PRESET SETTINGS

ToneMatch presets optimize system EQ to preserve the natural sound of your instrument or microphone.

Select ToneMatch presets (Channels 1 and 2 only)

1. Press and hold the channel control for either Channel 1 or 2 until the additional controls menu appears on the channel display.

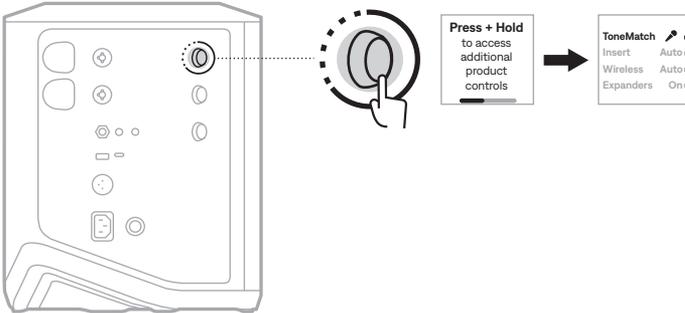

2. Press the channel control to select **ToneMatch**.
3. Rotate the channel control to highlight the appropriate preset for your source, then press to select it:
 - **Microphone:** By default, this preset adjusts the system EQ for a dynamic handheld microphone.
 - **Instrument:** By default, this preset adjusts the system EQ for a steel string acoustic guitar with piezo pickups.




NOTES:

- To customize these presets to match your specific microphone or instrument model or apply generic EQ filters, use the Bose app (see page 28).
 - Selecting Off bypasses the ToneMatch preset for that channel.
4. Press and hold the channel control until the additional controls menu disappears.

Customize ToneMatch presets using the Bose app

Using the Bose app, you can customize the default Microphone or Instrument presets on Channels 1 and 2 to better optimize system EQ for your setup scenario. Select from a library of ToneMatch presets to match your specific microphone or instrument model, apply generic EQ filters, or get the best sound from a guitar amp modeler pedal. You can access this option from the Settings menu.

When you customize a ToneMatch preset on a channel, a + symbol appears next to the icon on the channel display.




Your custom preset persists until you clear it or factory reset the system.


Clear a custom ToneMatch preset

Clearing a custom ToneMatch preset resets it to either the default Microphone or Instrument setting, depending on which preset you customized.

1. Press and hold the channel control for either Channel 1 or 2 until the additional controls menu appears on the channel display.

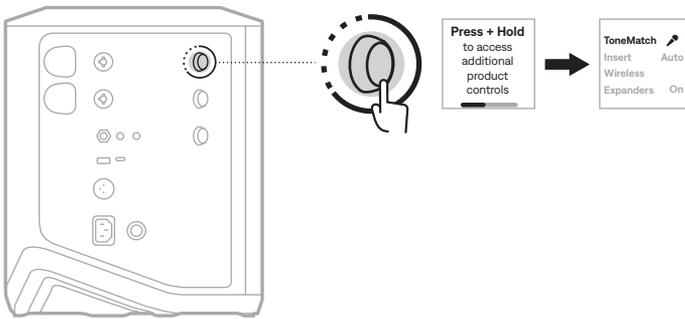

2. With the **ToneMatch** option highlighted, press and hold the channel control until the ToneMatch setting changes to **Off**.

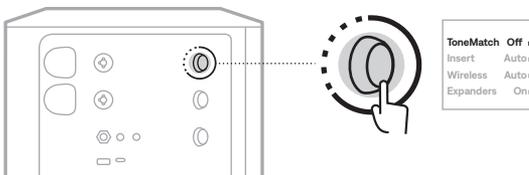

CHANNEL INSERT SETTINGS

Channel insert settings let you enable or disable the effects loop functionality for a channel. When enabled, you can connect your effects units or pedals to the channel input while using a wireless transmitter for your source.

For more information, see “Connect effects to a channel insert when using a wireless transmitter” on page 40.

CHANNEL WIRELESS SETTINGS

Channel wireless settings let you enable or disable wireless transmitter functionality for a channel.

For more information, see “Enable/Disable wireless transmitter functionality” on page 42.

CHANNEL EXPANDERS SETTINGS

The Expanders setting determines whether the system reduces the volume of low-level background noise for a channel.

For more information, see “Enable/Disable the Expanders setting” on page 75.

LIVE STREAM MODE SETTINGS

Live Stream mode allows the system to be recognized as an audio interface when you connect it to your computer using a USB-C® cable. This lets you perform live for an online audience or record audio directly to your computer's digital audio workstation (DAW).

For sample setup scenario images, see page 53.

NOTE: During Live Stream mode, the system can send audio to your computer, but it can't receive it. USB playback is not supported.

About Live Stream mode

When Live Stream mode is enabled, the system passes a dual mono mix of Channels 1, 2, and 3 to a connected computer.


In this mode, the channel volume controls behave like faders on a mixer. Adjusting channel volume using either the channel controls or the Bose app adjusts the level of that channel within the mix being sent to your computer.

A monitor volume control also appears on Channel 3, allowing you to adjust the master volume of the system speakers without affecting the computer mix (see page 33).


Once you enable Live Stream mode, it stays enabled until you disable it or the system powers off.

Enable/Disable Live Stream mode

1. Press and hold the channel control for Channel 3 until the additional controls menu appears on the channel display.

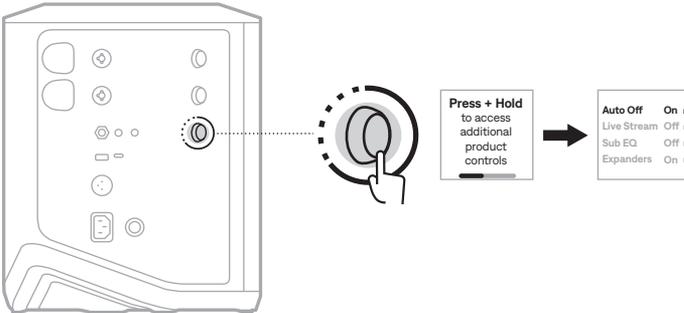


2. Rotate the channel control to highlight **Live Stream**, then press to select it.

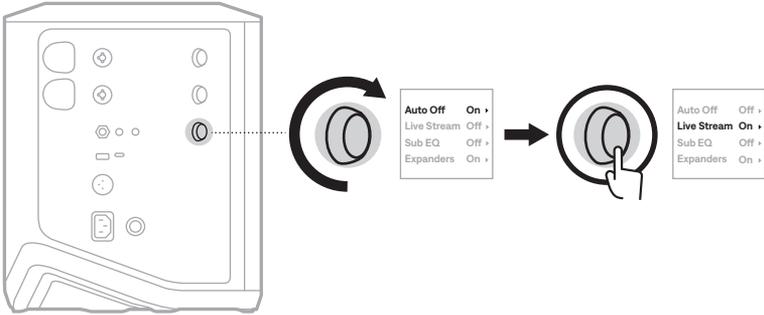

3. Rotate the channel control to highlight your preferred setting, then press to select it:


- **On:** Enables Live Stream mode, allowing the system to be recognized as an audio interface when connected to your computer.
- **Off (default):** Disables Live Stream mode, preventing the system from being recognized as an audio interface when connected to your computer.

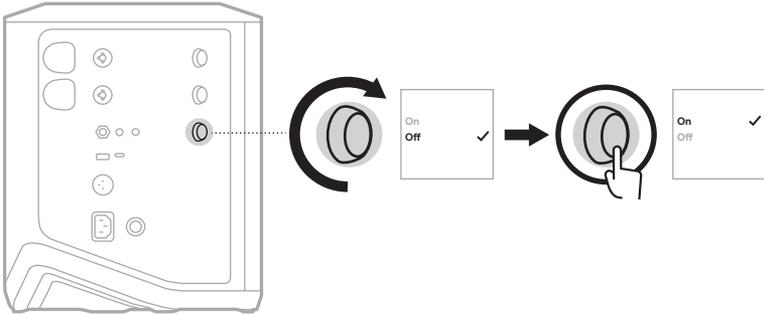

4. Press and hold the channel control until the additional controls menu disappears.

Connect the system to your computer

1. Connect one end of a USB-C cable (not provided) to the USB-C port on the system.
2. Connect the other end to your computer.

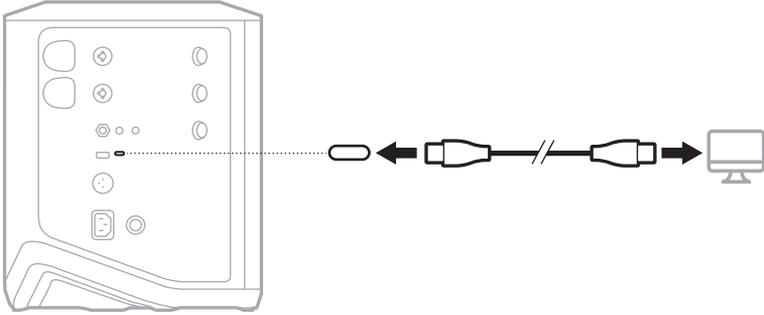


Adjust monitor volume in Live Stream mode


When Live Stream mode is enabled, you can use the channel control for Channel 3 to adjust the master volume of the system speakers without affecting the mix being sent to your computer.

NOTE: The monitor volume control isn't available in the Bose app.

1. Press and release the channel control for Channel 3 until **MONITOR VOLUME** appears on the channel display.

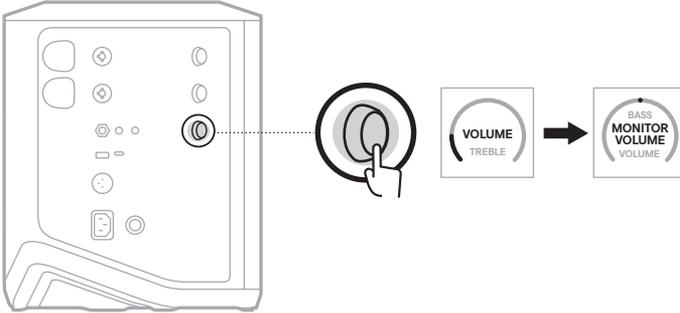

2. Rotate the channel control to adjust the monitor volume.

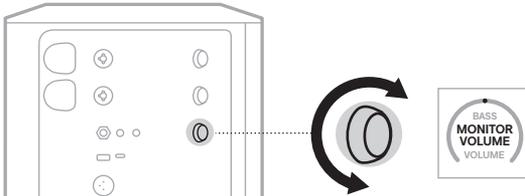

NOTE: After 10 seconds of inactivity, the channel display resets to VOLUME.

SUB EQ SETTINGS

The Sub EQ setting is a crossover that optimizes system EQ for setup scenarios in which a powered subwoofer is connected to the system LINE OUT port.

You can use Sub EQ with any powered subwoofer, but for optimal performance, Bose recommends the Bose Sub1 or Sub2 Powered Bass Module.

Once you enable Sub EQ, it stays enabled until you disable it or the system powers off.


For sample setup scenario images, see page 52.

NOTES:


- For information on how to connect the system to a Bose Sub1 or Sub2 Powered Bass Module, refer to the Bose Sub1/Sub2 Powered Bass Module owner's guide. Visit: support.Bose.com/Sub1 or support.Bose.com/Sub2
- You can also enable/disable Sub EQ using the Bose app. You can access this option from the Settings menu.

Enable/Disable Sub EQ

1. Press and hold the channel control for Channel 3 until the additional controls menu appears on the channel display.

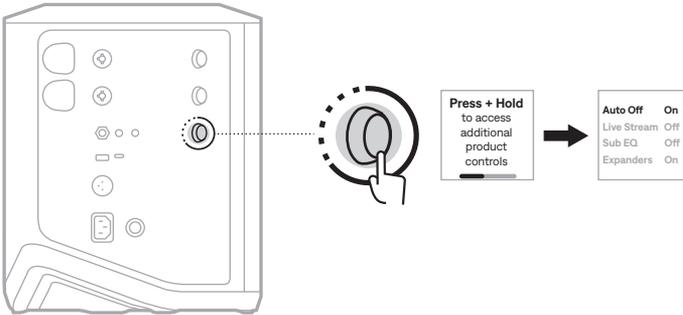


2. Rotate the channel control to highlight **Sub EQ**, then press to select it.

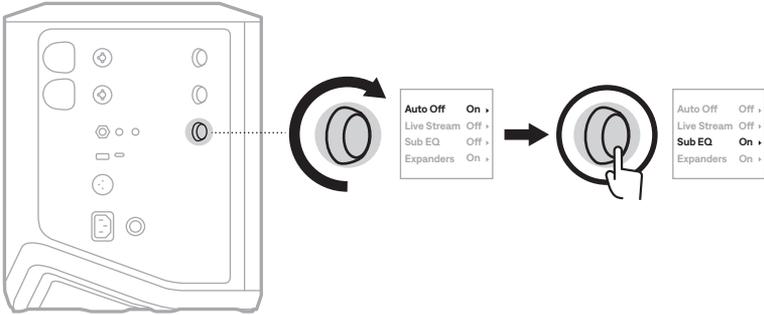

3. Rotate the channel control to highlight your preferred setting, then press to select it:

- **On:** Enables the Sub EQ setting.
- **Off (default):** Disables the Sub EQ setting.

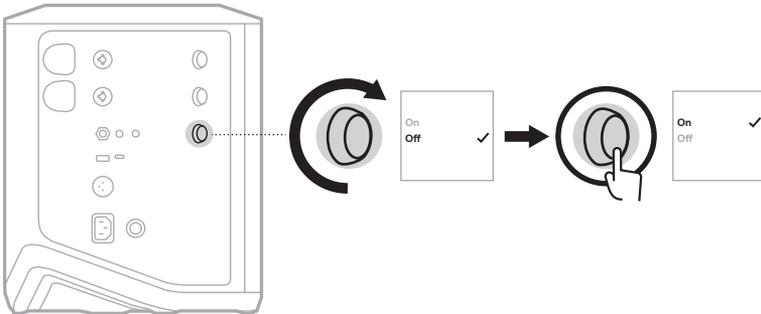

4. Press and hold the channel control until the additional controls menu disappears.

MUTE CHANNELS AND CHANNEL REVERB EFFECTS

You can mute channels and mute reverb effects for a channel in the Bose app. You can access channel mute and reverb mute settings from the main screen.

NOTES:

- To unmute a channel, either use the Bose app or rotate the channel control.
- To unmute reverb settings for a channel, either use the Bose app or adjust reverb using the channel control (see page 25).

SAVE SCENES

You can save channel and system settings as Scenes in the Bose app, allowing you to easily access them again later. You can access this option from the main screen.

ENABLE/DISABLE DUAL WIRELESS STREAMING

The Dual Wireless Streaming feature in the Bose app lets you play *Bluetooth* audio from both the system and another compatible Bose system at the same time in either dual mono or stereo. You can access this option from the Settings menu.

For sample setup scenario images, see page 53.

Compatible systems include:

- Bose S1 Pro+ Wireless PA System
- Bose L1 Pro8 & L1 Pro16 Portable Line Array System
- Bose L1 Pro32 Portable Line Array

More systems may be added periodically.

CUSTOMIZE TONEMATCH PRESETS

For information about customizing ToneMatch presets using the Bose app, see page 28.

COMPATIBLE WIRELESS TRANSMITTERS

With the optional Bose wireless transmitter accessories, you can wirelessly connect your instrument or microphone to the system through the wireless receivers built in to Channels 1 and 2.


The system is compatible with the following transmitter accessories:

- Bose Wireless Instrument Transmitter
- Bose Wireless Mic/Line Transmitter


To purchase these or other system accessories, visit: support.Bose.com/S1ProPlus

PAIR A WIRELESS TRANSMITTER TO CHANNEL 1 OR 2

1. If the system battery level is depleted, connect the system to power (see page 18).
2. Remove the cap from the wireless transmitter charging port for either Channel 1 or 2.

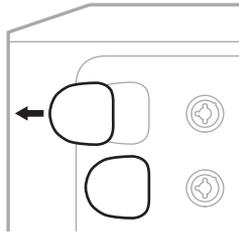

3. Fully insert the transmitter into the charging port until you hear or feel a click, then wait 5 seconds for the transmitter to pair to that channel.

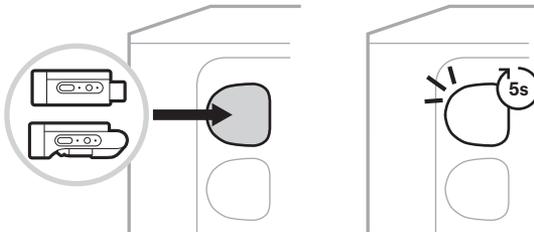


The transmitter begins to charge (see page 55).

NOTE: The transmitter can pair to only one channel at a time. To unpair the transmitter from the current channel and pair it to the other channel, insert it into the other channel's charging port.

CONNECT A PAIRED WIRELESS TRANSMITTER TO AN AUDIO SOURCE


1. Power on the system (see page 18).
2. Press the back of the wireless transmitter and release so that it slides out of the wireless transmitter charging port. Remove it from the charging port.

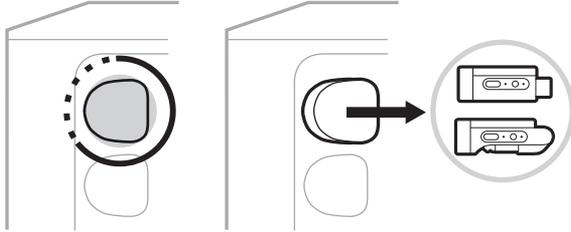


On the channel display, a battery icon briefly appears to indicate the transmitter battery level.



3. Connect the transmitter to your audio source.

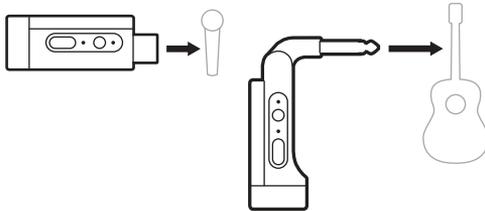

4. Power on the transmitter (see page 39). After a few seconds, a transmitter icon appears on the channel display and the connection light on the transmitter glows solid blue to indicate that the transmitter is connected (see page 63).

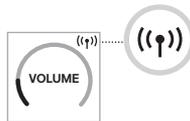

5. If you're using the Bose Wireless Mic/Line Transmitter, change between mic and line input settings if necessary to match the input requirements of your source (see page 40).

POWER ON/OFF A WIRELESS TRANSMITTER

Press the Power button .



When powered on, the power light glows solid white (see page 62).

Auto-off timer

The auto-off timer conserves power when the wireless transmitter isn't in use. The transmitter powers off when audio has stopped and you haven't pressed any buttons on the transmitter for 30 minutes.

MUTE/UNMUTE A WIRELESS TRANSMITTER

Press the **MUTE** button to mute/unmute channel audio.




When audio is muted, the connection light blinks blue (see page 62).

CHANGE BETWEEN MIC AND LINE INPUT

With the Bose Wireless Mic/Line Transmitter, you can change between mic and line input settings to match the input requirements of your source.

To do so, press and hold the Power button  and **MUTE** button until the transmitter icon on the channel display changes to reflect the new input setting.

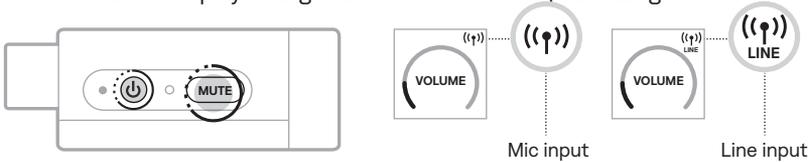

CONNECT EFFECTS TO A CHANNEL INSERT WHEN USING A WIRELESS TRANSMITTER

When you connect a wireless transmitter to a channel which has the Insert setting set to Auto (see page 41), the 1/4" (6.35 mm) TRS channel input becomes a series channel insert (also known as an effects loop). You can connect effects units or pedals to the input using an insert cable, all while using your instrument or mic wirelessly.


For sample setup scenario images, see page 47.

NOTES:


- An insert cable (1/4" or 6.35 mm TRS to dual 1/4" or 6.35 mm TS) is required to connect an effects unit to a channel insert. You can purchase an insert cable at your local music retailer.
- Don't connect an instrument or other audio source to the input using a standard 1/4" (6.35 mm) cable when a wireless transmitter is connected to the channel. This prevents audio from playing from both the wired and wireless source.

Enable/Disable channel insert functionality

1. Press and hold the channel control for either Channel 1 or 2 until the additional controls menu appears on the channel display.

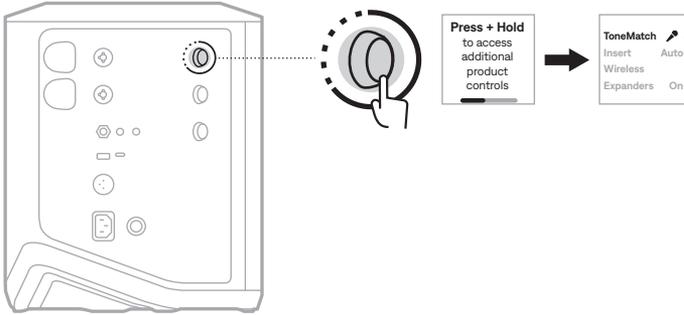


2. Rotate the channel control to highlight **Insert**, then press to select it.

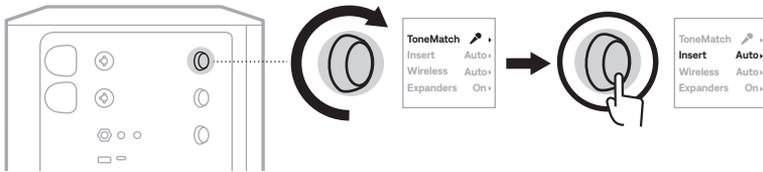

3. Rotate the channel control to highlight your preferred setting, then press to select it:

- **Auto** (default): When a wireless transmitter is powered on and connected to this channel, the 1/4" (6.35 mm) TRS channel input is converted into a series effects loop.
- **Off**: When a transmitter is powered on and connected to this channel, the system ignores signals from the channel input.

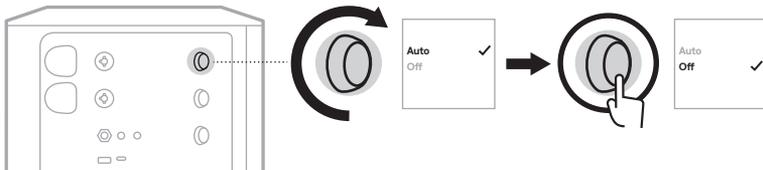


4. Press and hold the channel control until the additional controls menu disappears.


ENABLE/DISABLE WIRELESS TRANSMITTER FUNCTIONALITY

NOTE: Regardless of a channel's wireless setting, the system still charges any wireless transmitter inserted into the wireless transmitter charging ports.

1. Press and hold the channel control for either Channel 1 or 2 until the additional controls menu appears on the channel display.

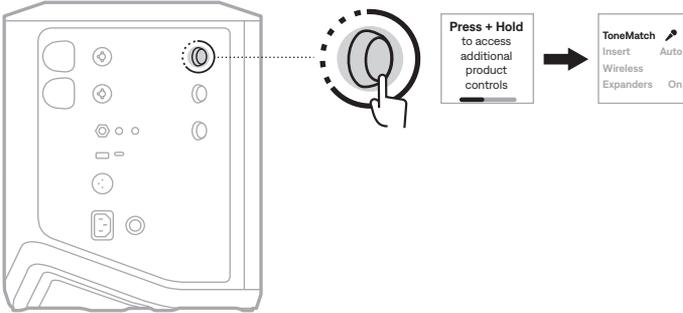


2. Rotate the channel control to highlight **Wireless**, then press to select it.

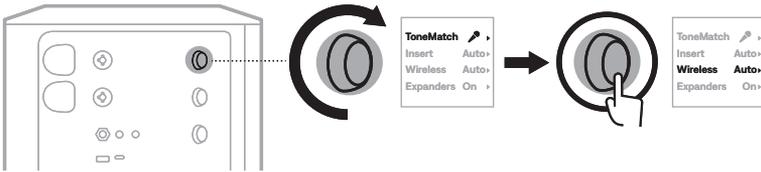

3. Rotate the channel control to highlight your preferred setting, then press to select it:


- **Auto** (default): Enables channel wireless functions. Previously paired transmitters can connect to the channel, and new transmitters can pair to the channel when inserted into the wireless transmitter charging port.
- **Off**: Disables channel wireless functions for when you need to avoid wireless interference. Previously paired transmitters can't connect to the channel, and new transmitters can't pair to the channel.

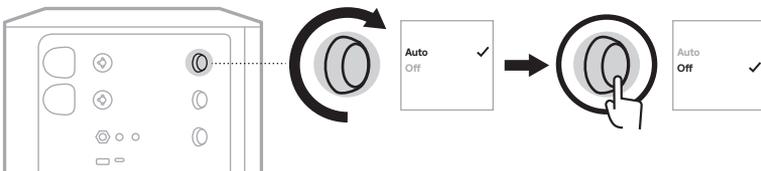

4. Press and hold the channel control until the additional controls menu disappears.

CONNECT A SPEAKER STAND

The bottom of the system includes a pole cup for mounting the system on a speaker stand. The pole cup fits a standard 1.38 in (35 mm) post. When the system is placed on a speaker stand, the EQ automatically updates to maintain optimum tonal balance.

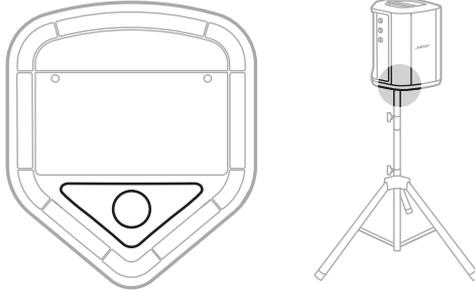

WARNING: Do NOT use the Bose S1 Pro+ Wireless PA System with a tripod/stand that is unstable. The loudspeaker is only designed for use on a 1.38 in (35 mm) post, and the tripod/stand must be capable of supporting a speaker with a minimum weight of 15 lbs (6.8 kg) and an overall size of 13.1 x 9.4 x 11 in (332.6 x 240 x 279.8 mm). Using a tripod/stand that is not designed to support the size and mass of the Bose S1 Pro+ Wireless PA System may lead to an unstable and hazardous condition that could result in injury.


SYSTEM CONFIGURATIONS

The Bose S1 Pro+ Wireless PA System can be used in four positions. With Auto EQ, the system EQ automatically updates to maintain optimal tonal balance for each position.

NOTE: You can also rotate the Bose logo on the system counterclockwise to match your position.

Elevated surface


Place the system on an elevated surface to project sound clearly and evenly throughout your audience.

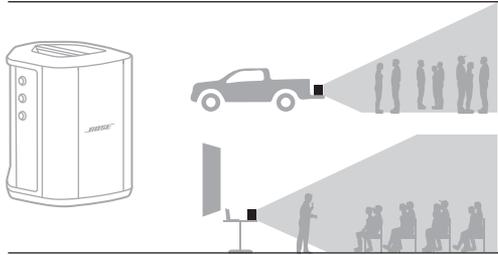

Tilt-back


For performances where your audience is close to you, tilt the system onto its back edge.

For best performance, stand or sit to the side of the system to avoid blocking sound.

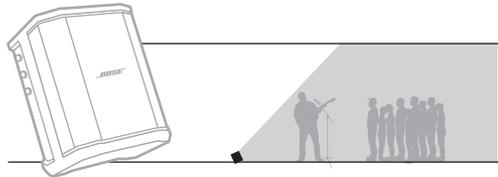


Monitor

To use the system as a personal floor monitor, place it horizontally on the ground in front of you and tilt it onto its side edge.

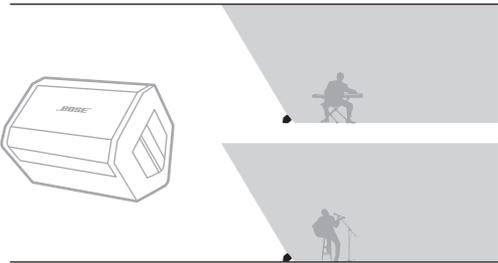


Speaker stand


Place one or more systems on a speaker stand (sold separately) for general sound reinforcement.

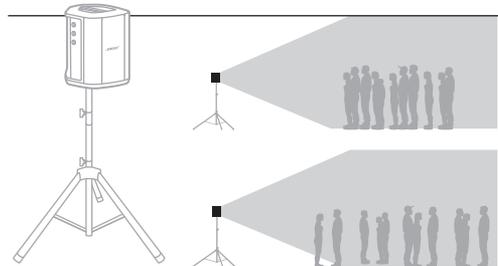


MUSICIAN WITH MOBILE DEVICE

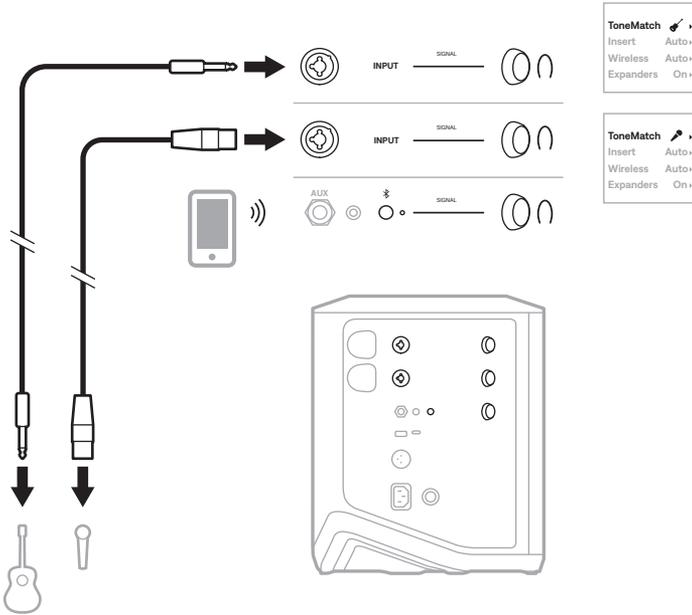


MUSICIAN WITH MOBILE DEVICE AND WIRELESS TRANSMITTERS

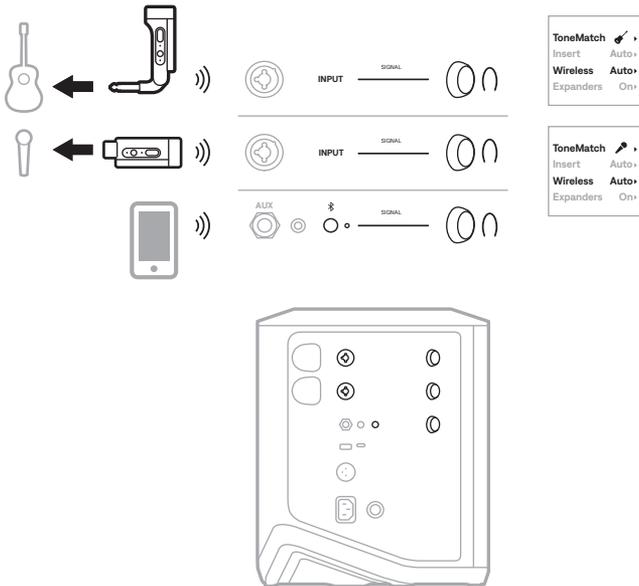

MULTI-INSTRUMENTALIST

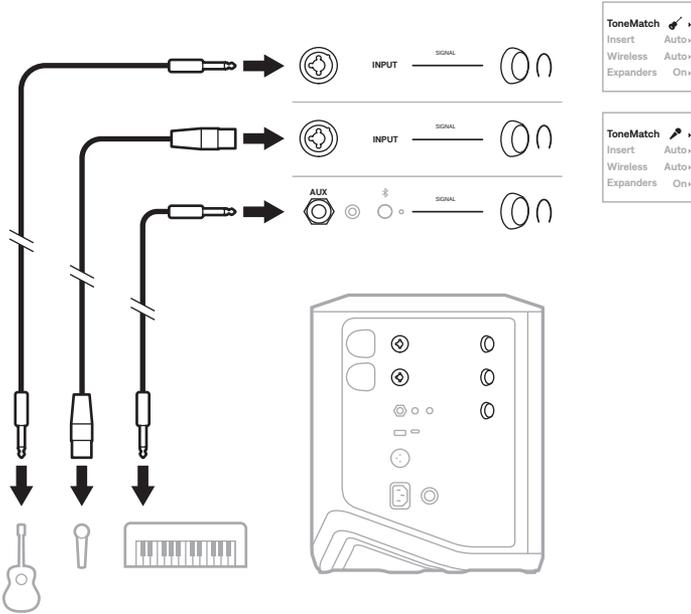


MUSICIAN WITH EFFECTS MIXER

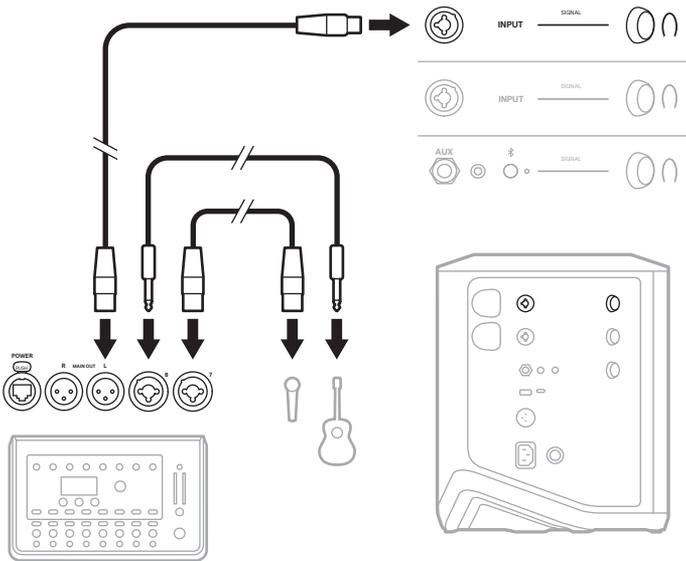


MUSICIAN WITH WIRELESS TRANSMITTERS, EFFECTS PEDAL, AND VOCAL PROCESSOR

NOTE: When using AC (mains)-powered effects units, a hum eliminator may be required. You can purchase a hum eliminator at your local music retailer.

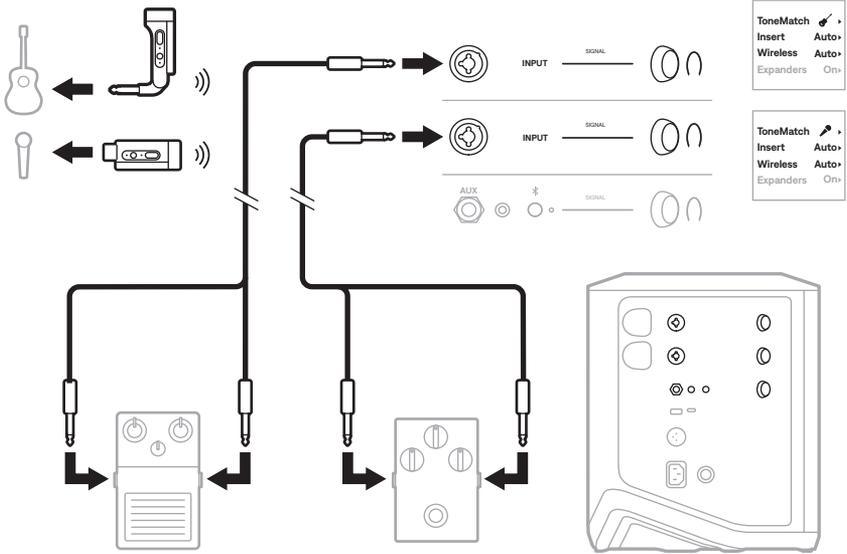

GUITARIST WITH WIRELESS TRANSMITTER AND AMP MODELER PEDAL

When using an amp modeler pedal, for best performance, use the Bose app to select the **Full Range Flat Response (FRFR)** ToneMatch preset for that channel.

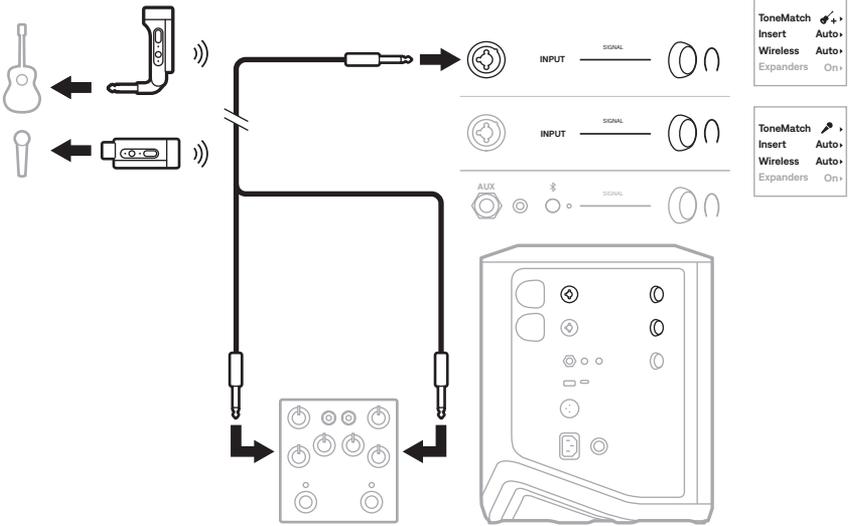


GENERAL-PURPOSE PA

You can connect two systems in either stereo or mono for use as a conventional PA system.

Stereo



When connecting systems in stereo through a mixer, on both systems, set reverb to the lowest setting and set ToneMatch to **Off** on the channel you're connecting the mixer line out to (see page 25 and page 27).

Stereo wired

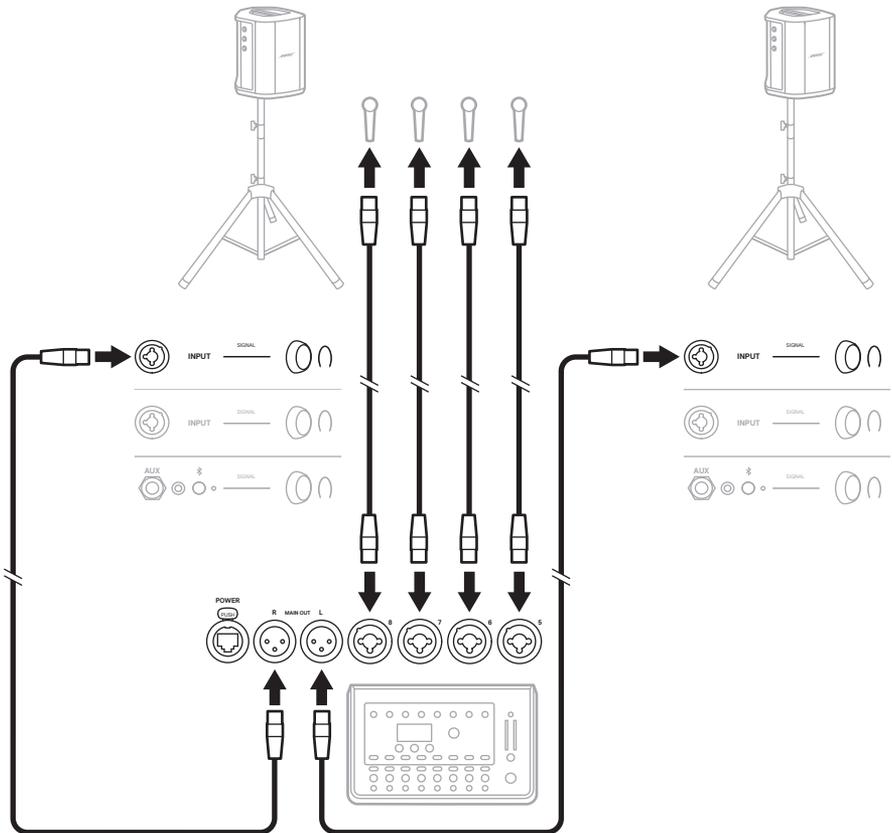

Stereo wireless

Before connecting Bose Wireless Mic/Line Transmitters to a mixer, make sure to set the transmitter input setting to line input for each transmitter (see page 40).

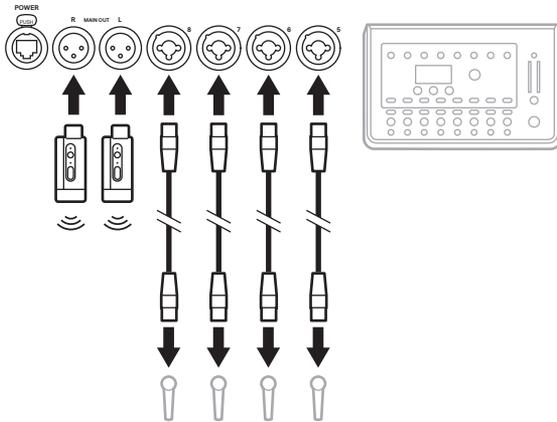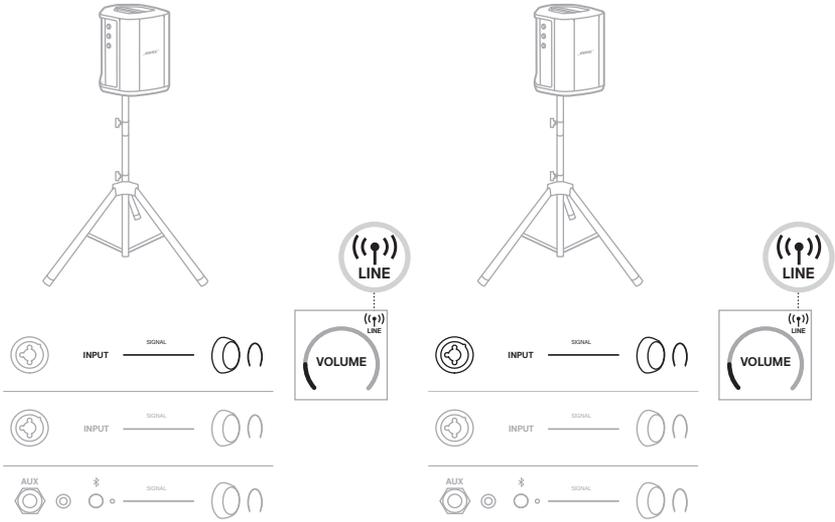


Dual mono/daisy-chain


When connecting systems in dual mono, on the secondary system(s), adjust the following settings on the channel you're connecting the primary system's line out to:

- Set reverb to the lowest setting (see page 25).
- Set ToneMatch to **Off** (see page 27).
- Set bass and treble to the neutral position (see page 24).

Dual mono wired

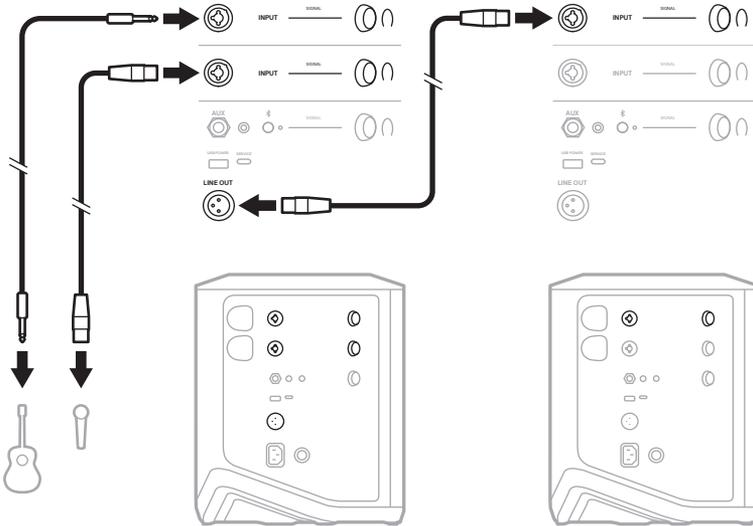


Dual mono wireless

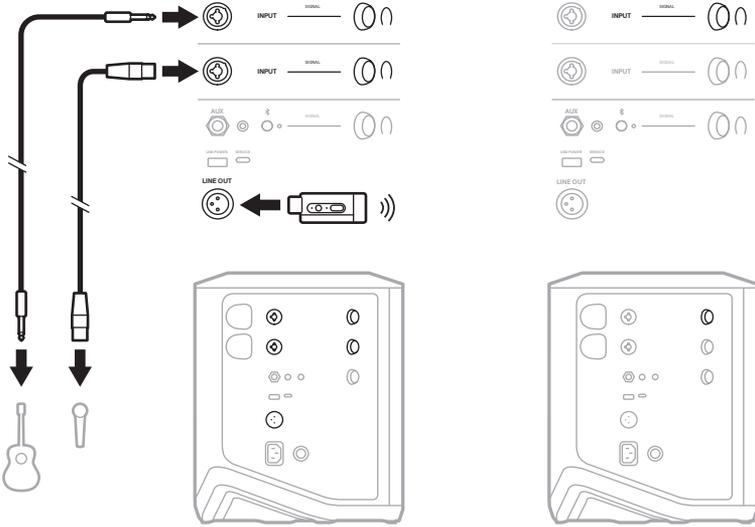


DJ WITH BOSE SUB1 OR SUB2 POWERED BASS MODULE

For detailed connection instructions, refer to the Bose Sub1/Sub2 Powered Bass Module owner's guide.


Visit: support.Bose.com/Sub1
support.Bose.com/Sub2

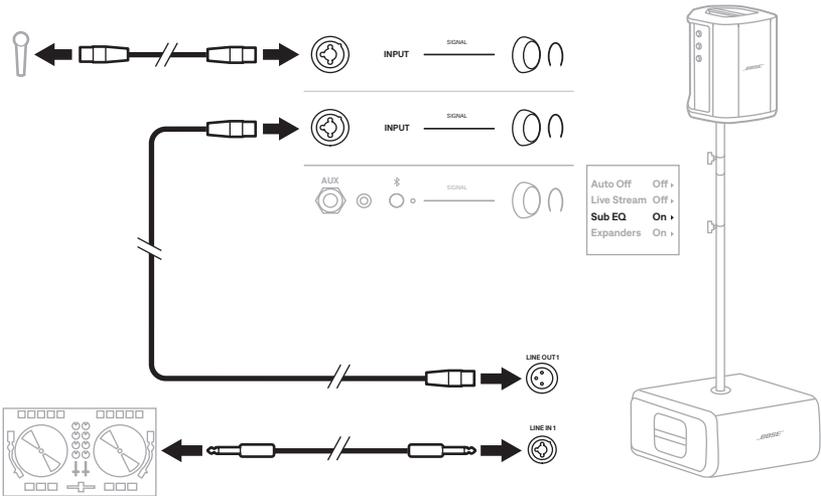

DUAL WIRELESS STREAMING WITH THE BOSE APP

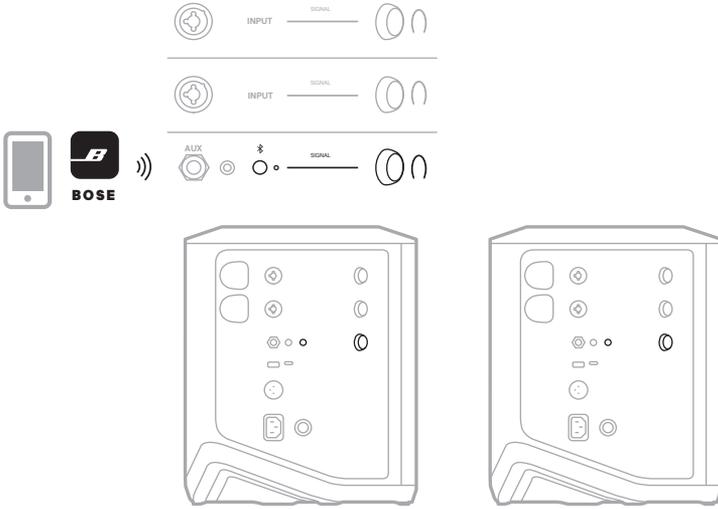


MUSICIAN RECORDING OR LIVE STREAMING TO COMPUTER

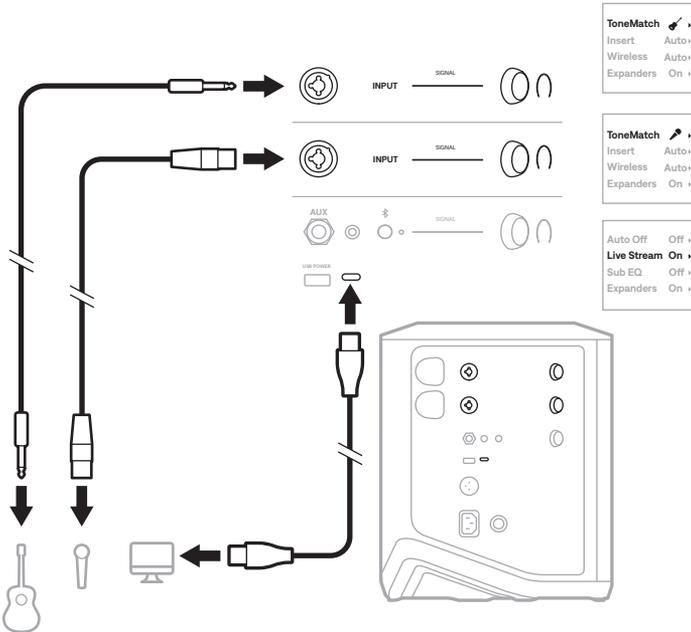


CHARGE THE SYSTEM BATTERY

To charge the system battery, connect the system to power (see page 18).

If the system is powered off, the power light pulses white to indicate that the system battery is charging. When the battery is fully charged, the power light turns off.

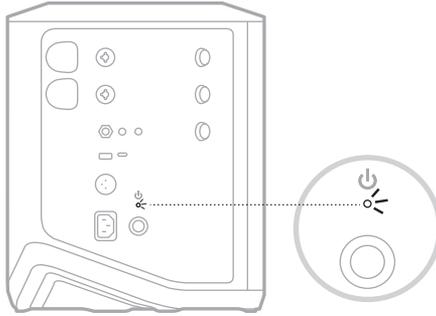

If the system is powered on, on the Channel 3 display, a lightning bolt icon appears next to the battery icon to indicate that the system battery is charging. When the battery is fully charged, the lightning bolt icon disappears (see page 61).

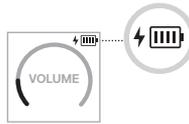

CAUTION: Do NOT attempt to charge the system while it is wet. Doing so may cause damage to the system.

Charging time

Allow up to 4 hours to fully charge the system battery.

With typical usage, the battery lasts up to 11 hours. Battery performance and charging time varies with the content played and volume at which it's played.


Check the system battery level

To check the system battery level and charging status, check the battery icon on the Channel 3 display (see page 61).


CHARGE A WIRELESS TRANSMITTER

Using the charging ports

Fully insert the wireless transmitter into the wireless transmitter charging port for either Channel 1 or 2 until you hear or feel a click.

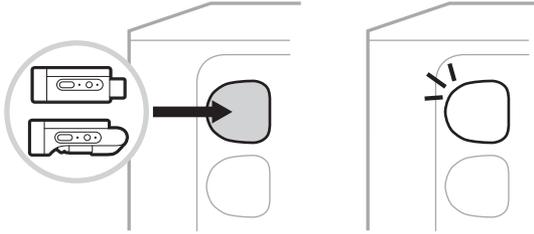

If the system is powered on, on the channel display, a battery icon with a lightning bolt next to it briefly appears to indicate that the transmitter battery is charging. A lightning bolt icon then appears in the upper-right corner of the display. When the transmitter is fully charged, the lightning bolt icon disappears (see page 60).

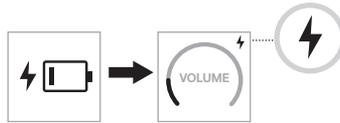


NOTE: If the system is connected to power, the AC (mains) power connection charges the transmitter. If the system is operating on battery power, the system battery charges the transmitter.

Using a wall charger or computer

NOTE: Use this product only with an agency-approved LPS power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).

1. Connect one end of a USB-C cable (not provided) to the USB-C port on the top of the wireless transmitter.

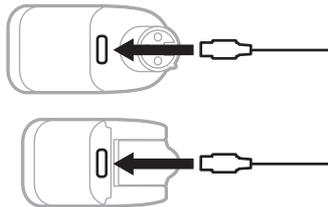

2. Connect the other end to a USB-A wall charger or computer.

The power light glows solid white (see page 62). When the transmitter is fully charged, the power light turns off.

Charging time

Allow up to 2 hours to fully charge the wireless transmitter battery.

With typical usage, the battery lasts up to 5 hours.

Check the wireless transmitter battery level


To check the wireless transmitter battery level, remove the transmitter from the wireless transmitter charging port and check the battery icon on the channel display (see page 60).

If you don't have the system nearby, you can also check the transmitter battery level by powering the transmitter on and checking the state of the power light (see page 62).


CHARGE YOUR MOBILE DEVICE USING THE USB CHARGING PORT

You can charge your mobile device using the system battery or AC (mains) power.

1. Connect one end of a USB-A charging cable (not provided) to the **USB POWER** port on the system.
2. Connect the other end to your mobile device.

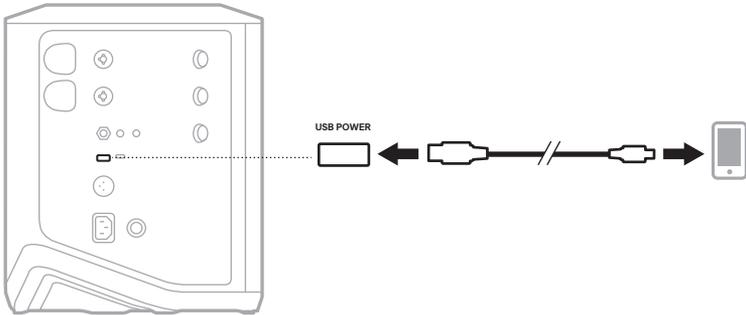

The signal/clip lights, power light, *Bluetooth* light, and channel displays located on the side of the system show the system status.

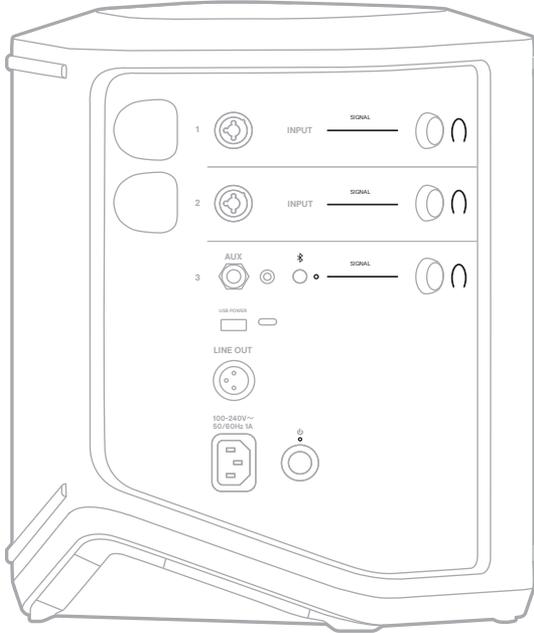

SIGNAL/CLIP LIGHTS

Shows the signal or clip status for Channels 1, 2, and 3.

LIGHT ACTIVITY	SYSTEM STATE
Solid green	Signal is present.
Solid red	Signal is clipping or system is limiting signal. NOTE: Reduce the channel or source volume to prevent clipping or limiting.

POWER LIGHT

Shows the power and charging status of the system.

LIGHT ACTIVITY	SYSTEM STATE
Solid white	Powered on.
Pulsing white while system is powered off and connected to power	Charging.
Solid red	System error. Power the system off and on again (see page 18). If the error persists, contact Bose customer service.
Slowly blinking red	Thermal error. Let the system cool to a lower temperature.
Quickly blinking red	Battery error. Contact Bose customer service.

BLUETOOTH LIGHT


Shows the *Bluetooth* connection status.

LIGHT ACTIVITY	SYSTEM STATE
Blinking blue	Ready to connect.
Solid white	Connected.
Blinks white 3 times	Cleared device list.

CHANNEL DISPLAYS

Shows the status and settings of each channel, the system, and any connected wireless transmitters.

How to read the channel displays

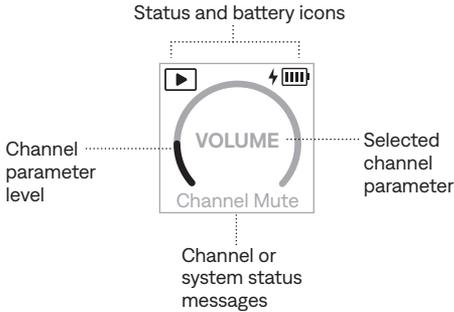

Status icons

The status icons show channel and system settings.

ICON	MEANING
	The default Instrument ToneMatch preset is applied to the channel.
	A custom Instrument ToneMatch preset is applied to the channel.
	The default Microphone ToneMatch preset is applied to the channel.
	A custom Microphone ToneMatch preset is applied to the channel.
	Live Stream mode is enabled.
	A wireless transmitter is connected to the channel. NOTE: If the transmitter is a Bose Wireless Mic/Line Transmitter, this icon indicates that the transmitter input setting is set to mic input.
	A Bose Wireless Mic/Line Transmitter is connected to the channel, and the transmitter input setting is set to line input.

Battery icons

The battery icons show the battery level and charging status of either the system or a paired wireless transmitter, depending on the channel display.

Channel 1 or 2 display

On the Channel 1 or 2 display, battery icons show the battery level and charging status of a paired wireless transmitter. They briefly appear as full-screen overlays, except for the lightning bolt icon, which appears in the upper-right corner of the display.


ICON	WIRELESS TRANSMITTER BATTERY LEVEL
	67% - 100%
	34% - 66%
	10% - 33%
	0% - 9%
	67% - 100% and charging
	34% - 66% and charging
	10% - 33% and charging
	0% - 9% and charging
	Charging

Channel 3 display

On the Channel 3 display, battery icons show the system battery level and charging status. They appear in the upper-right corner of the display.

ICON	SYSTEM BATTERY LEVEL
	67% - 100%
	34% - 66%
	10% - 33%
	0% - 9%
	67% - 100% and charging
	34% - 66% and charging
	10% - 33% and charging
	0% - 9% and charging

The power light and connection light on the wireless transmitter show the transmitter status.

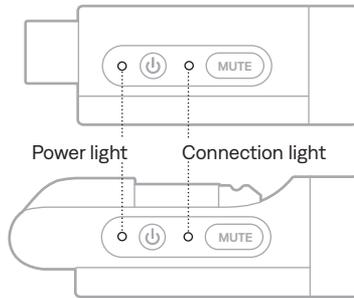

POWER LIGHT

Shows the power, battery level, charging, and error status of the transmitter.

LIGHT ACTIVITY	SYSTEM STATE
Blinks white 4 times (when powering on)	75% - 100% battery level
Blinks white 3 times (when powering on)	50% - 75% battery level
Blinks white 2 times (when powering on)	25% - 50% battery level
Blinks white 1 time (when powering on)	10% - 25% battery level
Solid white	Powered on or charging
Blinking red	Transmitter battery low
Solid red	Error - contact Bose customer service

CONNECTION LIGHT

Shows the connection and mute status of the transmitter.

LIGHT ACTIVITY	SYSTEM STATE
Solid blue	Connected
Blinking blue	Muted

CONNECT YOUR MOBILE DEVICE

For connection instructions, see page 21.

DISCONNECT A MOBILE DEVICE

Disable the *Bluetooth* feature on your device.

NOTE: Disabling the *Bluetooth* feature disconnects all other devices.

RECONNECT A MOBILE DEVICE

When powered on, the system tries to reconnect with the most recently-connected device.

NOTES:

- The device must be within range (30 ft or 9 m) and powered on.
- Make sure the *Bluetooth* feature is enabled on your mobile device.


CLEAR THE SYSTEM DEVICE LIST

1. Press and hold the *Bluetooth* button  for 10 seconds until the *Bluetooth* light blinks white 3 times.
2. Delete the system from the *Bluetooth* list on your mobile device.


All devices are cleared, and the system is ready to connect (see page 64).

REPLACE THE SYSTEM BATTERY


1. Press the Power button  to power off the system, then disconnect the system from power.

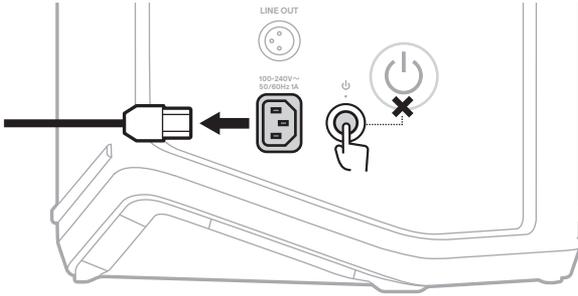


2. Turn the system upside down. Loosen the two screws, then remove the bottom plate.

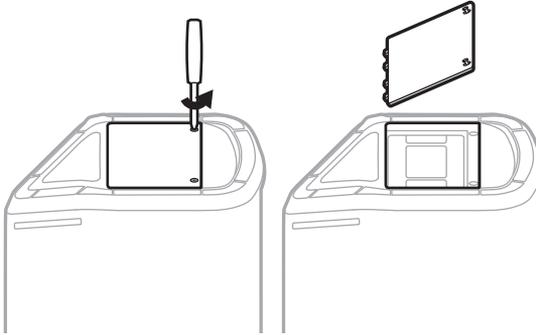


3. Remove the old battery using the pull tabs.

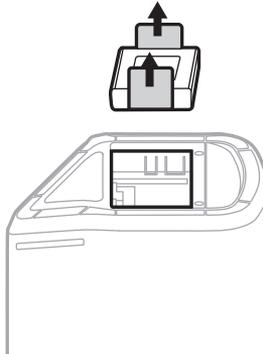


4. Insert the new battery, ensuring the connector pins line up appropriately.

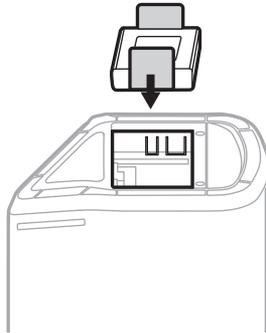

5. Replace the bottom plate, then tighten the two screws until secure.

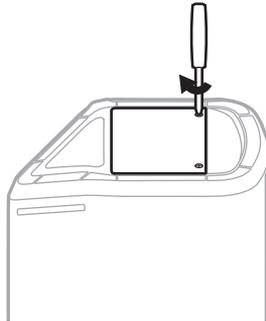

6. Connect the system to power.
7. Press the Power button  to power on the system.

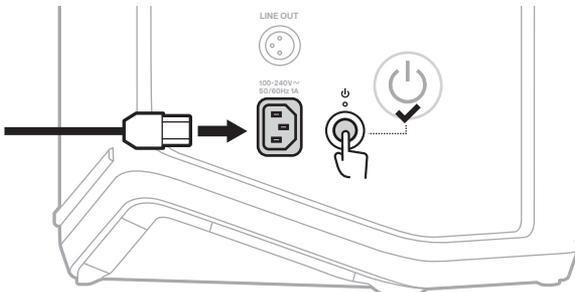

NOTE: The replacement battery remains in Sleep mode until the system is connected to AC (mains) power and powered on.

UPDATE THE SYSTEM

To check for and download system software updates, use your computer to visit the Bose updater website at: btu.Bose.com

For more detailed instructions, visit: support.Bose.com/S1ProPlusUpdate

NOTE: To update the system, you need to connect the system to your computer using a USB-C cable (not provided). For more information, see page 32.

UPDATE A WIRELESS TRANSMITTER

When you insert a wireless transmitter into either of the wireless transmitter charging ports, the system checks whether a software update is available. If it is, follow the instructions on the channel display to install the update.

CLEAN THE SYSTEM


Wipe the outside surface of the system with a soft, dry cloth. If necessary, carefully vacuum the grille of the system.

CAUTIONS:

- Do NOT use any sprays near the system.
- Do NOT use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do NOT allow liquids to spill into any openings.
- Do NOT allow objects to drop into any openings.

TRANSPORT AND STORE THE SYSTEM

When transporting or storing the system, place it in the upright or monitor position, not on its side.

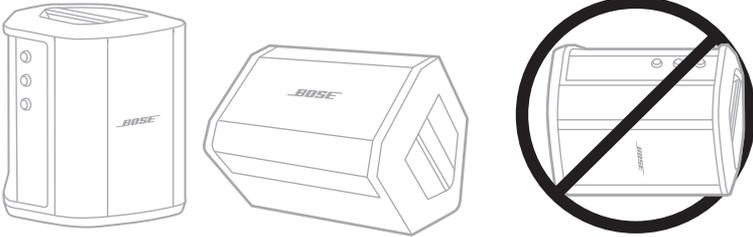

CAUTION: Storing the system on its side may cause damage under certain environmental conditions.

NOTE: Before storing the system for more than a few months, make sure the system battery is fully charged.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/S1ProPlus

LIMITED WARRANTY

The system is covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.

To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the system:

- Make sure the system is connected to a live AC (mains) outlet (see page 18).
- Power the system off and then on (see page 18).
- Secure all cables.
- Check the state of the status lights (see page 57).
- Check for and download any available software updates (see page 67).

OTHER SOLUTIONS

If you couldn't resolve your issue, see the table below to identify symptoms and solutions to common problems. You can also access troubleshooting articles, videos, and other resources at: support.Bose.com/S1ProPlus

If you're unable to resolve your issue, contact Bose customer service.

Visit: worldwide.Bose.com/contact

System

SYMPTOM	SOLUTION
System doesn't power on	<p>System battery may be in protection mode or discharged. Connect the system to AC (mains) power.</p> <p>Plug the power cord into a different AC (mains) outlet.</p> <p>If the power cord is connected to a power strip or surge protector, try plugging it directly into the AC (mains) outlet.</p> <p>Unplug the power cord and remove the system battery (see page 65). Wait 30 seconds, then replace the battery and firmly plug the power cord back in to the AC (mains) outlet.</p> <p>Reset the system (see page 77). Power on again.</p>

SYMPTOM	SOLUTION
<p>Intermittent or no audio from an instrument or audio source connected by an input cable</p>	<p>Make sure your instrument or audio source is firmly connected to the channel input.</p> <p>Increase the volume on the instrument or audio source and the system.</p> <p>Check that the signal/clip lights are lit to confirm that the system detects an audio signal from the source.</p> <p>Connect your instrument or audio source to a different amplifier to confirm the source is working.</p> <p>Connect a different instrument or audio source.</p> <p>Try using another input cable to connect the instrument or audio source to the system.</p> <p>If you're using a condenser microphone, make sure to connect it to a phantom power supply (such as a preamplifier or mixing console) before connecting it to the system.</p> <p>Unplug the power cord and remove the system battery (see page 65). Wait 30 seconds, then replace the battery and firmly plug the power cord back in to the AC (mains) outlet.</p> <p>Reset the system (see page 77).</p>
<p>System doesn't connect to <i>Bluetooth</i> device</p>	<p>On your device:</p> <ul style="list-style-type: none"> • Turn the <i>Bluetooth</i> feature off and then on again. • Delete the system from the <i>Bluetooth</i> list on your device, including any duplicate listings labeled LE (Low Energy). Connect again (see page 64). <p>Connect another mobile device (see page 64).</p> <p>Clear the system device list (see page 64). Connect again.</p>
<p>Intermittent or no audio from a <i>Bluetooth</i> device</p>	<p>Play audio from a different application or music service.</p> <p>Move your mobile device closer to the system (30 ft or 9 m) and away from any interference or obstructions.</p> <p>Stop other audio or video streaming applications.</p> <p>Make sure your mobile device supports <i>Bluetooth</i> connections.</p> <p>Restart your mobile device.</p> <p>Connect a different mobile device (see page 64).</p>

SYMPTOM	SOLUTION
Distorted audio from an instrument or audio source	<p>Turn the volume down on the source. If your audio source volume can't be adjusted, you can purchase input pads from your local music retailer.</p> <p>Try a different source or instrument.</p> <p>If you're playing audio from a mobile device connected to the Channel 3 AUX input, make sure that the device isn't also connected to the USB POWER port for charging. This can create noise during audio playback.</p> <p>Make sure the Expanders setting for that channel is set to On, not Off (see page 75).</p>
Humming or buzzing when nothing is plugged into the system	<p>Using an AC (mains) outlet tester, test the outlet that the system is plugged into for any reversed or open (hot, neutral, and/or ground) contacts.</p> <p>If the system is plugged into an extension cord, plug the system directly into the AC (mains) wall outlet instead.</p>
Feedback from a microphone connected to the system	<p>Turn the channel volume down.</p> <p>Orient the microphone so that it's not pointing directly at the system.</p> <p>Try a different microphone.</p> <p>Try a different position for the system and/or vocalist.</p> <p>Increase the distance from the microphone to the system.</p> <p>If using a vocal effects processor, try bypassing it to determine if the processor settings are contributing to feedback.</p> <p>Make sure the Expanders setting for that channel is set to On, not Off (see page 75).</p>
Excessive hum when daisy-chaining together multiple systems	<p>Reduce the volume on the daisy-chained unit(s).</p>

SYMPTOM	SOLUTION
System battery doesn't charge	<p>Try not using the system while the system battery is charging.</p> <p>If the system has been exposed to high or low temperatures, let it return to room temperature and then try charging again.</p> <p>Disconnect the system from power, then remove the system battery (see page 65). Once the battery is cool to the touch, replace the battery and try charging again.</p> <p>If you're using the system at a very high volume level, try turning the volume down. At very high volume levels, the system pauses charging the system battery and any connected wireless transmitters.</p>
Bose app doesn't work on mobile device	<p>Make sure your mobile device is compatible with the Bose app and meets minimum system requirements. For more information, refer to the app store on your mobile device.</p> <p>Uninstall the Bose app on your mobile device, then reinstall the app (see page 16).</p>

Wireless transmitter


SYMPTOM	SOLUTION
Wireless transmitter doesn't power on	<p>Fully charge the transmitter (see page 55). Power on again.</p> <p>Reset the transmitter (see page 77). Power on again.</p>
Wireless transmitter doesn't charge	<p>System battery may be in protection mode or discharged. Connect the system to AC (mains) power.</p> <p>If the transmitter has been exposed to high or low temperatures, let it return to room temperature and then try charging again.</p> <p>Charge the transmitter using a wall charger or computer (see page 55).</p> <p>If you're using the system at a very high volume level, try turning the volume down. At very high volume levels, the system pauses charging the system battery and any connected wireless transmitters.</p>
Wireless transmitter doesn't connect to system	<p>Check the power light to make sure the transmitter is powered on (see page 62).</p> <p>Check the connection light to confirm whether the transmitter is connected to the system or not (see page 63). If the light is turned off, try pairing the transmitter to the channel again (see page 37).</p> <p>Move the transmitter closer to the system (within 20 ft or 6 m) and away from any interference or obstructions.</p> <p>Make sure that the Wireless setting for that channel is set to Auto, not Off (see page 42).</p> <p>Reset the transmitter (see page 77). Pair the transmitter to the channel again (see page 37).</p>

SYMPTOM	SOLUTION
<p>Intermittent or no audio from a source connected to a wireless transmitter</p>	<p>Make sure the transmitter is securely connected to the source.</p> <p>Check the connection light to make sure the transmitter is connected to the system (see page 63). If the light is turned off, see “Wireless transmitter doesn’t connect to system” on page 73.</p> <p>Check the power light to make sure the transmitter is powered on (see page 62).</p> <p>Check the connection light to make sure the transmitter isn’t muted (see page 63). If it is, unmute the transmitter (see page 39).</p> <p>Move the transmitter and source closer to the system (within 20 ft or 6 m) and away from any interference or obstructions.</p> <p>See “Intermittent or no audio from an instrument or audio source connected by an input cable” on page 70.</p> <p>Reset the transmitter (see page 77). Pair the transmitter to the channel again (see page 37). Power on and connect the transmitter to the source, then test for audio.</p>
<p>Unusually quiet or loud audio from a source connected to a Bose Wireless Mic/Line Transmitter</p>	<p>Make sure that the transmitter is set to the appropriate input setting for your source (mic or line input). See “Change between mic and line input” on page 40.</p>
<p>No audio from a source connected to a channel input with an insert cable while a wireless transmitter is connected</p>	<p>Make sure that the Insert setting for that channel is set to Auto, not Off (see page 41).</p>
<p>Humming or feedback from an effects unit connected to a channel input with an insert cable</p>	<p>On the wireless transmitter for that channel, check the power light and connection light to make sure the transmitter is powered on and connected to the system (see page 62 and page 63). If it isn’t, the system treats the effects unit as an input, which can create humming or feedback.</p> <p>Make sure the Expanders setting for that channel is set to On, not Off (see page 75).</p> <p>Any remaining ground hum may be due to your effects unit. To help, you can purchase a hum eliminator at your local music retailer.</p>


ENABLE/DISABLE THE EXPANDERS SETTING

The Expanders setting determines whether the system reduces the volume of low-level background noise for a channel, such as noise caused by electrical feedback, radio frequency interference, or your environment. You can disable this feature for one or more channels if necessary for your setup scenario.


1. Press and hold one of the channel controls until the additional controls menu appears on the channel display.

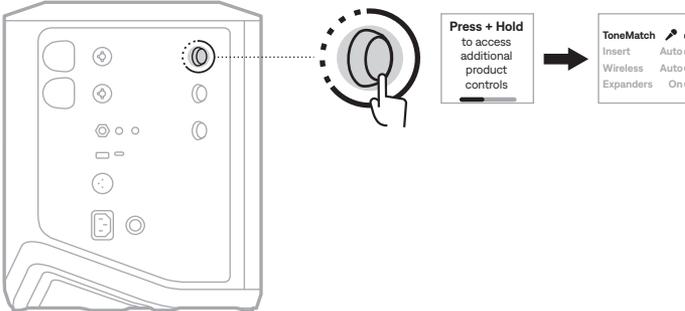

2. Rotate the channel control to highlight **Expanders**, then press to select it.

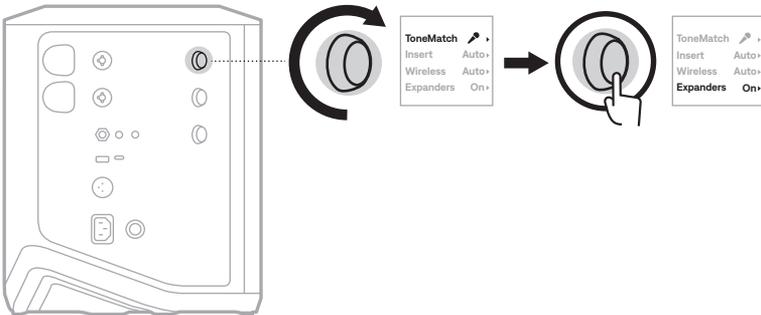

3. Rotate the channel control to highlight your preferred setting, then press to select it:
 - **On** (default): Enables the Expanders setting for this channel, causing the system to reduce the volume of low-level noise.
 - **Off**: Disables the Expanders setting for this channel, preventing the system from reducing the volume of low-level noise.

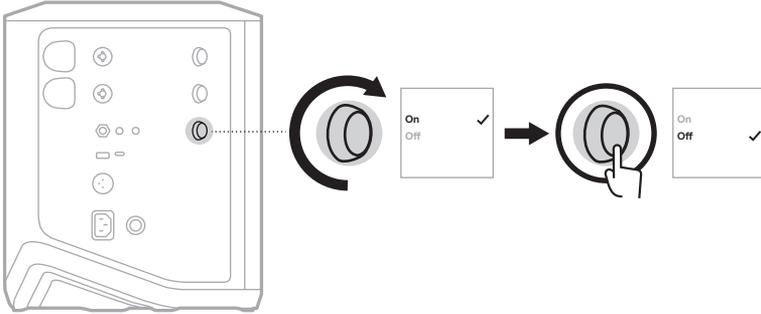


4. Press and hold the channel control until the additional controls menu disappears.

RESET THE SYSTEM

Factory reset clears all channel and system settings, *Bluetooth* connections, and wireless transmitter connections from the system and returns it to original factory settings.

NOTE: You can easily restore your channel and system settings after a system reset using the Bose app. To do so, before you reset, save your current settings as a Scene in the app (see page 36). Once the reset is complete, select the Scene in the app to restore all settings except for *Bluetooth* and wireless transmitter connections.

Press and hold the Power button  for 10 seconds until the power light turns off and a message appears on the channel displays.

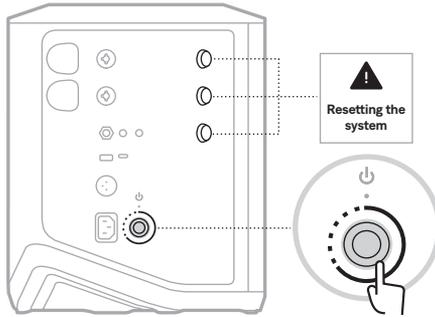

The system reboots. When the reset is complete, the power light glows solid white.

RESET A WIRELESS TRANSMITTER

Factory resetting a wireless transmitter clears all pairing information and returns it to original factory settings.

Press and hold the Power button  for 10 seconds until the power light turns off.





872237-0010