


SINK UNITS

500-1000

Undermount Sink Support Attachment

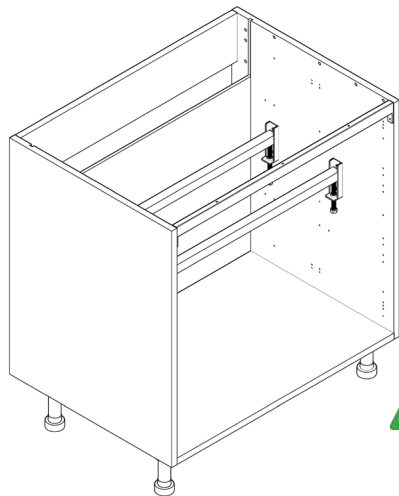


Contents:



**Mounting Bracket
& Fixings**

x2

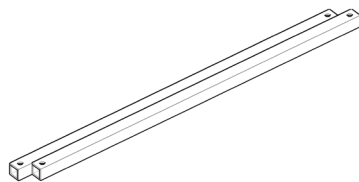

Sink support rails


x2

Step 1.

Position Mounting Brackets onto both end panels of the carcass as shown so that the Sink Support rail provides support at the front and back of the underside of the sink. Allow clearance for sink & tap plumbing. Secure using 2 x screws per Mounting Bracket, 15mm Screws are recommended.

**See Customer Specific Kitchen Plan
for Customer Sink Details.**

Screws for attaching
Mounting Brackets are not
provided. Ensure appropriate
fixings for this are used.

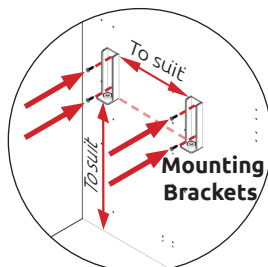


view from inside carcass

Step 2.

Adjust bolt to raise or lower the rail so that it applies
sufficient support to the sink.

Applying excessive pressure will damage the sink.
For curved underside sinks, use packers where
necessary to move supporting pressure from the
centre of the sink to the edges.

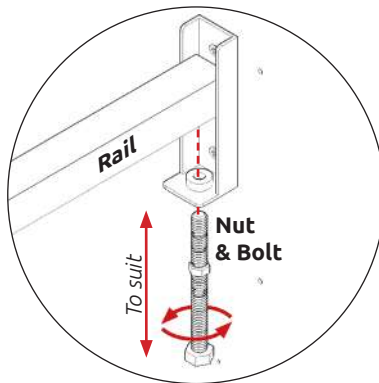

wren
KITCHENS