

INSTALLATION GUIDE

DB3

2016 Volkswagen Golf (Smart Key) - 403.VW06 1.27 RSR



This product is intended for installation by a professional installer only! Attempts to install this product by a person other than a trained professional may result in severe damage to a vehicle's electrical system and components.

DIRECTED®

Contents

- Introduction 4
- Pre-installation and application warnings 5
- Wiring diagram 6
 - Locating components in the vehicle 7
 - Immobilizer interface with OEM immobilizer receiver 8
- Vehicle connections 10
- SmartStart/XL202 installation notes 12
- Connecting the module 13
 - Module programming 14
 - LED diagnostics and troubleshooting 15
 - Parking light error codes 17
 - Soft reset 18
 - Hard reset 19
- Feature programming 20
- Feature and option list 21
- Limited one year consumer warranty 22
- Quick reference guide 23

Warning! Safety first

 The following safety warnings must be observed at all times:

- Due to the complexity of this system, installation of this product must only be performed by an authorized Directed dealer.
- When properly installed, this system can start the vehicle via a command signal from the remote control. Therefore, never operate the system in an area that does not have adequate ventilation.

The following precautions are the sole responsibility of the user; however, authorized Directed dealers should:

- Never use a test light or logic probe when installing this unit. Always use a multimeter.
- Never operate the system in an enclosed or partially enclosed area without ventilation (such as a garage).
- When parking in an enclosed or partially enclosed area or when having the vehicle serviced, the remote start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all remote controls to assure that the system does not unintentionally remote start the vehicle.
- **USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST REMAIN CLOSED AT ALL TIMES.**

Use of this product in a manner contrary to its intended mode of operation may result in property damage, personal injury, or death. Except when performing the Safety Check outlined in this installation guide, (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user is responsible for having the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized Directed dealer in accordance with the Safety Check outlined in this product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the user to fix the problem immediately.

OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY. IMMEDIATELY CEASE THE USE OF THE UNIT AND REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. DIRECTED WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.

Remote starters for manual transmission pose significant risks if not properly installed and operated. When testing to ensure the installation is working properly, only remote start the vehicle in neutral gear, on a flat surface and with a functional, fully engaged parking brake. Do not allow anyone to stand in front of or behind the vehicle.

This product should not be installed in any convertible vehicles, soft or hard top with a manual transmission. Installation in such vehicles may pose certain risk.

Introduction

DB3 is an all-in-one door lock and override module. This guide supports the installation of a DB3 in Remote Start Ready (RSR) mode. This solution offers three (3) configuration options to control your system: 3x OEM Lock Remote Start Activation, RF System or SmartStart (all sold separately).



Warning!

This module can only be flashed and configured using DirectLink at www.directechs.com or using the Directechs Mobile application for smartphones. Refer to "Connecting the module" for more information.

This solution is compatible with the 2016 Volkswagen Golf (Smart Key) and offers the following features:

- AV-Parking Lights Control
- DL-Arm Factory Security
- DL-Disarm Factory Security
- DL-Door Lock Control
- DL-Door Unlock
- DL-Driver Priority Unlock
- DL-Trunk / Hatch Release
- FOB-Control of aftermarket alarm with OEM remote
- PK-Universal RF Bypass- Key Req'd
- RS-3x LOCK START (Start control using OEM Remote)
- RS-3x LOCK STOP (Stop control using OEM Remote)
- RS-RAP Shut Down (Retained ACC Power)
- RS-Remote Start Ready
- RS-SmartStart
- RS-Tach / RPM Output
- SS-Entry Monitoring ALL Door Pins
- SS-Entry Monitoring Hood Pin
- SS-Entry Monitoring Trunk/Hatch Pin
- SS-Factory Alarm Trigger Monitoring
- ST-Brake Status (foot brake)
- ST-Door Locks Status
- ST-E-Brake Status
- ST-Ignition Status

Pre-installation and application warnings

Start here

Firmware notes: This section highlights important information for this specific firmware and will assist in pricing accordingly, as well as bringing awareness to any operational or vehicle limitations.


T-Harness compatible 	No <input checked="" type="checkbox"/>		Keys required for programming	1	Keys required for operation	1
--	--	--	-------------------------------	---	-----------------------------	---

- ♦ **Important!** RSR installations are **NOT** compatible with vehicles equipped with a manual transmission.
- ♦ Remote Start Ready (RSR) is a function that enables the interface module to remote start the vehicle completely on its own. Consequently, there is no need for an aftermarket or an OEM remote starter in order to start the vehicle from a distance.
- ♦ **SmartStart Compatible:** SmartStart is equipped with D2D, which means it can be connected to an interface module and used in Remote Start Ready (RSR) mode without the use of a remote starter. See "Module programming" for more information.
- ♦ Unless specified otherwise, all connectors are displayed from the wire side, with the exception of the OBDII diagnostic connector.
- ♦ **Important!** This firmware does **NOT** support Immobilizer bypass. One (1) programmed OEM key must be wired into the vehicle to complete the installation of a remote starter.
- ♦ Refer to "Vehicle connections" following the wiring diagram.

General notes: This section highlights important information for this specific firmware.

[1] For Key Wrap instructions, refer to "Immobilizer interface with OEM immobilizer receiver".

Additional parts required (maximum required):

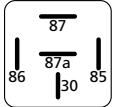
 0 x 1A Diode	 0 x Relay	 0 x Resistor	 0 x Fuse
---	---	--	---

Wiring diagram





Important!

The Hood Pin and Remote Start Safety Override Switch are mandatory safety devices, but are NOT supplied with the DBALL.

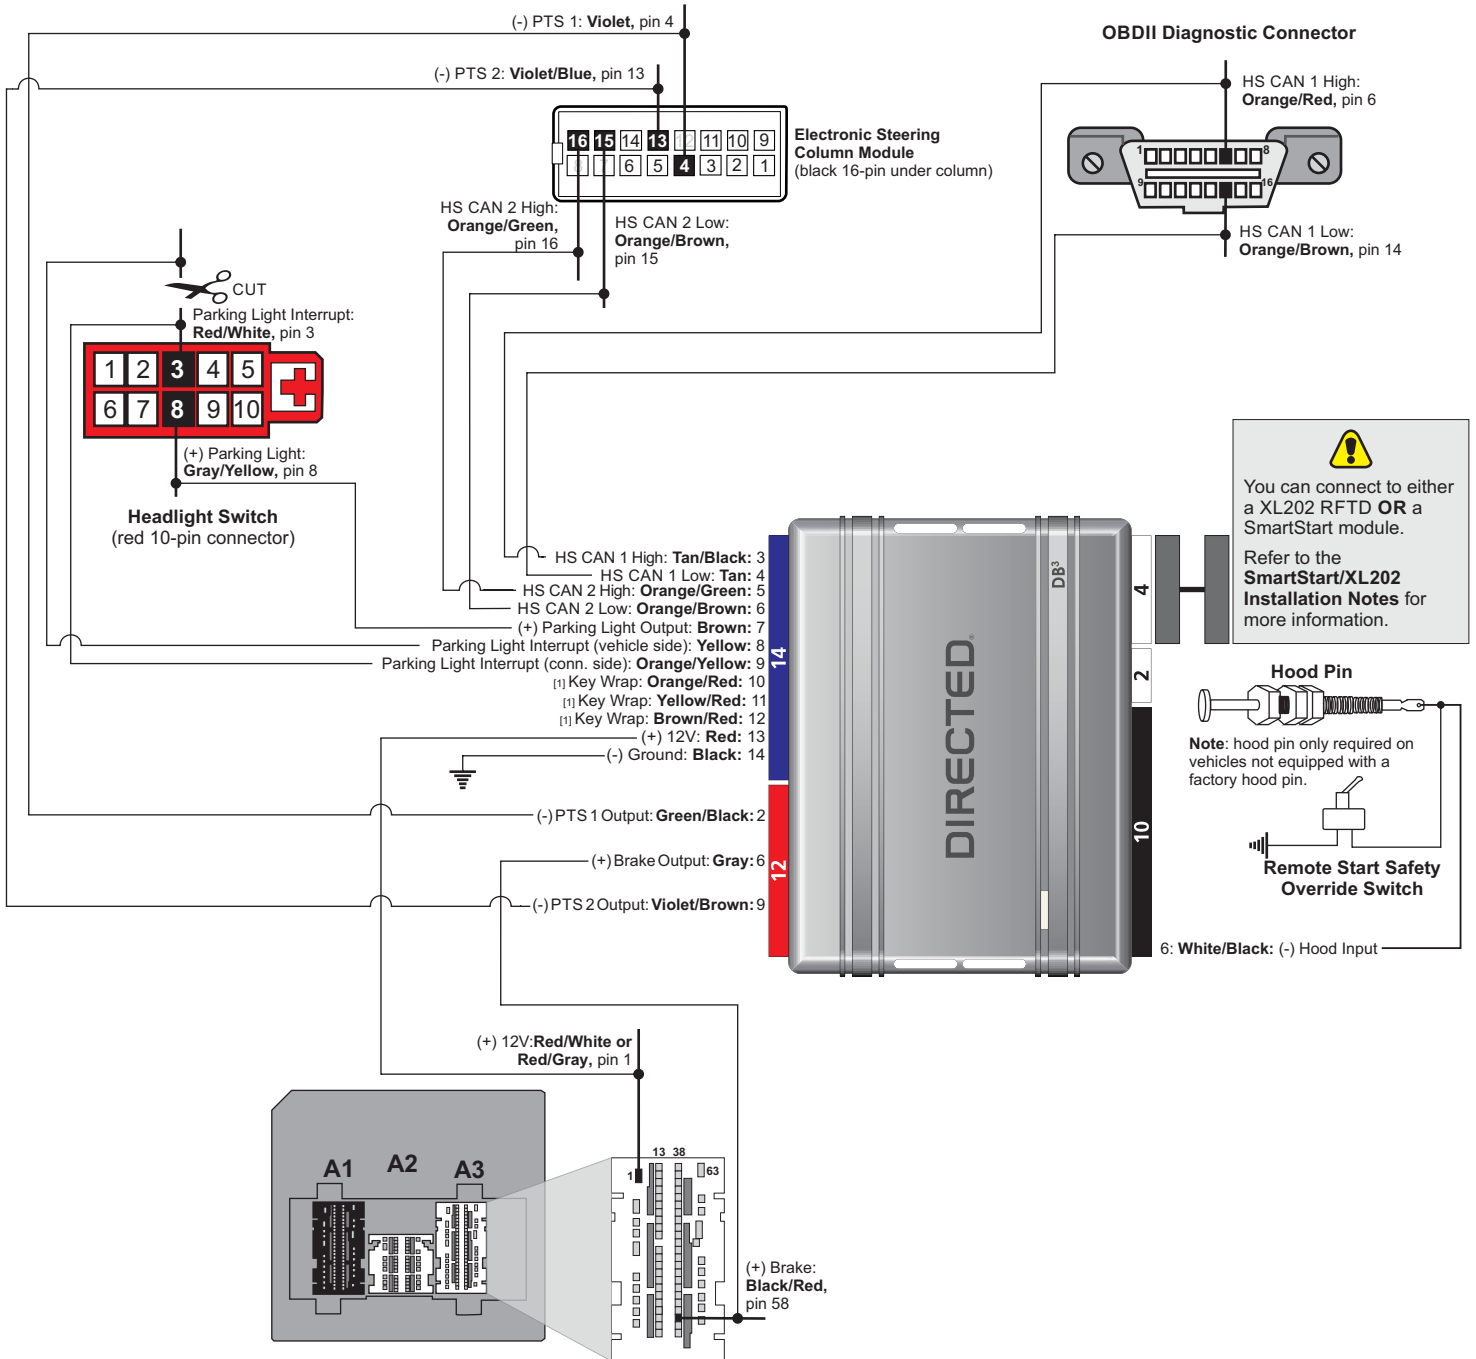

Locating components in the vehicle

VESCM - Vehicle Electrical System Control Module at Driver Side under dash, above Driver Kick Panel

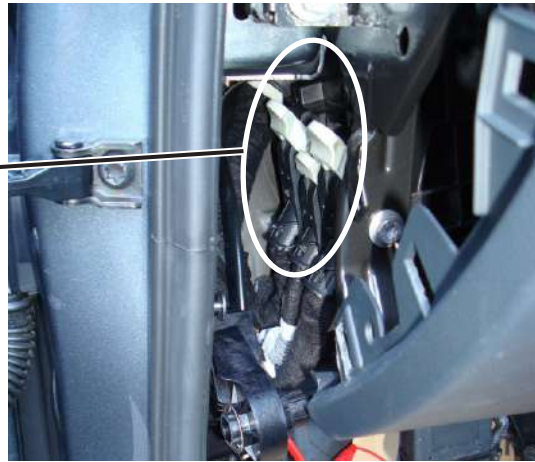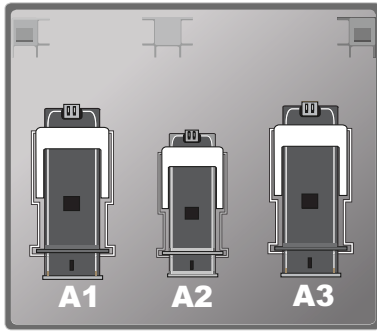


ESCLCM - Electronic Steering Column Lock Control Module at Steering Column



Method 1: Immobilizer interface with OEM immobilizer receiver (PTS)



Note: OEM immobilizer receiver is located on the underside of the steering column, where the ignition switch would normally be.

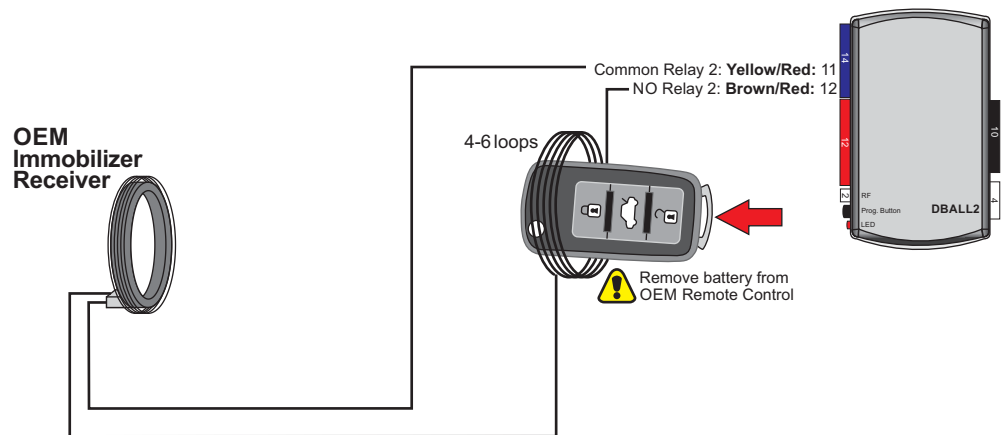


NOTE:

- Your OEM remote may differ from the model shown in the illustrations.
- Remove Battery from OEM FOB prior to performing the Key Wrap.
- Make 4-6 loops and place them around the front of the plastic body of the vehicle's coded key as shown above.
- Test and secure mounted loop before reassembling the vehicle.

Method 2: Immobilizer interface with 556U (PTS)

556U or 556UW is sold SEPARATELY.

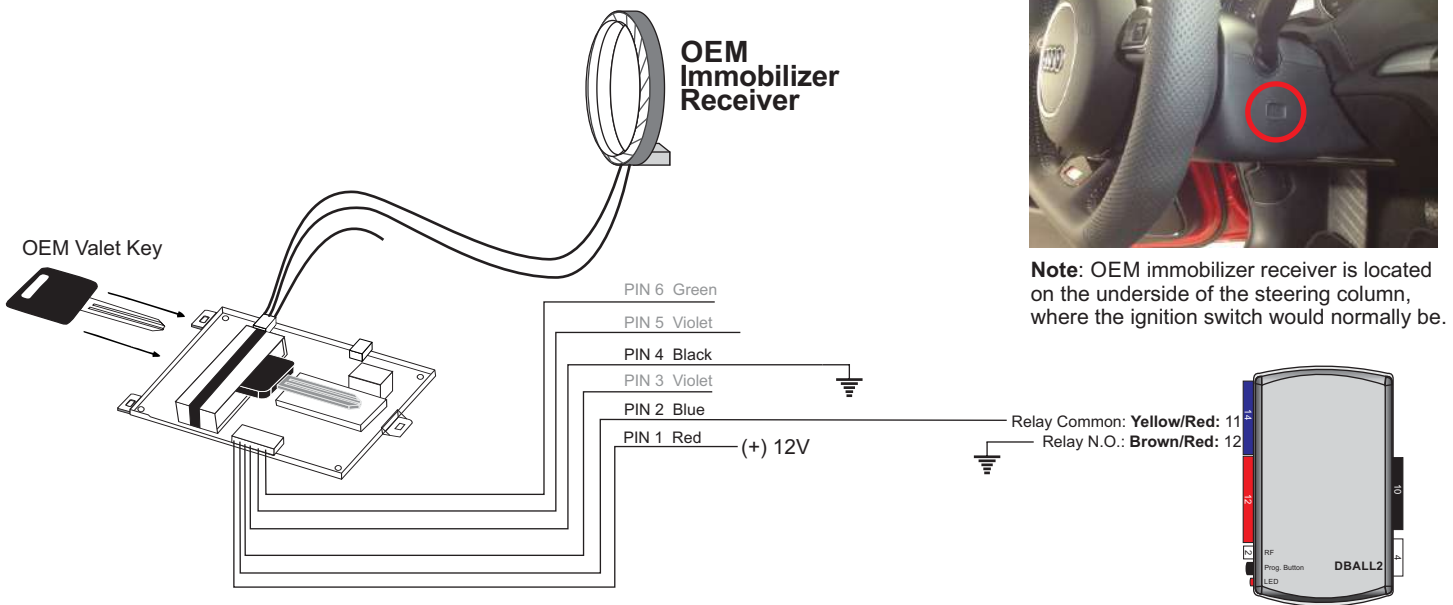


Note: OEM immobilizer receiver is located on the underside of the steering column, where the ignition switch would normally be.

IMPORTANT!: Not all OEM keys can be inserted in 556U because of their size.
Make sure the key will fit, otherwise it is recommended to use a different method.

Method 3: Key wrap for Push-to-Start (PTS) using OEM immobilizer ring



Note: OEM immobilizer receiver is located on the underside of the steering column, where the ignition switch would normally be.

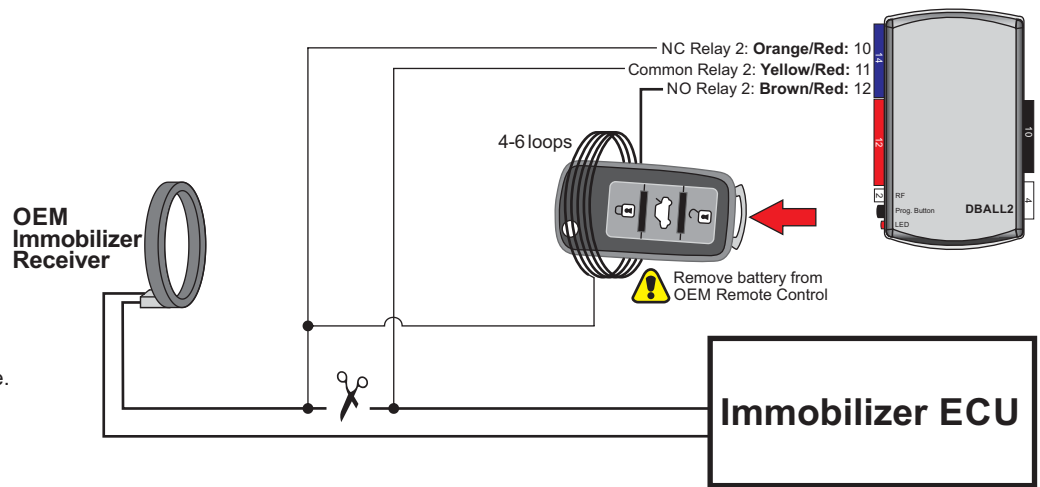

- Make 4-6 loops and place the around the front of the plastic body of the vehicle's coded key as shown above.
- **Connect with OEM Immobilier Ring as shown in the above diagram.**
- When possible, use valet key for key wrap. if blade key is used, battery must be removed.

Vehicle connections

The connection information listed below is specific to the 2016 Volkswagen Golf (Smart Key). Refer to "Pre-installation and application warnings" for a list of important notes.

Data 14-pin blue connector (H1)

Module			Connects To			
Conn./Pin	Color	Description	Wire Location	(+/-)	Wire Color	Ref.
H1/1	Light Green	[DATA]	No Connection			
H1/2	Violet/Yellow	[DATA]	No Connection			
H1/3	Tan/Black	[DATA] HS CAN High				
H1/4	Tan	[DATA] HS CAN Low				
H1/5	Orange/Green	[DATA] HS CAN High				
H1/6	Orange/Brown	[DATA] HS CAN Low				
H1/7	Brown	Relay N.O. Pk Light Output				
H1/8	Yellow	Relay COM Pk Light Output				
H1/9	Orange or Orange/Yellow	Relay N.C. Pk Light Output				
H1/10	Orange/Red	Relay N.C. Key Wrap				
H1/11	Yellow/Red	Relay COM Key Wrap				
H1/12	Brown/Red	Relay N.O. Key Wrap				
H1/13	Red	(+) 12 Volt				
H1/14	Black	(-) Ground				

Output 12-pin red connector (H2)

Module			Connects To			
Conn./Pin	Color	Description	Wire Location	(+/-)	Wire Color	Ref.
H2/1	Black/White	(-) Hazard Light Output				
H2/2	Green/Black	(-) PTS [4]				
H2/3	Green/White	(-)	No Connection			
H2/4	Red/Black	(-) Trunk Output				
H2/5	Violet/White	[AC]	No Connection			
H2/6	Gray	(+) Brake Output				
H2/7	Gray/Black	(+)	No Connection			
H2/8	Violet/Green	[MUX]	No Connection			
H2/9	Violet/Brown	[MUX] PTS				
H2/10	Yellow/Black		No Connection			
H2/11	Orange/Black		No Connection			
H2/12	Blue/Red	(-)	No Connection			

Input 10-pin black connector (H3)

Module			Connects To			
Conn./Pin	Color	Description	Wire Location	(+/-)	Wire Color	Ref.
H3/1	Black/White	(-)	No Connection			
H3/2	Green/Black	(-)	No Connection			
H3/3	Green/White	(-) [2]	No Connection			
H3/4	Red/Black	(-)	No Connection			
H3/5	Violet/White	(-) [3]	No Connection			
H3/6	Gray	(-) Hood Switch Input				
H3/7	Gray/Black	(+)	No Connection			
H3/8	Violet/Green	(+)	No Connection			
H3/9	Violet/Brown	(+)	No Connection			
H3/10	Yellow/Black	(-)	No Connection			

D2D 4-pin white connector (H4)

Module		
Conn./Pin	Color	Description
H4/1	Green	(Data) TX
H4/2	Black	(-) Ground
H4/3	Blue	(Data) RX
H4/4	Red	(+) 12 Volt

RF 2-pin white connector (H5)


Module		
Conn./Pin	Color	Description
H5/1	N/A	
H5/2	N/A	

SmartStart/XL202 installation notes

The DB3 Remote Start Ready (RSR) solution offers three (3) configuration options to control your system: 3x OEM Lock Remote Start Activation, RF Kit or SmartStart (both sold separately). This section provides specific installation information for SmartStart and XL202.

SmartStart revision A


SmartStart is **optional** and not included. It **MUST** be purchased separately.

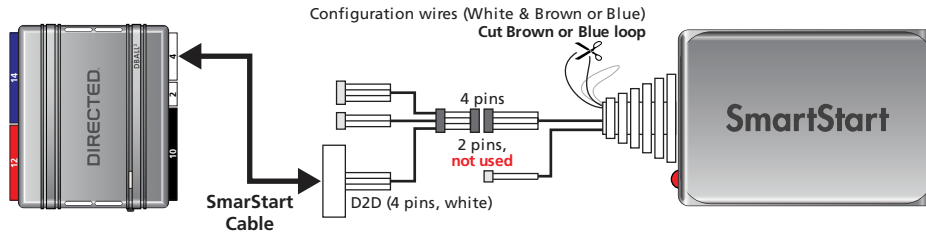

! The modules must be connected in a specific order. Refer to "Module programming" for more information.

SmartStart revision B

SmartStart is **optional** and not included. It **MUST** be purchased separately.

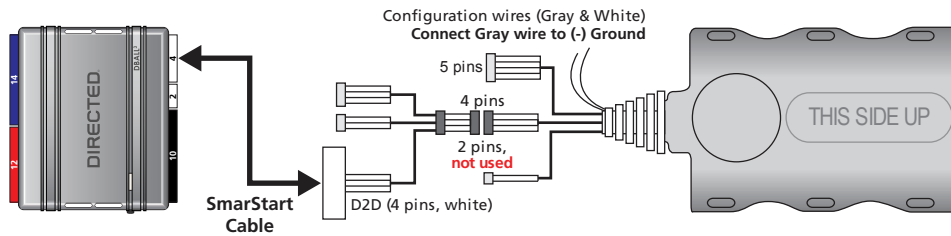

- !**
1. Use the D2D Crossover (XOVER) cable that is provided with XL202, and NOT the one in the DB3 package.
 2. The modules must be connected in a specific order. Refer to "Module programming" for more information.

RF System

The **optional** XL202 and antenna are not included and **MUST** be purchased separately.



! The modules must be connected in a specific order. Refer to "Module programming" for more information.

RF System & PKE combination

Refer to the Passive Keyless Entry (PKE) Installation Guide (N2102T) for detailed wiring information.

RF System, PKE & SmartStart BT combination

Refer to the Passive Keyless Entry (PKE) Installation Guide (N2102T) for detailed wiring information.

Connecting the module

Important!

Make all the required connections to the vehicle, as described in this guide, and double check to ensure everything is correct prior to moving onto programming.

Note: Before connecting either the XL202 or SmartStart module to DB3, it is important to ensure that the proper feature and function programming is selected using DirectLink (version 4.5 or higher). Visit www.directechs.com to download the latest version of the application.

Warning! To take advantage of advanced features, you must use DirectLink 4.5 (and higher) or the Directechs Mobile application.

Flashing a module using your computer:


1. **Connect** the interface module to your computer using the **XKLoader2**.
2. **Go** to www.directechs.com using Internet Explorer, and **select** the Flash Module button.
3. **Follow** the instructions to **select** your vehicle, installation type, and configure your options.
4. Once you have configured the firmware options, **click** on the FLASH button.

Flashing a module using your smartphone or tablet:


1. **Connect** the interface module to your **XKLoader3**.
2. **Launch** the Directechs Mobile app on your smartphone or tablet.
3. **Select** FLASH YOUR MODULE and **follow** the on screen instructions.

When the flashing operation is successful, you can proceed with the instructions below.

SmartStart installation

 The DB3 module **must** be disconnected from any power source before SmartStart can be connected to it. Failing to do so could damage DB3.


1. To ensure that the D2D communication between SmartStart and DB3 works properly, **connect** the Gray wire to a ground source (Rev B SmartStart), and **cut** the Brown or Blue loop (Rev A SmartStart).
2. Do **NOT** connect the 2-pin harness (on SmartStart). Power and ground will be provided by the DB3 D2D connector.
3. **Connect** SmartStart to DB3 using the D2D port.

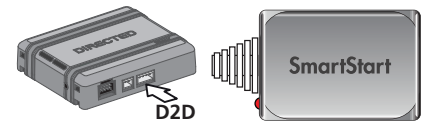


OR

XL202 installation


Connect XL202 to DB3 using the D2D port.

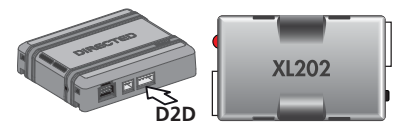


Module programming

 Refer to "LED diagnostics and troubleshooting" for more information and for troubleshooting purposes.

- 1** **Connect** the 10-pin, 12-pin and 14-pin harnesses to DB3, then **wait** until the LED turns ON solid red.

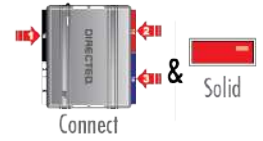

- 2** **Press** the Push-to-Start (PTS) button once to turn the ignition ON. The LED flashes orange, then flashes green.



- 3** The LED turns ON solid green for 3 seconds, then turns OFF. **Press** the PTS button once more to turn the ignition OFF.












You have successfully completed the module programming sequence.









LED diagnostics and troubleshooting

This section provides LED diagnostics and troubleshooting information to guide you through the various stages of your installation.


Module Programming

LED	Description	Troubleshooting
 Off	Module has no power.	Make sure the D2D harness is connected and that 12 Volt is present between the red and black wires. If 12 Volt is present, the module may be defective.
 Solid red	Waiting to begin the programming sequence.	Ensure the correct programming procedure is being followed.
 Flashes green & red	Initialization failed.	Reset the module and complete the programming again. If the issue persists, please contact Technical Support.
 Solid orange	Transponder functions were skipped.	(If compatible) when RXT mode is not desired or convenience features are needed, please reset the and reprogram the module.
 Flashes green	All required CAN networks has been detected.	Normal operation.
 Flashes orange	1 of 2 CAN networks has been detected.	Normal operation.
 Flashes orange slowly	Key2GO initiated.	Please follow the steps indicated in "Module programming" to complete the Key2GO programming.
 Solid green x 3 secs	Module was successfully programmed with all functions.	Normal operation.
 Solid orange x 3 secs	Module was successfully programmed without transponder functions.	Normal operation.






Module Programming - Error codes

LED	Description	Troubleshooting
 Flashes red x 1	CAN2 not detected.	Check the CAN2 Orange/Green and Orange/Brown wire connections. Wake up the data bus by turning the ignition on and try again. If your installation does not require this connection, skip this step by pressing the programming button 5 times.
 Flashes red x 1	J1850 not detected.	Check the J1850 wire connection. Wake up the data bus by turning the ignition on and try again.
 Flashes red x 2	CAN1 not detected.	Check the CAN1 Tan and Tan/Black wire connections. Wake up the data bus by turning the ignition on and try again. If your installation does not require this connection, skip this step by pressing the programming button 5 times.
 Flashes red x 3	Bypass data not detected.	Check the bypass line connection. If more than one wire is used, make sure they are not inverted. Ensure the vehicle still operates correctly using the factory key.
 Flashes red x 4	Bypass processing error.	The bypass calculation failed. Reset the module and try again. If the condition persists, please contact Technical Support.
 Flashes red x 5	ISO 1 not detected.	The Yellow/Black wire did not detect the expected signal. Refer to "Installation (wiring diagrams & vehicle wiring reference charts)" on page "Installation (wiring diagrams & vehicle wiring reference charts)" to check the connections.
 Flashes red x 6	ISO 2 not detected.	The Orange/Black wire did not detect the expected signal. Refer to "Installation (wiring diagrams & vehicle wiring reference charts)" to check the connections.
 Flashes red x 7	MUX not detected.	The Violet/Green or Violet/Brown wire did not detect the expected voltage value. Refer to "Installation (wiring diagrams & vehicle wiring reference charts)" to check the connections.







External Module Synchronization

LED	Description	Troubleshooting
 (Flashes red, red, then orange) x 10	OBDII feature not supported.	The diagnostic data bus was not detected, therefore the SmartStart features will be limited.






Active Ground When Running (Status)

LED	Description	Troubleshooting
 Flashes green	Ground When Running (Status) command received.	The module has initialized the remote start sequence.
 Flashes red & orange	Ignition ON command received.	The module has received the Ignition ON command and is processing the remote start sequence.
 Flashes green quickly	Start ON command received.	The module has received the Start ON command and is processing the remote start sequence.
 Flashes red x 10	PTS shutdown error.	The PTS output from the module was not activated due to safety protection.
 Flashes red x 21	CAN bus incorrectly detected.	Verify the CAN1 and CAN2 connections. Refer to "Installation (wiring diagrams & vehicle wiring reference charts)" to check the connections.



Commands

LED	Description	Troubleshooting
 Flashes orange x 1	LOCK command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.
 Flashes orange x 2	UNLOCK command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.
 Flashes orange x 3	TRUNK command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.
 Flashes orange x 4	AUX1 command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.
 Flashes orange x 5	AUX2 command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.
 Flashes orange x 6	AUX3 command received.	If the bypass module fails to flash, it did not receive the signal. Commands can come from RF or D2D.

Shutdown Codes

LED	Description	Troubleshooting
 Flashes green x 1	Takeover successful.	Normal operation.
 Flashes red x 1	Runsafe was not disabled.	No UNLOCK command was received prior to opening the door, or the 45 second timer expired in takeover mode.
 Flashes red x 2	Brake was not detected.	The brakes were not detected, which prevents the system from shutting down the vehicle.
 Flashes red x 3	Smart key was not detected.	The smart key was not detected, which prevents the system from shutting down the vehicle.
 Flashes red x 4	Speed was detected.	The vehicle was detected as moving, which prevents the system from shutting it down.

RSR Error Codes

LED	Description	Troubleshooting
 Flashes red x 7	RFTD disabled.	3x OEM Lock Remote Start Activation was attempted when the RFTD feature is disabled. Make sure 3x Lock Start is selected from the web in the flashing process.
 Flashes red x 9	Feature error.	An RSR feature file mismatch was detected. Please contact Technical Support.

Parking light error codes

The parking lights on your vehicle will flash a specific number of times 3 seconds following an unscheduled shutdown. Each flashing pattern is described below.


Flashes	Diagnostic
1	Runtime expired.
2	Over-rev shutdown.
3	Low or no RPM.
4	Shutdown without remote.
5	Brake shutdown.
6	Hood shutdown/Remote start safety override switch is ON.*
7	Remote start safety override switch is ON.*

* If the vehicle hood status is supported through data, the safety override switch input will report 7 flashes.

Soft reset

A module reset will only erase the steps performed in "Module programming". The firmware and settings flashed to the module will not be affected.

- 1 **Connect** the 10-pin & 12-pin harnesses to the module. **Press** and **hold** the programming button, then **connect** the 14-pin harness to the module.

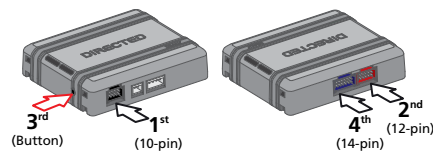

- 2 **Wait** 3 seconds until the LED turns ON solid orange then **release** the programming button. The LED turns ON solid red.




Hard reset


Warning Against Executing a Hard Reset!

A hard reset will revert the flashed firmware back to its default factory settings. Depending on the installation, some settings (such as RFTD and D2D options) may have to be reconfigured. Refer to "Feature and option list".

1 **Connect** the 10-pin & 12-pin harnesses to the module. **Press** and **hold** the programming button, then **connect** the 14-pin harness to the module.

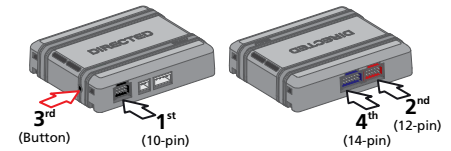

2 **Wait** 3 seconds until the LED turns ON solid orange, and **wait** 10 more seconds until the LED starts to flash orange and red.



3 **Release** the programming button. The LED turns ON solid red.



Feature programming

To enter feature programming routine:

1. **Turn** the ignition ON, then OFF.
2. Within 5 seconds, **press** and **hold** the programming button until the LED turns ON orange (after 3 seconds).
3. **Release** the Programming button.
4. The LED will flash green once slowly to indicate the feature number is 1. After a short delay, the LED flashes red rapidly to indicate the current option of feature 1 (e.g. 1 x green followed by 1 x red indicates feature 1 is set to option 1). The flashing sequence will repeat until a new command is entered.

Changing feature options:

1. **Press** the lock/arm or unlock/disarm button on aftermarket transmitter to change the option of the selected feature. When installing the DB3 in RSR using 3x OEM Lock Remote Start Activation only, there is no aftermarket transmitter on which to press lock/unlock to change the options of the selected feature. Tapping the green or blue lock/unlock wires on the black 10-pin harness to ground will change the option for the selected feature.
2. The LED flashes red rapidly the number of times equal to the current option number. After a short delay, the LED flashes green slowly the number of times to indicate the current feature. The flashing sequence will repeat until a new command is entered.

Accessing another feature:

1. **Press** and **release** the programming button a number of times to advance from the current feature to the next desired feature.
2. The LED flashes green slowly the number of times equal to the feature number. After a short delay, the LED flashes red rapidly to indicate the current option of the current feature. The flashing sequence will repeat until a new command is entered.

When the maximum number of features or options is reached, the LED will start flashing again from the first feature or option.

Exiting feature programming:

To exit feature programming, **press** and **hold** the programming button for 3 seconds or ensure there is no activity on the interface for 30 seconds. The LED will turn ON orange for 2 seconds to confirm the end of the programming sequence.

Feature and option list

It is recommended to configure all the features and options listed below using the configuration tool found on the module flashing page at www.directechs.com. The web offers more options; however, manual configuration of the features is possible using the information on this page.

* Default option

Feat.	Operation	Flashes / Option	Description
1	RFTD Output Type	1. No RF Output*	Module is connected to a remote starter using a standard installation.
		2. RFTD Output	Module is connected to an XL202 using an RSR or RXT installation (when available).
		3. SmartStart	Module is connected to SmartStart using an RSR or RXT installation (when available).
2	Unlock Driver Priority	1. Driver priority*	Unlocks only the driver door when the button is first pressed, and unlocks all doors when it is pressed a second time within 5 seconds.
		2. All	Unlocks all doors when the button is first pressed.
3	Smart OEM Alarm Control	1. Disabled	The OEM alarm will not be controlled by the interface upon remote start. No disarm or arm command will be executed at the beginning or end of the sequence; it must be controlled by the Remote Starter.
		2. Safelock	Smart OEM Alarm Control will behave like a standard Safelock feature on a remote starter. It will unlock at the beginning of the sequence, and relock after start and shutdown.
		3. Enabled*	Smart OEM Alarm Control will synchronize with the OEM alarm so that it will disarm and rearm the vehicle in the remote start sequence, only when required. Smart OEM Alarm Control will monitor the alarm and door lock status to detect if the disarm or rearm is required. If the vehicle is unlocked or is not equipped with factory alarm, the disarm/rearm will not be executed.

Limited one year consumer warranty

For a period of ONE YEAR from the date of purchase of a Directed Electronics remote start or security product, Directed Electronics. ("DIRECTED") promises to the original purchaser, to repair or replace with a comparable reconditioned piece, the security or remote start accessory piece (hereinafter the "Part"), which proves to be defective in workmanship or material under normal use, provided the following conditions are met: the Part was purchased from an authorized DIRECTED dealer; and the Part is returned to DIRECTED, postage prepaid, along with a clear, legible copy of the receipt or bill of sale bearing the following information: consumer's name, address, telephone number, the authorized licensed dealer's name and complete product and Part description.

This warranty is nontransferable and is automatically void if the Part has been modified or used in a manner contrary to its intended purpose or the Part has been damaged by accident, unreasonable use, neglect, improper service, installation or other causes not arising out of defect in materials or construction.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, EXCEPT AS STATED ABOVE, ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND WARRANTY OF NONINFRINGEMENT OF INTELLECTUAL PROPERTY, ARE EXPRESSLY EXCLUDED; AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON OR ENTITY TO ASSUME FOR IT ANY DUTY, OBLIGATION OR LIABILITY IN CONNECTION WITH ITS PRODUCTS. DIRECTED HEREBY DISCLAIMS AND HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING DEALERS OR INSTALLERS. DIRECTED IS NOT OFFERING A GUARANTEE OR INSURANCE AGAINST VANDALISM, DAMAGE, OR THEFT OF THE AUTOMOBILE, ITS PARTS OR CONTENTS, AND DIRECTED HEREBY DISCLAIMS ANY LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, LIABILITY FOR THEFT, DAMAGE, OR VANDALISM. IN THE EVENT OF A CLAIM OR A DISPUTE INVOLVING DIRECTED OR ITS SUBSIDIARY, THE PROPER VENUE SHALL BE SAN DIEGO COUNTY IN THE STATE OF CALIFORNIA. CALIFORNIA STATE LAWS AND APPLICABLE FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED DEALER'S PURCHASE PRICE OF THE PART. DIRECTED SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR AT DIRECTED'S OPTION THE PART AS DESCRIBED ABOVE.

This warranty only covers Parts sold within the United States of America and Canada. Parts sold outside of the United States of America or Canada are sold "AS-IS" and shall have NO WARRANTY, express or implied. Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State. DIRECTED does not and has not authorized any person or entity to create for it any other obligation, promise, duty or obligation in connection with this Part. For further details relating to warranty information of Directed products, please visit the support section of DIRECTED's website at: www.directed.com






920-10012-01 2013-07

This Interface kit / Data Bus Interface part has been tested on the listed vehicles. Other vehicles will be added to the select vehicle list upon completion of compatibility testing. Visit website for latest vehicle application guide. DISCLAIMER: Under no circumstances shall the manufacturer or the distributors of the bypass kit / data bus interface part(s) be held liable for any consequential damages sustained in connection with the part(s) installation. The manufacturer and it's distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the interface kit / data bus interface part(s) other than its replacement. N.B.: Under no circumstances shall the manufacturer and distributors of this product be liable for consequential damages sustained in connection with this product and neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than the replacement of this product only.

Protected by U.S. Patents: 5,719,551; 6,011,460 B1 *; 6,243,004 B1; 6,249,216 B1; 6,275,147 B1; 6,297,731 B1; 6,346,876 B1; 6,392,534 B1; 6,529,124 B2; 6,696,927 B2; 6,756,885 B1; 6,756,886 B2; 6,771,167 B1; 6,812,829 B1; 6,924,750 B1; 7,010,402 B1; 7,015,830 B1; 7,031,826 B1; 7,046,126 B1; 7,061,137 B1; 7,068,153 B1; 7,205,679 B1; Cdn. Patent: 2,320,248; 2,414,991; 2,415,011; 2,415,023; 2,415,027; 2,415,038; 2,415,041; 2,420,947; 2,426,670; 2,454,089; European Patent: 1,053,128; Pat. Pending: 2,291,306. Made in Canada.

Quick Reference Guide


Vehicle Takeover with Get In and Go*

- 1** Close the vehicle doors, hood and trunk, then **press** the Remote Start button on the transmitter to start the vehicle.**  Press remote start button**
- 2** Press the Unlock button on the factory or aftermarket remote.**  Press Unlock button on either remote**
-  **Complete the following steps within 45 seconds or the vehicle will shut down.**
- 3** Enter the vehicle, while making sure the factory remote is inside with you.  Enter vehicle with key fob
- 4** Press the brake pedal, **put** the car in gear and drive off.  Ready to drive off

* Get In and Go connections required.

** Your aftermarket remote may differ from the model shown in the illustrations.

Get In and Go




 Get In and Go is designed to provide users with easy takeover when entering their Push-to-Start (PTS) equipped vehicle, once it has been remote started.

Typically, users would have to remote start their vehicle, then get inside and press the vehicle start button to perform a takeover. There is therefore a physical action required to drive away. With Get In and Go technology, you simply remote start the vehicle, unlock the doors, get in and go... Nothing to do but put the gear in drive and enjoy your vehicle.

This unique feature monitors a variety of parameters such as the key fob, vehicle speed sensor and door sensor, in order to perform takeover securely.

Pit Stop Mode

The Pit Stop Mode feature is practical when you need to stop and run an errand, but wish to keep the engine running.

- 1** Stop the vehicle in a safe parking spot and put the gear in Park (P).  Stop & put vehicle in Park (P)
- 2** Press the button to remote start the vehicle.* Open then close the driver door and lock the vehicle.  Press remote start button*
- 3** It is now safe to leave the engine running and exit the vehicle with the factory remote in hand.  Exit vehicle with key
Note: We recommend that you always lock the doors of your vehicle when leaving it unattended.

* Your aftermarket remote may differ from the model shown in the illustrations.

Parking Light Error Codes

The parking lights on your vehicle will flash a specific number of times 3 seconds following an unscheduled shutdown or failure to start. Each flashing pattern is described below.

Flashes	Diagnostic
1	Runtime expired.
2	Over-rev shutdown.
3	Low/No RPM.
4	Transmitter shutdown.
5	Brake shutdown.
6	Hood shutdown/Remote start safety override switch is ON*.
7	Remote start safety override switch is ON*.

* If the vehicle hood status is supported through data, it will also report a 7 flash safety override code.

Quick Reference Guide

Remote Start Ready (RSR)



Remote Start Ready (RSR) is a function that enables the interface module to remote start the vehicle completely on its own. Consequently, there is no need for an aftermarket or an OEM remote starter in order to start the vehicle from a distance.

3x OEM Lock Remote Start Activation

This solution includes the option to remote start your vehicle by pressing the Lock button 3 times consecutively. If your vehicle allows the OEM remote to remain active while the engine is running, you may shut down your remote starter by pressing the Lock button 3 times once more.

Note: The range offered by OEM remotes is limited and typically requires you to be within eyesight of the vehicle to control it.

List of Available Commands

Note that the information below is for Viper, Clifford and Python models. Icons and commands may differ depending on the remote brand and model purchased. Refer to your authorized installation center for more information.

Button(s)	Actions
	Press & hold for 1 second to lock.
	Press & hold for 1 second to unlock.
	Press & hold for 1 second to remote start.
	Press & hold for 5 seconds to activate the trunk release (optional).
	Press <i>f</i> once, then to activate the rear hatch/tail glass release (optional).*
	Press <i>f</i> 3 times, then to activate the panic mode.
	Press <i>f</i> once, then to reset the remote starter runtime.

* This output is configurable. see your authorized installation center for more information.

Quick Reference Guide

SmartStart Compatible



This system is compatible with Directed SmartStart 3.0. For a complete list of supported features, please visit www.mysmartstart.com.



Notes

What is SmartStart?

Now you can remote start, lock and unlock your car just by pushing a button on your smartphone; using the SmartStart App from Directed, the leader in vehicle security and remote start. The simple graphical interface gives you control over the following features of your installed remote start or security with remote start system:

- Lock/Arm
- Unlock/Disarm
- Remote Car Starter
- Trunk Release
- Panic
- Aux Channels

You can also control multiple vehicles – great for families – and assign more than one user to control a vehicle. It's easy with SmartStart!

But, this is only the beginning! SmartStart is loaded with additional features including GPS tracking, SmartSchedule, vehicle status, roadside assistance, home control, parked car finder and more.

3.0 enables a "Cloud-Connected Car" like never before, providing an entirely new level of 2-way interaction with your vehicle. Connectivity is managed through the Directed Cloud Services (DCS) network linking car, app, end user, and the Internet.

For more information, visit www.mysmartstart.com.

