


# BOTTOM-MOUNT BUILT-IN REFRIGERATOR OWNER'S MANUAL

## GUIDE D'UTILISATION DU RÉFRIGÉRATEUR ENCASTRÉ AVEC CONGÉLATEUR EN BAS

---

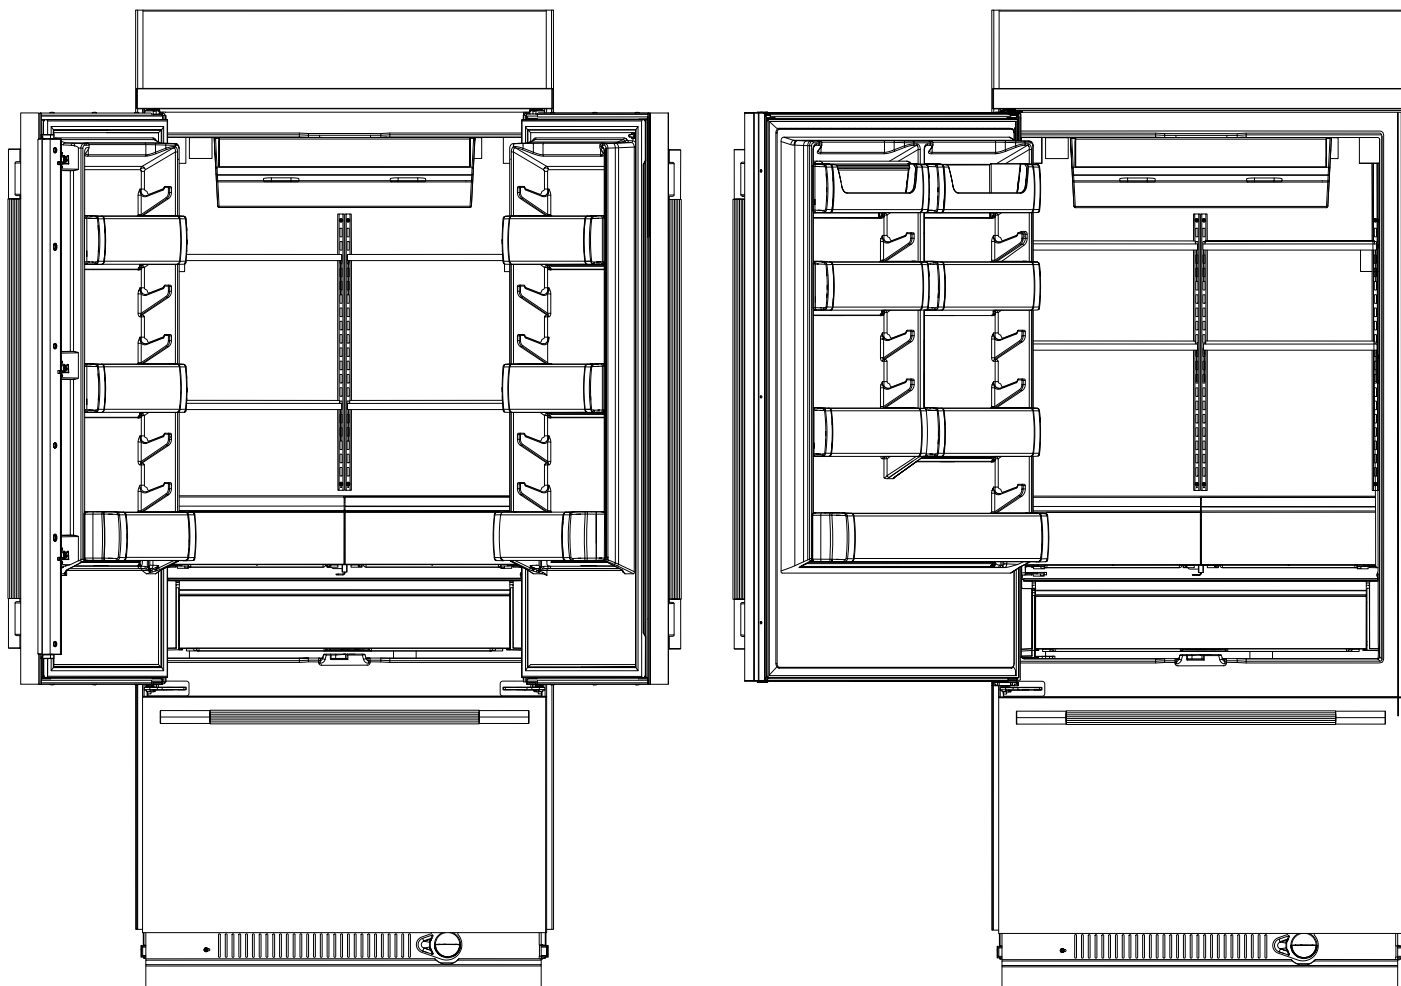

## Table of Contents/Table des matières

<b>REFRIGERATOR SAFETY</b> .....	3	<b>SÉCURITÉ DU RÉFRIGÉRATEUR</b> .....	20
Refrigerator Safety .....	3	Sécurité du réfrigérateur .....	20
Proper Disposal of Your Old Refrigerator .....	4	Mise au rebut du vieux réfrigérateur .....	21
<b>GETTING STARTED</b> .....	4	<b>MISE EN PLACE</b> .....	21
Models .....	4	Modèles .....	21
Unpack the Refrigerator .....	5	Déballage du réfrigérateur .....	22
Power On/Off .....	5	Marche/arrêt de l'alimentation .....	22
Water Supply Requirements .....	6	Spécifications de l'alimentation en eau .....	23
Water System Preparation .....	6	Préparation du circuit d'eau .....	23
Odor Absorber (FreshFlow™ Air Filter) .....	7	Filtre à odeur (filtre à air FreshFlow™) .....	24
Install Produce Preserver .....	7	Installation du conservateur pour produits frais .....	25
<b>REFRIGERATOR USE</b> .....	8	<b>UTILISATION DU RÉFRIGÉRATEUR</b> .....	26
Using the Controls .....	8	Utilisation des commandes .....	26
Ice Maker and Storage Bin .....	10	Machine à glaçons et bac d'entreposage .....	28
Water Filtration System .....	11	Système de filtration de l'eau .....	29
<b>REFRIGERATOR FEATURES</b> .....	12	<b>CARACTÉRISTIQUES DU RÉFRIGÉRATEUR</b> .....	30
Refrigerator Shelves .....	12	Tablettes du réfrigérateur .....	30
Deli/Crisper Drawers .....	13	TIROIRS POUR SPÉCIALITÉS ALIMENTAIRES/À LÉGUMES .....	31
<b>FREEZER FEATURES</b> .....	13	<b>CARACTÉRISTIQUES DU CONGÉLATEUR</b> .....	32
Freezer Drawer and Pull-out Ice Bin .....	13	Tiroir de congélateur et bac à glaçons coulissant .....	32
<b>DOOR FEATURES</b> .....	14	<b>CARACTÉRISTIQUES DE LA PORTE</b> .....	32
Door Bins .....	14	Balconnets de porte .....	32
<b>MAINTENANCE AND CARE</b> .....	15	<b>ENTRETIEN ET RÉPARATION</b> .....	33
Cleaning .....	15	Nettoyage .....	33
Changing the LED Module .....	15	Remplacer le module à DEL .....	34
Power Interruptions .....	16	Pannes de courant .....	34
Vacation Care .....	16	Entretien avant les vacances .....	34
<b>TROUBLESHOOTING</b> .....	16	<b>DÉPANNAGE</b> .....	35
Refrigerator Operation .....	16	Fonctionnement du réfrigérateur .....	35
Temperature and Moisture .....	17	Température et humidité .....	36
Ice and Water .....	17	Glaçons et eau .....	36
<b>PERFORMANCE DATA SHEET</b> .....	17	<b>FICHÉ DE DONNÉES DE PERFORMANCE</b> .....	37

# REFRIGERATOR SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**▲ DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**▲ WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use an extension cord.
- If power supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- Connect to potable water supply only.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices, and other working environments; farm houses and by clients in hotels, motels, and other residential-type environments; bed and breakfast-type environments; and catering and similar non-retail applications.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Use the new hose-sets supplied with the appliance and that old hose-sets should not be reused.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g., parts made at home using a 3D printer).
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Ice maker kit can be added to some models. See serial tag inside the food compartment of appliance for ice maker kit model information.
- A qualified service technician must install the water line and ice maker. See installation instructions supplied with ice maker kit for complete details.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- This appliance can be used at a maximum altitude of 2000 m (6561.7 ft) from the sea level.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions provided in the installation instructions.

**SAVE THESE INSTRUCTIONS**

# Proper Disposal of Your Old Refrigerator

## **⚠️WARNING**



### Tip Over Hazard

Refrigerator is top heavy and tips easily when not completely installed.

Keep doors taped closed until refrigerator is completely installed.

Use two or more people to move and install refrigerator.

Failure to do so can result in death or serious injury.

**WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

## **⚠️WARNING**

### Suffocation Hazard


Remove doors or lid from your old appliance.

Failure to do so can result in death or brain damage.

**IMPORTANT:** Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous, even if they will sit for “just a few days.” If you are getting rid of your old refrigerator, please follow these instructions to help prevent accidents.

### Important information to know about disposal of refrigerants:


Dispose of refrigerator in accordance with federal and local regulations. Refrigerants must be evacuated by a licensed, EPA-certified refrigerant technician in accordance with established procedures.

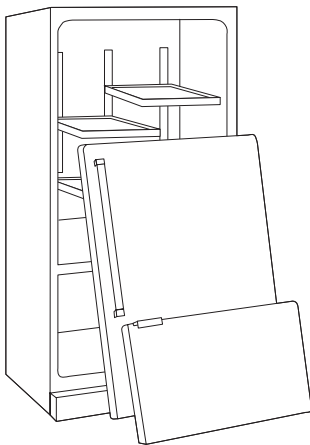

# GETTING STARTED

## Models

### Stainless Steel Series Bottom Mount Refrigerators

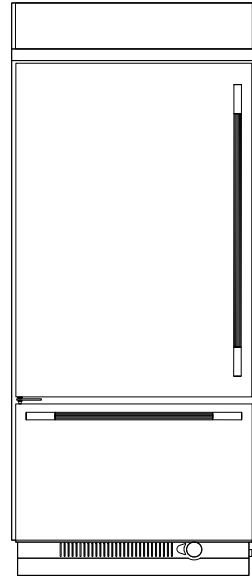


### Stainless Series

Features wraparound styling that complements the contoured door handles. This series provides a commercial-looking built-in refrigerator.

KBBL336SPS; KBBR336SPS

### Stainless Steel Series French Door Bottom Mount Refrigerators

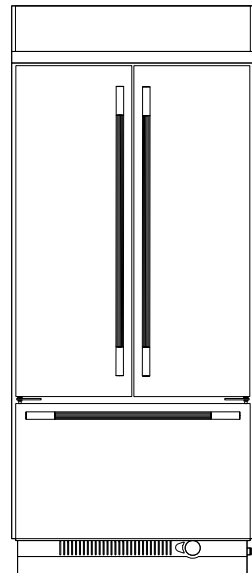


### Stainless Series

Features wraparound styling that complements the contoured door handles. This series provides a commercial-looking built-in refrigerator.

KBFN536SPS; KBFN536SBE; KBFN536SJP; KBFN542SPS; KBFN542SJP; KBFN542SBE

## Overlay Series French Door Bottom Mount Refrigerators

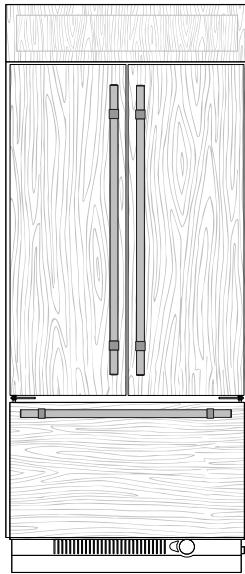

### Overlay Series

Features factory-installed, overlay style trim to provide a “frameless” look. This series requires the installation of custom panels, handles, and standoffs.

KBFN536TPA; KBFN542TPA

## Unpack the Refrigerator

### **WARNING**

#### **Excessive Weight Hazard**

**Use two or more people to move and install or uninstall appliance.**

**Failure to do so can result in back or other injury.**

### Refrigerator Delivery

- A minimum door opening of 33" (838 mm) is required. If door opening is 36" (914 mm) or less, then removal of doors, drawer, and hinges is required.
- Cart the refrigerator from the side for all door openings.

### When Moving Your Refrigerator:

Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure to cover the floor with cardboard or hardboard to avoid floor damage. Always pull the refrigerator straight out when moving it. Do not wiggle or “walk” the refrigerator when trying to move it, as floor damage could occur.

### Remove the Packaging

- Remove tape and glue residue from surfaces before turning on the refrigerator. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator. For more information, see “Refrigerator Safety.”
- Dispose of/recycle all packaging materials.

### Clean Before Using

After you remove all of the packaging materials, clean the inside of your refrigerator before using it. See the cleaning instructions in “Refrigerator Care.”


### Important information to know about glass shelves and covers:

Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. Tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use both hands when removing them to avoid dropping.


## Power On/Off

To turn the refrigerator power ON or OFF, you must remove the top grille assembly to access the power switch. Turn the refrigerator power OFF when you clean it.

1. Open the refrigerator door(s).
2. Put your hands under the top grille panel. Hold the bottom edge with your fingers and thumbs.
3. Pull the grille panel straight out until the grille stops. Then, lift up on the grille panel to remove.

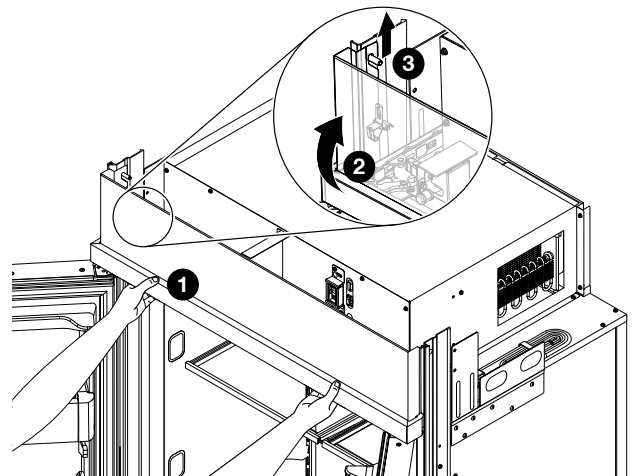

4. Press Power switch to the ON or OFF position.  
**NOTE:** While turning off the refrigerator for extended periods of time, remove the food and empty the ice bin.

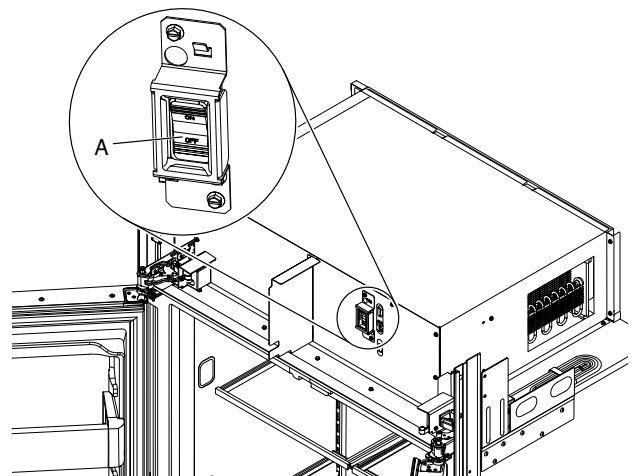

A. Power switch

### To Replace Top Grille:

1. Insert top grille hooks (located on the back of the top grille) onto mounting bolts on the side trim.
2. Pull the grille down slightly and push the bottom in to lock it into place.

**IMPORTANT:** Make sure the power switch is ON after you clean or repair the refrigerator.

# Water Supply Requirements

Read all directions before you begin.

## IMPORTANT:

- Read “Connect the Water Supply” in the installation instructions. For questions, refer the “Troubleshooting” section or contact a licensed plumber.
- If you turn on the refrigerator before you connect the water line, turn the ice maker OFF. Refer the “Ice Maker and Storage Bin” section.
- All installations must meet local plumbing code requirements.
- Connect to a potable water supply only.

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

- When using the ice maker or water dispenser, a banging noise might occur due to rapid changes in water pressure within your home’s pipes. To fix this, a water hammer arrestor should be installed where the refrigerator water line connects to the household water supply. This device absorbs the pressure shock, stopping the banging. For proper installation of the water hammer arrestor, please contact a licensed plumber.

## Water Pressure

A cold water supply with water pressure between 30 psi and 120 psi (207 kPa and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water pressure, call a licensed, qualified plumber.

**NOTE:** If the water pressure is less than what is required, the flow of water from the water dispenser could decrease or ice cubes could be hollow or irregular shaped. If you have questions about your water pressure, call a licensed, qualified plumber.

## Reverse Osmosis Water Supply

**IMPORTANT:** The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 30 psi and 120 psi (207 kPa and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 psi to 60 psi (276 kPa to 414 kPa).

If the water pressure to the reverse osmosis system is less than 40 psi to 60 psi (276 kPa to 414 kPa):

- Check to see whether the sediment filter in the reverse osmosis system is blocked. Replace the filter if necessary.
- Allow the storage tank on the reverse osmosis system to refill after heavy usage.
- If your refrigerator has a water filter, it may further reduce the water pressure when used in conjunction with a reverse osmosis system. Remove the water filter cartridge.

If you have questions about your water pressure, call a licensed, qualified plumber.

# Water System Preparation

Please read before using the water system. Follow the instructions specific to your refrigerator model.


- Connect to potable water supply only.
- Make sure the water valve is ON before you call for service.
- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

## NOTE:


- After installing/replacing the water filter, allow 24 hours for the first ice production.
- Discard the first full bin of ice.
- The ice container will then fill completely around 3 days of time, depending on the ice and freezer usage.
- Make sure the base grille filter is properly installed and the filter cap is in the horizontal position.

## To turn ON or OFF the ice maker:

1. Open the freezer drawer.

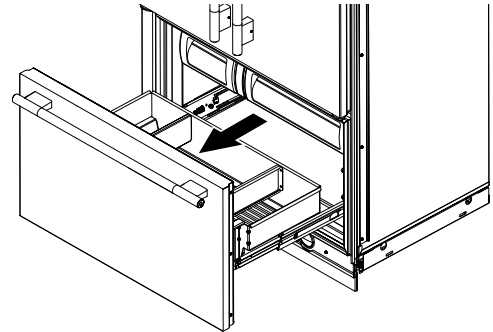


2. Slide the ice bin from the freezer drawer.

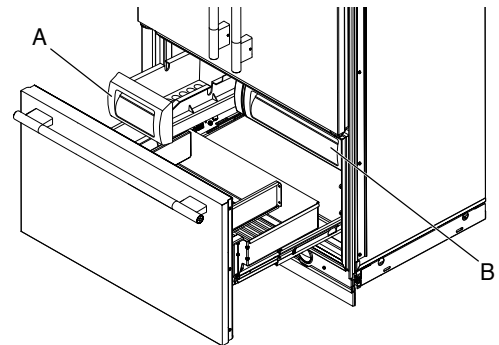


A. Ice bin  
B. Freezer Drawer

3. Use the switch to turn ON or OFF the ice maker.

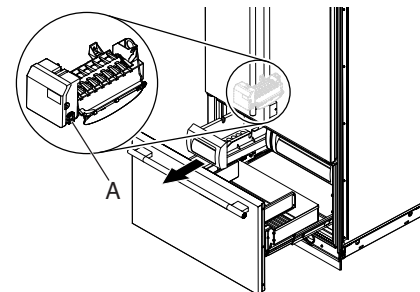

A. Ice maker switch


4. Slide back the ice bin and close the freezer drawer.

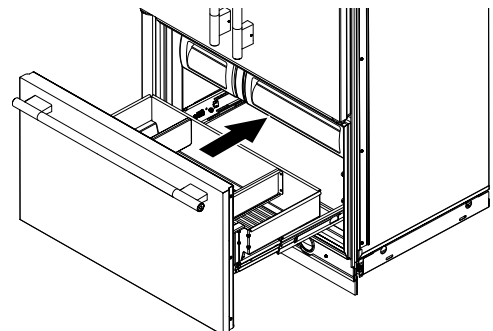

# Odor Absorber (FreshFlow™ Air Filter)

An air filter is 15 times more powerful than baking soda at reducing common food odors inside the refrigerator.

Your refrigerator's accessory packet includes a FreshFlow™ Air Filter, which must be installed prior to use. Please refer to the installation instructions for more information.

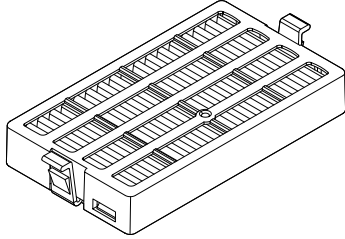


The odor absorber reduces the buildup of odors. This helps to maintain a cleaner environment inside the refrigerator.

## Installing the Odor Absorber

The absorber should be installed behind the vented door, which is located (depending on your model) along either the rear or left interior wall near the top of the refrigerator compartment.

1. Remove the odor absorber from its packaging.
2. Snap the absorber in to place.

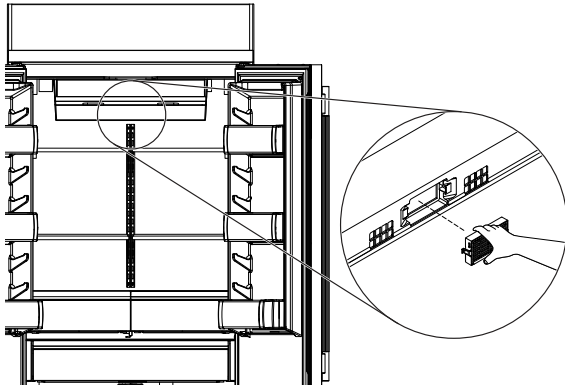


## Replacing the Odor Absorber

The disposable odor absorber should be replaced every 6 months, when the status indicator has completely changed from white to red.


To replace odor absorber, order replacement part **W10311524** online.

- Remove the old odor absorber by squeezing in on the side tabs.
- Install the new air filter by snapping it into place.

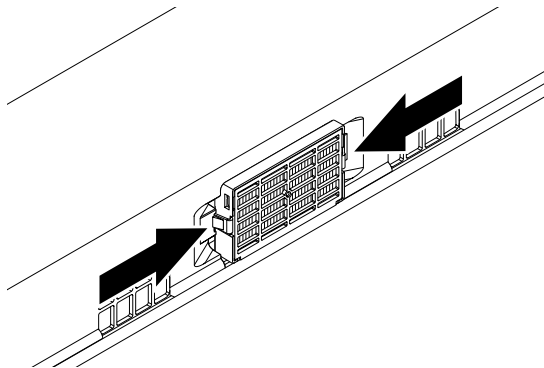

# Install Produce Preserver

The produce preserver absorbs ethylene to slow the ripening process of many produce items. As a result, certain produce items will stay fresh longer.

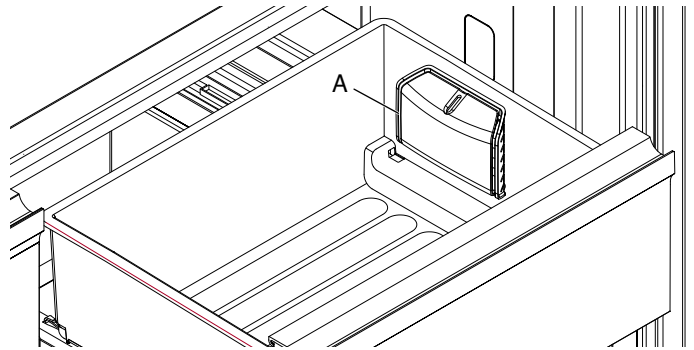

A. Produce preserver

Ethylene production and sensitivity varies, depending on the type of fruit or vegetable. To preserve freshness, it is best to separate produce with sensitivity to ethylene from fruits that produce moderate-to-high amounts of ethylene.

	Sensitivity to Ethylene	Ethylene Production
Apples	High	Very High
Asparagus	Medium	Very Low
Berries	Low	Low
Broccoli	High	Very Low
Cantaloupe	Medium	High
Carrots	Low	Very Low
Citrus Fruit	Medium	Very Low
Grapes	Low	Very Low
Lettuce	High	Very Low
Pears	High	Very High
Spinach	High	Very Low

## Installing the Produce Preserver

### CAUTION: IRRITANT

MAY IRRITATE EYES AND SKIN. DANGEROUS FUMES FORM WHEN MIXED WITH OTHER PRODUCTS.

Do not mix with cleaning products containing ammonia, bleach or acids. Do not get in eyes, on skin or clothing. Do not breathe dust. Keep out of reach of children.

**FIRST AID TREATMENT:** Contains potassium permanganate. If swallowed, call a Poison Control Center or doctor immediately. Do not induce vomiting. If in eyes, rinse with water for 15 minutes. If on skin, rinse with water.


1. Wash the interior of a drawer with a solution of mild dish soap and warm water and dry thoroughly.
2. Find the package containing the Produce Preserver inside the refrigerator and install the Produce Preserver into the drawer according to the instructions provided in the package.

### Replacing the Produce Preserver

The disposable packets should be replaced every 6 months or when the status indicator changes completely from white to red.

To order replacements, contact us. See online ordering information in the "Quick Start Guide."

1. Remove the used packets from the produce preserver housing.

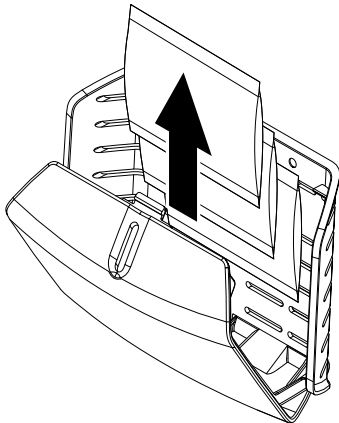

2. Remove the used status indicator.
3. Install the replacement packets and status indicator using the instructions included in the package.

## REFRIGERATOR USE

### Using the Controls

#### ⚠ WARNING



##### Electrical Shock Hazard

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

#### ⚠ WARNING



##### Explosion Hazard

**Keep flammable materials and vapors, such as gasoline, away from appliance.**

**Use nonflammable cleaner.**

**Failure to do so can result in death, explosion, or fire.**

User interface (UI) Controls are located on the ceiling of the refrigerator compartment.



For your convenience, your refrigerator and freezer controls are preset at the factory.

When you first install your refrigerator, make sure that the controls are still set to the recommended set points. The factory recommended set points are 37°F (3°C) for the refrigerator and 0°F (-18°C) for the freezer.

**IMPORTANT:**

- Wait 24 hours before you put food into refrigerator. If you add food before refrigerator has cooled completely, your food may spoil.  
**NOTE:** Adjusting the set points to a colder-than recommended setting will not cool compartments any faster.
- If the temperature is too warm or too cold in the refrigerator or freezer, first check the air vents to be sure they are not blocked before adjusting the controls.
- The recommended settings should be correct for normal household use. The controls are set correctly when milk or juice is as cold as you like and when ice cream is firm.  
**NOTE:** Areas such as a garage, basement or porch may have higher humidity or extreme temperatures. You may need to adjust the temperature away from the recommended settings to accommodate for these conditions.
- Wait at least 24 hours between adjustments. Recheck the temperatures before other adjustments are made.


**Cooling On/Off**

Your refrigerator and freezer will not cool when cooling is turned off.

- Press and hold the Cooling Off button for 3 seconds.  
The display will show a countdown timer and enter into cooling on or off mode.


**Temperature**

**Viewing the Temperature in Degrees Celsius**

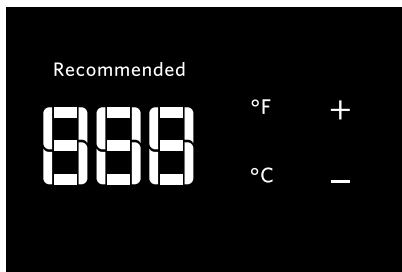

- Press C touch pad to display degree Celsius, press F touch pad to display degree Fahrenheit.  
**NOTE:** If the freezer temperature is below zero, the negative sign next to the freezer display will light up. This is normal.

**Adjusting Temperature**

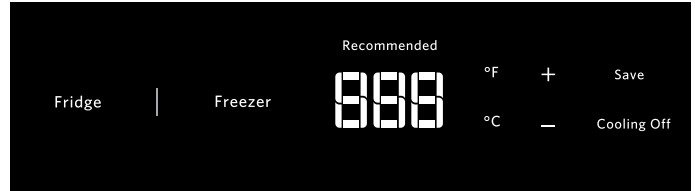

The following applies to both the fridge temperature button and freezer temperature button.

Pressing the Freezer or Fridge picture button once will display the compartment temperature.

Press + or - to adjust temperature. Press Save to set the temperature.

The Refrigerator temperature range will be from 33°F to 43°F (1°C to 6°C), with the factory default temperature being 37°F (3°C).

The Freezer temperature range will be from -8°F to 5°F (-22°C to -15°C), with the factory default temperature being 0°F (-18°C).

CONDITION/REASON	TEMPERATURE ADJUSTMENT
REFRIGERATOR too cold	REFRIGERATOR Control 1°C or 2°F higher
REFRIGERATOR too warm	REFRIGERATOR Control 1°C or 2°F lower
FREEZER too cold	FREEZER Control 1°C or 2°F higher
FREEZER too warm/too little ice	FREEZER Control 1°C or 2°F lower

**Water Filter Indicator and Reset**

The water filter indicator, located on the control panel, will help you know when to change the water filter.

A replacement water filter should be ordered when “Order” is displayed. It is recommended that you replace the filter when “Replace” is displayed or when water flow to your water dispenser and/or ice maker decreases noticeably. See “Changing the Water Filter” later in this section.

After changing the water filter, press and hold FILTER RESET for 3 seconds until the “Order Filter” or “Replace Filter” indicator light disappears.

**Filter Reset**

After changing the filter, press and hold Filter Reset button for 3 seconds. The display will count down 3,2,1, the filter reset will flash and return to the original display.

See the “Water Filtration System” section for steps to remove and replace filter.

## Max Cool/Max Ice

### Max Cool

The Max Cool feature assists with full grocery loads, temporarily warm room temperatures, or during heavy door opening use.

- Press **OPTIONS**, and then press Max Cool to turn on the Max Cool feature. Max Cool will remain activated for 24 hours unless manually turned off.

**NOTE:** The temperature display for the refrigerator compartment will remain at the user's set point, but the actual temperature of the refrigerator compartment will drop to 34°F (1°C), while the Max Cool feature is enabled. After 24 hours, the refrigerator returns to the previous temperature set points.

### Max Ice

The Max Ice feature speeds up the ice production rate to assist with periods of heavy ice usage.

- Press **OPTIONS**, and then press Max Ice to turn on the Max Ice feature. Max Ice will remain activated for 24 hours unless manually turned off.

**NOTE:** The temperature display for the refrigerator and freezer compartments will remain at the user's set points, but the actual temperature of the freezer compartment will drop to -5°F (-21°C), while the Max Ice feature is enabled. After 24 hours, the freezer will return to the previous temperature set point.

- Changing the refrigerator temperature or activating Vacation Mode will deactivate Max Cool/Max Ice.

## Sabbath Mode

- Press and hold the Sabbath button for 3 seconds to activate or deactivate sabbath mode.

**NOTE:** The refrigerator will remain in Sabbath Mode after a power outage.

## Alarm Functions

### Door Open

An alarm will sound when a door has been open for longer than 5 minutes. Closing the door or drawer, or pressing any Home Screen touch pad (Fridge, Freezer or Options) will reset the Door Open feature and turn off the audio alarm.

**NOTE:** If the door(s) or drawer are left open for 10 minutes the interior lights will go out. Closing the open door(s) or drawer will reset the lights.

## Power Outage

When a power outage occurs, a Power Outage indicator light will be displayed. Press any Home Screen touch pad (Fridge, Freezer or Options) to turn off the indicator light. The power outage indicator light will not display when either Cooling Off or Sabbath mode is active, but will appear after exiting Sabbath mode if a power outage occurred.

## Over Temperature

**IMPORTANT:** If the Over Temperature Alarm activates, your food may spoil. See "Power Interruptions." Minimize door openings until temperatures return to normal.

The Over Temperature feature is designed to let you know when either the refrigerator temperature rises above 48°F (9°C) or the freezer temperature rises above 15°F (-9°C) for longer than 1½ hours. The audio alarm will shut off automatically when the temperature returns to normal, but the indicator light will continue to flash to let you know that an Over Temperature condition occurred until an Over Temperature reset has been performed. Press any Home Screen touch pad (Fridge, Freezer or Options) to turn off the indicator light.

If the over temperature condition is still present when an Over Temperature reset is performed, the indicator light will continue to reactivate every 1½ hours until refrigerator and freezer temperatures are below 48°F (9°C) and 15°F (-9°C), respectively.

## Miscellaneous

### Showroom Mode

Demo mode for sales floor. Press and Hold the Fridge and Freezer buttons for 5 seconds, the showroom indicator will blink twice to remain on/off.


## Ice Maker and Storage Bin

**IMPORTANT:** Flush the water system before turning on the ice maker. See "Water and Ice Dispensers." Allow 24 hours to produce the first batch of ice. Discard the first three batches of ice produced. Allow 3 days to completely fill the ice container.

### Turn the Ice Maker On/Off

**NOTE:** The ice maker has an automatic shut-off feature. Do not force the wire shut-off arm up or down.

1. Use the switch to turn ON or OFF the ice maker.

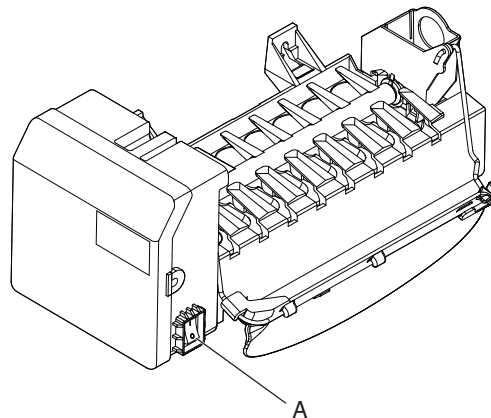


A. Ice maker switch

## Clean the Ice Storage Bin

**NOTE:** It is normal for ice to stick together in the ice bin. Ice may be dispensed or used more frequently which will break up the ice. It is recommended that the ice container be emptied and cleaned as needed.

### To clean the ice storage bin:

1. Slide the ice bin out of the freezer, and then lift up and out.

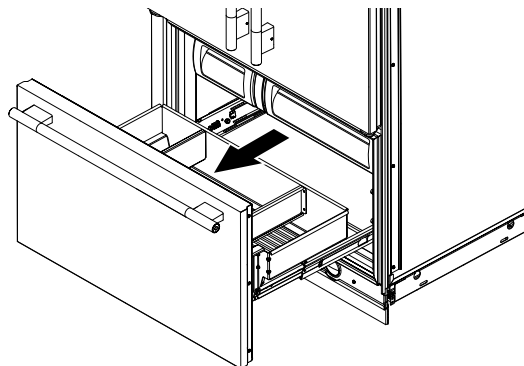

2. Empty the ice bin. Use warm water to melt the ice if necessary.

**NOTE:** Do not use anything sharp to break up the ice in the bin. This can cause damage to the ice bin and the ice maker mechanism.

- Wash the ice bin with warm water and a mild detergent, rinse well and dry thoroughly. Do not use harsh or abrasive cleaners or solvents.

### Remember

- Allow 24 hours to produce the first batch of ice. Allow 3 days to completely fill ice container.
- Discard the first three batches of ice produced to avoid impurities that may be flushed out of the system.
- The quality of your ice will be only as good as the quality of the water supplied to your ice maker.
- Avoid connecting the ice maker to a softened water supply.
- Water softener chemicals (such as salt) can damage parts of the ice maker and lead to poor quality ice. If a softened water supply cannot be avoided, make sure the water softener is operating properly and is well maintained.
- It is normal for the ice cubes to be attached at the corners. They will break apart easily.
- Do not store anything on top of the ice maker or in the ice storage bin/bucket.

## Water Filtration System

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

### Water Filter Status Indicator

The water filter indicator, located on the control panel, will help you know when to change the water filter.

#### Replace status:

- Replace the water filter cartridge when the water filter status display changes to "Replace".

#### Replace Overdue status:

- When the light turns red on the control panel, this tells you that it is time to change the water filter cartridge.
- It is recommended that you replace the filter when the status light turns red or water flow to your water dispenser or ice maker decreases noticeably.

**NOTE:** If water flow to your water dispenser or ice maker decreases noticeably, change the filter sooner. The filter should be replaced at least every 6 months, depending on your water quality and usage.


When dispensing water after the Replace Filter icon is on, the Replace Filter icon blinks for the duration of dispensing. This applies for both the Replace Filter status and Replace Overdue status. Fourteen days after the Replace Filter indicator turns On, it shall enter "Replace Overdue" mode.

#### Filter Reset

After changing the filter, press and hold Filter Reset button for 3 seconds. The button will no longer display once reset.

## Changing the Water Filter

The water filter is located in the base grille below the freezer compartment door. It is not necessary to remove the base grille to remove the filter.

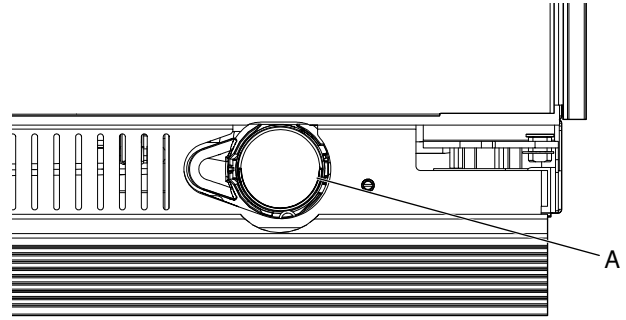


A. Water filter

- Remove the filter by pressing the eject button and pulling straight out on the filter cap.

#### NOTE:


- Avoid twisting the cap when removing the filter because this could cause the cap to come off. If this occurs, replace the cap and pull the filter straight out.
- There will be water in the filter. Some spilling may occur.

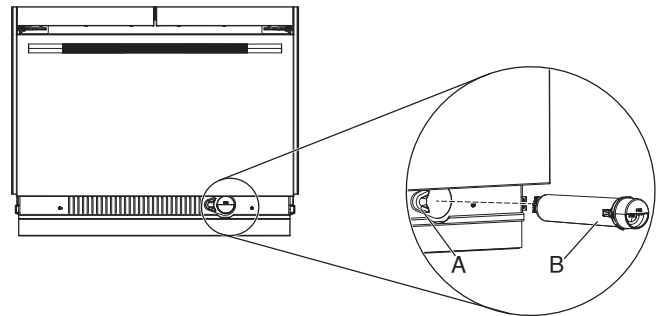

A. Eject button  
B. Water filter


- Remove the cap by turning it counterclockwise until it stops.

**IMPORTANT:** Do not discard the cap. It is part of your refrigerator. Keep the cap to use with the replacement filter.

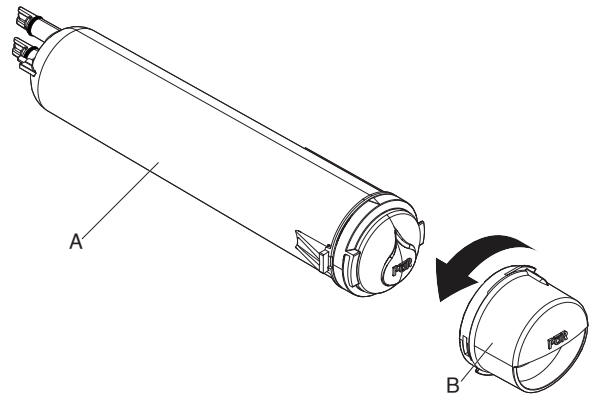


A. Water filter  
B. Cap

- Align the ridge on the cap with the arrow on the new filter, and turn the cap until it snaps into place.

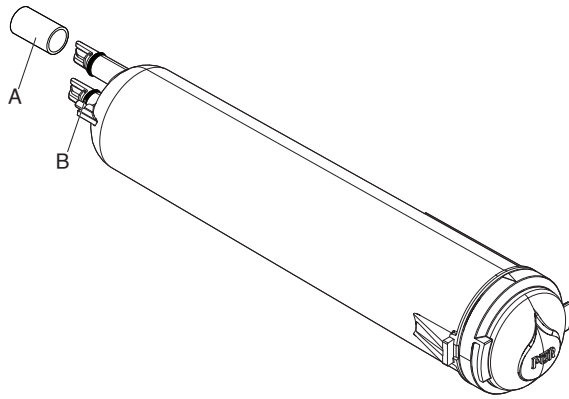

A. Cover  
B. O-rings

- Remove the covers from the O-rings. Make sure that O-rings are still in place after the covers are removed.
- Place the cap (removed in Step 2) on the new filter. Align the ridge on the cap with the arrow on the filter. Turn the cap clockwise until it snaps into place.

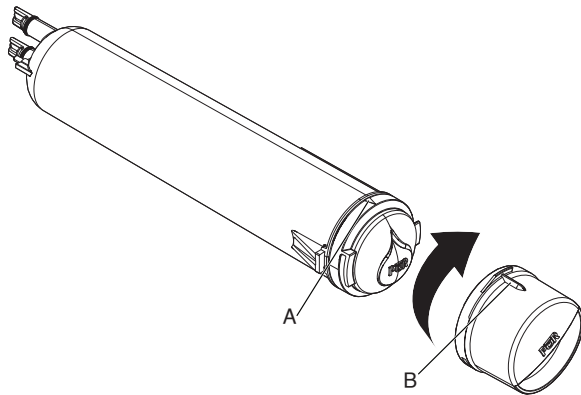

A. Arrow on filter  
B. Ridge on cap

- Push the new filter into the opening in the base grille. As the filter is inserted, the eject button will depress. The eject button will pop back out when the filter is fully engaged.
- Pull gently on the cap to check that the filter is securely in place.
- Flush the water system. Depending on your model, see "Water and Ice Dispensers" or "Ice Maker and Storage Bin."


### Using the Ice Maker Without a Water Filter

You can operate the ice maker without a water filter. Your ice will not be filtered.

- Remove the filter by pressing the eject button and pulling on the cap. See "Changing the Water Filter" earlier in this section.
- Remove the cap by turning it counterclockwise until it stops.

**IMPORTANT:** Do not discard the cap. It is part of your refrigerator.

- With the cap in a horizontal position, insert the cap into the base grille until it stops.

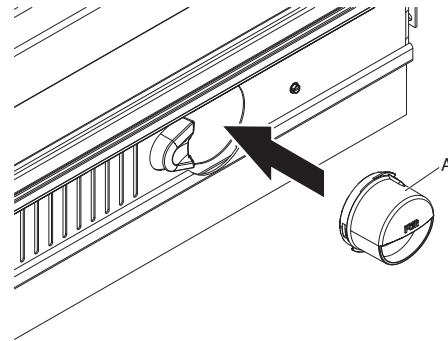

A. Cap

- Turn the cap counterclockwise until the cap slips into the attachment slot. Then, turn the cap clockwise until it is in a horizontal position.

**NOTE:** The cap will not be even with the base grille.

## REFRIGERATOR FEATURES

### Refrigerator Shelves

#### Important information to know about glass shelves and covers:

Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. Tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use both hands when removing them to avoid dropping.


The shelves in your refrigerator are adjustable to match your individual storage needs.

Storing similar food items together in your refrigerator and adjusting the shelves to fit different heights of items will make finding the exact item you want easier. It will also reduce the amount of time the refrigerator door is open, and save energy.

#### Shelves and Shelf Frames

##### To remove and replace a shelf/frame:

- Remove the shelf/frame by tilting it up at the front and lifting it out of the shelf supports. Pull shelf straight out.
- Replace the shelf/frame by guiding the rear shelf hooks in to the shelf supports. Tilt the front of the shelf up until the rear shelf hooks drop into the shelf supports.
- Lower the front of the shelf and check that the shelf is in position.

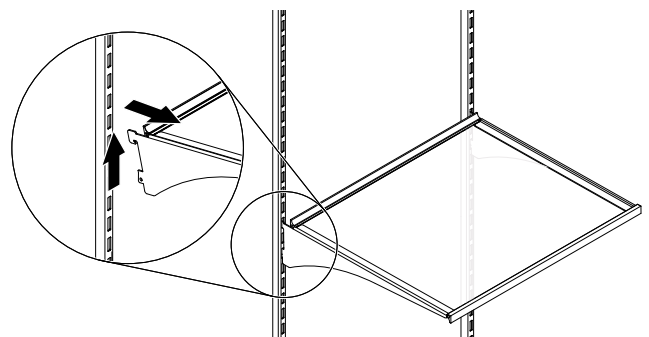

## Meat Storage Guide


Store most meat in original wrapping as long as it is airtight and moisture-proof. Rewrap if necessary. See the following chart for storage times. When storing meat longer than the times given, freeze the meat.

Fresh fish or shellfish..... use same day as purchased  
Chicken, ground beef, variety meats (liver) ..... 1-2 days  
Cold cuts, steaks/roasts ..... 3-5 days  
Cured meats..... 7-10 days  
Leftovers - Cover leftovers with plastic wrap, aluminum foil, or plastic containers with tight lids.


## Deli/Crisper Drawers

To remove and replace the deli/criisper drawers:

1. Slide the deli/criisper drawer straight out to the stop. Lift the front of the drawer with one hand while supporting the bottom with the other hand. Slide the drawer out the rest of the way.

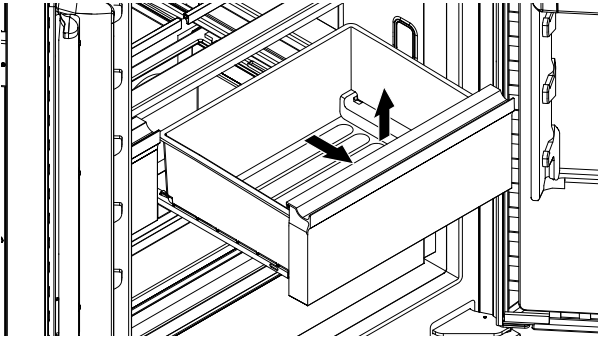


2. To replace the deli/criisper drawer, pull out the drawer slides until they are fully extended and set the drawer on the slides.

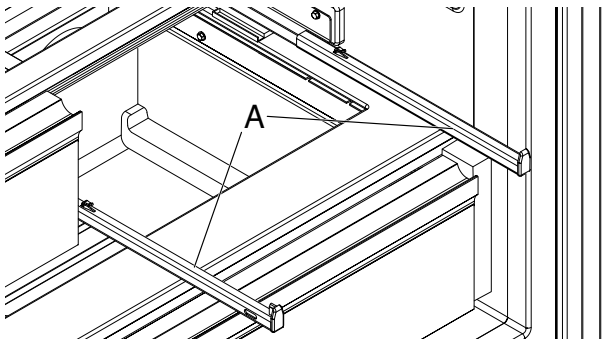

A. Drawer slides

3. Push the drawer in toward the back until it is in closed position.

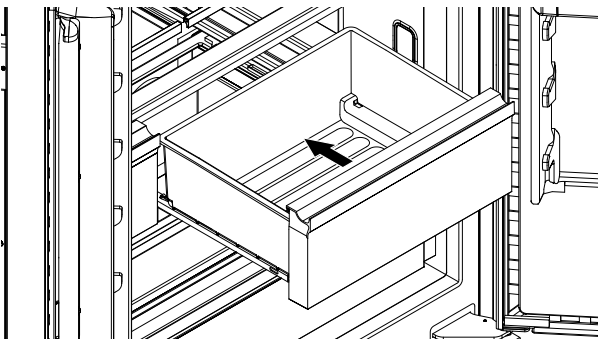

4. Reopen the deli/criisper drawer to make sure it has been replaced properly.


## FREEZER FEATURES

### Freezer Drawer and Pull-out Ice Bin


The freezer drawer can be used to store smaller items. The freezer drawer is not removable.

To remove and replace the ice bin:

1. Slide the ice bin out of the freezer, and then lift up and out.

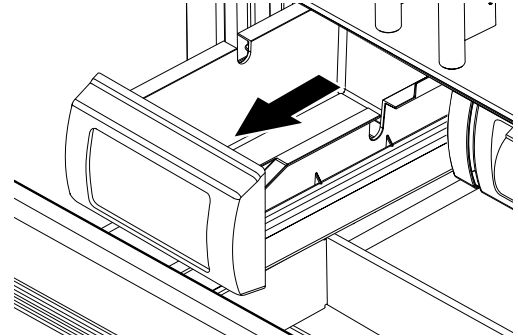

2. To replace the ice bin, pull out the drawer slides until they are fully extended, and then set ice bin on the slides. Push the ice bin in toward the back until it is in closed position.

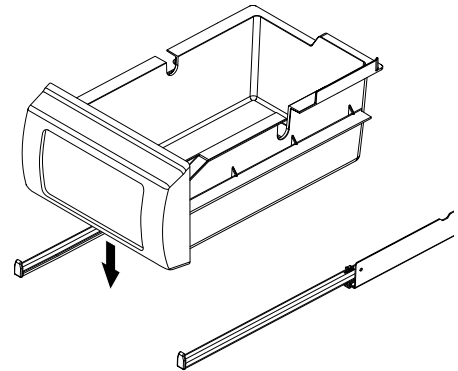

3. Reopen the ice bin to make sure it has been replaced properly.

### Frozen Food Storage Guide

Storage times will vary according to the quality and type of food, the type of packaging or wrap used (should be airtight and moisture-proof), and the storage temperature. Ice crystals inside a sealed package are normal. This simply means that moisture in the food and air inside the package have condensed, creating ice crystals.

Put no more unfrozen food into the freezer than will freeze within 24 hours (no more than 2 to 3 lbs of food per cubic foot [907 g-1,350 g per 28 L] of freezer space). Leave enough space in the freezer for air to circulate around packages. Be sure to leave enough room for the door to close tightly.

For more information on preparing food for freezing, check a freezer guide or reliable cookbook.

# DOOR FEATURES

## Door Bins

Large door bins hold gallon containers and the smaller door bins hold 2 L bottles. The door bins are adjustable and removable for easy cleaning and adjusting.


### Small Items Bin

**NOTE:** Proper placement of bin is on top spot of door to avoid items from falling out during opening and closing of door.


1. Install the Small Items Bin in top spot of door and push down to secure.

#### To remove and replace the small items bins:

1. Remove the bin by lifting it up and pulling it out.

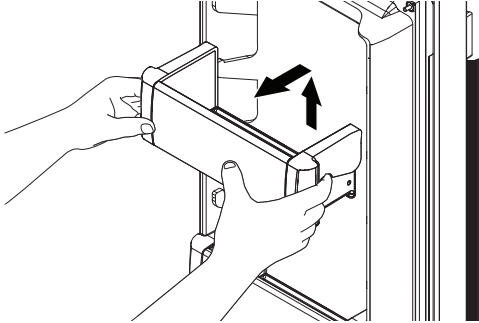


2. Replace the bin by sliding it in above the desired support and pushing down until it stops.

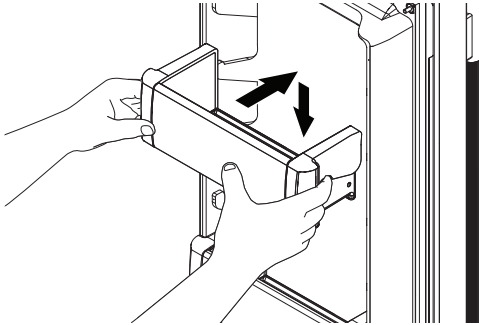


### Shallow Door Bins

#### To remove and replace the shallow door bins:

1. Remove the bin by lifting it up and pulling it out.

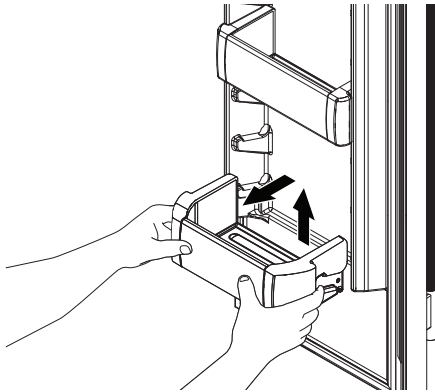

2. Replace the bin by sliding it in above the desired support and pushing down until it stops.

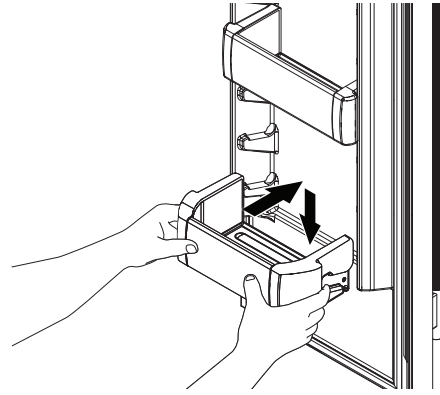


### Gallon Door Bin

**NOTE:** The bin can only be placed on the lower door support.


1. Install bin above lowest door support adjustment slot and push down to secure.

#### To remove and replace the gallon door bin:

1. Remove bin by lifting it up and pulling it out.

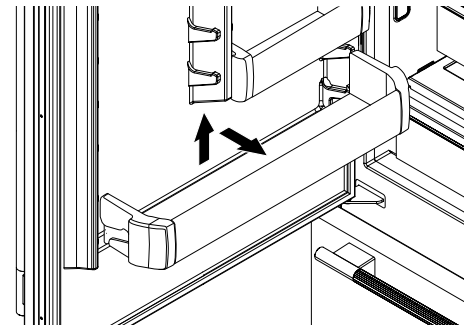


2. Replace the bin by sliding it in above the desired support and pushing down until it stops.

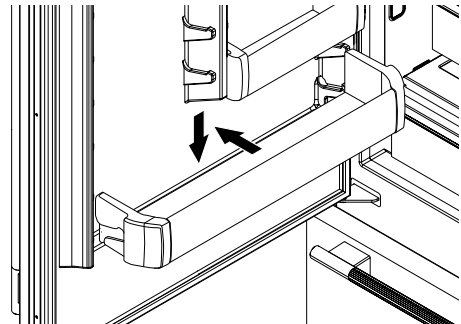

# MAINTENANCE AND CARE

## Cleaning

**⚠WARNING**



**Explosion Hazard**

**Risk of Fire or Explosion.**

**Flammable Refrigerant Used.**

**Do Not Use Mechanical Devices to Defrost Refrigerator.**

**Do Not Puncture Refrigerant Tubing.**

Both the refrigerator and freezer sections defrost automatically. However, clean both sections about once a month to avoid buildup of odors. Wipe up spills immediately.

### To Clean Your Refrigerator:

1. Remove the top grille. See "Power On/Off Switch."
2. Press the power switch to OFF.
3. Remove all removable parts from inside, such as shelves, FreshChill drawer, etc.
4. Hand wash, rinse, and dry removable parts and interior surfaces thoroughly. Use a clean sponge or soft cloth and a mild detergent in warm water.
  - Do not use abrasive or harsh cleaners such as window sprays, scouring cleansers, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior and door liners or gaskets. Do not use paper towels, scouring pads, or other harsh cleaning tools. These can scratch or damage materials.
  - To help remove odors, you can wash interior walls with a mixture of warm water and baking soda (2 tbs to 1 qt [26 g to 0.95 L] of water).
5. Wash stainless steel and painted metal exteriors with a clean sponge or soft cloth and a mild detergent in warm water. Do not use abrasive or harsh cleaners, or cleaners containing chlorine. Dry thoroughly with a soft cloth.


**NOTE:** To keep your Stainless Steel refrigerator looking like new and to remove minor scuffs or marks, it is suggested that you use the manufacturer's approved Stainless Steel Cleaner and Polish.

**IMPORTANT:** This cleaner is for stainless steel parts only. Do not allow the Stainless Steel Cleaner and Polish to come into contact with any plastic parts such as the trim pieces, dispenser covers or door gaskets. If unintentional contact does occur, clean plastic part with a sponge and mild detergent in warm water. Dry thoroughly with a soft cloth. To order the cleaner, see "Accessories."

6. Press the power switch to ON.
7. Replace the top grille. See "Power On/Off Switch."

## Condenser Cleaning

**⚠WARNING**




**Explosion Hazard**

**Risk of Fire or Explosion due to Puncture of Refrigerant Tubing;**

**Follow Handling Instructions Carefully.**

**Flammable Refrigerant Used.**

There is no need for routine condenser cleaning in normal home operating environments. If the environment is particularly greasy or dusty or there is significant pet traffic in the home, the condenser should be cleaned every 6 months to ensure maximum efficiency.

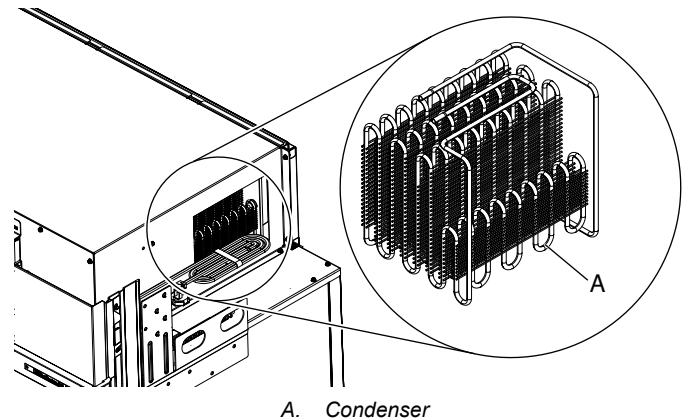

1. Unplug refrigerator or disconnect power.
2. Remove the upper grille.
3. Use a vacuum cleaner with a soft brush to clean the grille, the open areas behind the grille, and the front surface area of the condenser.
4. Replace the base grille when finished.
5. Plug in refrigerator or reconnect power.

**NOTE:** If you are unable to clean the condenser, please call for service.

## Changing the LED Module

**IMPORTANT:** The lights in both the refrigerator and freezer compartments use LED technology. If the lights do not illuminate when the door or drawer is opened, call for assistance or service. Refer to the "Quick Start Guide" for contact information. If an LED module(s) do not illuminate when the refrigerator and/or freezer door is opened, call for assistance or service.

## Power Interruptions

If the power will be out for 24 hours or less, keep the door or doors closed (depending on your model) to help food stay cold and frozen.

If the power will be out for more than 24 hours, do one of the following:

- Remove all frozen food and store it in a frozen food locker.
- Place 2 lbs (907 g) of dry ice in the freezer for every cubic foot (28 L) of freezer space. This will keep the food frozen for 2 to 4 days.
- If neither a food locker nor dry ice is available, consume or can perishable food at once.

**IMPORTANT:** A full freezer stays cold longer than a partially filled one. A freezer full of meat stays cold longer than a freezer full of baked goods. If you see that food contains ice crystals, it may be refrozen, although the quality and flavor may be affected. If the condition of the food is poor, dispose of it.

## Vacation Care

**If You Choose to Turn Off the Refrigerator Before You Leave:**

1. Remove all food from the refrigerator.
2. If your refrigerator has an automatic ice maker:
  - Turn off the water supply to the ice maker at least one day ahead of time.
  - When the last load of ice drops, raise the wire shutoff arm to the Off (up) position or press the switch to Off, depending on your model.
3. Under the Fridge or Freezer menu, press and hold Cooling Off for 3 seconds to turn off cooling.

**NOTE:** To turn off the power completely, use the power On/Off switch located behind the top grille. See "Power On/Off Switch."
4. Clean refrigerator, wipe it, and dry well.
5. Tape rubber or wood blocks to the tops of both doors to prop them open far enough for air to get in. This stops odor and mold from building up.

When you get to your new home, put everything back and refer to the "Installation Instructions" section for preparation instructions. Also, if your refrigerator has an automatic ice maker, remember to reconnect the water supply to the refrigerator.


## TROUBLESHOOTING

### Refrigerator Operation

First try the solutions suggested here to avoid service call. If you need further assistance, refer to the contact information in the "Quick Start Guide."

#### The Refrigerator will not Operate

**⚠ WARNING**



**Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

- **Power cord unplugged?** Plug into a grounded 3 prong outlet.
- **Is outlet working?** Plug in a lamp to see if the outlet is working.
- **Household fuse blown or circuit breaker tripped?** Replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.
- **Are controls on?** Make sure the refrigerator controls are on. See "Using the Controls."
- **Is refrigerator defrosting?** Your refrigerator will regularly run an automatic defrost cycle. Recheck in 45 minutes to see if it is operating.
- **New installation?** Allow 24 hours following installation for the refrigerator to cool completely.

**NOTE:** Adjusting the temperature controls to the coldest setting will not cool either compartment more quickly.

#### The Motor Seems to Run too Much

Your new refrigerator may run longer than your old one due to its high-efficiency compressor and fans. The unit may run even longer if the room is warm, a large food load is added, doors are opened often, or if the doors have been left open.

#### If the Refrigerator is Noisy

Refrigerator noise has been reduced over the years. Due to this reduction, you may hear intermittent noises from your new refrigerator that you did not notice from your old model. Below are listed some normal sounds with an explanation.

- **Buzzing** - heard when the water valve opens to fill the ice maker.
- **Pulsating** - fans/compressor adjusting to optimize performance.
- **Rattling** - flow of refrigerant, water line, or from items placed on top of the refrigerator.
- **Sizzling/Gurgling** - water dripping on the heater during defrost cycle.
- **Popping** - contraction/expansion of inside walls, especially during initial cool-down.
- **Water running** - may be heard when water melts during the defrost cycle and runs into the drain pan.

- **Creaking/Cracking** - occurs as ice is being ejected from the ice maker mold.
- **Banging noise during ice maker or water dispensing operation** - Check if a water hammer arrestor is required to be installed. Refer to the “Water Supply Requirements” section for more information.

### There is no Audible Door Open Alarm

#### Has the door been open less than 10 minutes?


The door open alarm will only flash when the door has been open for 10 minutes. The audible alarm will sound the first time the door is left open for more than 10 minutes. Subsequent door open alarms will only flash. You must reset the audible alarm each time. See “Using the Controls.”

#### The Doors will not Close Completely

- **Door blocked open?** Move food packages away from door.
- **Bin or shelf in the way?** Push bin or shelf back in the correct position.

#### The Doors are Difficult to Open

⚠ WARNING



Explosion Hazard

**Keep flammable materials and vapors, such as gasoline, away from appliance.**

**Use nonflammable cleaner.**

**Failure to do so can result in death, explosion, or fire.**

**Are the gaskets dirty or sticky?** Clean gaskets with mild soap and warm water.

### The Lights Do not Work

**Is the refrigerator in Sabbath mode?** See “Using the Controls.”

**Has the door been open more than 10 minutes?** See “Using the Controls.”

## Temperature and Moisture

### Temperature is Too Warm

- **New installation?** Allow 24 hours following installation for the refrigerator to cool completely.
- **Door(s) opened often or left open?** Allows warm air to enter refrigerator. Minimize door openings and keep doors fully closed.
- **Large load of food added?** Allow several hours for refrigerator to return to normal temperature.
- **Controls set correctly for the surrounding conditions?** Adjust the controls a setting colder. Check temperature in 24 hours. See “Using the Controls.”
- **Refrigerator not cooling?** For models with digital controls, turn the refrigerator off and then on to reset. If this does not correct the problem, call for service.
- **Air vents blocked?** Remove any item from in front of the air vents.

## There is Interior Moisture Buildup

**NOTE:** Some moisture buildup is normal.

- **Humid room?** Contributes to moisture buildup.
- **Door(s) opened often or left open?** Allows humid air to enter refrigerator. Minimize door openings and keep doors fully closed.

## Ice and Water

### The Ice Maker is Not Producing Ice or not Enough Ice

- **Refrigerator connected to a water supply and the supply shut-off valve turned on?** Connect refrigerator to water supply and turn water shut-off valve fully open.
- **Kink in the water source line?** A kink in the line can reduce water flow. Straighten the water source line.
- **Ice maker turned on?** Make sure switch is in the ON position.
- **New installation?** Wait 24 hours after ice maker installation for ice production to begin. Wait around 72 hours for full ice production.
- **Large amount of ice recently removed?** Allow 24 hours for ice maker to produce more ice.
- **Ice cube jammed in the ice maker ejector arm?** Remove ice from the ejector arm with a plastic utensil.
- **Reverse osmosis water filtration system connected to your cold water supply?** This can decrease water pressure. See “Water Supply Requirements”.

### The Ice Cubes are Hollow or Small

**NOTE:** This is an indication of low water pressure.

- **Water shut-off valve not fully open?** Turn the water shut-off valve fully open.
- **Kink in the water source line?** A kink in the line can reduce water flow. Straighten the water source line.
- **Reverse osmosis water filtration system connected to your cold water supply?** This can decrease water pressure. See “Water Supply Requirements.”
- **Questions remain regarding water pressure?** Call a licensed, qualified plumber.

### Ice is Sticking Together in the Ice Storage Bin

- It is normal for frost to be on top of the ice storage bin due to normal opening and closing of the freezer.
- It is normal for ice to stick together when it is not dispensed or used frequently. It is recommended that the ice storage bin be emptied and cleaned as needed. See “Ice Maker and Storage Bin.”

### Off-Taste, Odor or Gray Color in the Ice

- **New plumbing connections?** New plumbing connections can cause discolored or off-flavored ice.
- **Ice stored too long?** Discard ice. Wash ice bin. Allow 24 hours for ice maker to make new ice.
- **Odor transfer from food?** Use airtight, moisture proof packaging to store food.
- **Are there minerals (such as sulfur) in the water?** A water filter may need to be installed to remove the minerals.
- **Is there a water filter installed on the refrigerator?** Gray or dark discoloration in ice indicates that the water filtration system needs additional flushing.

# PERFORMANCE DATA SHEET

## Water Filtration System

**Model EDR3RXD1B/P1WB2 Capacity 200 Gallons (757 Liters) with PID; 100 Gallons (378 Liters) without PID  
Replacement Filter EDR3RXD1, EDR3RXD1B, WHR3RXD1, KAD3RXD1 and EDR3RXD1R**



System tested and certified by NSF International against NSF/ANSI Standard 42, 53, 401, and CSA B483.1 for the reduction of contaminants specified on the Performance Data Sheet.

This system has been tested according to NSF/ANSI Standards 42, 53, 401, and CSA B483.1 for the reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI Standards 42, 53, 401, and CSA B483.1.

<b>Substance Reduction</b>	<b>Influent Challenge Concentration</b>	<b>Maximum Permissible Product Water Concentration</b>	<b>Average % Reduction</b>
<b>Aesthetic Effects</b>			
Chlorine Taste/Odor	2.0 mg/L ± 10%	50% reduction	97.4%
Particulate Class I*	At least 10,000 particles/mL	85% reduction	> 99.9%
<b>Contaminant Reduction</b>	<b>Influent Challenge Concentration</b>	<b>Maximum Permissible Product Water Concentration</b>	<b>Average % Reduction</b>
Lead: @ pH 6.5/@ pH 8.5	0.150 mg/L ± 10%	0.005 mg/L	> 99.7% / > 99.7%
Mercury: @ pH 6.5/@ pH 8.5	0.006 mg/L ± 10%	0.002 mg/L	> 96.6% /96.7%
Asbestos	10 <sup>7</sup> to 10 <sup>8</sup> fibers/L††	99%	> 99.0%
Live Cysts†	50,000/L min.	99.95%	> 99.99%
Turbidity	11 NTU ± 10%	0.5 NTU	99.1%
Atrazine	0.009 mg/L ± 10%	0.003 mg/L	> 94.0%
Benzene	0.015 mg/L ± 10%	0.005 mg/L	> 96.9%
Carbofuran	0.080 mg/L ± 10%	0.040 mg/L	> 98.7%
Endrin	0.006 mg/L ± 10%	0.002 mg/L	> 96.8%
Ethylbenzene	2.100 mg/L ± 10%	0.700 mg/L	> 99.9%
Lindane	0.002 mg/L ± 10%	0.0002 mg/L	> 99.1%
MTBE	0.015 mg/L ± 10%	0.005 mg/L	93.2%
O-Dichlorobenzene	1.800 mg/L ± 10%	0.600 mg/L	> 99.9%
Tetrachloroethylene	0.015 mg/L ± 10%	0.005 mg/L	> 96.8%
Toxaphene	0.015 mg/L ± 10%	0.003 mg/L	> 93.3%
TTHM	0.045 mg/L ± 10%	0.080 mg/L	98.6%
VOC	0.300 mg/L ± 10%	0.015 mg/L	99.7%
Atenolol	200 ± 20%	30 ng/L	> 95.1%
Trimethoprim	140 ng/L ± 20%	20 ng/L	> 96.6%
Linuron	140 ng/L ± 20%	20 ng/L	> 96.7%
Estrone	140 ng/L ± 20%	20 ng/L	> 96.1%
Nonylphenol	1400 ng/L ± 20%	200 ng/L	> 95.8%
Meprobamate	400 ng/L ± 20%	60 ng/L	> 94.9%
Carbamazepine	1400 ng/L ± 20%	200 ng/L	> 98.6%
DEET	1400 ng/L ± 20%	200 ng/L	> 98.8%

Contaminant Reduction	Influent Challenge Concentration	Maximum Permissible Product Water Concentration	Average % Reduction
Metolachlor	1400 ng/L ± 20%	200 ng/L	> 98.7%
TCEP	5000 ng/L ± 20%	700 ng/L	> 98.0%
T CPP	5000 ng/L ± 20%	700 ng/L	> 98.0%
Phenytoin	200 ng/L ± 20%	30 ng/L	> 93.8%
Ibuprofen	400 ng/L ± 20%	60 ng/L	> 93.9%
Naproxen	140 ng/L ± 20%	20 ng/L	> 95.8%
Bisphenol A	2000 ng/L ± 20%	300 ng/L	> 98.9%

Test Parameters: pH = 7.5 ± 0.5 unless otherwise noted. Flow = 0.5 GPM (1.89 LPM). Pressure = 60 psi (413.7 kPa). Temperature = 68°F to 71.6°F (20°C to 22°C). Rated service capacity = 200 gallons (757 liters).

The compounds certified under NSF 401 have been deemed as “emerging compounds/incidental contaminants.” Emerging compounds/incidental contaminants are those compounds that have been detected in drinking water supplies at trace levels. While occurring at only trace levels, these compounds can affect the public acceptance/perception of drinking water quality.


- For installation, operation, and maintenance instructions please refer to the Owner’s Manual.
- It is important that operational, maintenance, and filter replacement requirements be carried out for the product to perform as advertised. Property damage can occur if all instructions are not followed.
- The disposable cartridge must be changed at least every 6 months.
- Use replacement filter part #EDR3RXD1/EDR3RXD1B. 2025 suggested retail price of \$59.99 U.S.A./\$69.99 Canada. Prices are subject to change without notice.
- The filter monitor system measures the amount of water that passes through the filter and alerts you when it is time to replace the filter. To learn how to check the water filter status, see “Using the Controls” section page 8 or “Water Filtration System” section page 11 in the Owner’s Manual.
- After changing the water filter, flush the water system. See “Water System Preparation” section page 6 in the Owner’s Manual.
- These contaminants are not necessarily in your water supply. While testing was performed under standard laboratory conditions, actual performance may vary.
- The product is for cold water use only.
- The water system must be installed in compliance with state and local laws and regulations.
- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts. EPA Est. No. 082047-TWN-001.
- Refer to the “Warranty” section for the Manufacturer’s limited warranty, name and telephone number.

#### Application Guidelines/Water Supply Parameters

Water Supply	Potable City or Well
Water Pressure	30 psi-120 psi (207 kPa-827 kPa)
Water Temperature	33°F-100°F (0.6°C-37.8°C)
Service Flow Rate	0.5 GPM (1.89 LPM) @ 60 psi (413.7 kPa)

- Your water filtration system will withstand up to 120 pounds per square inch (psi) water pressure. If your water supply is higher than 80 psi, install a pressure reducing valve before installing the water filtration system.

Consumer Support **1.800.442.9991**  
By Whirlpool Corporation  
2000 North M63  
Benton Harbor, MI 49022  
Made in Taiwan.

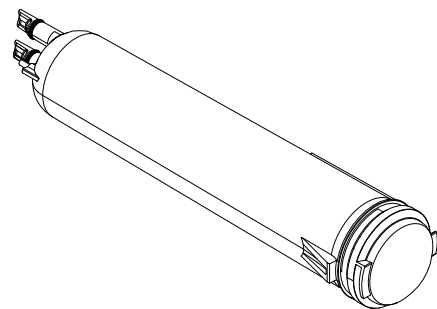

\*Class I particle size: > 0.5 um to 1 um

†Based on the use of *Cryptosporidium parvum* oocysts

‡Fibers greater than 10 um in length

©NSF is a registered trademark of NSF International.